



MOP
HARDWARE MANUAL

MOP series HMI

1 Features

Mop series HMI have high quality display: 16 million true color TFT-LCD, support BMP and JPG format, have rich 3D photo gallery, has the flexible components choice space, user-defined animation, convenient mode setting switch, precise touch calibration function, , curve shows, and other forms of data management ways, offers one USB interface, perform high speed data download, high speed loading and high-speed operation.

Product features

■ Display

- 16 million true colors TFT-LCD, support BMP and JPG format, better color and display;
- Precise touch calibration function;
- 128MB memory, perform high speed data download, high speed loading and high-speed operation
- Memory capacity increase substantially;
- Support multi-language: Chinese, English, Japanese, Korean, German, French, Arabic, etc. The fonts support any size, artistic effect, bold, italic, etc.
- Rich images of material, screen operation

■ Control

- Switch control, dynamic monitor and display data, bar map, real time trend map, time trend map, XY trend map, discrete/continue column map, real time alarm, history alarm record...
- User-defined data collection and saving function
- Set user authority, 9 levels password protection
- Simulate online/offline, upload/download data, configuration function
- Powerful C function block
- Special USB-B port for data download, make the data transfer faster
- User-defined animation design

■ Communication

- Drive the panel printer directly, economical and flexible
- Support free format communication, user edits the driver program

2 General specifications

HMI specifications

Item		MOP-04MT	MOP-07MT	MOP-08MT	MOP-10mt
Screen	Size	4.3”	7.0”	8.0”	10.1”
	Type	16 million colors			
	Resolution	480*272	800*480	800*600	800*480
	Brightness	Non-adjustable	Adjustable (through register PFW100)		
	Touch panel	4-wire resistance mode			
	Using life	More than 50000 hours, temperature 25℃, running for 24 hours			
	Language	Chinese, English, Japanese, Korean, German, French, Arabic...			
	Character	Any font and size			
Memory	Capacity	64MB	128MB (TG765-XT is 64MB)		

Electric specifications

Item		MOP-04MT	MOP-07MT	MOP-08MT	MOP-10MT
Electric	Input voltage	DC24V (Range: DC22V-DC26V)			
	Consumption current	140mA	200mA	250mA	270mA
	Allowable momentary power failure	Below 10ms (Actual power failure<1s)			
	Withstand voltage	AC1000V,10mA,less than 1 minute (signal and ground)			
	Insulated impedance	DC500V, above 10MΩ (signal and ground)			
Environment	Operation temperature	0-50°C			
	Reserve temperature	-20-60°C			
	Environment humidity	10%RH-90%RH (no condensation)			


	Withstand oscillation	10-25HZ（X,Y,Z each direction 30 minutes 2G）			
	Anti-jamming	Voltage noise:1500Vp-p, pulse 1us, 1 minute			
	Surrounding air	No corrosive gas			
	Protection construction	IP65			
Construction	Cooling method	Natural air cooling			
	Exterior dimension (mm)	152.0*102.0*41.8	200.4*146.9*43.4	224.4*170.8*45.5	272.2*191.7*51.2
	Mounting dimension (mm)	144.0*94.0	192.0*138.5	211.4*157.8	260.2*179.7
Interface	PLC port	RS232/RS485	RS232/RS485		
	Download port	-	RS232		
		-			
		-			
	USB	USB-B (accord with USB2.0), USB download port			

MOP series HMI display area dimension:

Series	Display area dimension (mm)
MOP-04MT	95.04*53.86
MOP-07MT	154.08*85.92
MOP-08MT	162.0*121.5
MOP-10MT	219.6*131.76




3 Hardware

3-1 Hardware structure

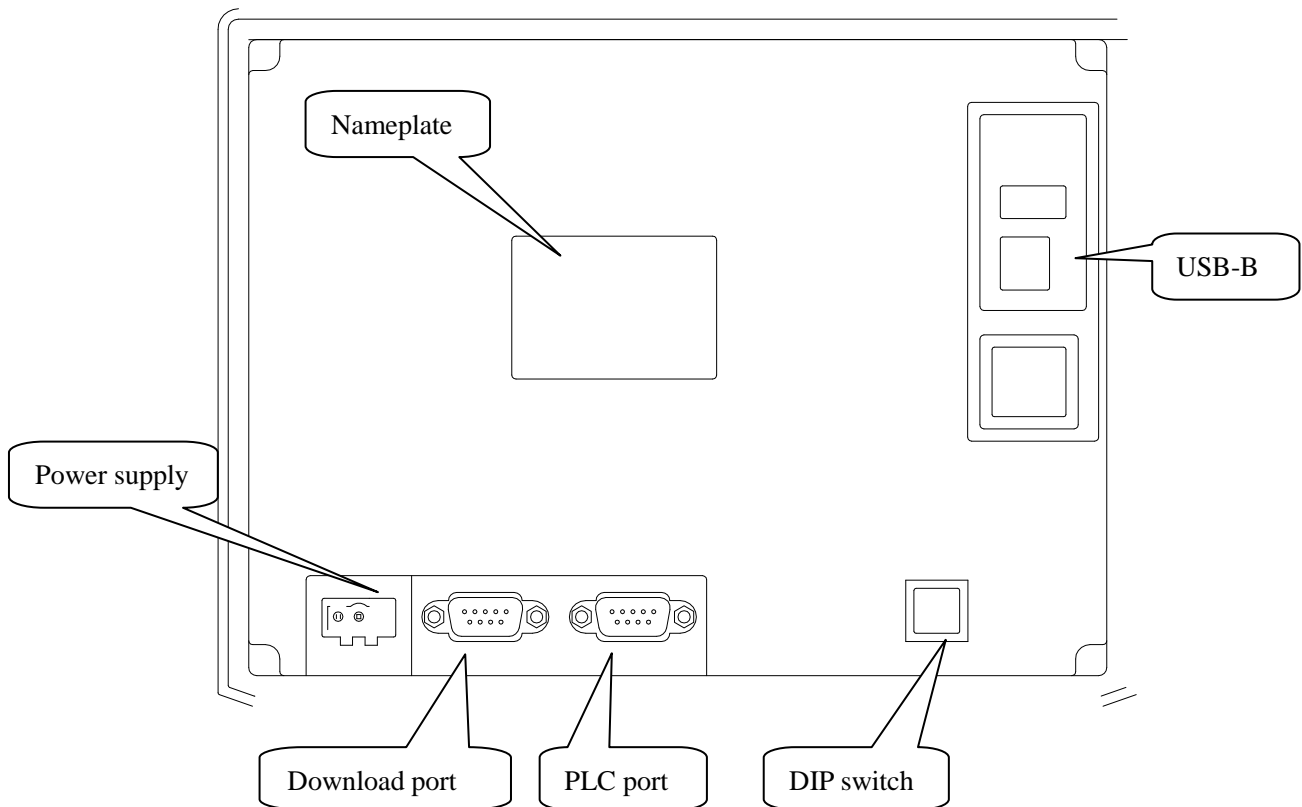

3-2 Ports introduction

 MOP series HMI port:

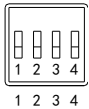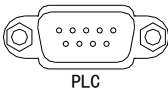Outline	Name	Function
	DIP switch	Force-download, touch area adjustment
	PLC port	RS232/RS485/RS422
	USB-B	Connect USB cable to download/upload program

1. DIP switch

TG series has 4-bit DIP switch at the back side; they can set the function of COM1 port.

Switch	DIP1	DIP2	DIP3	DIP4	Function
State	OFF	OFF	OFF	ON	Undefined
	OFF	ON	OFF	OFF	Force-download mode
	OFF	OFF	ON	OFF	System menu: Adjust clock and touch panel, Import program of flash disk
	ON	OFF	OFF	OFF	Undefined



If the screen cannot show normally after downloading the program, please use force-download.

Step:

- (1) Cut off the power of MOP, turn ON DIP switch 2;
- (2) Power on MOP, connect the download cable to PC to download the program;
- (3) Turn OFF DIP switch 2 after finishing the download, repower on the MOP.

1	2	3	4
---	---	---	---

<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ON
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	OFF

2. Communication interface

The Pins definition of download port:

The Pins definition of PLC port:


	Pin	Name	Description
	1	TD+	RS422 send +
	2	RXD	RS232 receive
	3	TXD	RS232 send
	4	A	RS485 + signal
	5	GND	Signal ground
	6	TD-	RS422 send -
	7	B	RS485 - signal
	8	RDD-	RS422 receive -
	9	RDD+	RS422 receive +

4. USB-B port

TG has one USB-B port (accord with USB2.0), located at the back side of MOP, the functions are shown as below:

- To download the data, the speed can up to 480Mbps.

USB-B port definition

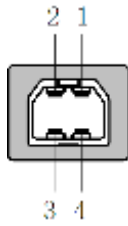



Pin	Name	Description
1	+5V	+5V voltage signal
2	DATA-	Data signal -
3	DATA+	Data signal +
4	GND	Ground signal

(1) Please use shielded USB cables.



(2) Please install USB driver before using. Download the driver from www.metaltext.com.br.


(3) Connect MOP with PC, open MOP Soft software, click “ or ” to download the program.

4 Dimensions and installation

4-1 Product dimensions


MOP-04MT

(Unit: mm)

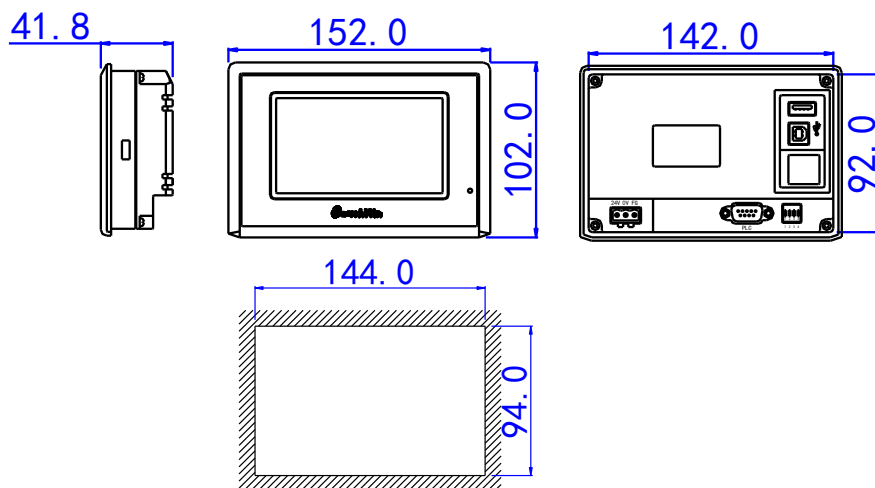


MOP-07MT

(Unit: mm)

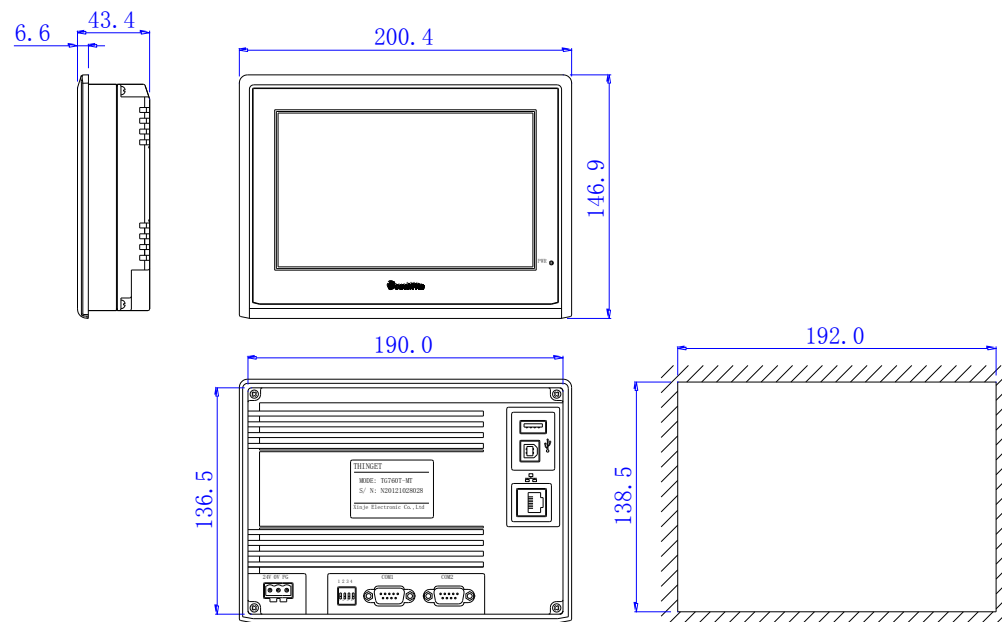


MOP-08MT/UT/ET

(Unit: mm)

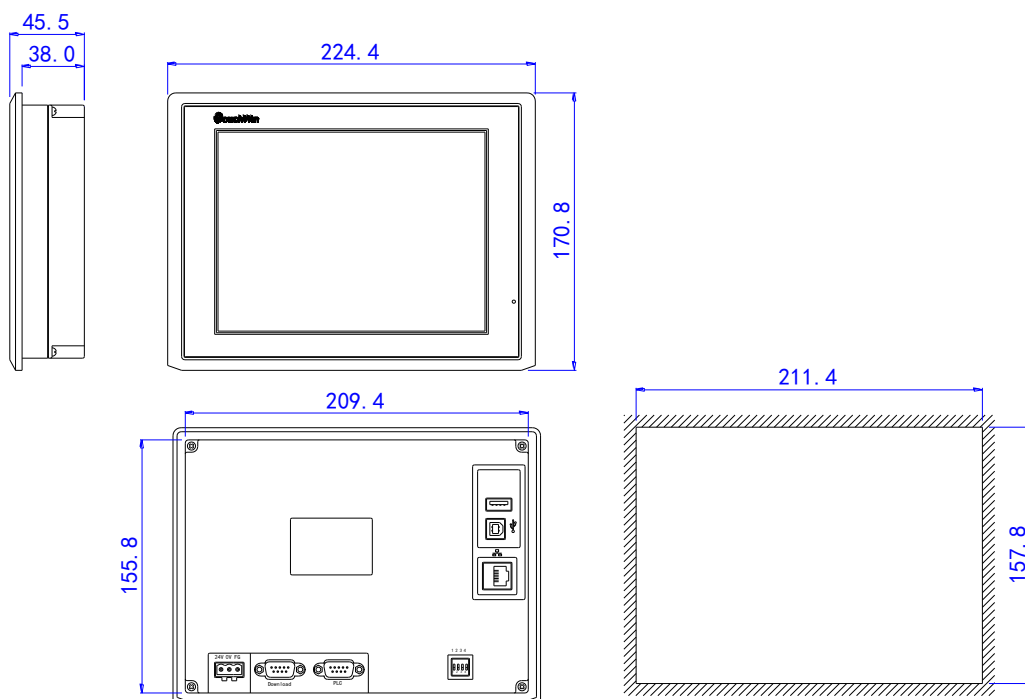

MOP-10MT

(Unit: mm)

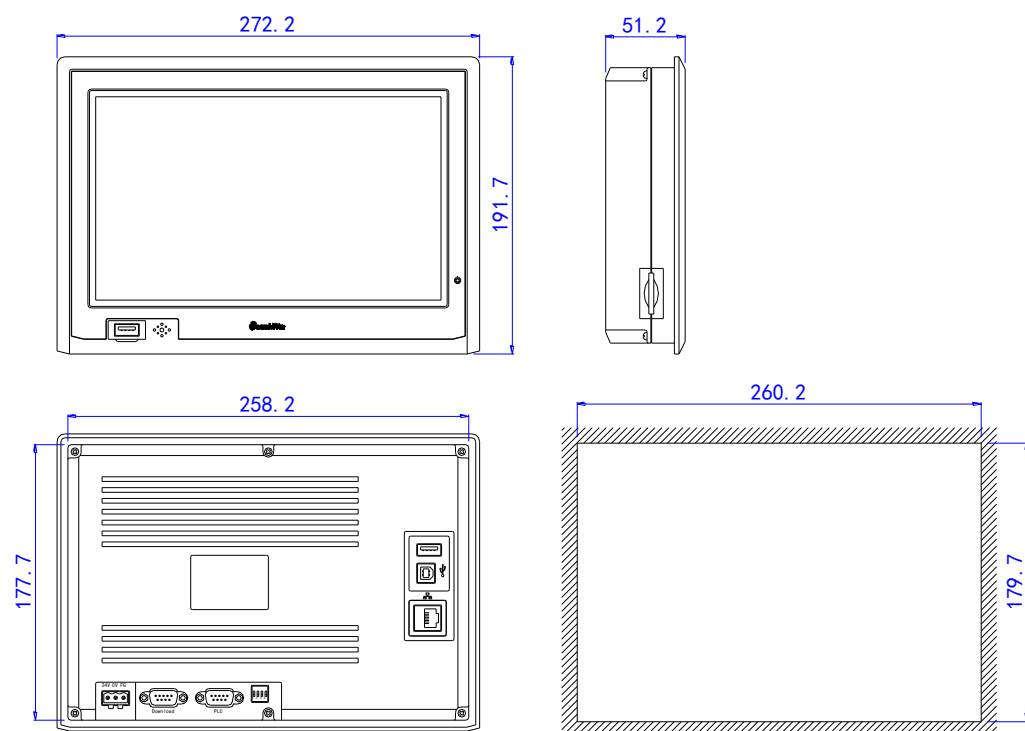


4-2 Installation and using environment

Install requirements:

MOP has four ferric mounting racks when out of factory, there are two square holes on the up, down side of MOP, use mounting rack to fix the MOP with control cabinet.

In order to avoid temperature too high after long time working, please keep 10cm space on the up/down and 5cm on the left/right side of the when installing.

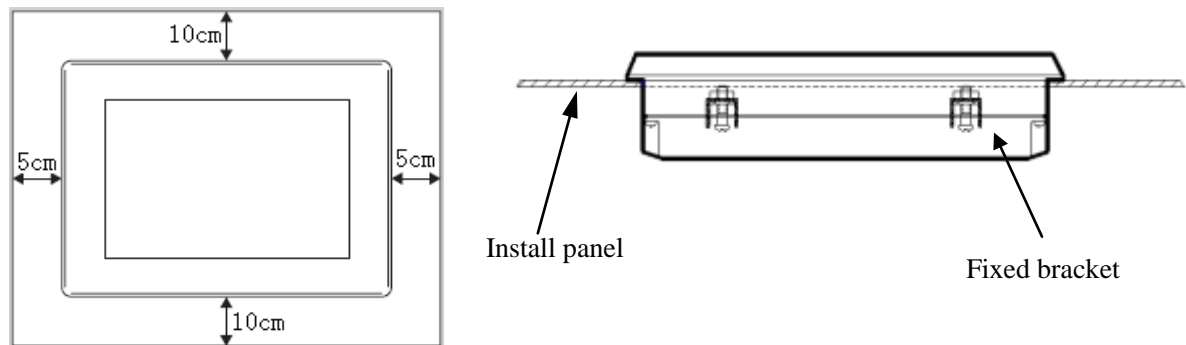

Install steps:

1. Refer to the dimension in the former chapter to open a rectangle mounting hole in the control cabinet;
2. Add airproof circles in the airproof slot when installing;
3. Insert the bottom of MOP into the mounting hole of control cabinet;
4. Insert the install rack into the fix hole of MOP then tighten the screw;
5. Connect MOP and PLC with communication cable.

Notice: The communication cable can be offered by the supplier or made by user according to the connection diagram, input +24V DC power to start working

Environment:

Please use MOP series touch screen indoor.




Do not use MOP in below environment:

Inflammable gas, steam, dust, fast vary temperature, high humidity (it may cause moisture inside MOP).

Power supply requirements:

MOP series touch screen use DC +24V power supply only. The permitted voltage range is 20V~26V. The connection is as below:

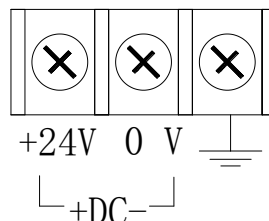

Besides, if connect high voltage or AC power supply with MOP, the MOP may be damaged and cause electric shock to human body.



If use the DC +24V output of PLC, make sure the PLC has enough current to drive the MOP.



MOP Soft edit tool

User manual

INDEX

1 MOP SOFT EDITING SOFTWARE	14
1-1. INSTALLATION AND UNINSTALLATION OF MOP SOFT EDITING SOFTWARE	14
1-1-1. <i>Installation</i>	14
1-1-2. <i>Uninstall</i>	17
1-2. INSTALLATION AND UNINSTALL THE USB DOWNLOAD CABLE	17
2 SIMPLIFIED PROJECT MANUFACTURE	19
2-1. CREATE PROJECT	19
2-2. SCREEN EDITING	20
2-3. OFF-LINE SIMULATION	22
2-4. ON-LINE SIMULATION	22
2-5. PROGRAM DOWNLOAD	23
2-5-1. <i>Common download</i>	23
2-5-2. <i>Complete download</i>	23
2-5-3. <i>U flash disk download</i>	Erro! Indicador não definido.
2-6. UPLOAD PROGRAM	24
3 SOFTWARE SCREEN AND WINDOW	25
3-1. SOFTWARE STRUCTURE	25
3-2. PROJECT AREA	25
3-2-1. <i>Insert</i>	26
3-2-2. <i>Cut copy paste</i>	26
3-2-3. <i>Delete</i>	26
3-3. MENU BAR	27
3-3-1. <i>File</i>	27
3-3-2. <i>Edit</i>	35
3-3-3. <i>View</i>	36
3-3-4. <i>Part</i>	37
3-3-5. <i>Tool</i>	38
3-3-6. <i>window</i>	39
3-3-7. <i>Help</i>	40
3-4. SCREEN EDITING AREA	40
3-5. TOOL BAR	40
3-6. STATUS BAR	41
4 PARTS	42
4-1. OVERALL OPERATION	42
4-1-1. <i>Standard tool bar</i>	42
4-1-2. <i>Operation tool bar</i>	42
4-1-3. <i>Picture adjustment</i>	43
4-1-4. <i>Zoom tool bar</i>	44
4-1-5. <i>Status tool bar</i>	44
4-2. DRAWING TOOL BAR	45

4-2-1. Line.....	45
4-2-2. Arc.....	47
4-2-3. Rectangle	52
4-2-4. Round rectangle.....	54
4-2-5. Ellipse	57
4-2-6. Fold - polygon.....	60
4-2-7. Block.....	64
4-2-8. Frame	66
4-2-9. Insert map.....	68
4-2-10. Move animation.....	70
4-2-11. Rotate animation	72
4-2-12 Material library	74
4-3. COMPONENT TOOL BAR	75
4-3-1. Text.....	75
4-3-2. Dynamic text	78
4-3-3. Variational text	83
4-3-4. Lamp	88
4-3-5. Button	92
4-3-6. Lamp button.....	97
4-3-7. Screen jump	102
4-3-8. Digital display	105
4-3-9. Alarm display	108
4-3-10. Text display.....	112
4-3-11. Digital input	116
4-3-12. ASCII code input	122
4-3-14. Set data	126
4-3-15. Digital keyboard.....	130
4-3-16. ASCII keyboard	132
4-3-17. User input.....	133
4-3-18. Bar.....	136
4-3-19. Dynamic map	139
4-3-20. Call window.....	141
4-3-21. Window button	144
4-3-22. Down recipe	147
4-3-23. Up recipe	152
4-3-24. Function button.....	156
4-3-25. Function field	177
4-3-26. Discrete column map	180
4-3-27. Continue column map.....	183
4-4. DISPLAY TOOL BAR	186
4-4-1. Date.....	186
4-4-2. Clock.....	188
4-4-3. Buzzer.....	191
4-4-4. Backlight	192

4-4-5. Scale	194
4-4-6. Instrument.....	196
4-4-7. Valve	200
4-4-8. Pipe	204
4-4-9. Pump	207
4-4-10. Fan	210
4-4-11. Motor	213
4-4-12. Retort	215
4-4-13. Inverter alarm information	219
4-4-14. Scroll text	222
4-4-15. Real trend map.....	223
4-4-16. History trend map	228
4-4-17. Event button.....	234
4-4-18. XY trend map	240
4-4-19. XY fold map	244
4-4-20. Time trend map	248
4-4-21. Alarm list.....	256
4-4-22. Display real time event	260
4-4-23. Display history event	264
4-4-24. Common grid	267
4-4-25. Data grid	272
4-4-26. Sample save	277
4-4-27. Sample export	279
4-4-28. Process orbit.....	284
5 HMI INTERNAL REGISTER.....	287
5-1. HMI INTERNAL REGISTERS.....	287
5-2. SPECIAL INTERNAL REGISTERS	287

Mop Soft editing software

1-1. Installation and uninstallation of Mop Soft editing software

1-1-1. Installation

If you want to install more than two versions of editing software, you need to choose different installaton paths. If you make overwrite installation, the software will operate unusually and even not operate.

1. Software source

CDROM or enter the Metaltex company website www.metaltex.com.br to get the installation software and the installation instructions.

2. Hardware settings of computer

CPU: above INTEL Pentium II

RAM: above 64MB

HARD DISK: above 2.5GB the disk space can not be less than 1GB

DISPLAY: the resolution ratio of 32 bit true color display is above 800 x 600

3. Operating system


Windows 98/Windows 2000/Windows XP/Windows ME/WIN 7

4. Install steps (for example V2.C.6 simplified Chinese version)


(1) find the“setup.exe”in the installation file and double click it, then the following dialogue box will appear:




- (2) click the “next”. The following will appear on the screen, then choose the “I accept this agreement” and click the “next”;

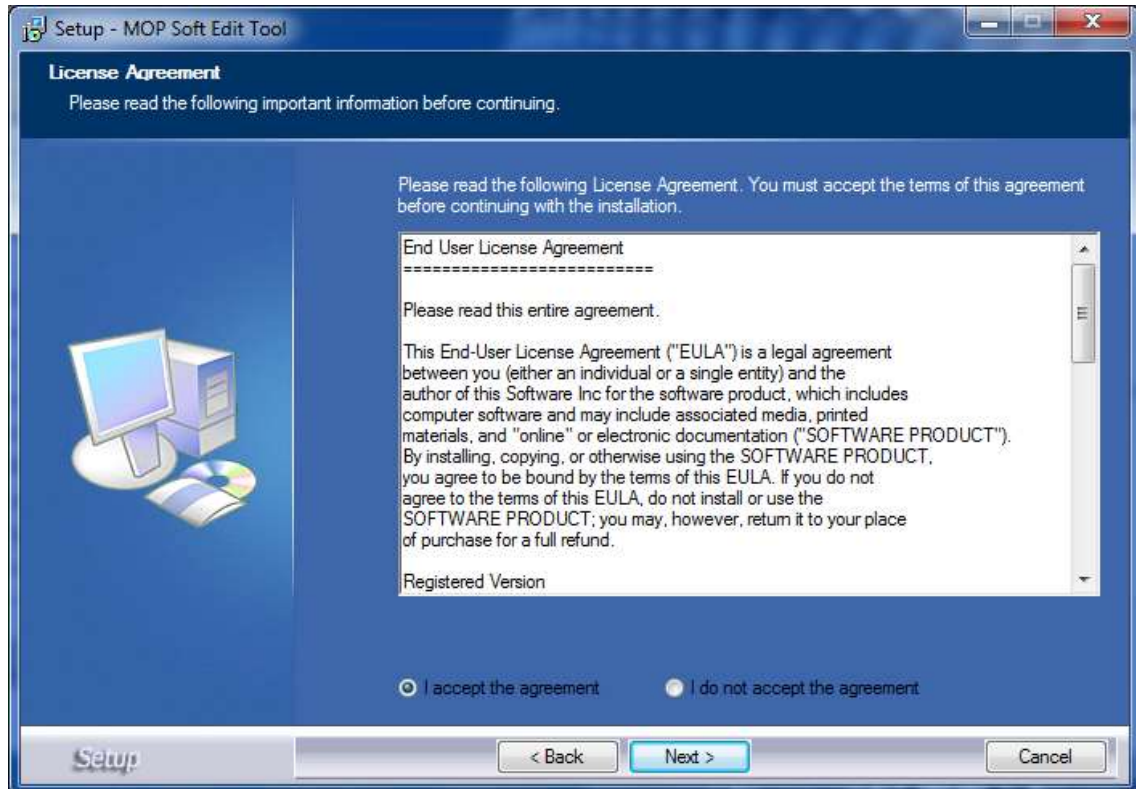


- (3) Input the username, company name and serial number. Serial No. is. "1111111111111" (you can copy from the “serial_no.txt” in the software setup package) Then click the “next”.

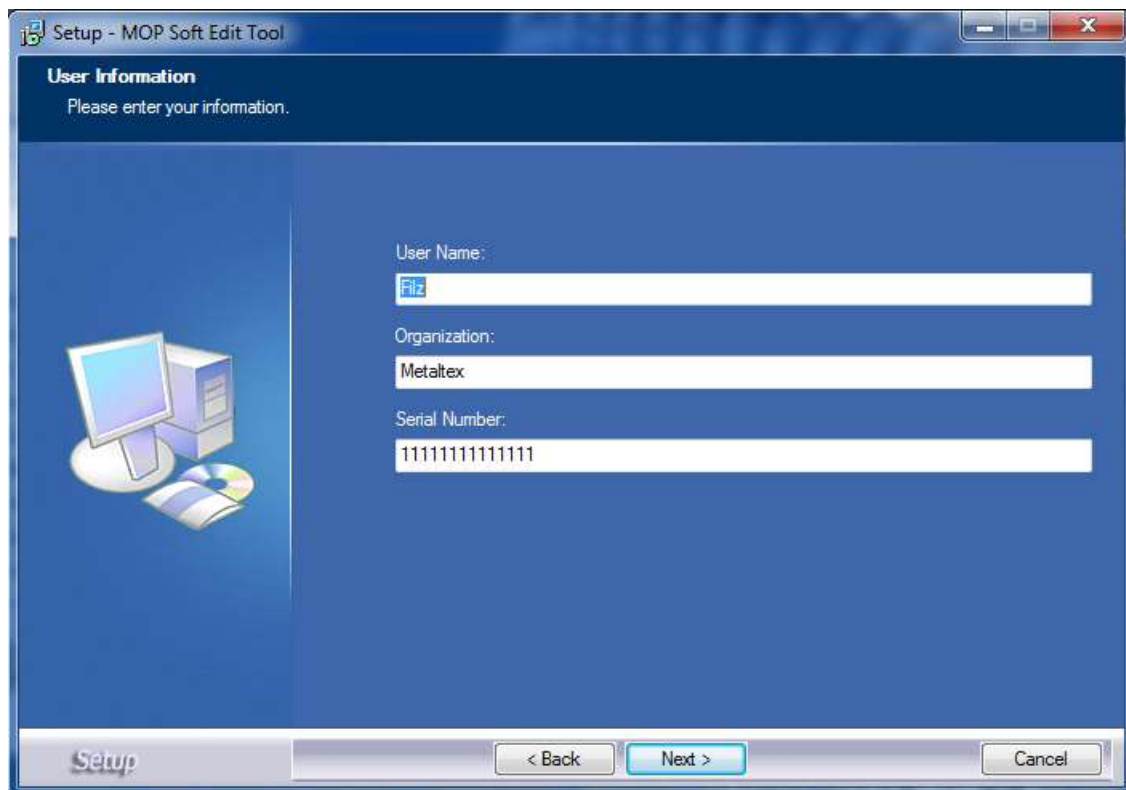

(4) click the “browse” and set the software installation catalogue or use the default installation path, then click the “next”.

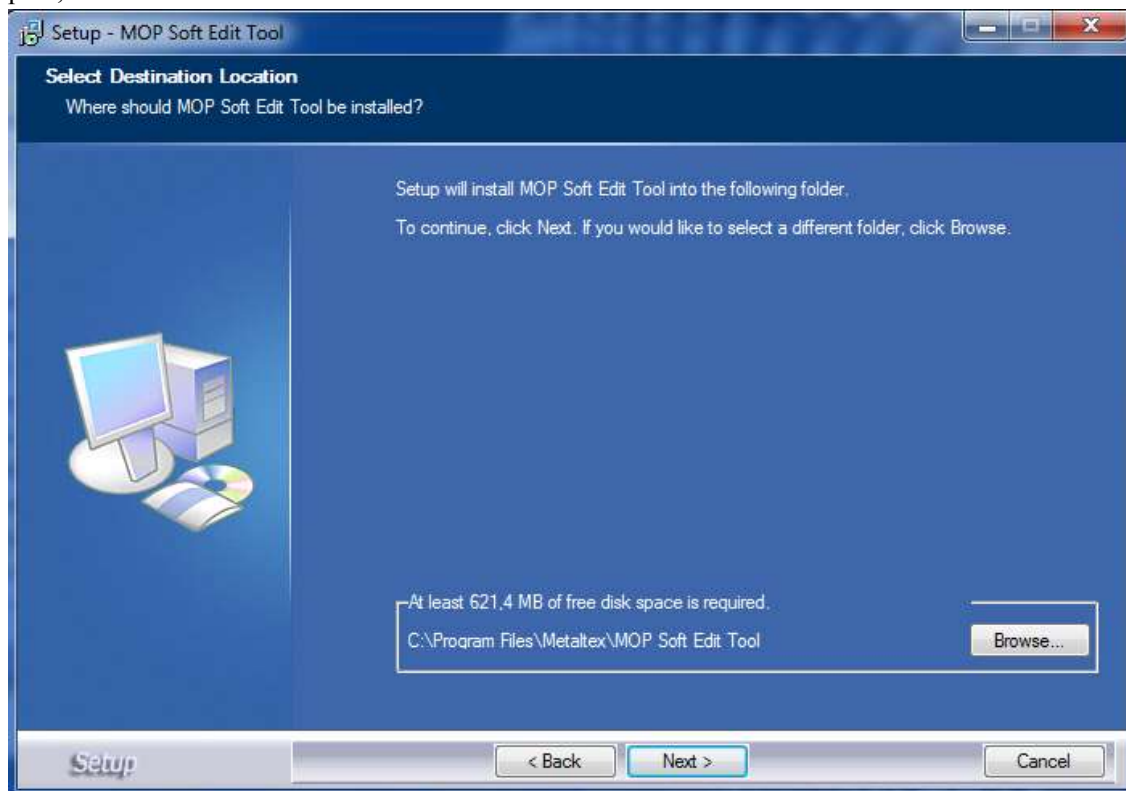


(5) click the “browse” and choose the shortcut path of creating the program in the start menu.

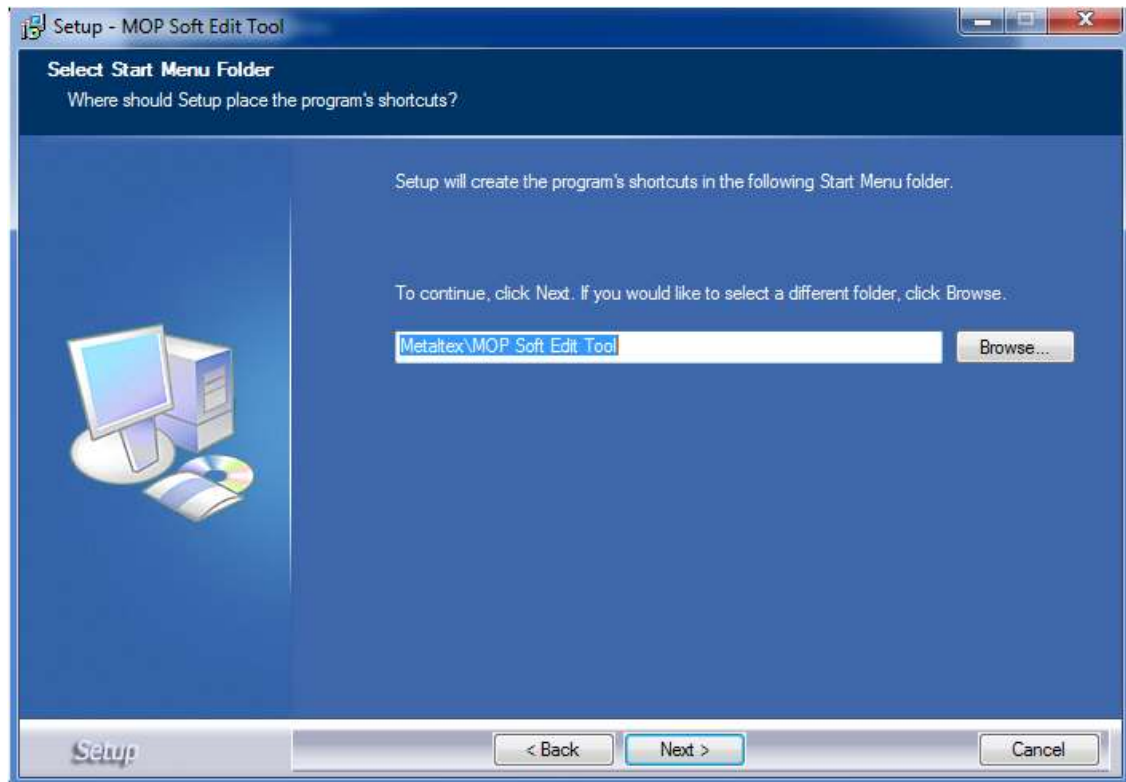



(6) click the “install” button according to guide. At last click the “finish” button to install the software successfully.

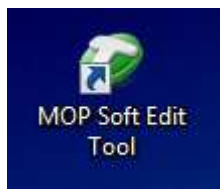(7) The following shortcut will appear on the desktop after finishing the installation. Please double click the icon to open the software.



1-1-2. Uninstall

1. Click the “start/program/ Metaltex/Mopsoft for MT/  unload” or double click “ ” in the setup package.
2. According to the step one, click the “yes(Y)” to confirm to uninstall the software.
3. click the “confirm” button. After uninstalling the software, please delete the catalogue folder.

1-2. Installation and uninstall the USB download cable

USB download cable is only suitable for Mop series HMI.

MOP MT series HMI support the USB2.0(USB-B) standard communication port. It is in the top right corner on the back of HMI. It can realize high-speed downloading and its transmission rate can be up to 480Mbps. This section will introduce how to install the USB download cable driver and download the program.

Now USB download driver has two kinds of installation modes in the system of Win98, WinXP, Win7-32 Bit. They are automatic installation and manual installation. It only can be installed manually in the system of Win7-64Bit.

1. Manual installation

Concrete operation

- (1) use the USB download cable to connect HMI USB download port and computer USB port. Then give the HMI power again. The catalogue box “find the guide of new hardware” will appear. Please choose “no” and click the “next”.
- (2) Choose the “install from list or assigned address (advance)”, then click the “next”.
- (3) choose “include this place in the search” in the option of “search the best drive program in those places”. Click the “browse” and find the relevant drive file. Click the “confirm”, then click the “next”.



Win98 system should choose Win98. WinXP and Win7-32Bit system should choose WinXP. Win7-64Bit system should choose Win7.

- (4) Click the “finish” to install the drive successfully.
- (5) Download program.

2. Uninstall the USB download cable drive

- (1) Use the USB download cable to connect HMI USB download port and computer USB port. Then repower the HMI, and right click the “my computer” to choose “device manager”. Click the “universal serial bus controllers”, then you can see the information of installed USB drive such as “Thinget TH USB Device”.
- (2) According to above operation, choose the “Thinget TH USB Device”. Right click to choose “uninstall”.
- (3) Click the “confirm” button, then the drive will be uninstalled.


2 Simplified project manufacture


The characteristic of Mop Soft editing software is simple and fast. It provides an ideal editing platform for beginners or those who have some basis. This chapter introduces the use method of HMI editing software by a simple project manufacture.




Please confirm the HMI type and the communication equipment type before making the screen. This is the premise of making the screen program and equipment operate normally.

2-1. create project


1. Open the software and click the standard tool bar “” icon or “new” in the “file” menu.
2. Choose the correct HMI type.

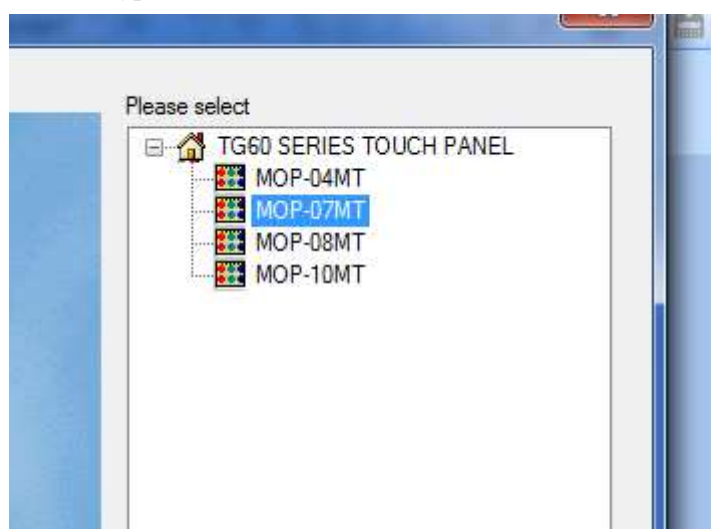

3. Set PLC port and choose the correct PLC type and set the communication parameters.

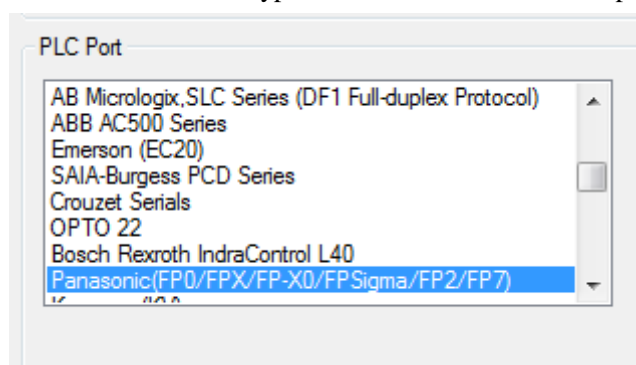


4. Set download port. When Download port communicates without external equipment, please choose “don’t use Download port”. When Download port communicates with external equipment, please choose the correct equipment type and set communication parameters.

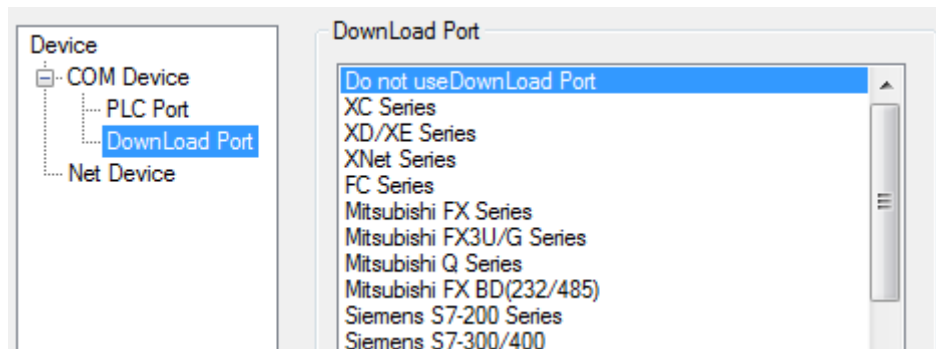

5. Set expanded port like Download port. Please choose the “unused equipment” when expanded port communicates without external equipment. Please choose the correct equipment type and set communication parameters when expanded port communicates with external equipment.


6. Input name, author and remarks according to requirement. Click the “finish” button at last, then the project will be created.

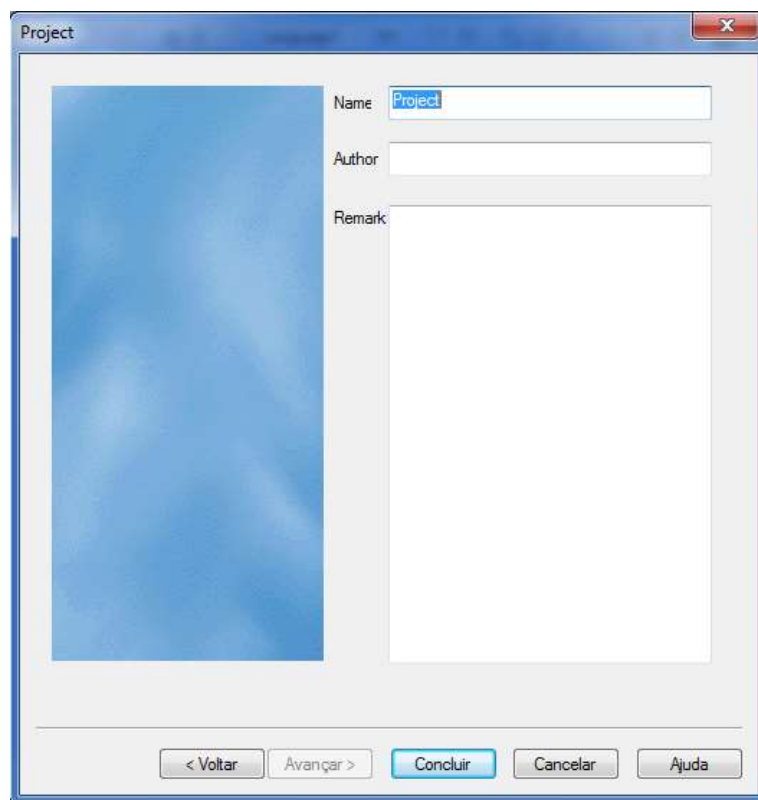

2-2. Screen editing

We will make a simple button. The function is to set ON /OFF the PLC output terminal Y0.

1. Bit Button

Click the menu “part/operate/bit button” or icon “”, click in the editing screen.

- Object

Object type: set to “Y0”

The screenshot shows the 'Button' configuration dialog box with the 'Object' tab selected. The 'Station' section includes a 'Device' dropdown set to 'PLC Port', a 'VirStaNO' input field with '0', and a 'Station' input field with '1'. The 'Object' section includes an 'ObjType' dropdown set to 'Y' and an input field with '0', along with an 'indirect' checkbox.

- operate

Button operation: set to “reverse”.

The screenshot shows the 'Button' configuration dialog box with the 'Operate' tab selected. The 'Button' section contains four radio buttons: 'Set ON', 'Set OFF', 'Reverse' (which is selected), and 'On Instant'.

- button

text: input “reverse”


The screenshot shows the 'Button' configuration dialog box with the 'Button' tab selected. The 'Text' checkbox is checked, and the text input field below it contains the word 'Reverse'.

2. Lamp

Click the menu “part/operate/lamp” or icon “💡”, click in the editing screen, and set attributes in the attribute catalogue box.


- object

object type: set to “Y0”.

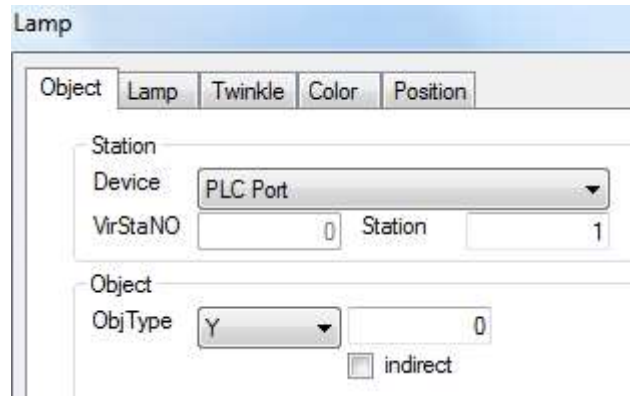

2-3. Off-line simulation

To debug the program, you can simulate the program in the software without connecting the PLC.

1. Click the menu “file/off-line simulation” or icon “”
2. Click the “reverse” button. You can set ON and set OFF the Y0.




ON status



OFF status

2-4. On-line simulation


Simulate practical operation situation of the HMI and PLC in the computer. Realize the monitoring function for lower-computer. (PLC should be connected to computer, and the operation time of on-line simulation should be within half an hour)

1. click the menu bar “file/on-line simulation” or “on-line simulation” icon “”, the following catalogue box will appear. Please click the “ok” button to enter the simulation screen.



on-line simulation only support equipment of Modbus RTU protocol. PLC, inverter and so on.

2. Click the right key of mouse in the blank of screen. Choose the “Com Port” in the catalogue box, and set the PLC Port to the serial port of connecting to the computer. The other keep default. Close the “COM Port” catalogue box at last.

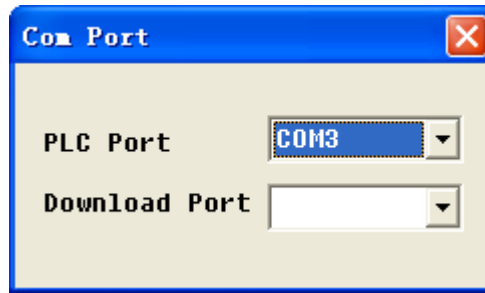

- Log history record of logging in and quitting time
- About informations about AutoWin version
- Com Port the above catalogue box will appear. Set the computer serial port number which is connected with HMI PLC port /Download port.
- Exit exit

3. Please click the right key of mouse in the blank area again after those operations above. Choose the “Exit” to exit current on-line simulation operation, then open the on-line simulation again to perform the simulation function for lower-computer PLC.




If “communicating” window appears in the on-line simulation screen, you need to check if the setting is correct for “PLC Port”. Then check if you open the simulation screen again after exiting simulation operation. Then check if the serial port is occupied by other softwares.


2-5. Program download

MOP software support two kinds of download style, and they are common download and complete download. Please choose the revelant download cable to download according to different kinds of HMI. This case uses USB download cable to download program. If you want to know the serial port download, please refer to the HMI hardware handbook.

2-5-1. Common download

Click the menu bar “file/download” or “download” icon “”, then you can download the program. This download style doesn’t have upload function.

2-5-2. Complete download


Click the “complete download” icon “”, then you can download the program. This download style can upload the HMI program to computer.



the following versions can not support upload function

2-6. Upload program

HMI support uploading project. It is useful for data resource management.

Click the “upload” icon “

- No encryption You don’t need to input password. It is open to all customers
- Encryption You need to input password to upload the project

3 Software screen and window

This chapter will have complete introductions of HMI editing software MOP Soft.



Part of this handbook is based on primary function software. If you want to know advanced functions, please contact us to get advanced function manual.

3-1. Software structure




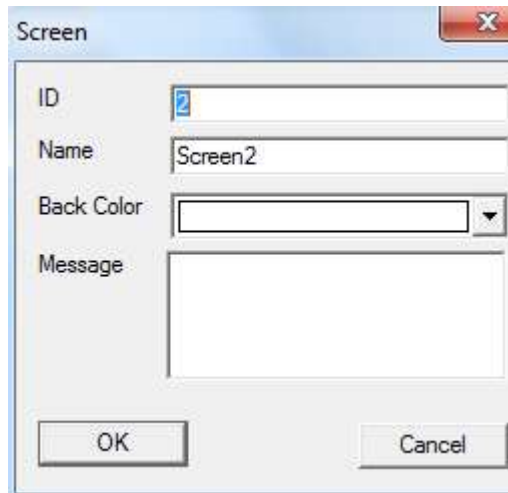
- Project area about the basic operations, such as the creation, delete, copy, cut of screen and window.
- Screen editing area project screen editing platform
- Menu bar It has seven teams of menu. It contains file, edit, check, component, tool, window and help.
- Parts and buttons it contains tools such as standard, picture, operate, zoom, picture adjustment, display, status, parts, etc.
- Status bar display HMI type, PLC port connection equipment, display informations of download port connection equipment, etc.

3-2. Project area

Insert, cut, copy, paste and delete the screen, window.

3-2-1. Insert


Choose the project bar “screen” and click the right key of mouse. Please choose “insert” or click “” icon. The following attributes catalogue box will appear.



The 'Screen' dialog box contains the following fields:


- ID: A text box containing the number '2'.
- Name: A text box containing 'Screen2'.
- Back Color: A dropdown menu.
- Message: A large text area.
- Buttons: 'OK' and 'Cancel' at the bottom.

- Screen number add the screen serial number and click ok, then the screen number can not be changed.
- Screen name project screen define name.
- Screen background the background color of project screen.
- Prompt message input relevant screen note informations.


Please click “” icon to change the screen attributes.

3-2-2. Cut copy paste

1. Choose screen2, click the right mouse and choose “cut” or “copy”.
2. Choose project bar “screen”, and click the right mouse to choose “paste” to finish the operation.

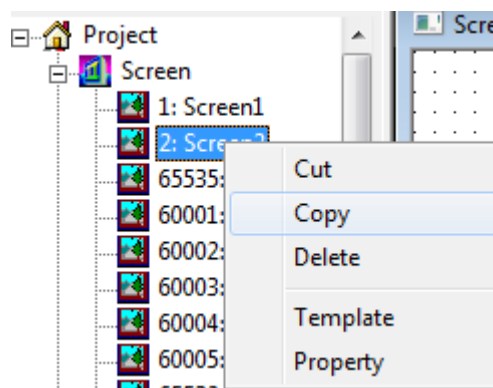

3-2-3. Delete

Choose the screen which you want to delete and click the right mouse, then choose the “delete” or click “” icon to delete the screen.



The insert, cut, copy, paste, delete of window are the same.

3-3. Menu bar

3-3-1. File

File contains different kinds of operation such as create, open, close, save, download project data, simulation, export project, etc.

File	Edit	View	Part	Tool	Win
New					Ctrl+N
Open...					Ctrl+O
Close					Ctrl+Q
Save					Ctrl+S
Save As...					Ctrl+A
Download					Ctrl+D
Export Project...					
RunOnLine(B)					Ctrl+B
RunOffLine(M)					Ctrl+M
PFW Set(P)					Ctrl+P
Setting...					Ctrl+T
Build SCADA					
Last					
Exit					

1. New



Please refer to chapter 2-1.

2. Open

Click “file/open” or “” icon to open project.

3. Close

Click “file/close” to close current project. But it doesn’t mean to exit MOP Soft editing software.

4. Save

Click “file/save” or “” icon to save the project.



You need to save at all times to prevent losing data at the process of editing screen.

5. Save as

This operation is different from “save”. “Save” uses new file to replace the old file based on the project. “Save as” save the current project at the form of new project. After the “save” catalogue box appears, please choose the saved path and input the file name and click “save” button.

6. Download

Download the project in the HMI, click “ or ” icon to perform the same function.



Please refer to chapter 2-5.

7. Export project



Please refer to chapter 2-5-3.

8. Run online

This function is similar to SCADA. Connect the PLC with the software; simulate the project functions in the software.



Please refer to chapter 2-4.

9. Run offline


Simulate the project functions in Autowin software without connecting the PLC.



Please refer to chapter 2-3.

10. PFW set

Initialize the PFW data after downloading program again. Click “file/PFW set”, and following catalogue box will appear.

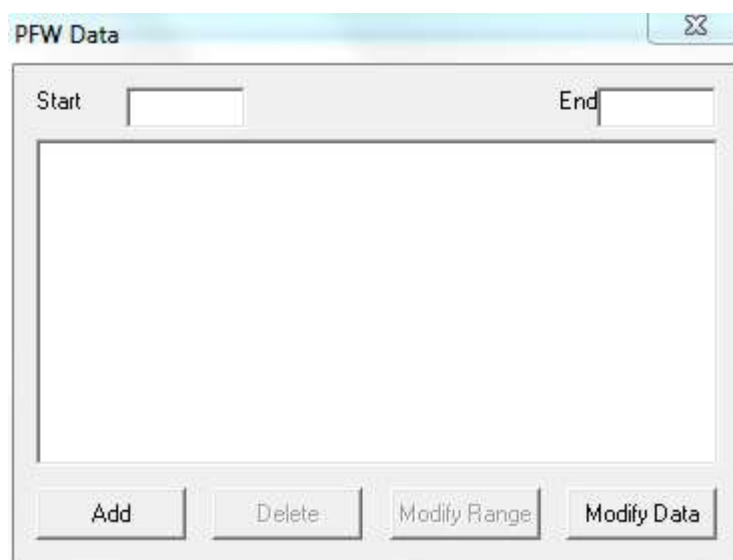

- set the address range of PFW
- Start PFW set the start address of PFW register.
- End PFW set the end address of PFW register.
- Add click “add” after setting the start and end addresses. Then the set data range will be listed in the data set list.
- Modify range when the start and end address need to modified, please change the start or end address, then click modify range, the following message will appear, please click ok.

- Modify data modify the register data in the set range.

■ Set the data of PFW.

Choose the PFW register address range and click “modify data” or double click the PFW address range. Then the following window will appear.

	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9
PFW[000000400]	0	0	0	0	0	0	0	0	0	0
PFW[000000410]	0	0	0	0	0	0	0	0	0	0
PFW[000000420]	0	0	0	0	0	0	0	0	0	0
PFW[000000430]	0	0	0	0	0	0	0	0	0	0
PFW[000000440]	0	0	0	0	0	0	0	0	0	0
PFW[000000450]	0	0	0	0	0	0	0			

Display
☒ Dec ☐ Hex

Reset 0 Set FF OK Cancel

Display data can be decimal or hex format.

Reset 0: set all the data to 0.

Set FF: set all the data to 65535(HFF).



The first address of data begins with PFW256, and PFW0~PFW255 is internal system data which is not allowed to modify. Specific content please refer to the chapter 5.

11. Setting

■ Parameter



- **Screen** Define the start screen No. when the HMI start. When downloading and repowering, the first screen is generally the main screen or the most used screen.
- **Password** password has the function of protecting data to improve security of program. Project password has nine levels. The range is from level 1 to 9. The first level is the lowest priority, and the 9th level is the highest priority). Level 9 password can open all the password from level 1 to 9. Level 1 only can open its own password. Level 2 can open level 1 and 2 password...
- **Screen save** When there is no operation for a long time, the HMI will close the backlight or jump into the assigned screen.

Latency time you can choose the waiting time according to your request or you can also choose no screen protection.

Close LCD when time is up to your waiting time, the backlight will be closed.

Show screen when the time is over, it will jump to the certain screen.

■ Alternation

The 'Project Set' dialog box is shown with the 'Device' tab selected. It contains two main sections: 'Change Screen Control' and 'Report Current Screen ID'. Each section has a 'Station' group with 'Device' (PLC Port), 'VirStaNO' (0), and 'Station' (1). Below this is an 'Object' group with 'Object' (D, 0) and an 'Indirect' checkbox. At the bottom are 'OK' and 'Cancel' buttons.

- Change screen control jump screen according to the data of register; for example, the register data is 10, it means to jump to screen ID10. System will clear the data of register to 0 after jumping screen.

Device current equipment port of communicating

Virstano communication equipment address No.

Object set the object style and address No. of register controlling screen transform.

Station No. Connected equipment No.

Indirect current register address changes by the data of indirect designated register.

$Dx[Dy]=D[x+Dy \text{ data}]$, (x, y=0, 1, 2, 3.....)

- report current screen ID display the number of current screen. for example, if the current screen is 7, the register will display 7.

Device current equipment port of communicating

Virstano communication equipment address No.

Object set the object style and address No. of reporting current screen number register.

Station No. Connected equipment No.


Indirect current register address changes by the data of indirect designated register.

$Dx[Dy]=D[x+Dy \text{ data}]$, (x, y=0, 1, 2, 3.....)



virtual station: it is not open to use for all components. Follow-up no longer need.

■ clock

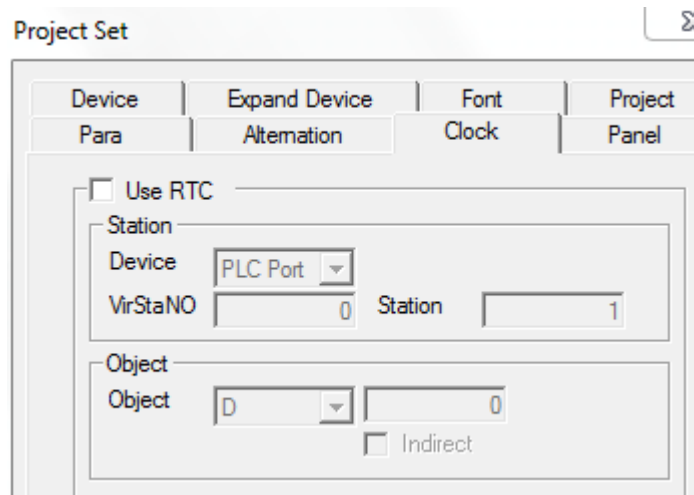

- Use RTC this function will export current time to related equipment for saving data.
 - Device current equipment port of communicating
 - Virstano communication equipment address No.
 - object set the object style and first address No. of exporting clock register; if the address is set to D0, D0~D6 will display year, month, day, hour, minute, second and week. They occupy seven register addresses
 - station connected equipment No.
 - indirect current register address will change by the data of indirect designated register.
- $Dx[Dy]=D[x+Dy \text{ data}]$, (x, y=0, 1, 2, 3.....)



Time display is in hex format.

■ Panel

- Model display current HMI types. If you want to modify the display type and choose new display type, please click “ok” to make it effective.
- description display current screen size and pixel;
- Set parameter set the internal spaces of HMI and you can modify the number of PFW register and PSW register.

Parameter	Value
PFW Num	4096
PSB Num	1024
VisPSW Num	4096
PriPSW Num	4096
Cache Num	1

PFW number set the total number of PFW in storage area

PSB number set the total number of PSB in storage area

Visible PSW number normal PSW number. Such as data area of data input and display, and so on.

Invisible PSW number internal storage number of data. Such as the automatic data storage area of historical trend diagram and real-time trend diagram.

Cache number number of PFW data cache register



Specific contents of PSW, PFW, PSB, please refer to the fifth chapter.

➤ Zoom when you are changing display type. Proportional relationship of component's width and height size and display size in the screen.

Same size width and height value of components unchanged

Same ratio zoom the width and height value of components according to aspect ratio of display.

Small ratio zoom the width and height value of component according to the lowest aspect ratio of display.

Big ratio zoom the width and height value of component according to the highest aspect ratio of display.

■ Device

➤ Single control system is one screen one machine or one screen many machines. Adjust HMI to unit mode.

➤ Host net control system is many screens one machine or many screens many machines. This HMI is in the master mode.

➤ Slave net control system is many screens one machine or many screens many machines. This HMI is in the slave mode.

➤ PLC port

Model PLC port connected equipment type

Parameter bit rate, data bit, verification mode, stop bit display. Click “...” to modify parameters.


➤ Download port

Model Download port connected equipment type. “Don’t use Download port” in default situation. It means that Download doesn’t participate in communication of external equipment.

Parameters bit rate, data bit, verification mode, stop bit display. Click “...” to modify parameter.


■ Expand device

This content is mainly related to system attribute of HMI and equipment which is connected with HMI by expanded port.

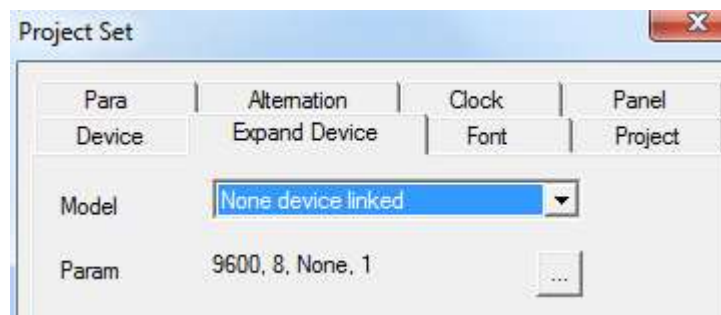

■ Font


This function is used to set input font of project screen. The font can be modified by “settings”.

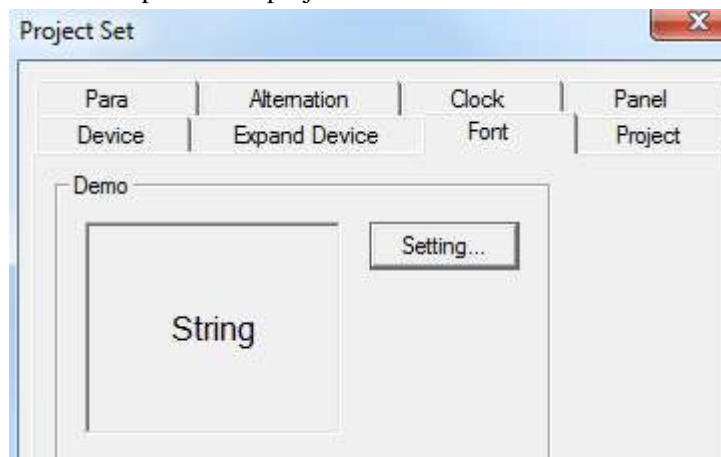

This setting is only effective for input real-time event display and historical event display of components.

■ project

This attribute records project informations, such as name, writer and remarks of this project.

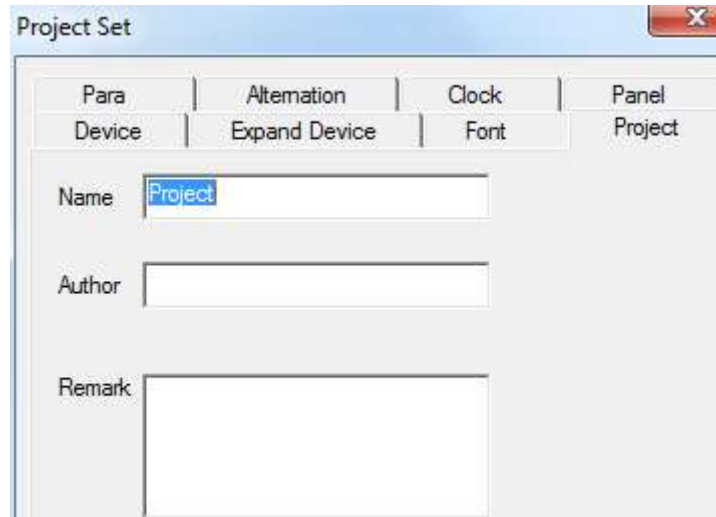


12. Build SCADA

Its function is the same to on-line simulation.

Steps:

Open “file/build SCADA”. Please choose saving path. The AutoWin file will be generated.

Double click “ AutoWin.exe”, then you can simulate the HMI project in the software.



please refer to chapter 2-4 for details.

13. Last


If you have opened or edited some projects recently, software will save names of these projects automatically. It will help you find them faster and you don’t need to check their paths any more. Please you can click the editing project name to edit.


14. Exit


This function is used to exit MOP Soft editing software, but it is different from the “close” operation. If you don’t save the project, the saving window will appear to prevent losing operation.

3-3-2. Edit

Editing menu is used for editing component. “cut, copy, paste and cancel” is corresponding to shortcuts of standard tool bar. As the following picture:

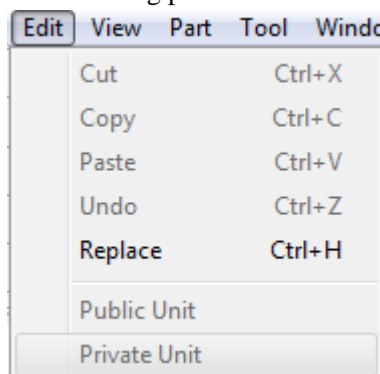


 from left to right: cut, copy, paste and cancel

 from left to right: public unit, private unit




Please refer to chapter 4-1-1 for details.

■ Replacement

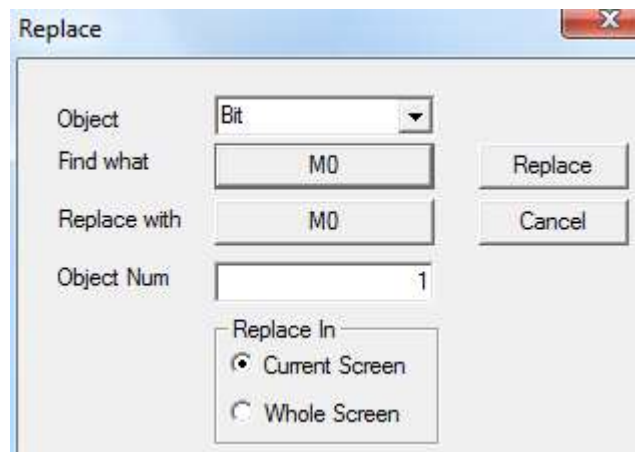

- Object the replaced object type: bit, register, nregister
- Find what the first address of primary object that you want to replace.
- Replace with replace first address of new object
- Object number replace the number of “bit” or “register”
- Replace in
 - Current screen replace only in the scape of current screen
 - Whole screen replace all the screens of this project


For example: replace D5 with D0 of current screen. Please set as following picture. Click “replace” and then click “finish”.

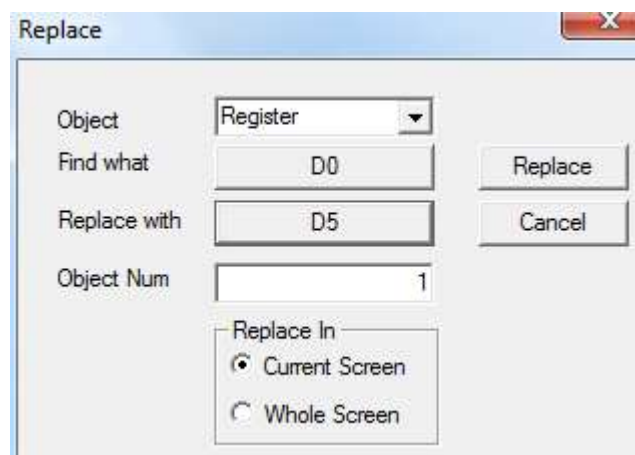

3-3-3. View


It is used for displaying tools and columns. It contains standard bar, status bar, project area,

drawing, zoom, status change, operate, part, align, advance, advance2, panel and CAD. Advance and advance2 display grayish white. It indicates that it is not activated. Only when the MOP Soft editing software is in the status of advance function, it can be activated. CAD instructions please refer to “intelligent flexible manufacture system manual based on CAD”.

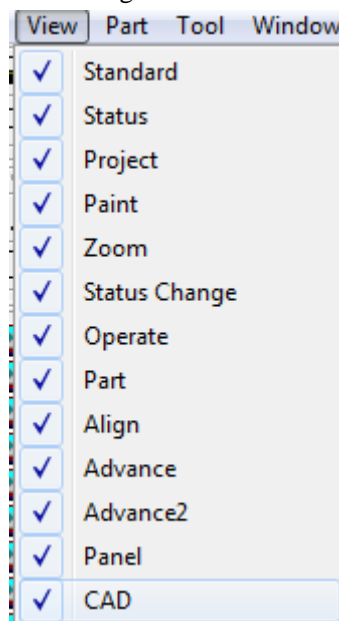

3-3-4. Part

Part menu is used to edit part. It is corresponding to icons in tool bar.

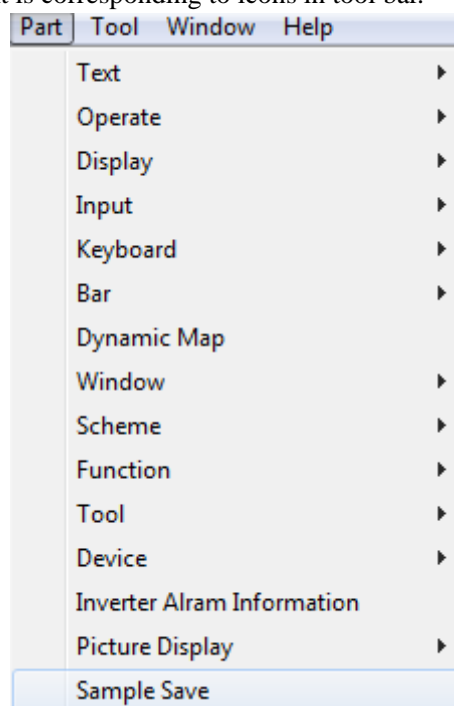




Please refer to chapter 4-3 for details.


3-3-5. Tool

This content contains basic tool segment, rectangle, ellipse, fold, map and options. The front five options are corresponding to tools in drawing bar. You can make the frame, polygon block and so on by cutshorts in drawing bar.

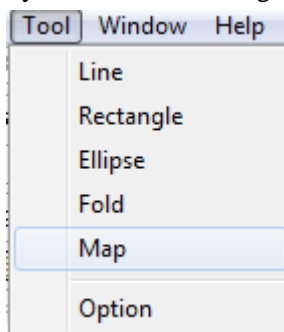


■ Option

This content refers to special settings, such as displaying, downloading data and uploading data, etc.

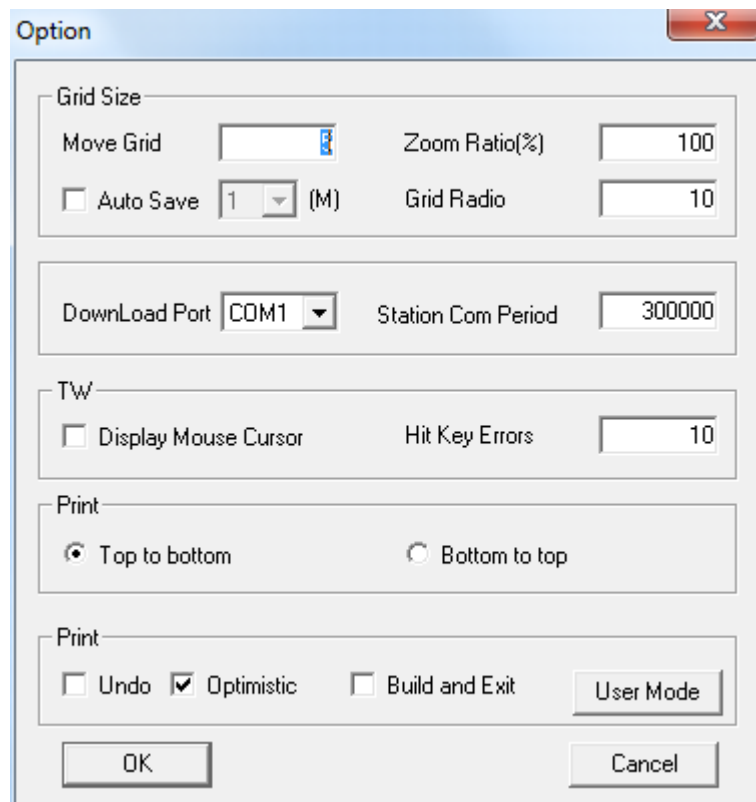


- grid size
 - move grid least grid number when moving object.
 - Grid ratio set density of grid in screen. The smaller values are, the denser they will be.
- For example: when the “display grid” is changed from “20” to “5”, difference is as follow:

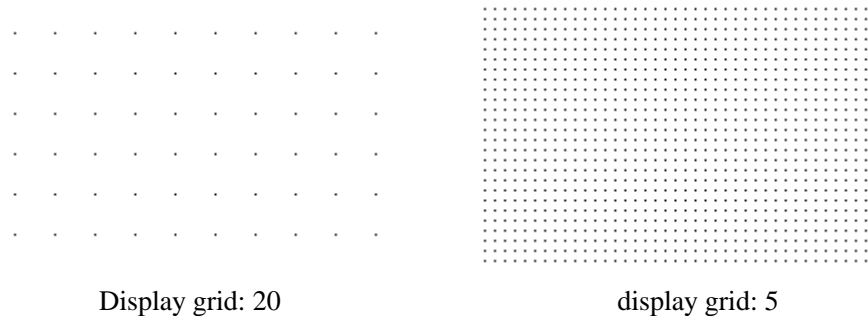

- Auto save you can set the automatic saving time to prevent losing data when launching this option. You can also save project data manually without launching this option.
- Download port
 - default communicatin port first choice when you are downloading data.
- TW
 - Display mouse cursor check if display mouse in the screen according to TW series.
 - Hit key errors touch sensitivity
- print
 - top to bottom/bottom to top set printing direction
- other
 - Undo enable the undo operations
 - optimize enable optimization operation for download serial port
 - build and exit enable compiling function block when exiting.
 - User mode open or close advance function.

3-3-6. window

Window menu is mainly used to edit screen window. It contains create window, cascade, tile and arrange icon.

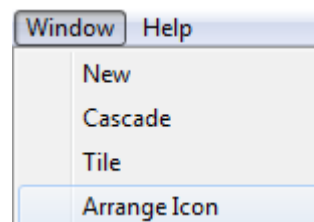


- New creat a new screen
- cascade arrange all the opening screen in the mode of cascade
- tile arrange all the opening screen in the mode of tile
- arrange icons arrange the icons

3-3-7. Help

Version and copyright information of software or click “?” icon.

3-4. Screen editing area

You can right click the part in the screen editing area.

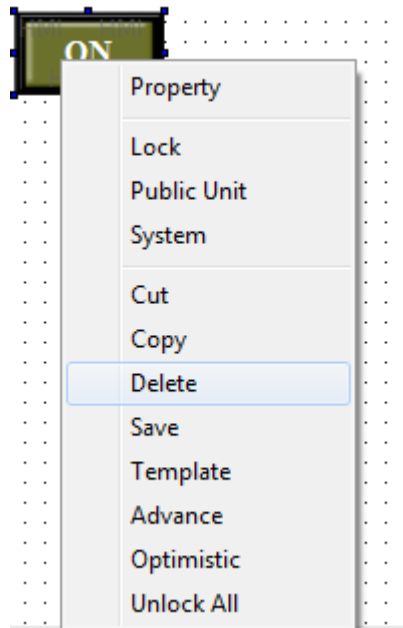

- Property part setting, such as “display”, “font”, “color” and “location”, etc.
- Lock relative position lock. After operation, this component can not be moved. You can realize the moving function by “unlock”.
- Public unit the unit can be used in all the screen
- cut cut the part
- copy copy the part
- delete delete the part
- save save current part into material store, and you can directly use it from material store.

3-5. Tool bar

Tool bar refers to all the operations about parts and screen. Relative font will appear when you move the mouse to relative component in operation. The specific distribution is as follows:



Drawing tool bar: line, animation, webpage, etc. webpage can only operate simulation or configuration.



Material store: add and save materials which are manufactured at the time of editing project.



Parts tool bar: it contains font, operation key, display, input, keypad, bar, dynamic map, window, recipe, function, continue column map, etc.



specific content about parts tool bar please refer to the fourth chapter.




Display tool bar: it contains basic tool, equipment, inverter alarm information, picture display, saving collected data, etc.



Standard tool bar: it contains new, open, save, cut, copy, paste, cancel, about, etc.



Status tool bar: it contains button status, animation status, etc.

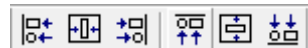

Picture adjustment tool bar: it contains align left, align centre, align right, align top, align middle, align bottom, etc.



Operation tool bar: it contains public unit, private unit, create screen, screen attribute, delete, off-line simulation, on-line simulation, download, upload, complete download, etc.



Zoom tool bar: it contains zoom out screen, display proportion selection, zoom in screen, grid display, etc.


3-6. Status bar

Display current HMI type, PLC port communication device; coordinate position of the mouse in the editing screen, etc.

4 Parts


4-1. Overall operation

Overall operation will main refer to the following tool bar.

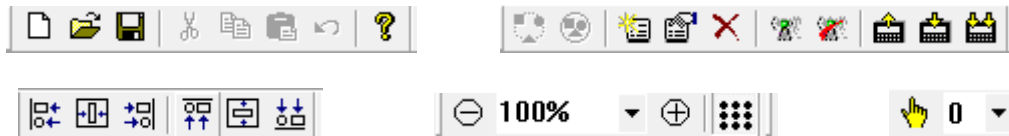


4-1-1. Standard tool bar

1. cut “”

Choose target object and cut it to shear plate. Choose target element or many elements at operation, then click “”.

 2. copy“”

Choose target element and copy it. Choose target element or many elements at operation, then click “”.

The difference with cut is: the cut operation makes the original component not exist, but the original component still exists after copy operation.





3. paste“”

It is the operation of “cut” and “copy”. When you do “paste” operation after cutting or coping object element, you have moved or copied successfully.

4. cancel“”

Recover historical operation by “cancel” button. This operation can not be used aquiescently. You need to choose “cancel”of“option” in the “tool” manually.



Specific content about “  ” and “”, please refer to chapter 3-3-1 and 3-3-7.

4-1-2. Operation tool bar



Specific content about “     ” please refer to the second chapter.

1. Public unit “”

The part can be used to all project screens. It is the same to copying part to all screens.


2. Private unit “”


This part is only effective for current screen. It is the same to deleting the same part which is copied to other page.

3. Create screen“”

Specific content please refer to chapter 3-2-1

4. Screen attribute “”

Choose the screen name which is needed to be modified in project bar. Click “” icon in the overall tool bar to open catalogue box of screen attribute, then you can modify screen attribute in it.

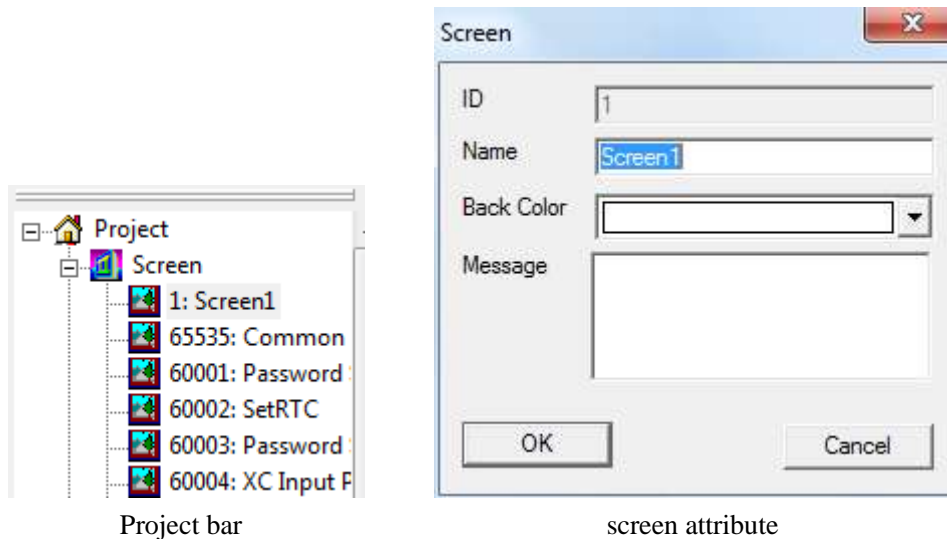

For the built screen, its number can not be modified.

5. delete screen “”


Specific content please refer to chapter 3-2-3.

4-1-3. Picture adjustment


It is mainly used to arrange globality of chosed elements.



“Align tool bar” can only be used when two or more than two elements are chosed at the same time. If not, the tool bar will be grey. It means that it can not be used.

For example: as the following picture, elements don't arrange in a line in the screen. You can choose all of them and click align midde “”.


Before align

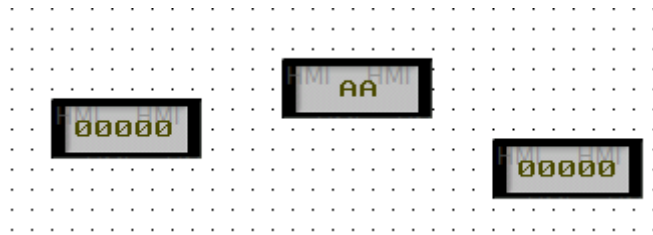




After alignment



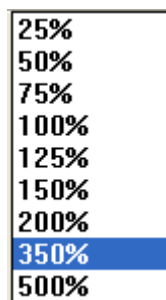


4-1-4. Zoom tool bar



- edit display proportion of screen
-  zoom out editing screen according to proportion
-  zoom in editing screen according to proportion
-  display grid

4-1-5. Status tool bar

1. “” can reverse the status.

For example: indicator light “” in the screen. Choose this element to reverse the status of ON and OFF by “”.

 


OFF status



ON status

2、“0” can choose the status of dynamic picture. There are 32 kinds of status display.

For example: it is dynamic picture “” in the screen. You can display relative status in the screen by choosing status number. Below is the display of “0” status and “20” status.



“0”status



“20”status

 



4-2. Drawing tool bar




Drawing tool bar contains line, arc, rectangle, round rectangle, ellipse, fold, polygon block, frame, map, web, move animal, rotate animal. Web is used in configuration to log in a website or open a designated path. Here we don't describe detailly. Move animal and rotate animal is referred to the application of advance function. Specific instructions please refer to “HMI advance function manual”.


4-2-1. Line

1. Click the “” icon in the drawing tool bar, and drag the left mouse. Then move the cursor to the end to release the left mouse. If you need to cancel this operation, please press “ESC” or click the right mouse.

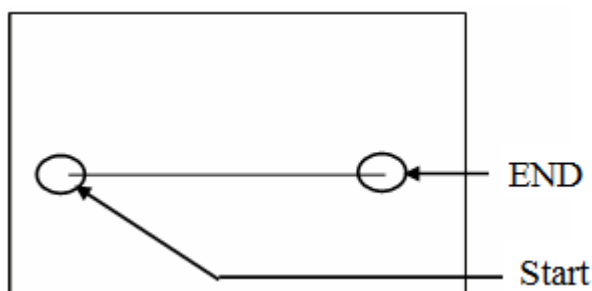


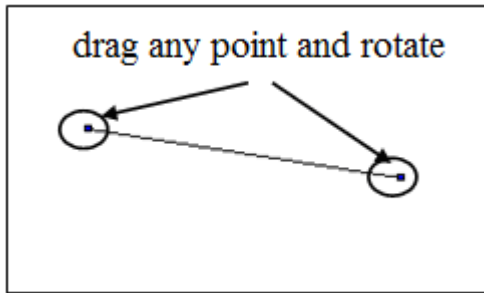

This line can move location, change the size, rotate angle, etc.


2. Double click “line” or choose “line”, then click right mouse. Choose “attribute” or set the attribute by “” button.

■ line

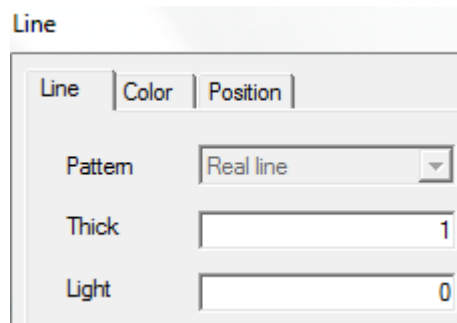


- Pattern “real line”, it can not be modified.
- Thick change thick of line according to the value. The greater the value, the greater the width. (integer between 0 and 255)
- light without this function now

■ color

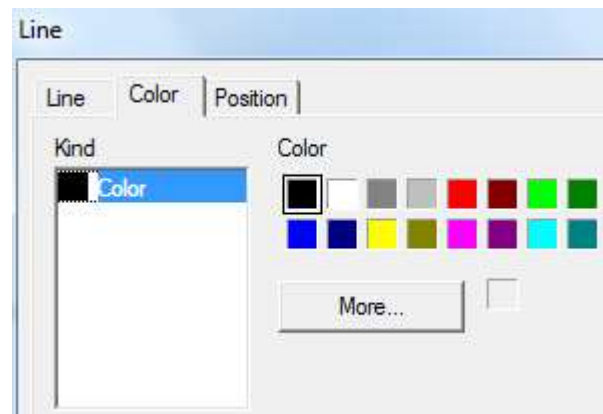

- kind choose the color type which is need to be modified.
- color set the color of the kind.

■ position

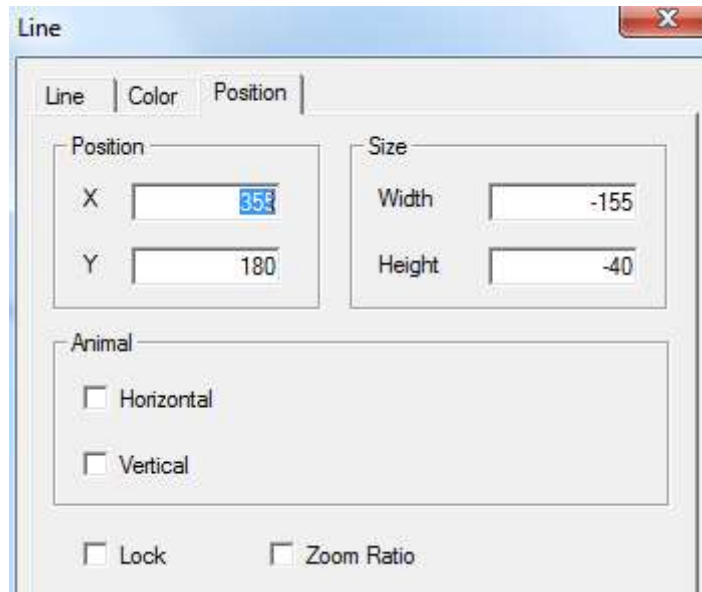

- position use the upper-left point as origin of coordinates(0, 0) , and set the X, Y coordinate values
 - X position set the coordinate value of X axle
 - Y position set the coordinate value of Y axle
- size set the width and height of line
 - width (W) set the width of line
 - height (H) set the height of line
- animal set if the line can be moved

horizontal set horizontal display position of line according to the value of register.
Modify the coordinate value of X axle.


$X \text{ axle coordinate value} = X \text{ position} + \text{current value of register}$


vertical set the vertical display position of line according to the value of register.
Modify the coordinate value of Y axle.

$Y \text{ axle coordinate value} = Y \text{ position} + \text{current value of register}$


- lock set if the line can be moved when you are editing.
- Zoom ratio set if it can be zoomed according to its proportion when you are changing the size.

4-2-2. Arc


1. Click the “” icon in the drawing tool bar. Drag the left mouse and move the cursor to the end. Release the left mouse to finish it.

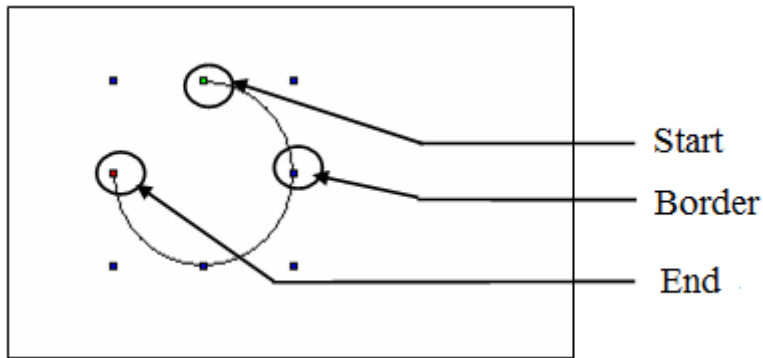

- Start point, end point move this point to change length of arc
- Boundary point move boundary point to change the width and length of arc


2、double click “arc” or click right mouse, and choose “attribute” or set the attribute by “” button.

■ line

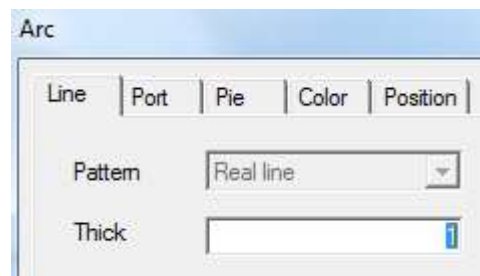

- pattern “real line”, it can not be modified.
- thick change the width of line according to the value. The greater the value, the greater the width(integer between 0 and 255).

■ Port

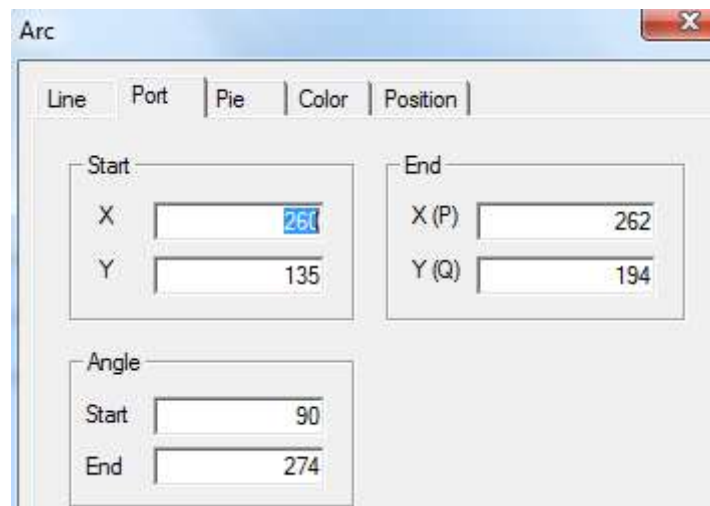


- start point set to display the horizontal and vertical coordinate position of arc.
- End point set to display the horizontal and vertical coordinate position of arc.
- Angle set the angle of arc.
- Starting angle the central point of arc is the basic point. Make the direction of


horizontal line crossing the basic point as the horizontal 0° . The angle cross the horizontal line and connect line of starting point and basic point.

Ending angle the ending angle is the angle crossing the horizontal 0° and connection line of basic point and ending point.


As the following picture, you can measure angles of the starting point and ending point which are 90° and 180° .

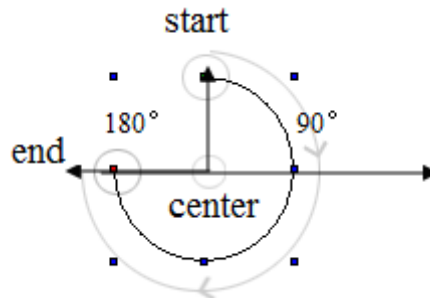


■ pie

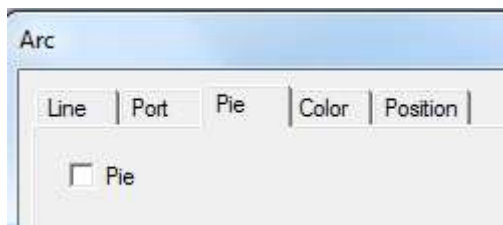

- pie connect starting point, ending point and central point of arc to be a closed graph which is named pie.

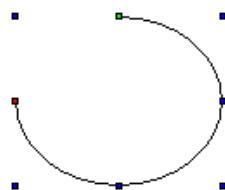


Not checked "pie"

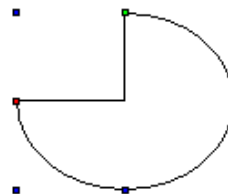

checked "pie"


■ fill

After choose the "pie", choose this component again and right click it to choose "attribute". you can also double click this component, and you will find that the title of attribute catalogue box has changed from "arc" to "pie" and add the option of "fill". As the following picture.

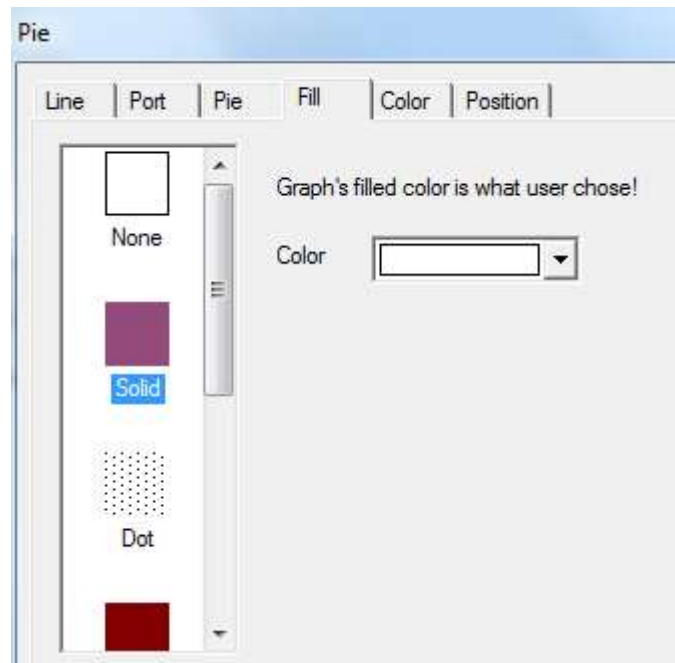


- None the interior of pie is performed as transparent.
- Solid choose the target tone from the pull-down list and you can choose the tone you need or customer color from “more”.
- Dot fill the internal of pie in the form of punctiform pattern. The greater the points, the greater the intensive degree;
- Meek choose target tone and the desalt proportion of starting tone should be 0%. When the desalt proportion is positive value, the tone will be desalted. When the proportion is negative value, the tone will be deepening.
- Hatch the internal of pie is filled in the form of pattern.
 Origin point coordinate the origin point position of pattern contains X ordinate and Y ordinate.
 Foreground color choose the own tone of pattern
 Background color choose the filled bottom color of pattern.
- Linear
 First color the tone choosing of starting point of graph
 Last color the tone choosing of ending point of graph
 Direction of gradual change you can choose the gradual change type and direction of color. You can also set the angle value of “angle setting”.
 style color the tone of color is as same as starting color
 style type choose the filling mode of tone
- Centerar
 Central color choose the central tone of filling object
 Border color choose the border color of filling object
 Central point X-% the relative position of central point X axle
 Central point Y-% the relative position of central point Y axle
 Ratio X-% X direction proportion occupied by central point
 RatioY-% Y direction proportion occupied by central point

■ color

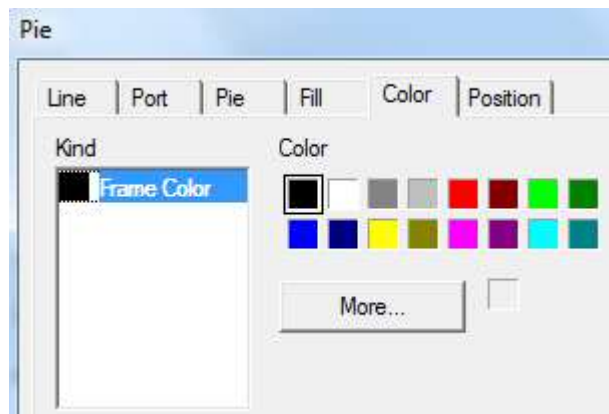


- kind choose the color type which need to be modified
- color set the type color which is chosen by you


■ position

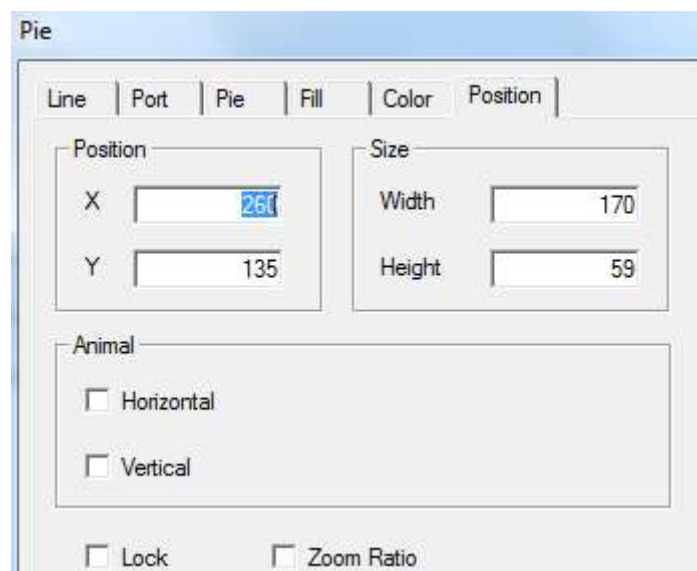

- position make the upper left point to be the origin point coordinate (0, 0) , and set the coordinate value of arc X and Y.
 - X position set the axle coordinate value of arc X
 - Y position set the axle coordinate value of arc Y
- size set the width and height of arc
 - width (W) set the width of arc
 - height (H) set the height of arc
- animal set if the arc can be moved
 - Horizontal set the horizontal position of arc according to the register value. Modify the X axle coordinate value. X axle coordinate value=X position+current value of register
 - Vertical set the vertical position of arc according to register value. Modify the Y axle coordinate value. Y axle coordinate value=Y position+current value of register
- Lock set if the arc can be moved when editing.
- Zoom ratio set if it can be zoomed when editing its size.

 
4-2-3. Rectangle

1. Click the “” icon in the drawing tool bar. Drag the left mouse at the starting point. Move the cursor to the end and release the left mouse to finish it.

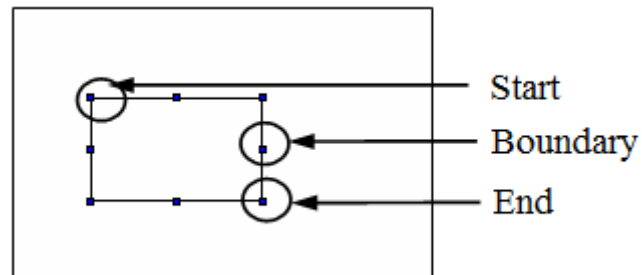


➤ Starting point and ending point move this point to change the length and width of rectangle by equal proportion.

➤ Boundary point move this point to change the width or height of rectangle.

2. Double click “rectangle” or choose “rectangle” and click the right mouse. Choose “attribute” or set the attribute by “” button.


■ line

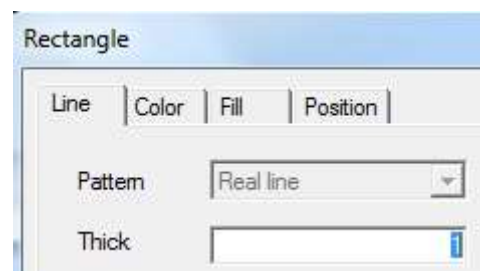

➤ Pattern it is “real line”. It can not be modified

➤ Thick change the line thick according to the value. The greater the value, the greater the width. (integer between 0~255)


■ color

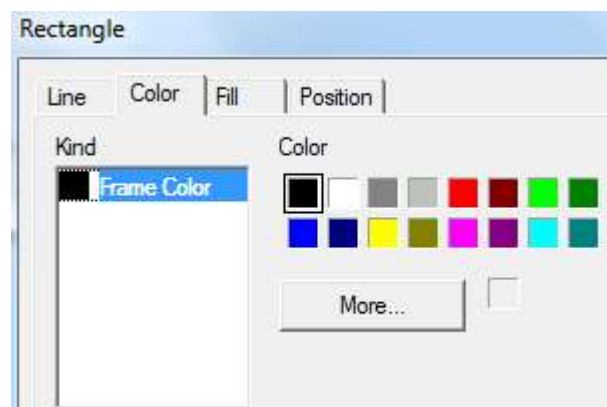

➤ kind choose the color type which need to be modified.


➤ color set the color of the chosed type

■ fill

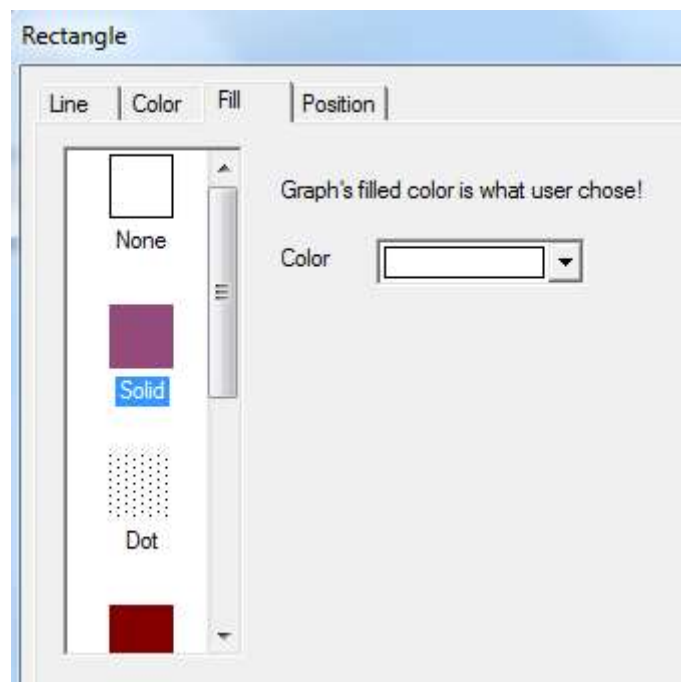


- None the interior of pie is performed as transparent.
- Solid choose the target tone from the pull-down list and you can choose the tone you need or customer color from “more”.
- Dot fill the internal of pie in the form of punctiform pattern. The greater the points, the greater the intensive degree;
- Meek choose target tone and the desalt proportion of starting tone should be 0%. When the desalt proportion is positive value, the tone will be desalted. When the proportion is negative value, the tone will be deepening.
- Hatch choose target tone and the desalt proportion of starting tone should be 0%. When the desalt proportion is positive value, the tone will be desalted. When the proportion is negative value, the tone will be deepen.
- Linear
 - Starting color the tone choosing of starting point of graph
 - Ending color the tone choosing of ending point of graph
 - Direction of gradual change you can choose the gradual change type and direction of color. You can also set the angle value of “angle setting”.
 - style color the tone of color is as same as starting color
 - style type choose the filling mode of tone
- Centerar
 - Central color choose the central tone of filling object
 - Border color choose the border color of filling object
 - Central point X-% the relative position of central point X axle
 - Central point Y-% the relative position of central point Y axle
 - Ratio X-% X direction proportion occupied by central point
 - Ratio Y-% Y direction proportion occupied by central point


■ position

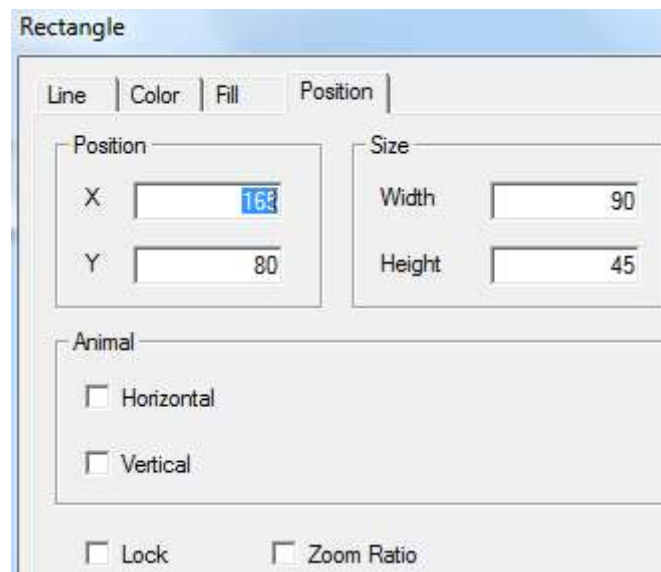


- position make the upper left point to be the origin point coordinate (0, 0) , and set the coordinate value of arc X and Y.
 - X position set the axle coordinate value of arc X
 - Y position set the axle coordinate value of arc Y
- size set the width and height of arc
 - width (W) set the width of arc
 - height (H) set the height of arc
- animation set if the arc can be moved
 - Horizontal set the horizontal position of arc according to the register value. Modify the X axle coordinate value. X axle coordinate value=X position+current value of register
 - Vertical set the vertical position of arc according to register value. Modify the Y axle coordinate value. Y axle coordinate value=Y position+current value of register
- Lock set if the arc can be moved when editing.
- Zoom ratio set if it can be zoomed when editing its size.

4-2-4. Round rectangle


1. Click the “” icon in the drawing tool bar. Drag the left mouse at the starting point. Move the cursor to the ending point and release the left mouse to finish it.

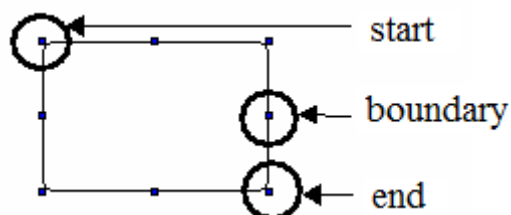

- Starting point and ending point move this point to change the length and width of rectangle by equal proportion.
- Boundary point move this point to change the width or height of round rectangle.


2. Double click the “round rectangle” or choose “round rectangle” and click right mouse to choose “attribute” or set the attribute by “” button.

■ line

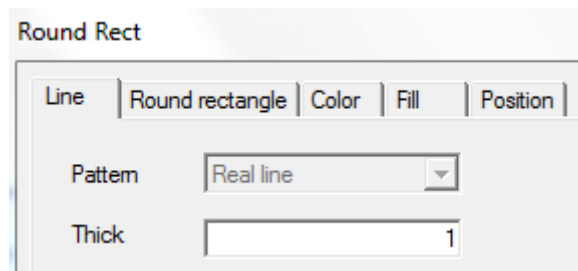


- pattern It is “real line” and can not be modified
- thick change the width of line according to value. The greater the value, the greater the width. (integer between 0~255)

■ round rectangle

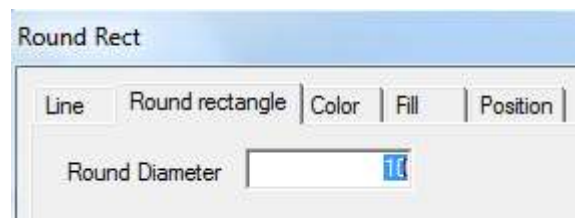


- Round diameter modify by inputing value. Greater the value, greater the round diameter.

■ color

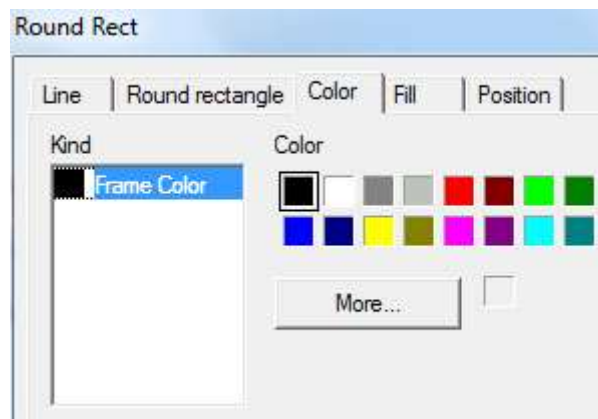

- kind choose the type of color which need to modify
- color set the color of kind

■ fill

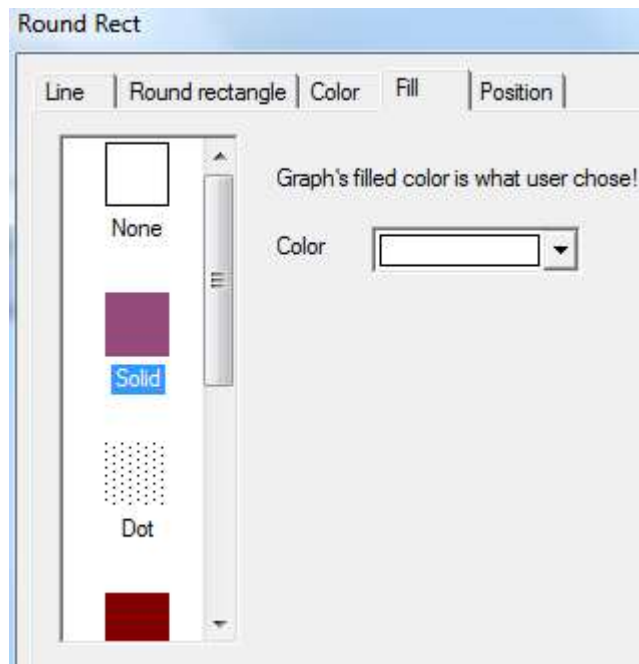

- none graph's inside will lucidly display
- solid choose the target color by pull-down list. You can choose the color which you chose by "more".
- dot fill the graph's inside with dots. Dot's value decides the dot density.
- meek choose the target color. Desalt proportion of original color is 0%. When the proportion is positive value, the color will be desalted. When it is negative value, the color will be deepening.
- hatch fill round rectangle's inside with hatch.
 - Origin coordinate graph's origin coordinate. It contains positions of horizontal and vertical coordinate.
 - Fore color choose the graph's color
 - Back color choose the graph's back color
- linear
 - first color choose the graph's first color
 - last color choose the graph's last color
 - linear direction you can choose the linear type and direction of color and also can set angle value by "set angle".
 - Style color color tone is as same as first color.
 - Style kind choose the filling mode.
- centerar
 - center color choose the center color of filling object
 - brink color choose the brink color of filling object
 - center pointX-percentage relative position of center point X
 - center pointY- percentage relative position of center point Y
 - ratioX- percentage X direction ratio occupied by center point
 - ratioY- percentage Y direction ratio occupied by center point

 
■ position


- position make the upper left point in screen as the origin point (0, 0) and set X, Y coordinate value of round rectangle.
 - X position set X coordinate value of round rectangle.
 - Y position set Y coordinate value of round rectangle.
- size set the width and height of round rectangle.
 - width (W) set the width of round rectangle
 - height (H) set the height of round rectangle
- animal set if the round rectangle can be moved
 - Horizontal set the horizontal position of round rectangle according to register value, modifying the X coordinate value.


$$\text{X coordinate value} = \text{X position} + \text{current value of register}$$
 - vertical set the vertical position of round rectangle according to register value, modifying the Y coordinate value.

$$\text{Y coordinate value} = \text{Y position} + \text{current register value}$$
- lock set if round rectangle can be moved when editing it.
- Zoom proportion set if it can be zoomed when changing its size. Now this function can not work.


4-2-5. Ellipse

1. Click “” icon in drawing tool bar. Drag the left mouse at the first point. Move the cursor to the end and release left mouse to finish it.

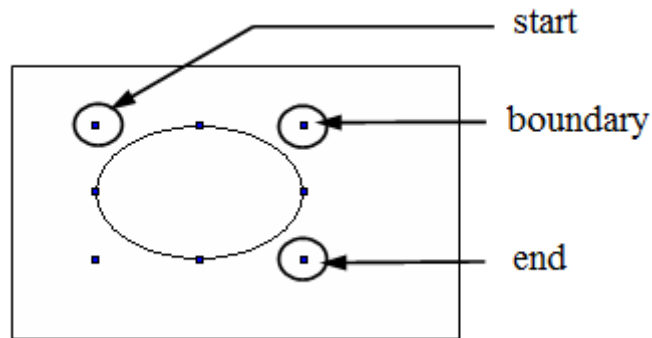


- First point, boundary point, last point edit width or height of ellipse by these points
- 2. Double click “ellipse”, or choose “ellipse” and right click the mouse. Then choose “attribute” or set attribute by “” button.

■ line

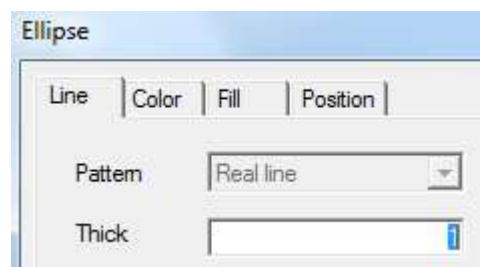


- Pattern it is “real line” which can not be modified.
- Thick change width of line according to value. Greater the value, greater the width. (integer between 0~255)

■ color

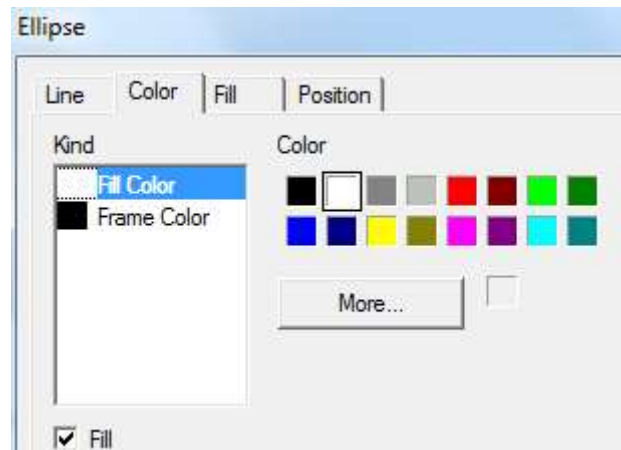


- kind choose the color kind which need to be modified.
- color set the color of the kind
- fill set if ellipse need to be filled with fill color.

■ fill

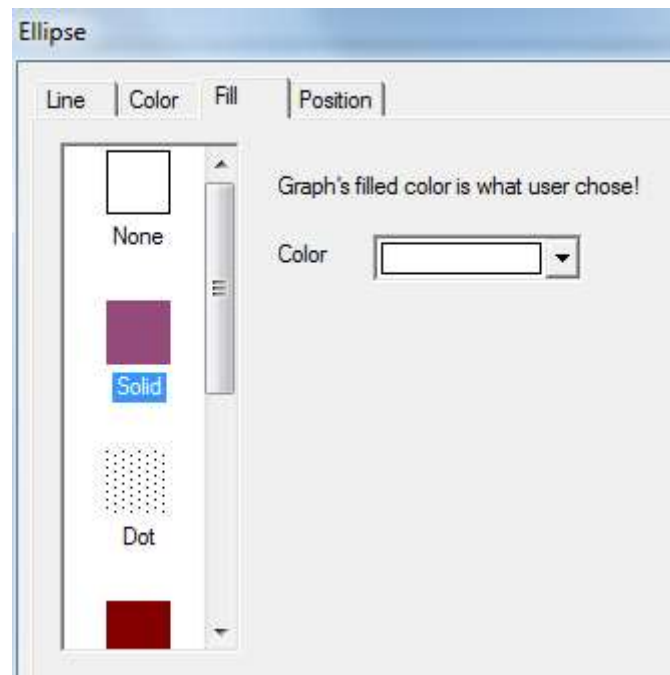

- none graph's inside will lucidly display
- solid choose the target color by pull-down list. You can choose the color which you chose by "more".
- dot fill the graph's inside with dots. Dot's value decide the dot density.
- meek choose the target color. Desalt proportion of original color is 0%. When the proportion is positive value, the color will be desalted. When it is negative value, the color will be deepen.
- hatch fill round rectangle's inside with hatch.
 Origin coordinate graph's origin coordinate. It contains positions of horizontal and vertical coordinate.
- Fore color choose the graph's color
- Back color choose the graph's back color
- linear
 first color choose the graph's first color
- last color choose the graph's last color
- linear direction you can choose the linear type and direction of color and also can set aple value by "set angle".
- Style color color tone is as same as first color.
- Style kind choose the filling mode.
- centerar
 center color choose the center color of filling object
- brink color choose the brink color of filling object
- center pointX- percentage relative position of center point X
- center pointY- percentage relative position of center point Y
- ratioX- percentage X direction ratio occupied by center point
- ratioY- percentage Y direction ratio occupied by center point


■ position

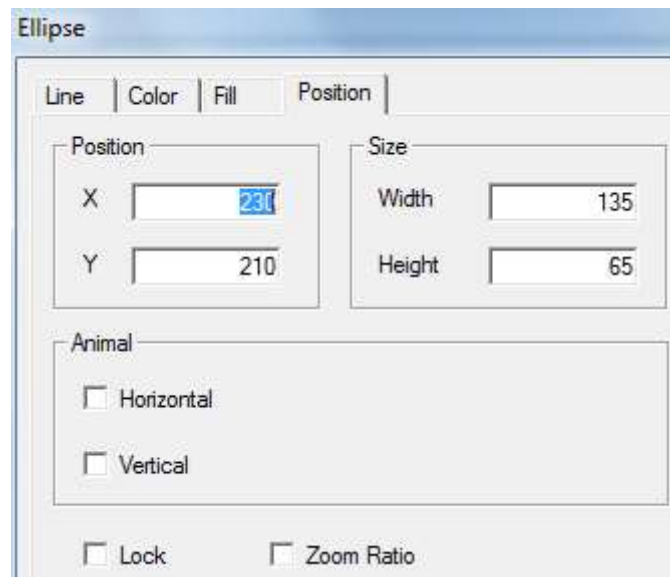



- position make the upper left point in screen as the origin point (0, 0) and set X, Y coordinate value of round rectangle.
 - X position set X coordinate value of round rectangle.
 - Y position set Y coordinate value of round rectangle.
- size set the width and height of round rectangle.
 - width (W) set the width of round rectangle
 - height (H) set the height of round rectangle
- animal set if the round rectangle can be moved
 - Horizontal set the horizontal position of round rectangle according to register value, modifying the X coordinate value.
 - $X \text{ coordinate value} = X \text{ position} + \text{current value of register}$
 - vertical set the vertical position of round rectangle according to register value, modifying the Y coordinate value.
 - $Y \text{ coordinate value} = Y \text{ position} + \text{current register value}$
- Lock set if round rectangle can be moved when editing it.
- Zoom proportion set if it can be zoomed when changing its size. Now this function can not work.

4-2-6. Fold - polygon


The difference between fold and polygon is whether it is closed.

1. Click “” icon in the drawing tool bar and press left mouse at the first point. Move the cursor and confirm positions of endpoints. When it is the last endpoint, please click left mouse to finish it.

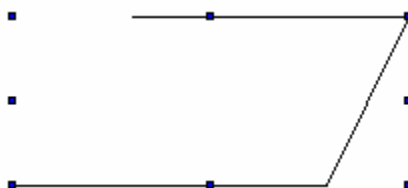


2. Double click “fold” or choose “fold”, then click right mouse to choose “attribute or set the attribute by “” button.

■ line

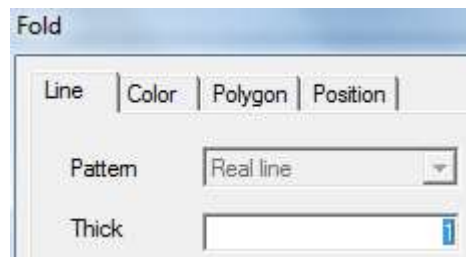


- Pattern it is “real line” which can not be modified.
- Thick change the width of line according to its value. Greater the width, greater the value. (integer between 0~255)

■ color

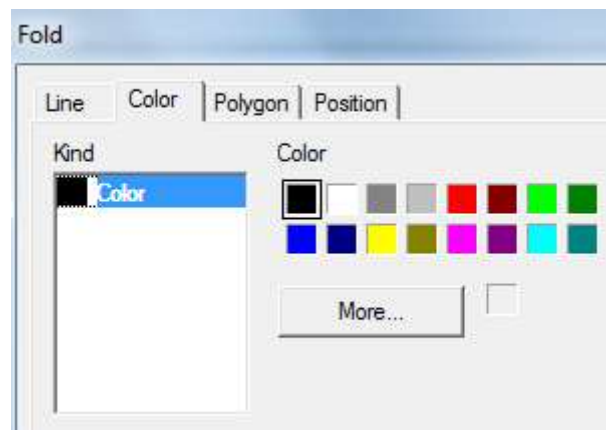


- kind choose the kind of color you want to modify
- color set the kind of color


■ polygon

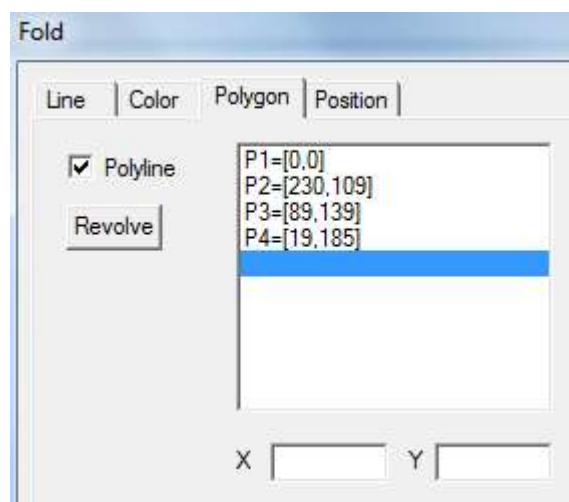

- **polyline** its mode is polyline. When you don't choose it, the polyline will connect first point and last point to be a polygon. Then it will fill the polygon area in default filling pattern.

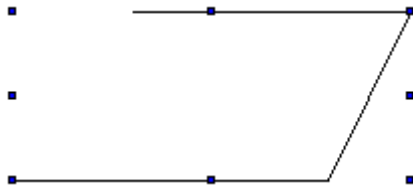


Choose "polygon"

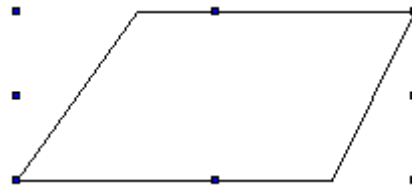

don't choose "polygon"


- **modify coordinate** set the first point as the starting point. List the coordinates in the form in the order according to paths. Choose the coordinate of object point. Input relative X, Y coordinates and press "enter" key to be effective.
- **revolve** click this button to set the revolve angle of polyline
click the "revolve" button in "polyline". Following catalogue box will appear

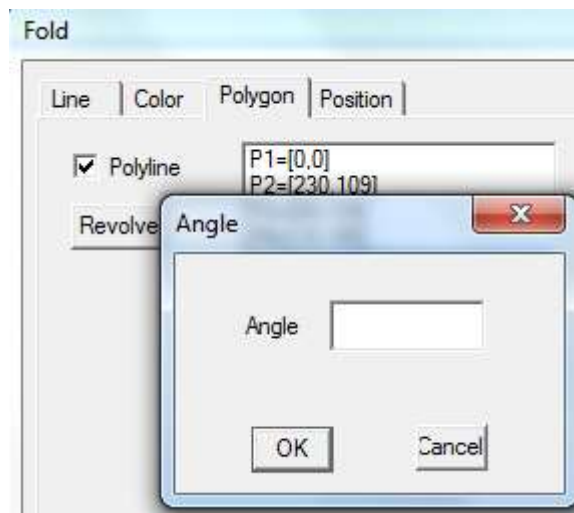

Input the value of target angle. (positive value is anticlockwise revolve and negative value is clockwise revolve) then you can click "confirm".


■ fill

Don't choose "fold" and confirm it. Then choose this component to click right mouse to choose "attribute" or double click this component directly. Then you will find that the title of catalogue box has been changed from fold to polygon. Add the "fill" option.

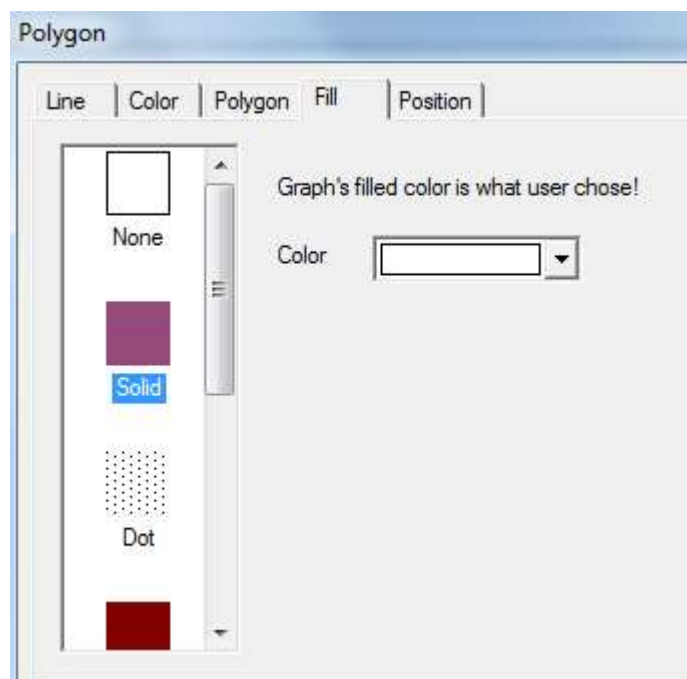

- none polygon's inside will lucidly display
- solid choose the target color by pull-down list. You can choose the color which you chose by "more".
- dot fill the graph's inside with dots. Dot's value decide the dot density.
- meek choose the target color. Desalt proportion of original color is 0%. When the proportion is positive value, the color will be desalted. When it is negative value, the color will be deepen.
- hatch fill round rectangle's inside with hatch.
 Origin coordinate graph's origin coordinate. It contains positions of horizontal and vertical coordinate.
- Fore color choose the graph's color
- Back color choose the graph's back color
- linear
 first color choose the graph's first color
 last color choose the graph's last color
 linear direction you can choose the linear type and direction of color and also can set angle value by "set angle".
 Style color color tone is as same as first color.
 Style kind choose the filling mode.
- centerar
 center color choose the center color of filling object
 brink color choose the brink color of filling object
 center pointX-percentage relative position of center point X
 center pointY- percentage relative position of center point Y
 ratioX- percentage X direction ratio occupied by center point
 ratioY- percentage Y direction ratio occupied by center point


■ position

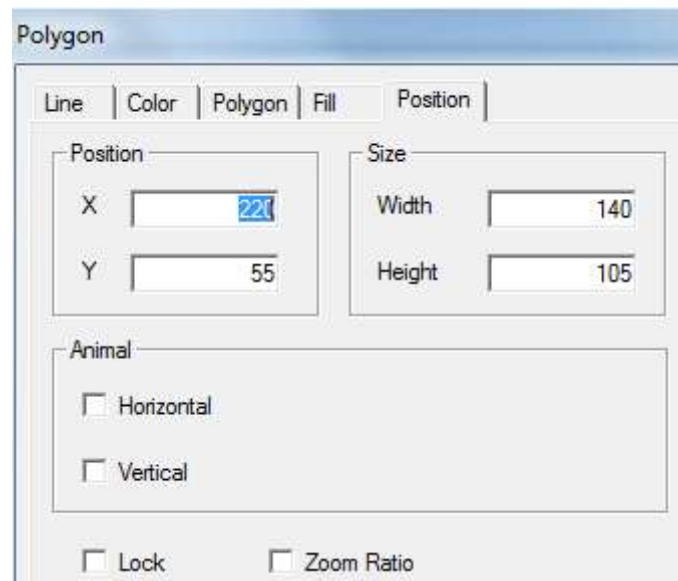



- position set the upper left point in the screen to coordinate point (0, 0) , and set the X and Y coordinate value of fold and polygon.
 - X position set the X coordinate value of fold and polygon.
 - Y position set the Y coordinate value of fold and polygon.
- size set the width and height of fold and polygon.
 - width (W) set the width of fold and polygon
 - height (H) set the height of fold and polygon
- animal0 set if the fold and polygon can be moved.
 - Horizontal set the horizontal position of fold and polygon according to register value, modifying X coordinate value.
 - X coordinate value X position+current value of register
 - Vertical set the vertical position of fold and polygon according to the register value, modifying Y coordinate value.
 - Y coordinate value=Y position+current value of register
- lock set if the fold and polygon can be moved when editing.
- Zoom proportion set if it can be zoomed when editing its size. This function can not work.

4-2-7. Block


Change the area size occupied by color block in the polygon by setting the block value.

1. Click “” icon in the drawing tool bar. Press left mouse at the first point and confirm the position of top point. Then loosen the left mouse and confirm the position of second point. According to top point number, do this operation repeatedly. Please double click left mouse at the end. At this time the end and the first point will connect automatically to finish the drawing of “block”.

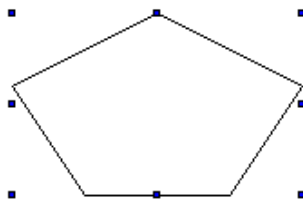

2. Double click “block” or choose “block” and click the right mouse to choose “attribute” or set the attribute by “” button.


■ Polygon block

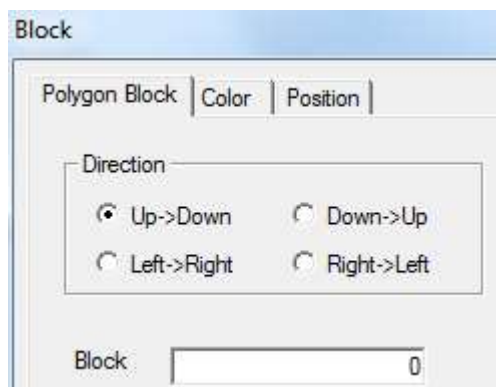


➤ Direction choose the filling direction of block.

➤ Block the value of block

For example: choose the direction “from up to down” and set the block value to “50”.

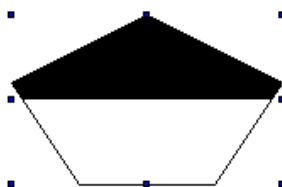


■ color

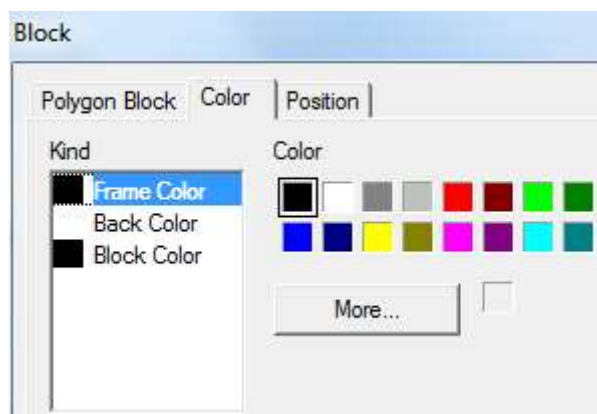

➤ kind choose the kind of color

➤ color set the color of the kind

■ position

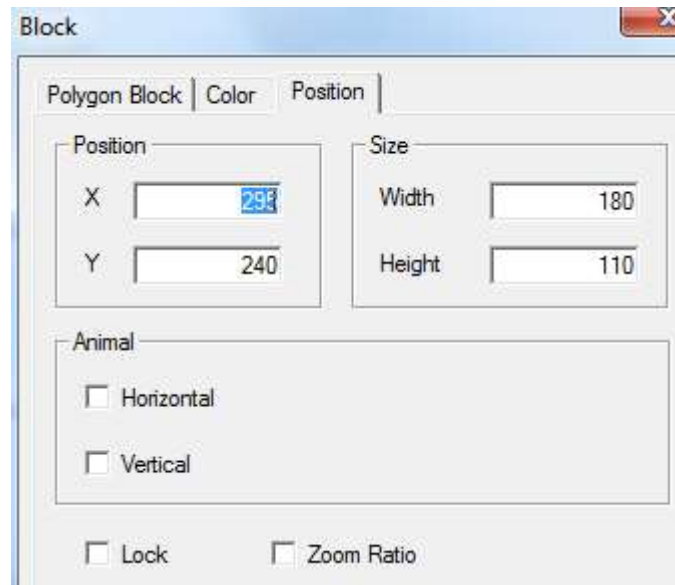



- position set the upper left point in the screen as the coordinate point (0, 0) , and set the X and Y coordinate value of block.
 - X position set the block X coordinate value.
 - Y position set the block Y coordinate value.
- size set the width and height of block
 - width (W) set the width of block
 - height (H) set the height of block
- animal set if the block can be moved
 - Horizontal movement set the horizontal position of block according to register value, modifying X coordinate value.

$$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$$
 - Vertical movement set the vertical position of block according to register value, modifying Y coordinate value.

$$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$$
- set if the block can be moved when editing .
- Zoom proportion set if the size can be zoomed when editing its size. This function can not work.

 4-2-8. Frame


1. Click the “” icon in the drawing tool bar. Keep pressing the left mouse at the first point and move the mouse to make a path of rectangle. Then loosen the left mouse assssss at the end point. No the frame has been finished.

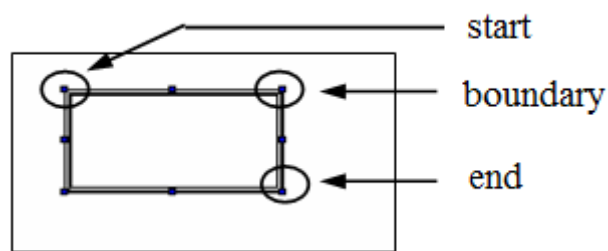

Edit the length, width and other attributes according to the modification of first point, boundary point and end point.


2. double click "frame" or choose "frame" and click right mouse to choose "attribute" or set the attribute by "📏" button.

■ color

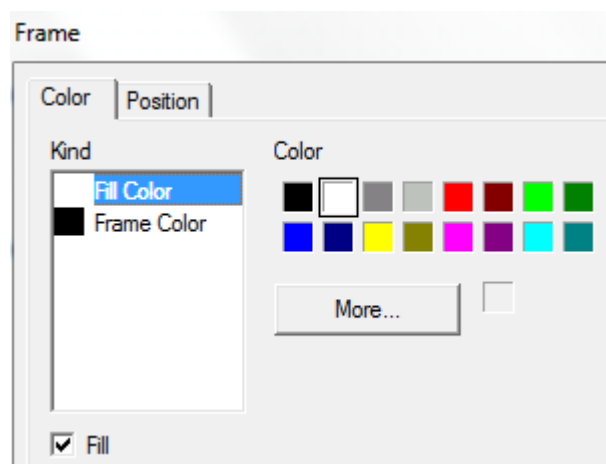

- kind choose the type of color which need to be modified.
- color set the color of the kind.
- Fill set if the frame needs to be filled with color.


■ position

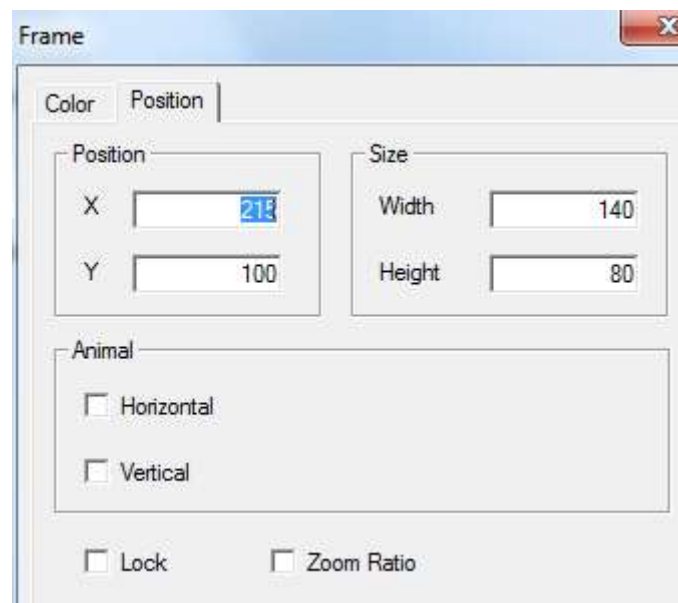


-
- position set the upper left point as the coordinate point (0, 0). Set the X and Y coordinate values of frame.
 - X position set the X coordinate value of frame
 - Y position set the Y coordinate value of frame
 - size set the width and height of frame
 - width (W) set the width of frame
 - height (H) set the height of frame
 - animal set if the frame can be moved.
 - Horizontal set the horizontal position of frame according to register value, modifying the X coordinate value.
 - X coordinate value=X position+current value of register.
 - Vertical set the vertical position of frame according to register value, modifying the Y coordinate value.
 - Y coordinate value=Y position+current value of register
 - lock set if the frame can be moved
 - zoom proportion se if it can be zoomed when editing its size. This function can not work now.

4-2-9. Insert map


Realize the insert function of screen in HMI by this function.

1. Click “” icon in the drawing tool bar. When the cursor is cross-shaped, please press the left mouse to open the window of inserting paths.
2. Choose the goal display picture. (Now it support pictures of BMP and JPG form) Click “open” or double click the goal picture. Then it will be added to current screen automatically and its size and position can be moved freely as the following picture.




3. Double click the ‘picture’ or choose “picture” and click right mouse. Then set the attribute by “attribute” or “” button.

■ picture

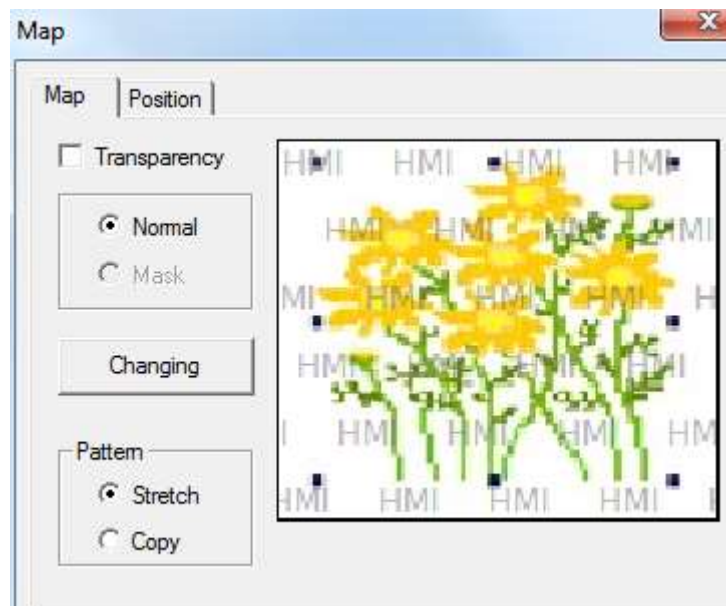

It is “display picture”. If you choose “transparency”, you need to add “mask”.

Add mask: after clicking “mask”, please click “changing” to appear a window. Then you can choose the picture. (Mask picture should be black and white picture which is the same size)
Please see the following example to understand easily.

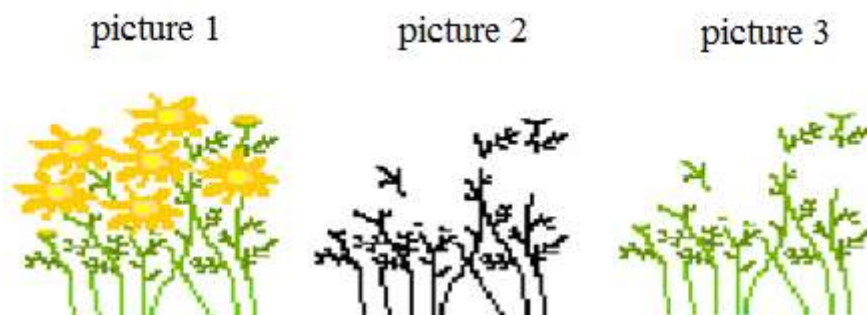


In the above picture, first picture is the original picture. It is the display picture. Now you need to do transparent processing for this picture.

Second picture is the same size as first picture and it is black and white mask picture.

Third picture is the final picture which is done transparency.

You can find something from picture 1, picture 2 and picture 3. transparency add picture 1 and picture 2. The white area in picture 2 will be transparent and the black area will be display.


■ position

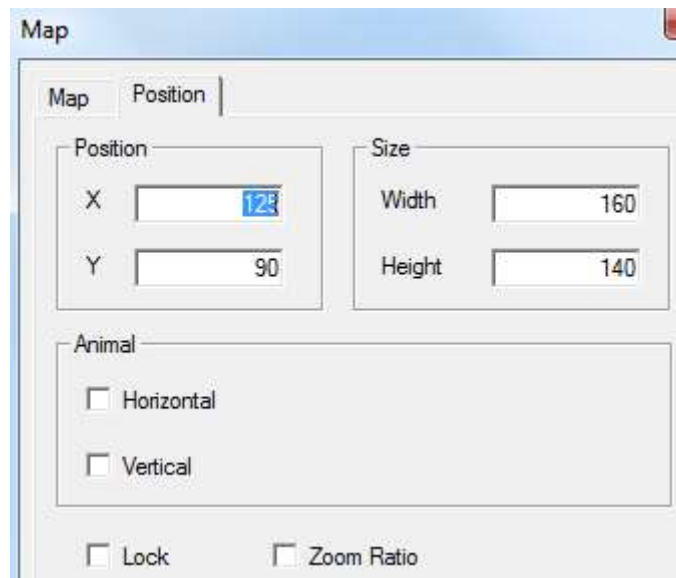


- position set the upper left point in the screen as coordinate point (0, 0). Set the X and Y coordinate value of picture.
 - X position set the X coordinate value of picture.
 - Y position set the Y coordinate value of picture.
- size set the width and height of picture.
 - width (W) set the width of picture
 - height (H) set the height of picture
- animal set if the picture can be moved
 - horizontal set the horizontal position of picture according to register value, modifying X coordinate value.
 - X coordinate value=X position+current value of register
 - vertical set the vertical position of picture according to register value.
 - Y coordinate value=Y position+current value of register.
- lock set if the picture can be moved when editing it.
- Zoom ratio set if it can be zoomed when editing its size. This function can not work now.

4-2-10. Move animation


This function can make animation with other parts.

1. Click  icon in the menu, draw the animation track. Left click mouse to draw the track, left click mouse again to draw the second track, double click mouse to finish the drawing.

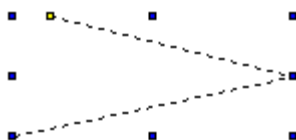


2. Double click move animation to open the attribute window.

Coordinate

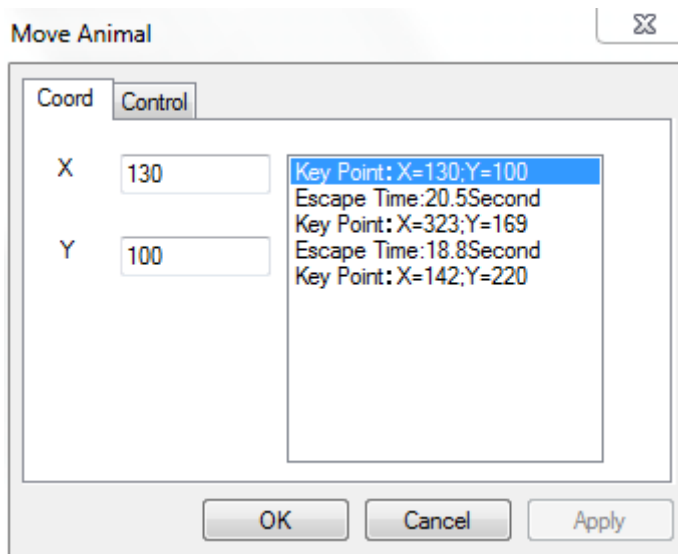


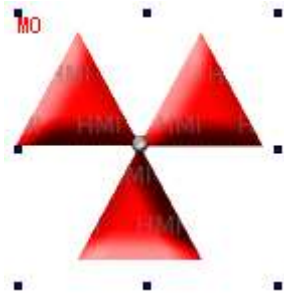
- coordinate the coordinate of animation
- X the position of X-axis
- Y the position of Y-axis
- Escape time the time from one position to another, the unit is second.
- Control

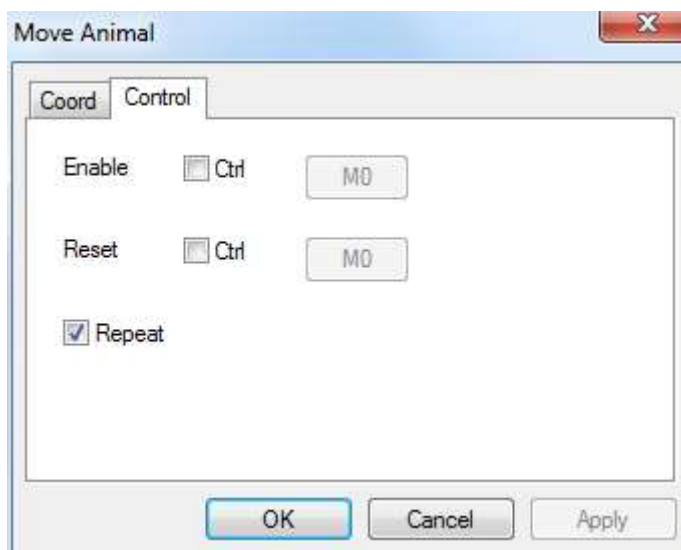

- Enable the animation is activated by the coil. When the coil is on, the animation starts to move.
- Reset when the coil is on, the animation will move from the starting position.
- Repeat repeat moving the animation


4-2-11. Rotate animation

1. Click  and put it in the screen. Right click it or press ESC to cancel.



2. Double click the rotate animation to open the attribute window.

■ Animation clip

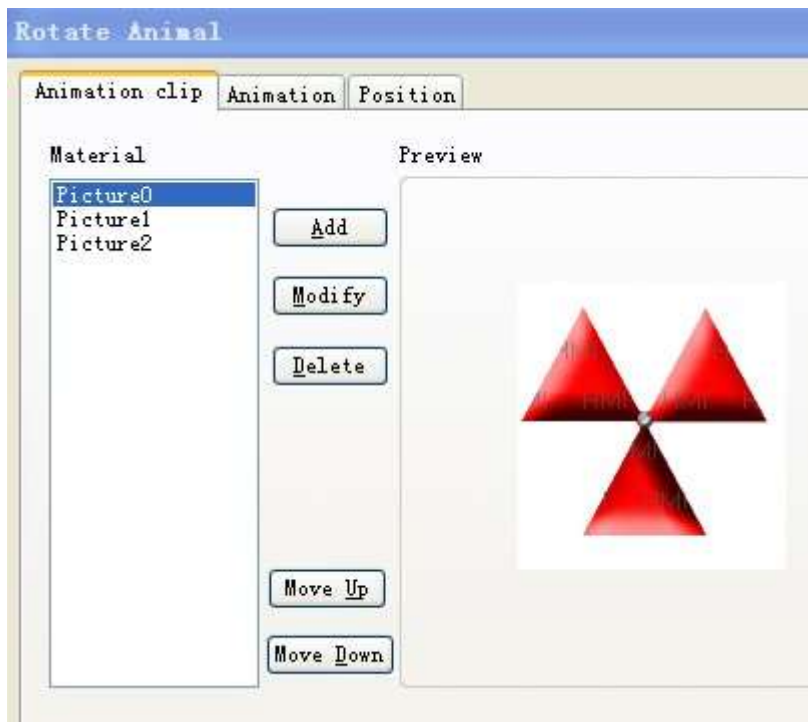

- Material the pictures of animation, it can contain many pictures
- Add open material library to add new picture and set the picture position
- Delete delete the pictures
- Modify open the material library, change the picture and the position
- Move up move up the picture
- Move down move down the picture
- Preview display the picture


■ Animation

The screenshot shows the 'Rotate Animal' software interface with three tabs: 'Animation clip', 'Animation', and 'Position'. The 'Animation' tab is selected. The settings are as follows:

- Period:** A text box containing '800' followed by 'ms'. Below it is a 'DO' button and a checkbox for 'Register controls' which is unchecked.
- Enable:** A checked checkbox. To its right is a 'MO' button and a checked checkbox for 'Register controls'.
- Reset:** An unchecked checkbox. To its right is a 'MO' button and an unchecked checkbox for 'Register controls'.
- Mode:** A section containing:
 - Random:** An unchecked radio button next to an empty text box.
 - Continue:** A checked radio button.
 - Single:** A checked radio button.
 - Trip:** An unchecked radio button.
 - Repeat:** A checked checkbox.
- Coil Control:** An unchecked checkbox. Below it is a 'MO' button.


- **Period** the time to finish the animation, the time can be set through register or constant
- **Enable** please always choose this item to ensure the animation can work. Register control means the animation can work when the coil is ON.
- **Reset** when the rising edge of signal is coming, the animation will start again.
- **Random** switch the pictures as the order defined by user
- **Continue** switch the pictures as the default order
- **Single** switch the pictures from first to final one, then from first to final one again.
- **Trip** switch the pictures from first to final one, then from the final to first one, then from the first to final one...
- **Repeat** repeat the switching picture operation
- **Coil control** when the coil is ON, the animation is visible. When the coil is OFF, the animation is invisible.


■ Position

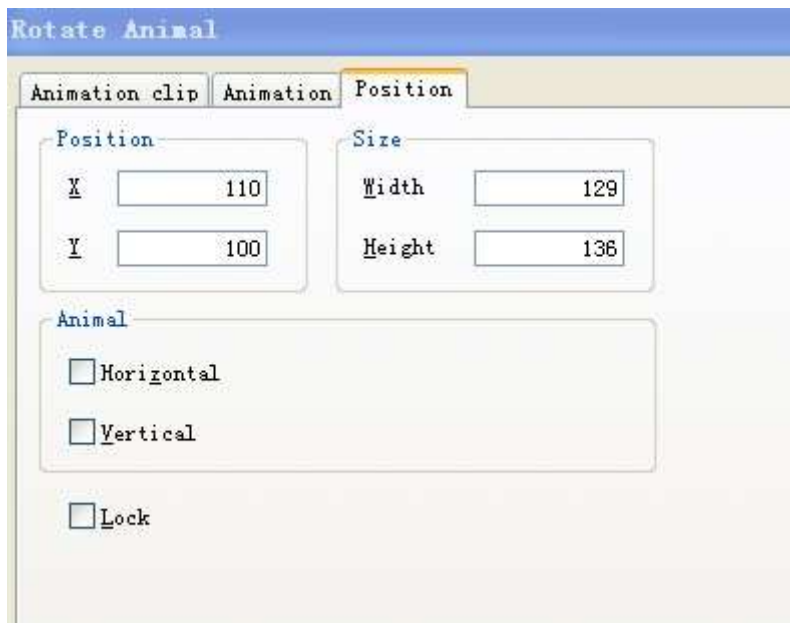

- **Position** set the coordinate of animation according to the origin on the upper left corner
 - X the X-axis coordinate
 - Y the Y-axis coordinate
- **Size** set the width and height of animation
 - Width the width of animation
 - Height the height of animation
- **Animal** the move direction of animation
 - Horizontal horizontal moving the animation. Set the X-axis position through register.
X coordinate = X position + current register value
 - Vertical vertical moving the animation. Set the Y-axis position through register.
Y coordinate = Y position + current register value
- **Lock** lock the animation, it cannot move

4-2-12 Material library


Click “” icon in the drawing tool bar. Then the dialogue box of choosing picture will appear. It is as follow.

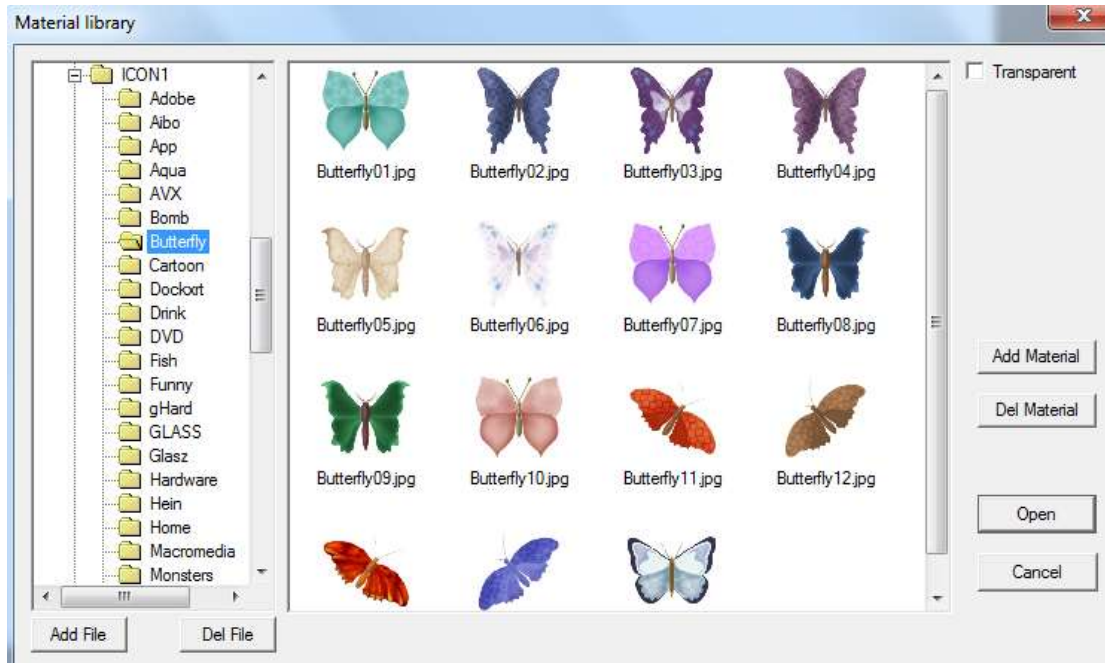

- You can click “add file” or “delete file” to add or delete folder.
- Choose the picture in the right side, click open to insert it in the screen. Click “add material” or “delete material” to add or delete the picture.

4-3. Component tool bar


Component tool bar contains all basic buttons of data processing.

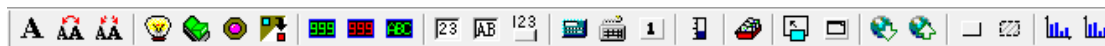


From left to right: text, dynamic text, variational text, lamp, button, lamp button, screen jump, digital display, alarm display, tet display, digital input, text input, set data, digital keyboard, ASCII keyboard, user input, bar, dynamic map, call window, window button, down recipe, up recipe, function button, function field, discrete column map and continue column map.


4-3-1. Text

1. Click “A” icon in the component tool bar. Move the cursor to the screen and click left mouse to place it. Then click right mouse or ESC button to cancel it. Modify the height and width of text by boundary point.

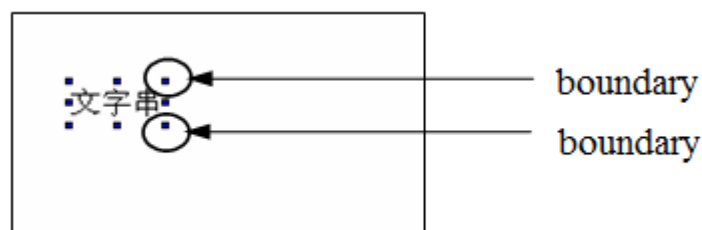

2. Double click “text” or choose “text” and click right mouse. Then set the attribute by choosing “attribute” or “” button.


■ display

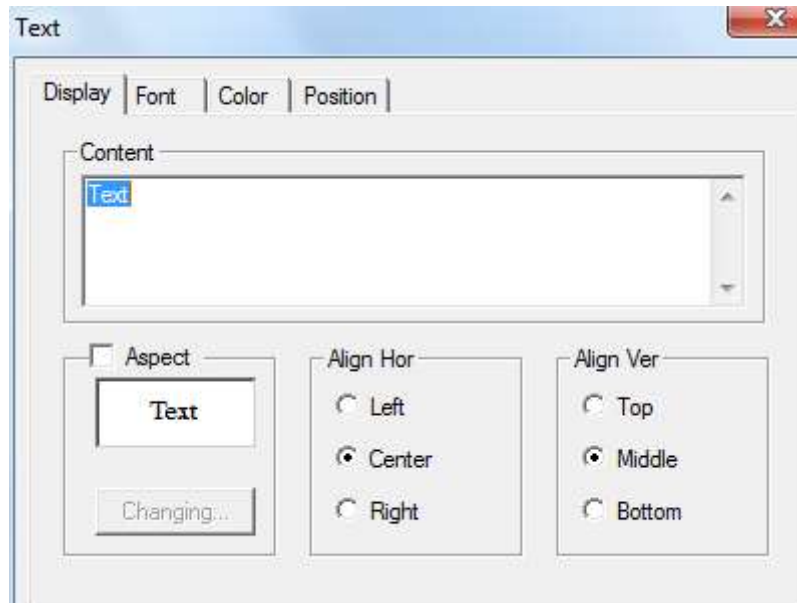


- content input content of text
- aspect choose if you need text frame. When you want to use it, you can modify the aspect by “changing” button.
- Align hor it contains three kinds of align which are left, centre and right.
- Align ver it contains three kinds of align which are top, middle and bottom.

■ font


Set the content form of text

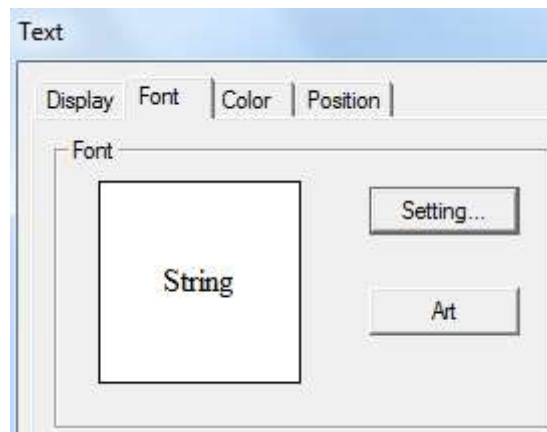


- settings set informations of font, type and size in instrument.

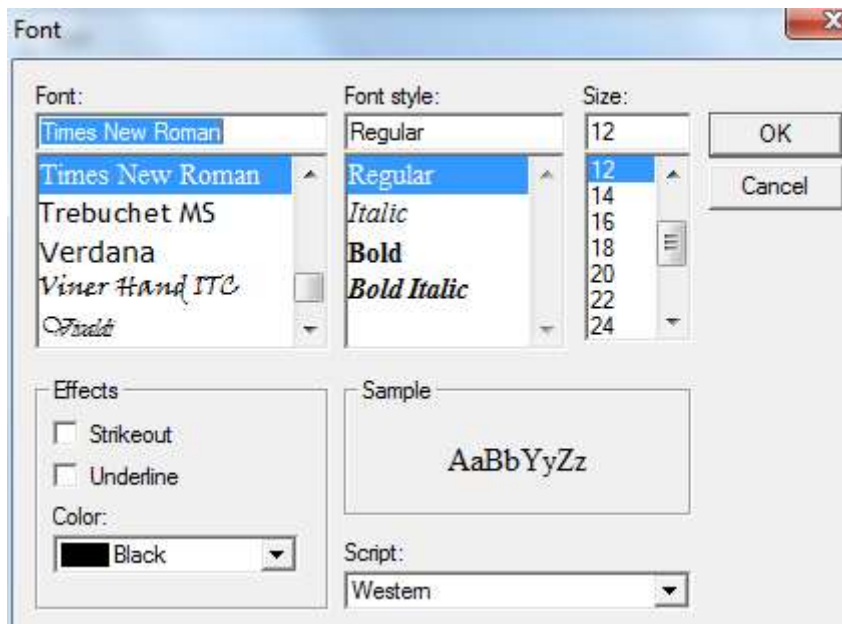

- art set the art type of displaying font in instrument.

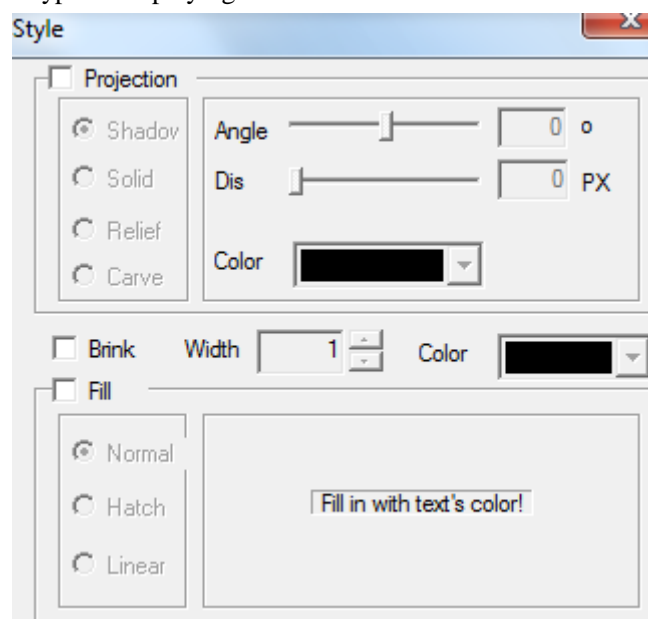


- color

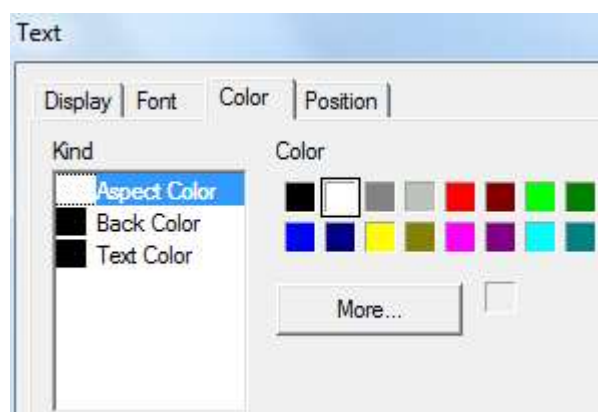

- kind choose the type of color in text.
- color modify the color according to the kind.


■ position

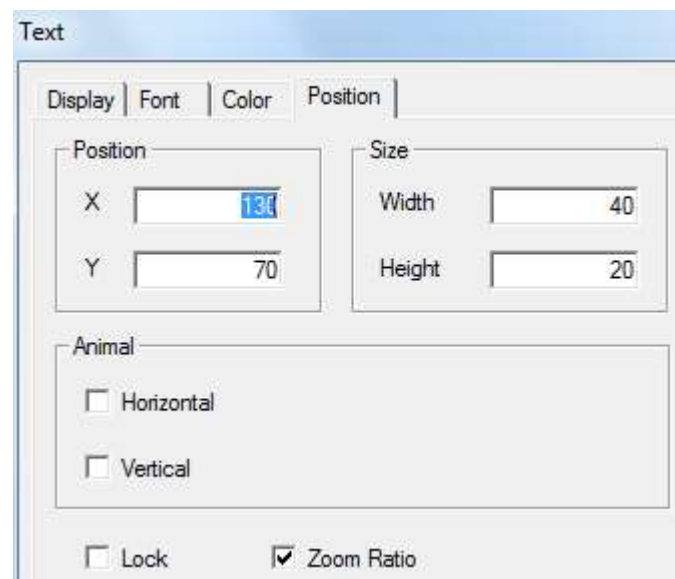


- position set the upper left point in screen as coordinate point (0, 0). Set the X and Y coordinate value of text.
 - X position set the X coordinate value of text.
 - Y position set the Y coordinate value of text.
- Size set the width and height of text.
 - width (W) set the width of text
 - height (H) set the height of text
- animal set if text can be moved
 - horizontal set the horizontal position of text in screen according to register value, modifying X coordinate value.
 - $X \text{ coordinate value} = X \text{ position} + \text{current value of register}$
 - vertical set the vertical position of text in screen according to register value, modifying Y coordinate value.
 - $Y \text{ coordinate value} = Y \text{ position} + \text{current value of register.}$
- lock set if the text can be moved in screen.
- zoom ratio set if it can be zoomed when editing its size. This function can not work now.


4-3-2. Dynamic text

Dynamic text can transfer the displaying content by values of relative link register.


1. Click “” icon in component tool bar. Move the cursor to the screen and click the left mouse to place it. Please click right mouse or ESC button to cancel it. You can modify the height and width of text area by boundary points.

2. Double click “dynamic text” or choose “dynamic text” and click right mouse. Then set the attribute by choosing “attribute” or “” button.

■ object

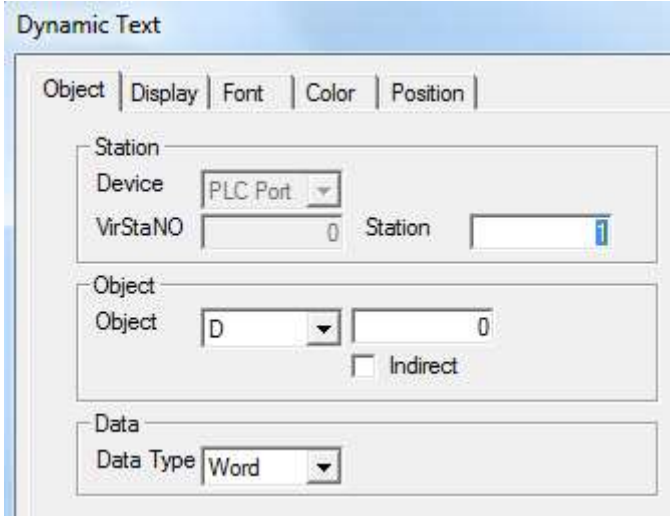

- station device current device port which is communicating.
- station address number of communication equipment.
- object set the object type and address number of dynamic text.
- indirect set the offset of current address as following picture.

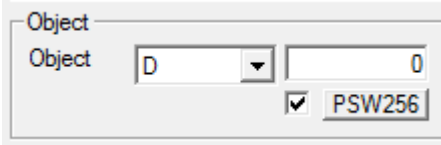

Current address of dynamic text changed with register PSW256. $D0[PSW256] = D[0 + PSW256 \text{ value}]$.


- value set the data type as separate or double words.



We suggest using internal address of HMI for indirect specified address. (PSW, PFW) if not, the communication will be slow.

■ display

The display content of register is determined by object register value. It contains 16 kinds of display content of dynamic text.

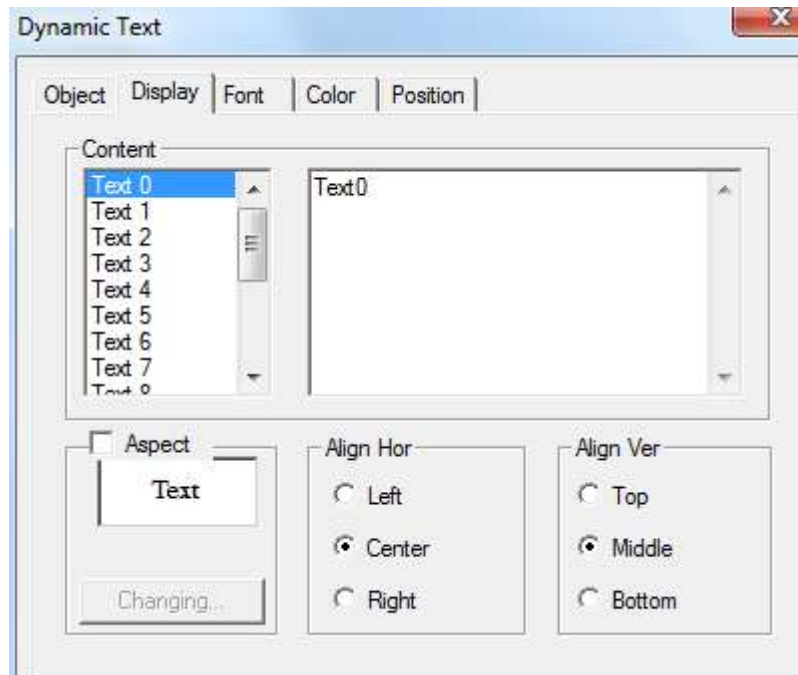

- content input the content of text
- aspect choose if you need text frame. When you are choosing, you can modify the appearance by “change” button.
- Align hor it contains three kinds of align type which are left, centre and right.
- Align ver it contains three kinds of align type which are top, middle and bottom.


For example: when the register value is 0, it will display the content of text 0. When the value is 1, it will display content of text 1 and so on.




When the object register value is above 15, the text content will not appear.

■ font


Set the content form of dynamic text.

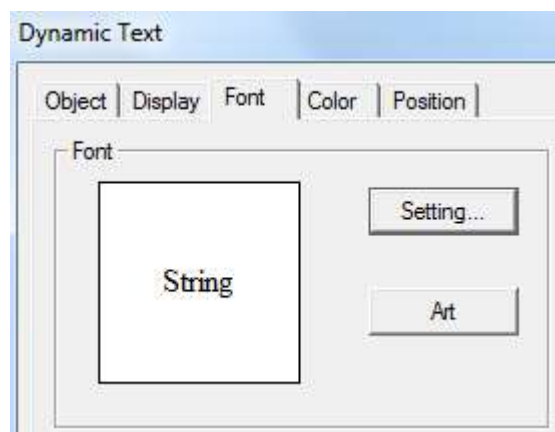


- set it contains font, type, size, effect, example, color and character set. You can set for your requirement.

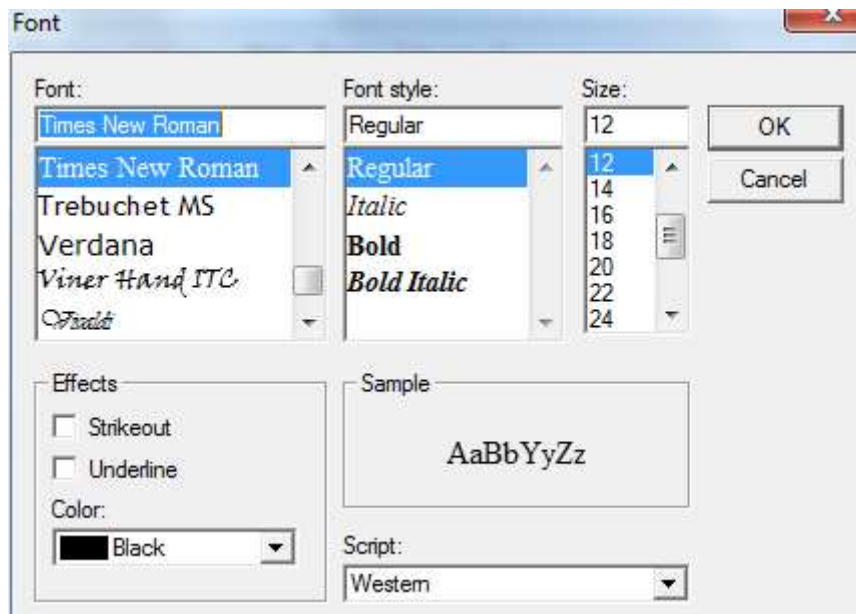

- art it contains projection, brink, fill and angle and so on. You can set for your requirement.

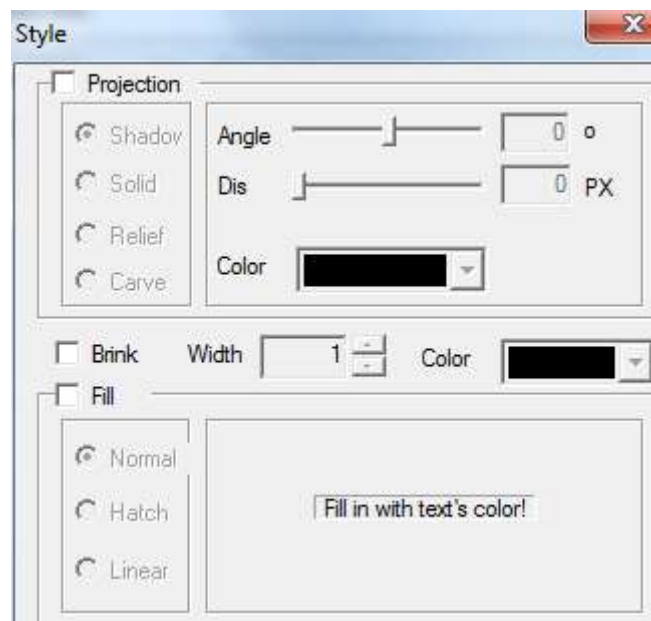


- color

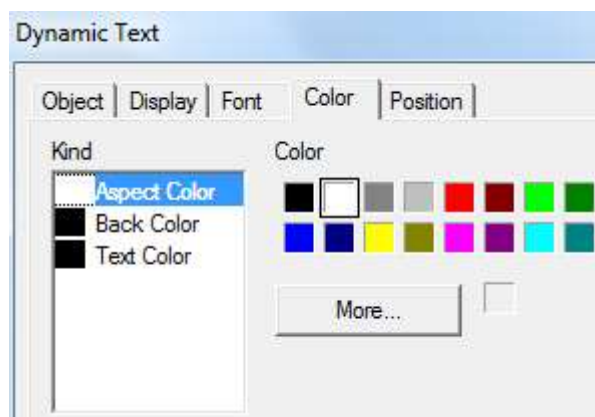




- kind choose dynamic text to modify the kind of color.
- color modify the color according to the kind.

■ position

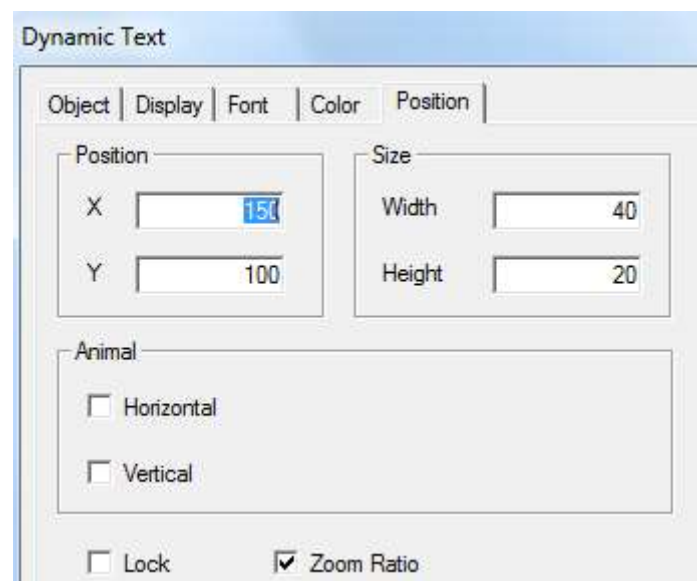

- position set the upper left point in screen as coordinate point (0, 0). Set the X and Y coordinate value of dynamic text.
 - X position set the X coordinate value of dynamic text.
 - Y position set the Y coordinate value of dynamic text.
- size set the width and height of dynamic text
 - width (W) set the width of dynamic text
 - height (H) set the height of dynamic text
- animal set if the dynamic text need to be moved.
 - horizontal set the dynamic text in the horizontal position of HMI according to register value, modifying X coordinate value.
 - X coordinate value=X position+current value of register
 - vertical set the dynamic text in the vertical position of HMI according to register value, modifying Y coordinate value.
 - Y coordinate=Y position+current value of register
- lock set if the dynamic text can be move in screen.
- zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

We will explain the using process. Object register is PSW300. Change the value of PSW register by input data. When PSW300 is 1, it will display “temperature over warning value. When PSW300 is 5, it will display “temperature over alarming value”. The interface is as follow:

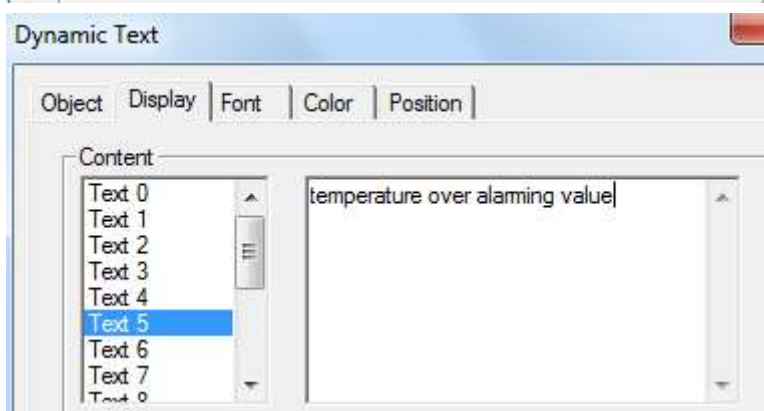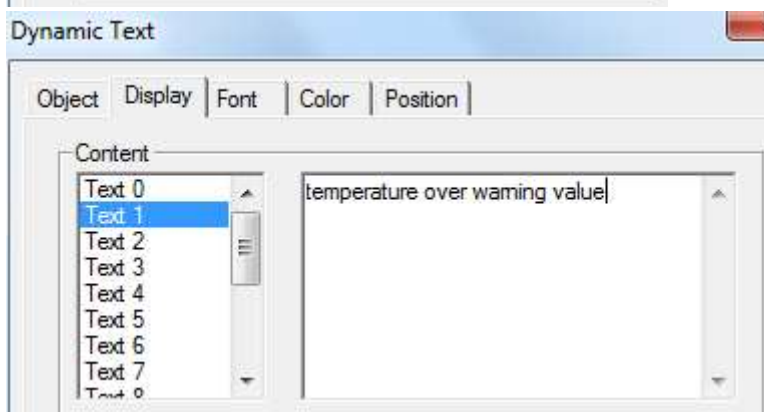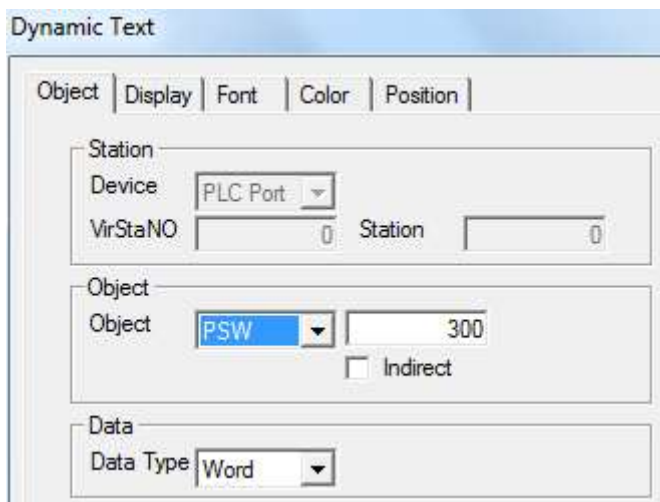

4-3-3. Variational text

1. Click “” icon in component tool bar. Move the cursor to screen and click left mouse to set it. Then cancel it by clicking right mouse or ESC button. Modify the length and height of variational text by boundary point.
2. Double click “variational text” or click “variational text” and click right mouse. Then set attribute by choosing “attribute” or “” button.

■ Object

Variational Text

Object | Display | Font | Color | Position

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: D Address: 0

☐ Indirect

Data

Data Type: Word

- device current device port which is communicating.
- station address number of communication device.
- object set the object type and address number of dynamic text.
- Indirect set offset off current address as follow.

Variational Text

Object | Display | Font | Color | Position

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: D Address: 0

☒ PSW256

Data

Data Type: Word


Current address of variational text will change with the value of register PSW256. It is $D0[PSW256] = D[0+PSW256 \text{ value}]$.

- value set the data type to separate or double characters.




We suggest using internal address of HMI(internal address PSW and PFW) for indirect address. If not, it will make communication be slow.

■ display

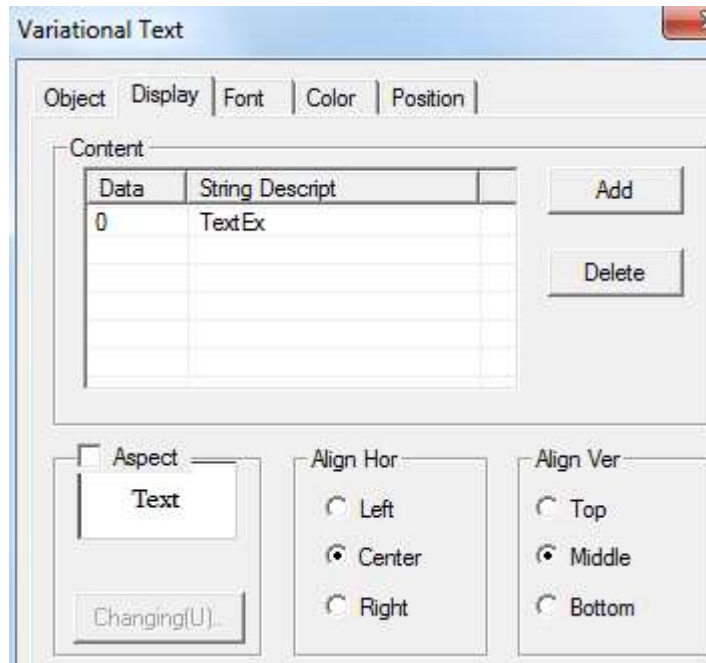


- content input display content of text
- data display the content number of text
- string descript edit content of text
- add add the project number of variational text by this button.
- delete delete the project of variational text by this button.
- aspect choose if you need text frame. When you are choosing, please modify the aspect by “changing” button.
- Align hor it contains three kinds of align type which are left, centre, right.
- Align ver it contains three kinds of align type which are top, middle, bottom.


- font
set the content form of variational text.

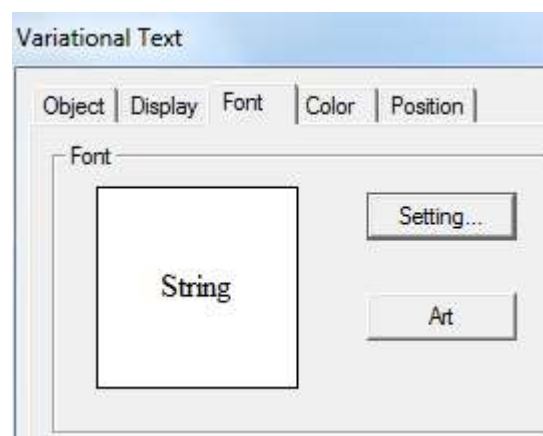


- settings it contains font, type, size, effect, example, color, character set and son on. You can set it freely.

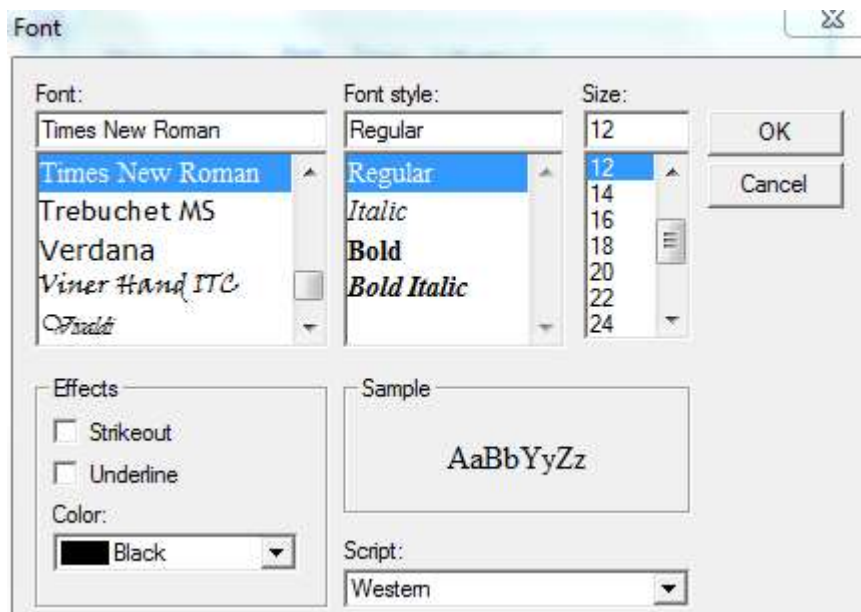

- art it contains projection, brink, fill, angle and so on. You can set it freely.

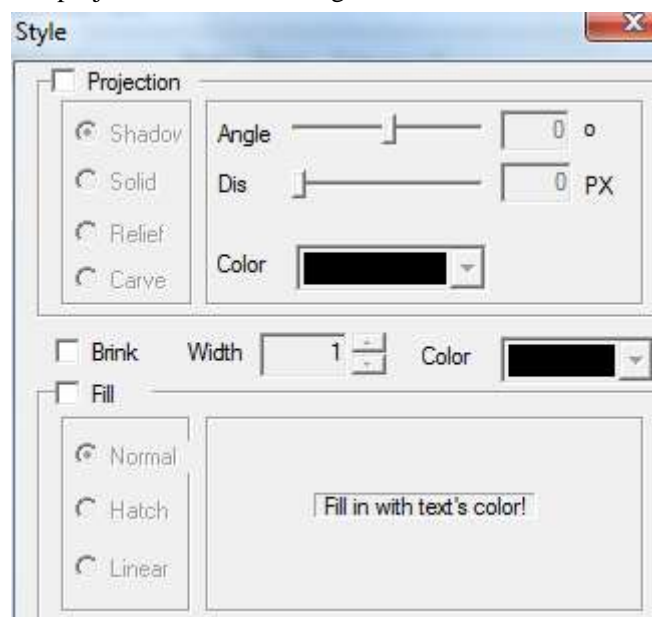


- color

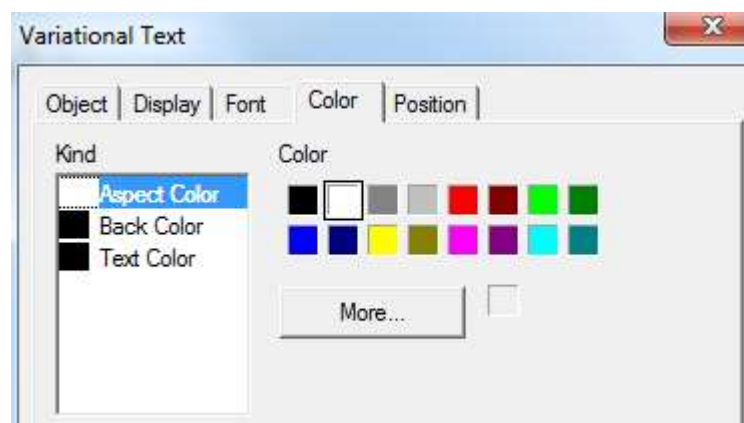

- kind choose the kind of color
- color modify the color according to the kind

■ position

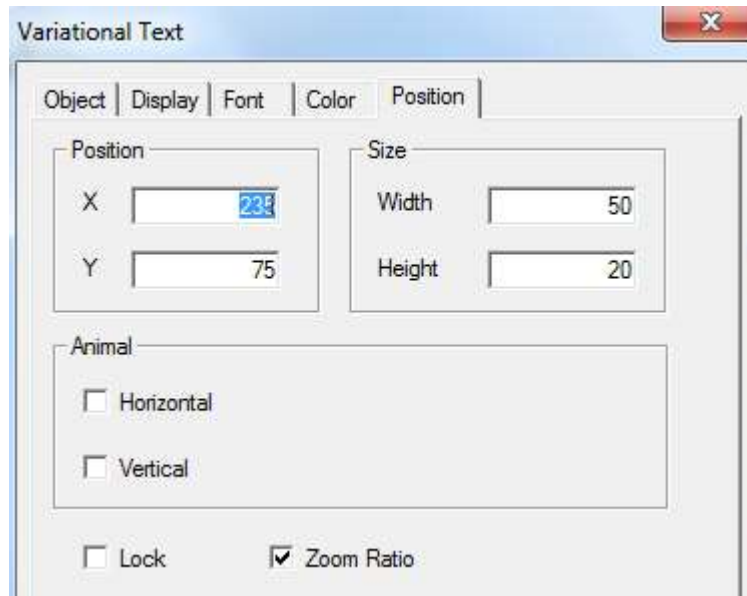

- position set the upper left point to be coordinate point (0, 0). Set the X and Y coordinate value of variational text.
 - X position set the X coordinate value of variational text
 - Y position set the Y coordinate value of variational text
- size set the width and height of variational text
 - width (W) set the width of variational text
 - height (H) set the height of variational text
- animal set if variational text can be moved
 - horizontal set the variational text in the horizontal position of HMI according to register value, modifying X coordinate value.
 - $X \text{ coordinate value} = X \text{ position} + \text{current value of register}$
 - vertical set the variational text in vertical position of HMI according to register, modifying Y coordinate value.
 - $Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$
- lock set if the variational text can be moved in screen.
- zoom ratio set if it can be zoomed when editing its size. But now this function can not work.




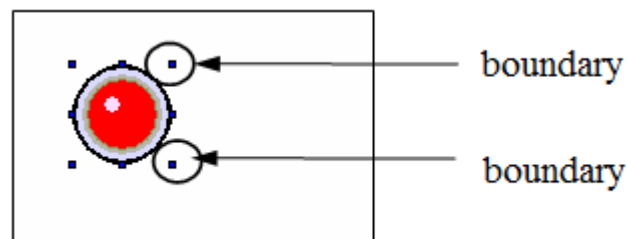
the differences of functions between “variational text” and “dynamic text” is as follow:


- (1) variation of variational text can be added manually. It has not only 16 kinds of display content.
- (2) variational text can not use newline. But dynamic text can use newline to edit.

4-3-4. Lamp


You can display object status by this button.

1. Click “” icon in component tool bar. Move the cursor to screen and click left mouse to set. Cancel it by clicking right mouse or ESC button. You can realize to adjust the boundary size of object lamp button by boundary point.




2. Double click “lamp” or click “lamp” and click right mouse. Then set attribute by choosing “attribute” or “” button.

■ object

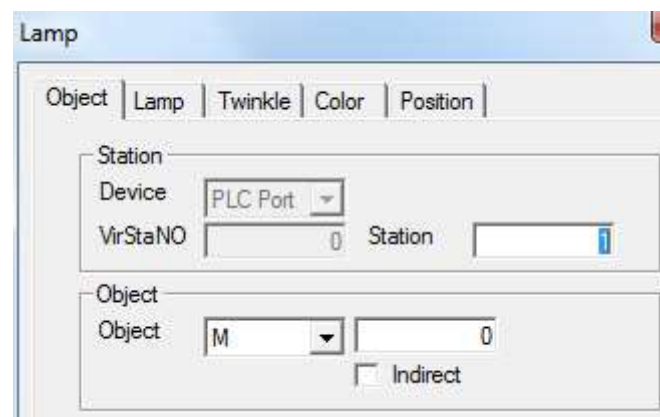

- station device station current device port which is communicating the address of communication device
- object set address and trigger signal object type of lamp
- indirect set the offset of current address as follow

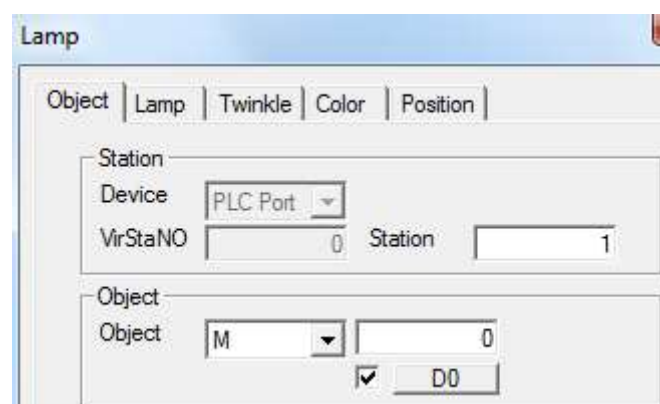


Current trigger signal address of lamp will change with D0 value of register. It is $M0[D0]=M[0+D0 \text{ value}]$



Click the pull-down box of object type. Change the relative object by choosing type in the pull-down menu. Because lamp is double state component, so relative object type can only be relay types or a bit of register. We suggest using internal address of HMI (PSW, PFW) for indirect address. If not, the communication will be slow.

■ lamp

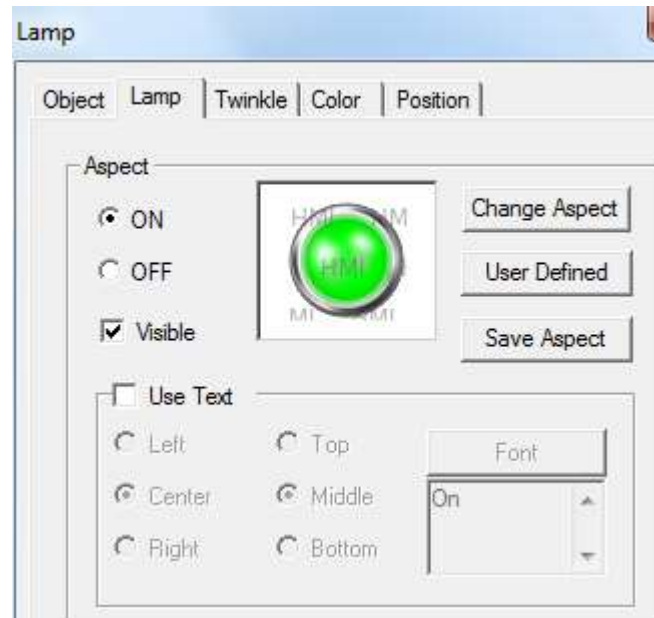


- ON right frame display lamp when object cable is ON.
 - OFF right frame display lamp when object cable is OFF.
 - Change aspect modify the aspect of lamp. Because it has own material library, so you can choose freely.
 - User defined modify the aspect of lamp. It has user defined material library.
 - Save aspect save the aspect of lamp. It is convenient when you are programming.
 - Use text modify the content, font, align type of lamp text.
 - content set the display content of text
 - font set the size, font, type of text.
 - align user can choose align type freely according to your requirement.
- (1) change aspect: choose relative pictures in lamp library to display.
Click “change aspect”. Following editing screen will appear.



choose the lamp icon in material library and press “confirm”.

(2) User defined: you can define displaying picture freely from material library.

Click “use defined”, then the following editing screen will appear.

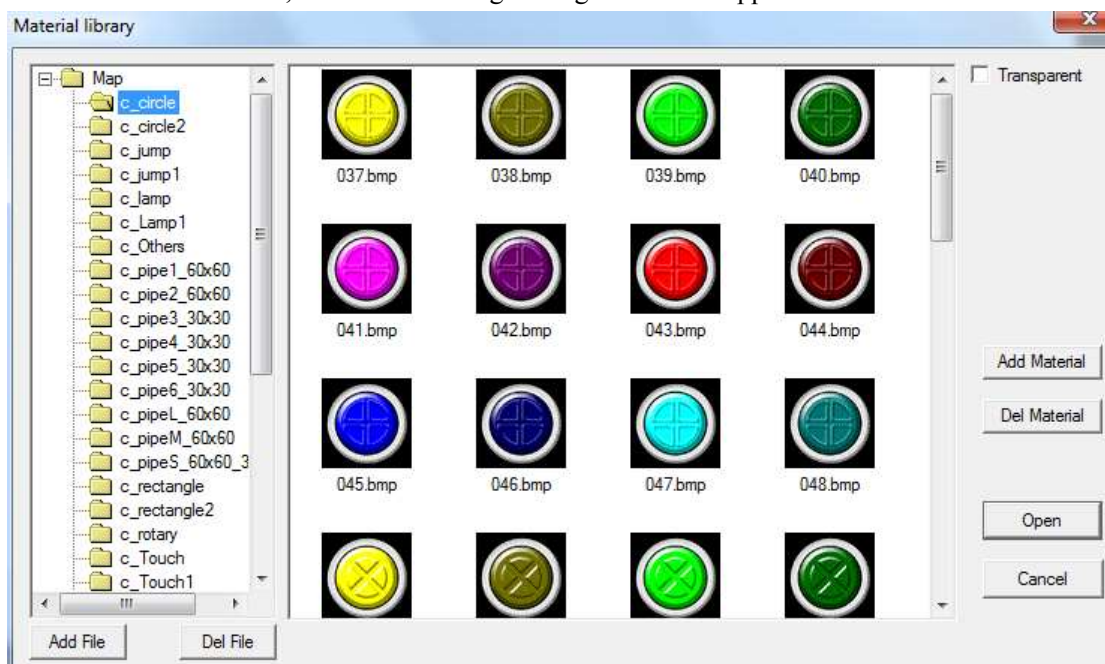

Choose target icon in material library and click “open”. Then the target icon will be added into lamp.


(3) save aspect: you can put user defined lamp into lamp library. If you want to use it next time, you can call it directly.

■ twinkle


choose the twinkle status of lamp.



- status
 - stop it will stop twinkling whenever the lamp is ON or OFF.
 - ON lamp will twinkle when it is ON.
 - OFF lamp will twinkle when it is OFF.
- speed choose the twinkle speed when lamp is triwklng. Slow or fast
- color

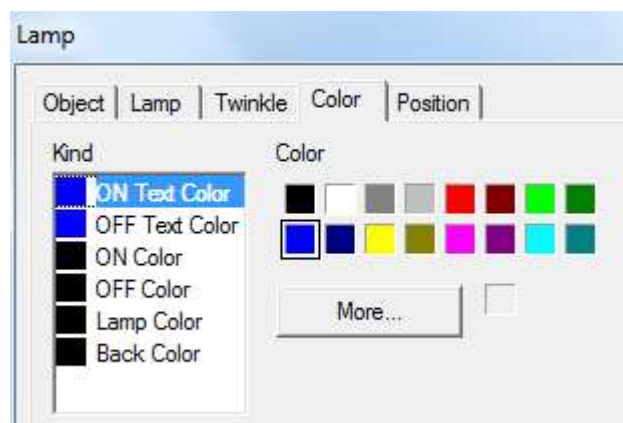


- kind choose the kind of color for lamp.
- color modify the color according to the kind.
- position

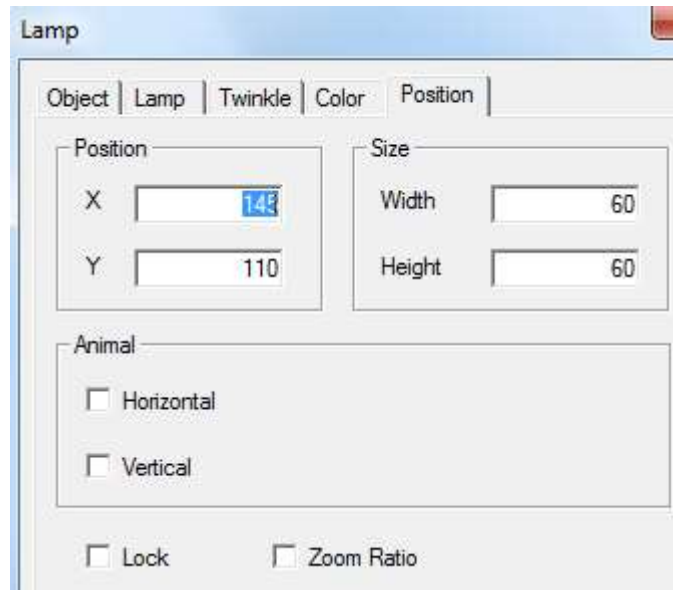


- position set the upper left point to be coordinate point (0, 0). Set the X and Y coordinate value of lamp.
 - X position set the X coordinate value of lamp
 - Y position set the Y coordinate value of lamp
- Size set the width and height of lamp
 - width (W) set the width of lamp
 - height (H) set the height of lamp
- animal set if the lamp can be moved
 - horizontal set the lamp in the horizontal position of HMI according to register value, modifying X coordinate value.
 - $X \text{ coordinate value} = X \text{ position} + \text{current value of register}$
 - Vertical set the lamp in the vertical position of HMI according to register value, modifying Y coordinate value.
 - $Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$
- lock set if the lap in the screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-5. Button

Realize the bit operation of relative switching value.

1. Click “” icon in component tool bar. Move the cursor in screen and click left mouse to set. Then cancel it by clicking right mouse or ESC button. You can adjust the size of button by eight small boundary points.



2. Click “button” or choose “button” and click right mouse to choose “attribute”. you can set attribute by “” button.

■ object

Button

Object | Operate | Button | Color | Position

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: M Address: 0

☐ Indirect

- station device current device port which is communicating
- station address of communication device
- object set the object type and address of button.
- indirect set the offset of current address as follow

Button

Object | Operate | Button | Color | Position

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: M Address: 0

☒ D0

Trigger signal address of current button changes with D0 value of register. $M0[D0]=M[0+D0 \text{ value}]$



We suggest using internal address of HMI (PSW, PFW) for indirect address. If not, communication will be slow.

■ operate

Button


Object | Operate | Button | Color | Position

Operate


☒ Set ON ☐ Set OFF ☐ Reverse ☐ On Instant

- button set ON set the control cable to be ON
- set OFF set the control cable to be OFF
- reverse set the control cable to be reverse


ON instant when the button is pressed, the cable is ON at the moment. If the button is pressed again, the cable will be OFF.

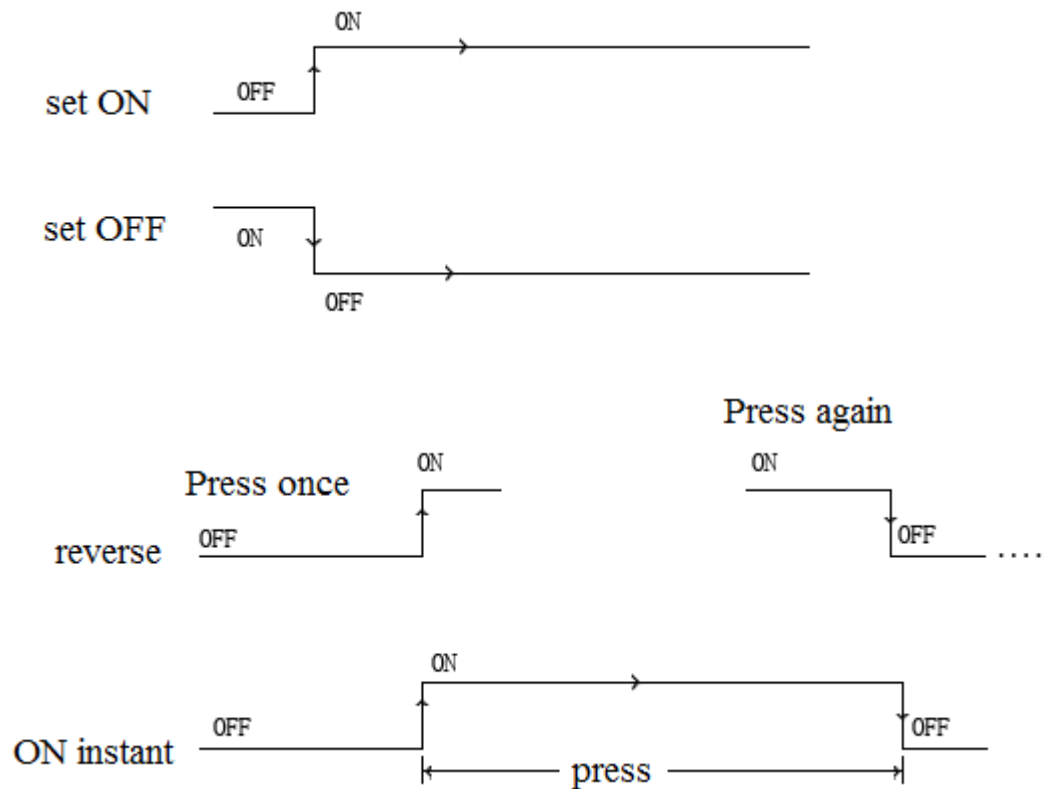


■ button

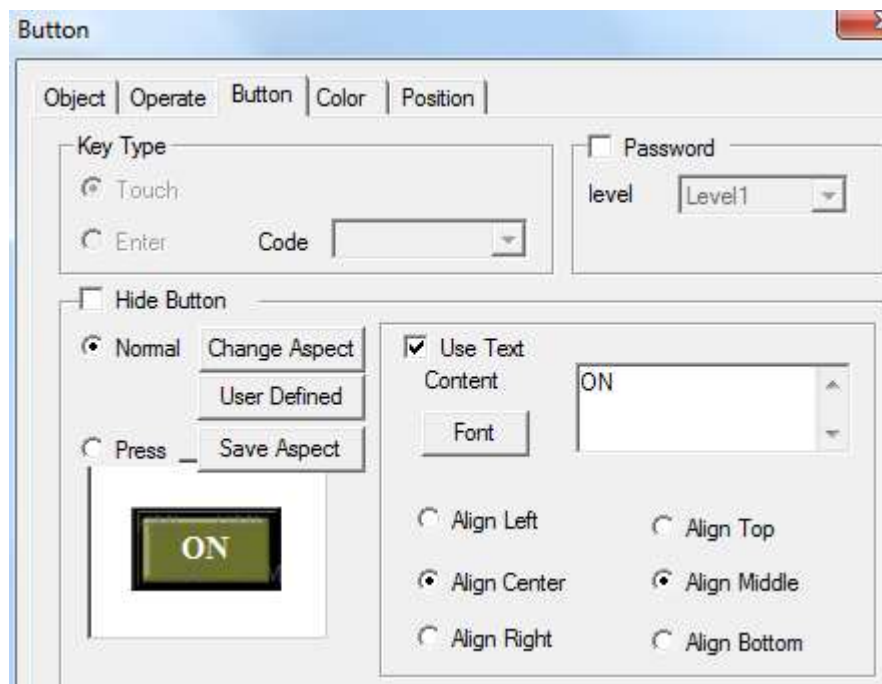

- Key type define the button code of touch or enter. Enter key is only for OP560, MP360, MP760, XMP, XMH.

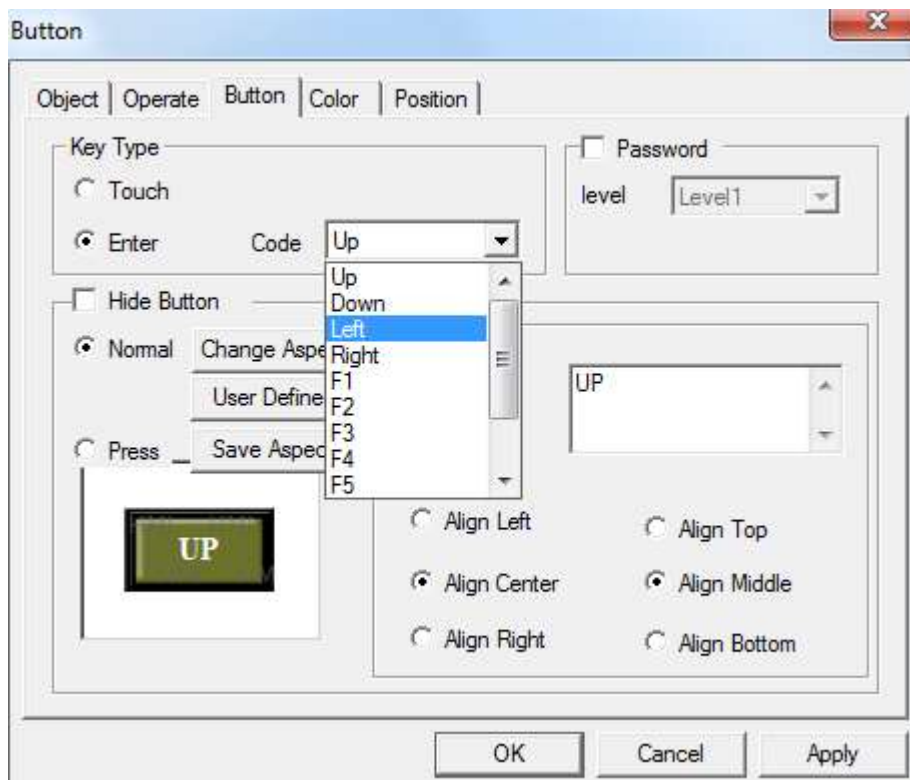


- hide button if you want the button visible or invisible when it is operating, please choose this option. The aspect and text of button can no be operated.

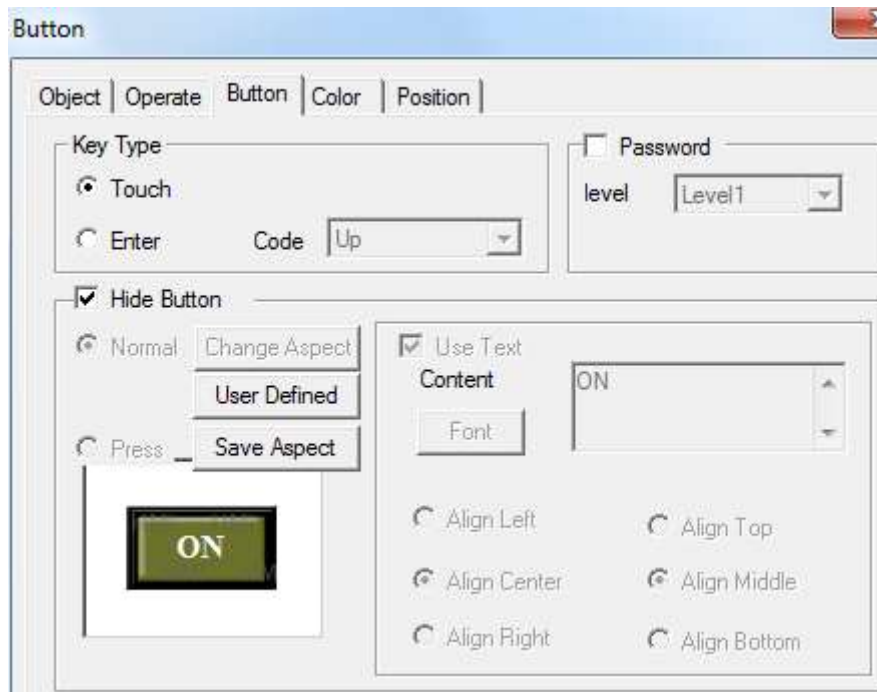


- Normal the status picture when the button display normally or after the button was released.
- Press the status picture when the button is pressed.
- Change aspect modify the aspect of button. It has its own material library. You can choose it freely.
- User defined modify the button aspect. It has its own material library.

- Save aspect save the button aspect. It is convenient when you are programming.
 - Use text modify the content, font, align of button text.
- content set the content of button
- font set the size, font, type of button text.
- align you can choose align type according to your requirement.

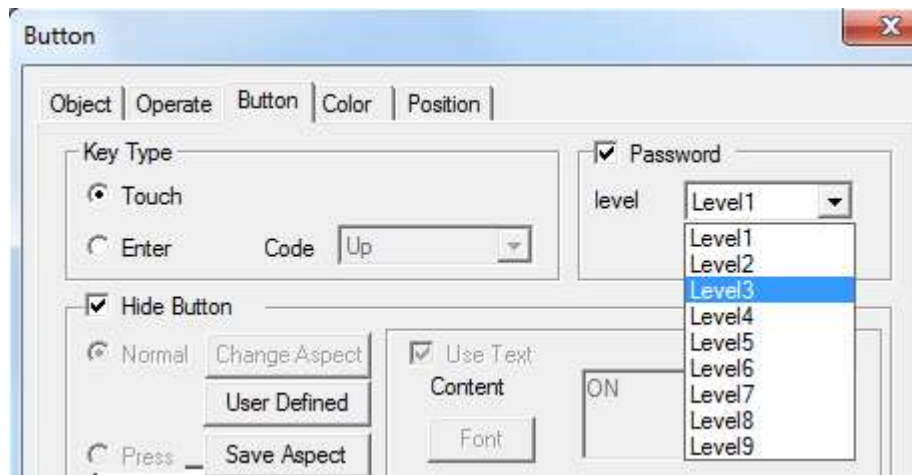

- Password set if the button needs to be protected by password. If you choose “password”, please use password protection function and choose the password level.
- color

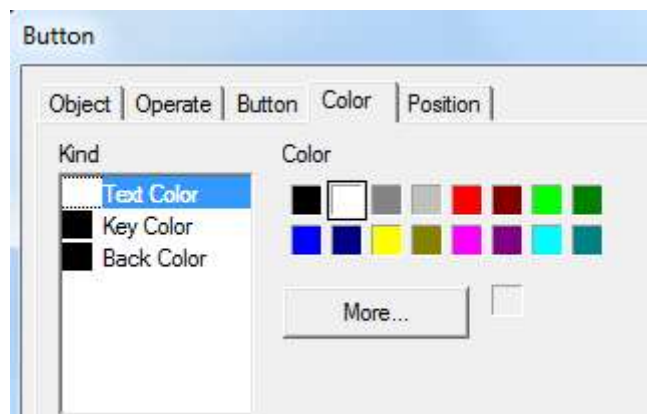

- kind choose the kind of color which need to be modified.
- color modify the color according to the kind.

- position

The image shows a software window titled 'Button'. It contains several tabs: 'Object', 'Operate', 'Button', 'Color', and 'Position'. The 'Position' tab is selected. Inside this tab, there are two main sections: 'Position' and 'Size'. The 'Position' section has input fields for 'X' (value 20) and 'Y' (value 70). The 'Size' section has input fields for 'Width' (value 75) and 'Height' (value 42). Below these sections, there are checkboxes for 'Horizontal', 'Vertical', 'Lock', and 'Zoom Ratio'. The 'Horizontal' and 'Vertical' checkboxes are grouped under a label 'Animal'.


- position of button. set the upper left point to be the coordinate point (0, 0). Set the X and Y of button.
- X position set the X coordinate value
- Y position set the Y coordinate value
- size set the width and height of button
- width (W) set the width of button
- height (H) set the height of button
- animal set if the button can be moved
- horizontal set the button in the horizontal position according to register value, modifying X coordinate value.


$$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$$
- vertical set the button in the vertical position according to register value, modifying Y coordinate value.


$$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$$
- lock set if the button in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-6. Lamp button

Lamp button can control and display the object status.

1. Click “” icon in component tool bar. Move the cursort to screen and click left mouse to set. Click right mouse or ESC button to cancel it. You can modify the size of lamp button by pulling boundary points.

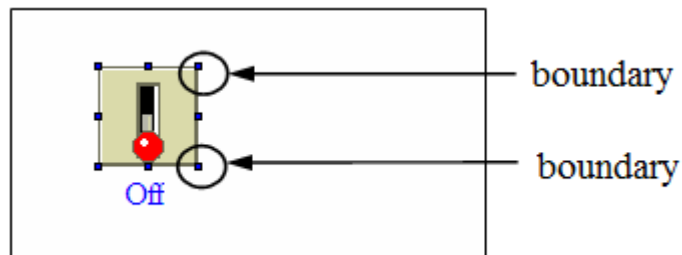


2. double “lamp button” or choose “lamp button” and click right mouse. Choose “attribute” or “” button to set the attribute.

■ object

(1) Operate object object controlled by button

- station current device port which is communicating
- device address of communication device
- station set the object type and address of lamp button
- object set the offset of current address as follow.
- indirect

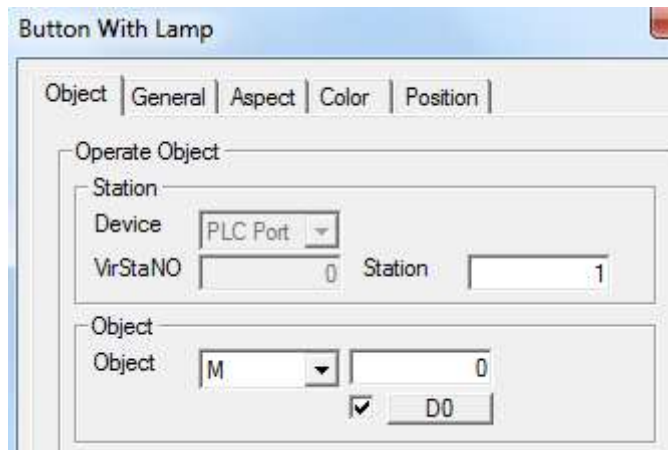


Current signal address of lamp button changed as register D0 value. $M0[D0]=M[0+D0 \text{ value}]$




We suggest using the internal address of HMI (PSW, PFW) for indirect address. If not, the communication will be slow.

(2) Watch object display object of lamp button

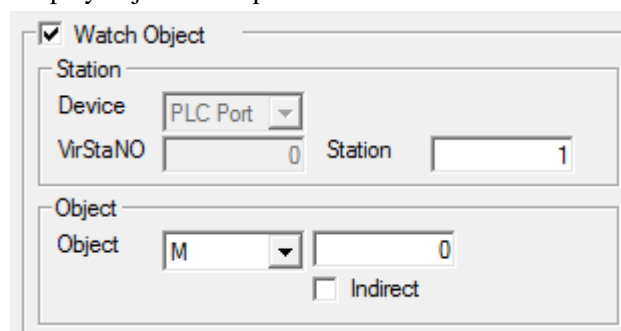

When you don't choose it, the display object is as same as operate object and they can not be modified. When you choose it, you can choose the device station number and object type of watch target.

- station
 - device current device port which is communicating.
 - station address of communication device
- object set the watching object type and address of lamp button.
- Indirect set the offset of current address as follow.

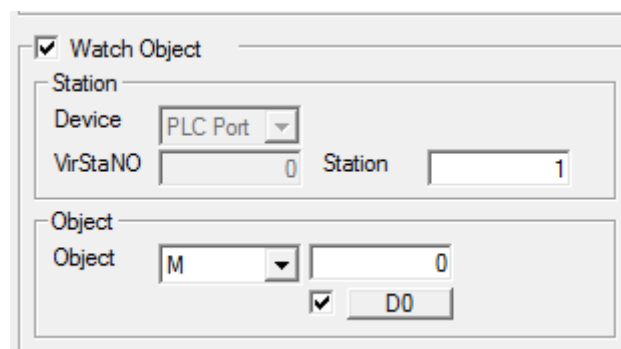


Current watch object address of lamp button changes with register D0 value. $M0[D0]=M[0+D0 \text{ value}]$.




We suggest using internal address of HMI (PSW, PFW) for indirect address. If not, the communication will be slow.

■ general

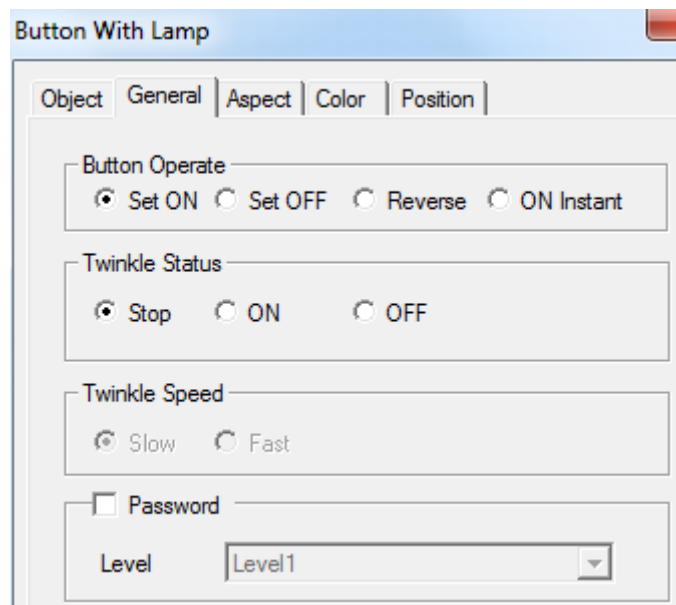


- Button operate it is used for “operate object” of “object” option. You can choose set ON, set OFF, reverse and ON instant
- set ON set the control cable to be ON
- set OFF set the control cable to be OFF
- reverse reverse the status of control cable
- ON instant When you press it, the cable will be ON. When you release it, the cable will be OFF.
- Twinkle status it is used for “watch object” of “object” option. You can choose stop, ON and OFF. When you choose twinkle, you can use “twinkle speed” to decide its speed.
- Stop it will stop twinkling whenever the lamp is ON or OFF.
- ON it will twinkle when the lamp is ON.
- OFF it will twinkle when the lamp is OFF.
- password set if the “operate object” in “object” option need to protected by password. If you choose “password”, please use password protection function and choose the relative password level.

■ aspect

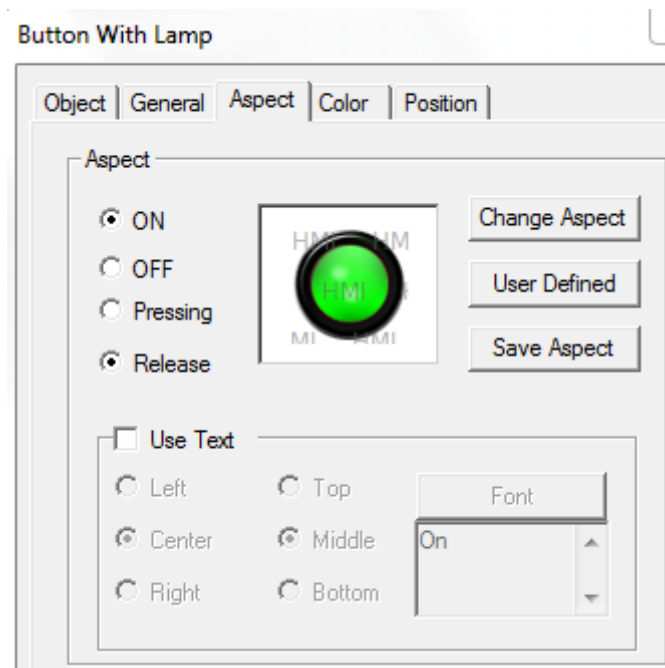


- ON the lamp will display when the “watch object” is ON in the right box “object”.
- OFF the lamp will display when the “watch object” is OFF in the right box “object”.
- pressing it is used for “operate object” in “object” option, displaying aspect when pressing.
- release it is used for “operate object” in “object” option, displaying aspect when releasing.
- Change aspect modify the aspect of lamp button. It has its own material library. Customers can choose from it freely.
- User defined modify aspect of lamp button. It has user defined material library.
- Save aspect save aspect of lamp button. It is convenient when programming.
- Use text modify the content, font align type of lamp button.

■ color

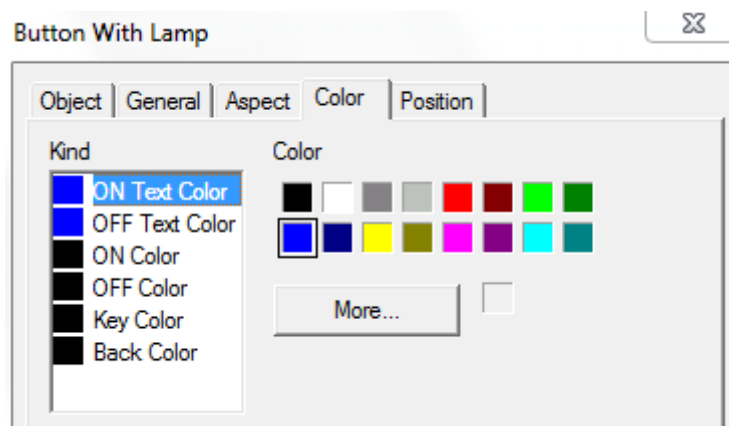

- kind choose the type of color for lamp button
- color modify the color according to the kind.

■ position

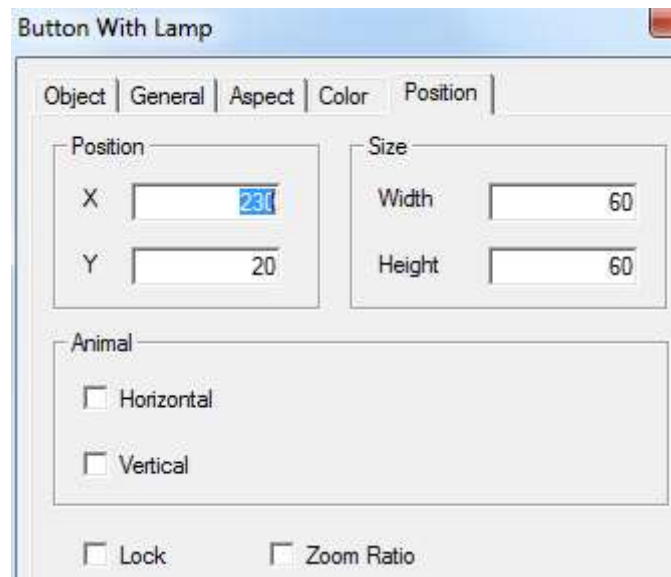


- position set the upper left point to be coordinate point (0, 0). Set the X and Y coordinate value of lamp button
 - X position set the X coordinate value of lamp button.
 - Y position set the Y coordinate value of lamp button.
- size se the width and height of lamp button.
 - width (W) set the width of lamp button.
 - height (H) set the height of lamp button
- aniaml set if the lamp button can be moved.
 - horizontal set the lamp button in the horizontal position of HMI according to register value, modifying the X coordinate value.


$$\text{X coordinate value} = \text{X position} + \text{current value of register}$$
 - vertical set the lamp button in the vertical position of HMI according to register value.


$$\text{Y coordinate value} = \text{Y position} + \text{current value of register}$$
- lock set if the lamp button in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-7. Screen jump


This component will realize the jump function between different screens. At the same time, you can set the limits of authority.

1. Click “” icon in the component tool bar. Move the cursor to the screen and click left mouse to set. Click right mouse or ESC button to cancel it.

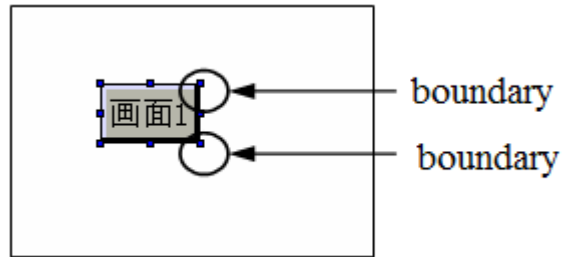

2. Double click “screen jump” or choose “screen jump” to click right mouse. Set the attribute by choosing “attribute” or “” button.

■ operate

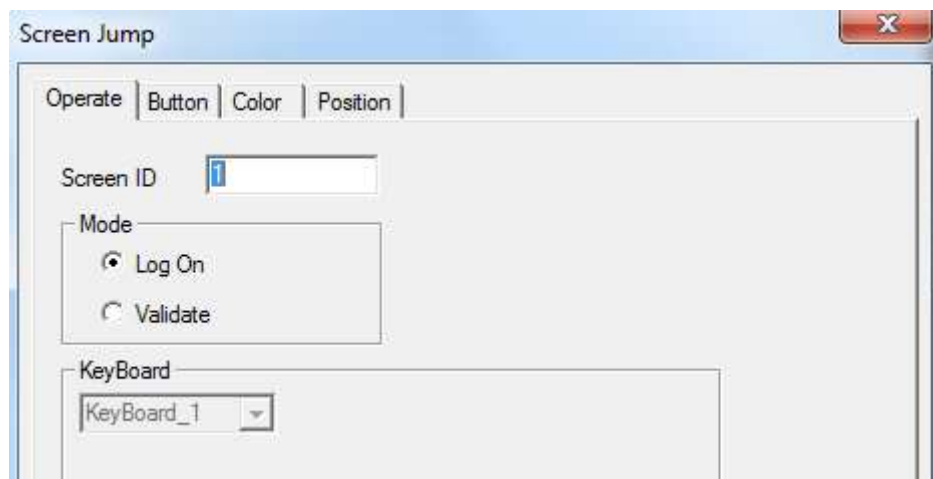


➤ screen ID input screen ID

➤ mode


log on in this mode you need't set the limit of authority and it can jump screen directly.

validate in this mode, it operate password protection. You can jump the screen only when you input correct password. It is as same as “password function” in the “button” option.

■ button

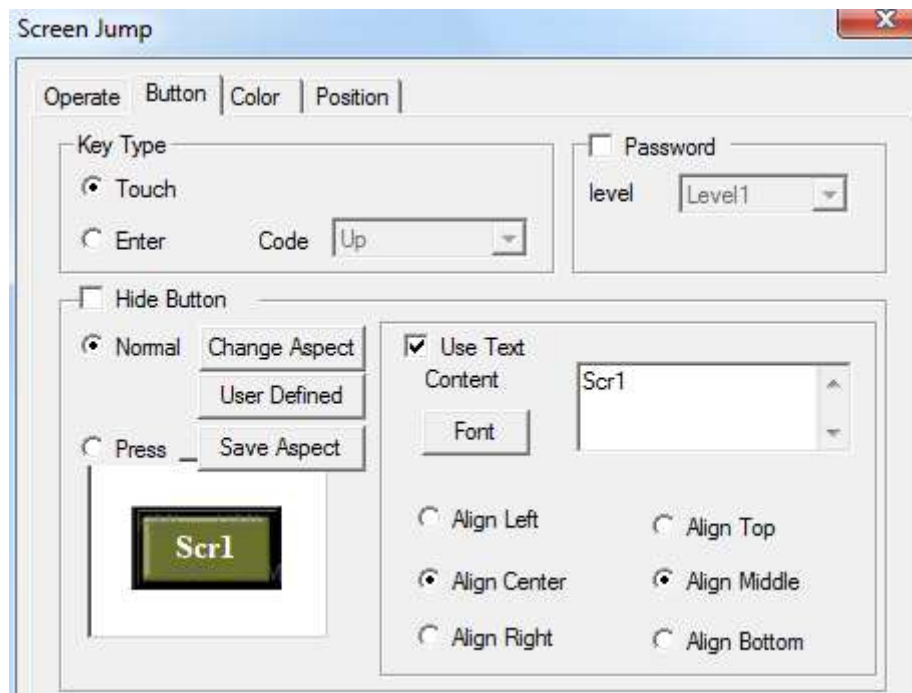

■ position

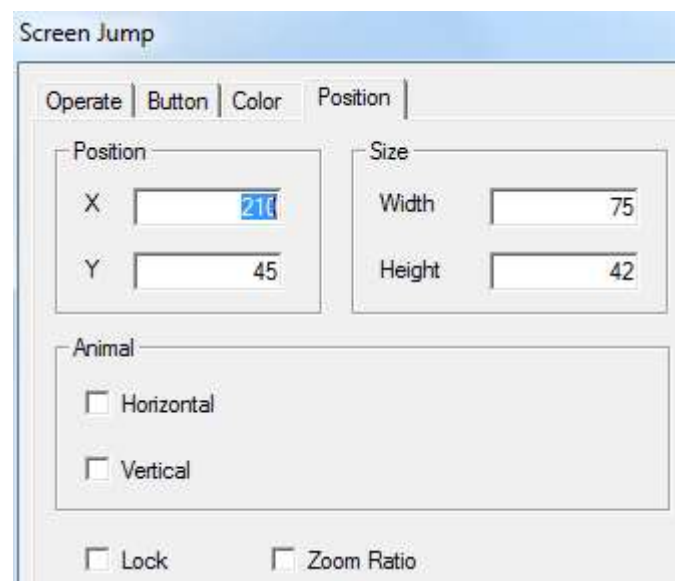

- position set the upper left point as coordinate point (0, 0). Set the X and Y coordinate value of screen jump.
 - X position set the X coordinate value of screen jump.
 - Y position set the Y coordinate value of screen jump.
- size set the width and height of screen jump.
 - width (W) set the width of screen jump.
 - height (H) set the height of screen jump.
- animal set if the screen jump need to be moved.

horizontal set the screen jump in the horizontal position of HMI according to register value, modifying the X coordinate value.

X coordinate value=X position+current value of register


vertical set the screen jump in the vertical position of HMI according to register value,根据 modifying Y coordinate value.

Y coordinate value=Y position+current value of register;


- lock set if the screen jump in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-8. Digital display


Display the register value.

1. Click the “” icon in the component tool bar. Move the cursor to the screen and click left mouse to set. Click right mouse or ESC button to cancel it. The size of difital box can be edited by boundary points.




2. Double click “digital display” or choose “digital display” and click right mouse. Set the attribute by “attribute” or “” button.

■ object

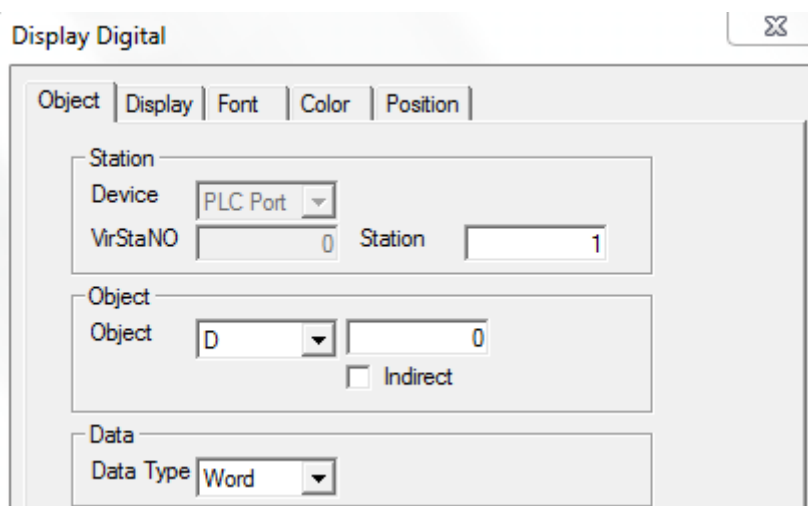

- station
 - device current device port which is communicating
 - station address of communication device
- object set the object type and address of digital display.
- indirect set the offset of current address as follow

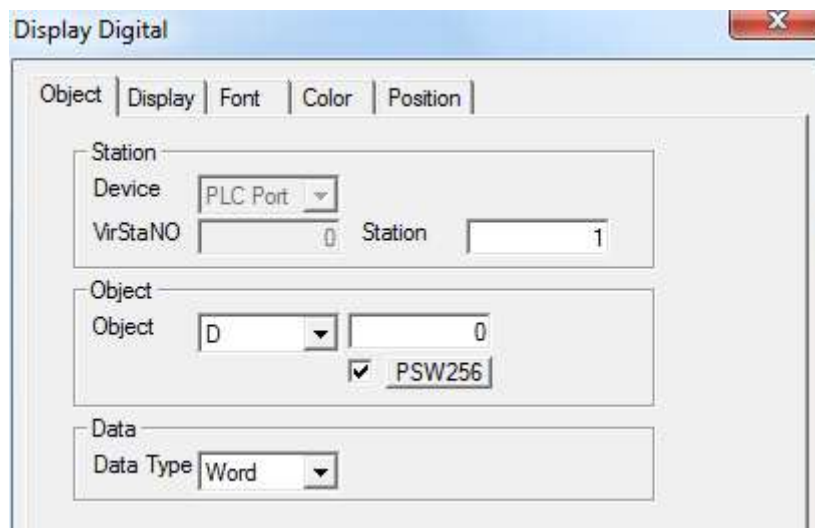

Current address of digital display will change with register PSW256 value.


$D0[PSW256]=D[0+PSW256 \text{ value}]$

- data set the data type to separate word or double words.



We suggest using the internal address of HMI (PSW, PFW) for indirect address. If not, the communication will be slow.

■ display

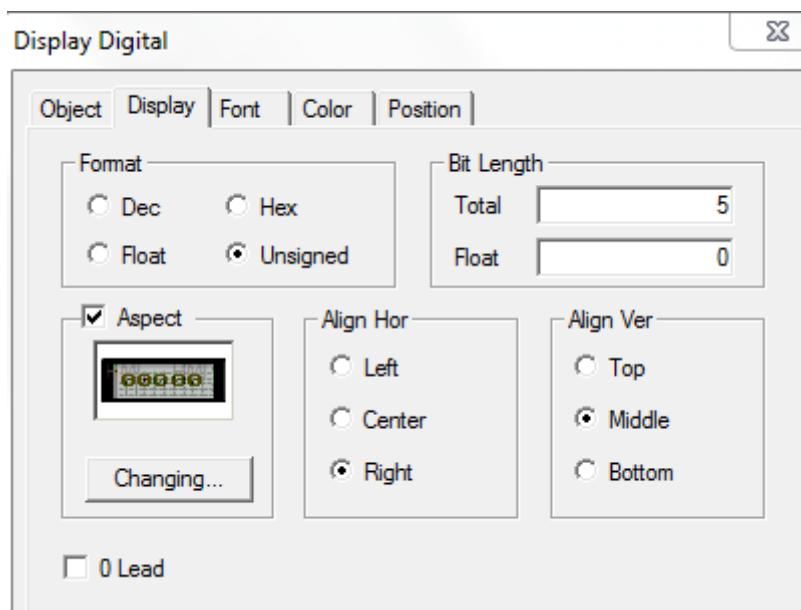

- type choose the form of digital display. It can be decimal, hexadecimal, floating number and unsigned number.
- length total bit of digital display and length setting of decimal place.
- aspect choose if it need digital display frame and modify the aspect by “changing” button.
- Align hor it contains left, centre and right.
- Align ver it contains top, middle and bottom.
- 0 lead add 0 when the data digits fails to meet figures.


For example: the register value is 23. The setting bits of digital display are 5 and decimal place is 0. When you choose 0 lead, the digital display will be 00023.

■ font




- setting it contains font, type, size, effect, example, color, character set and so on. You can set it freely.
- art it contains projection, brink, fill and angle. You can set it freely.

■ color

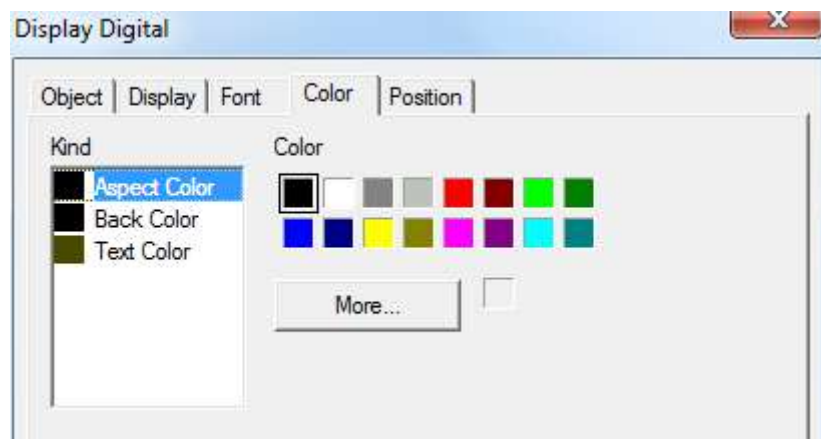

- kind choose digital display to modify the kind of color.
- color modify the color according to the kind.

■ position

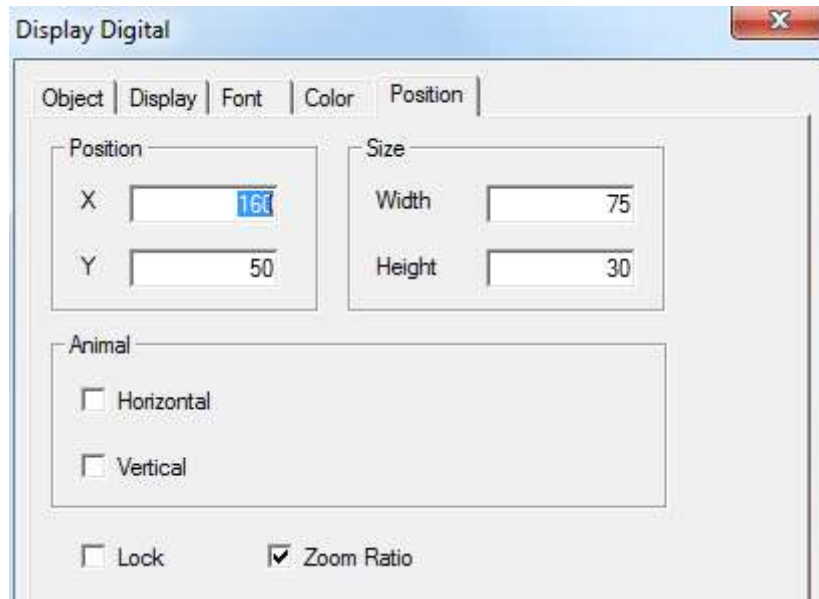


- position set the upper left point as the coordinate point(0, 0). Set the X and Y coordinate value of digital display.
 - X position set the X coordinate value of digital display.
 - Y position set the Y coordinate value of digital display.
- size set the width and height of digital display.
 - width (W) set the width of digital display
 - height (H) set the height of digital display
- animal set if the digital display need to be moved.
 - horizontal set the digital display in the horizontal position of HMI according to register value, modifying X coordinate value.

$$\text{X coordinate value} = \text{X position} + \text{current value of register}$$
 - vertical set the digital display in the vertical position of HMI according to register value, modifying Y coordinate value.


$$\text{Y coordinate value} = \text{Y position} + \text{current value of register}$$
- lock set if the digital display in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But it can not work now.

4-3-9. Alarm display

Realize the limit function of data. It will twinkling when the data is over limit.

1. Click “” icon in the component tool bar. Move the cursor to screen and click left mouse to set. Click the right mouse or ESC button to cancel it. The size of digital frame can be adjusted by boundary points.



2. Double click “alarm digital display” or choose “alarm digital display” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

- station
 - device current device port which is communicating.
 - station address of communication device
- object set the object type and address of alarm display
- indirect set the offset of current address as follow.

Current address of alarm display will change with register value PSW256.


$D0[PSW256]=D[0+PSW256 \text{ value}]$

- data set the data type to separate word or double word




We suggest using internal address of HMI (PSW, PFW) for indirect address. If not, the communication will be slow.

- display

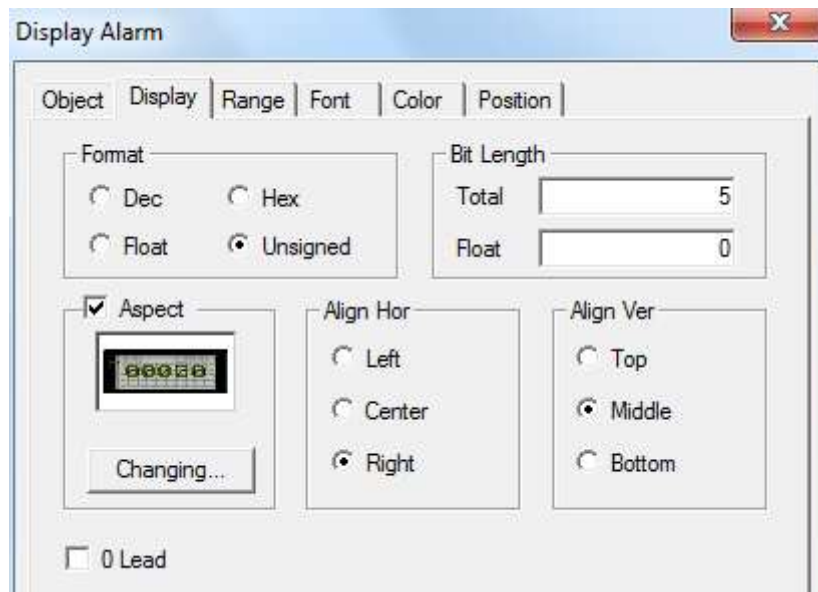


- format choose the form of digital display. It can be decimal, hexadecimal, floating number and unsigned number.
- Bit length total length of digital display and length setting of decimal place.
- aspect choose if it need alarm digital display frame. You can modify the aspect by “changing” button.
- Align hor it contains left, centre and right.
- Align ver it contains top, middle and bottom.
- 0 lead add 0 when the data digital fails to meet figures

■ Range

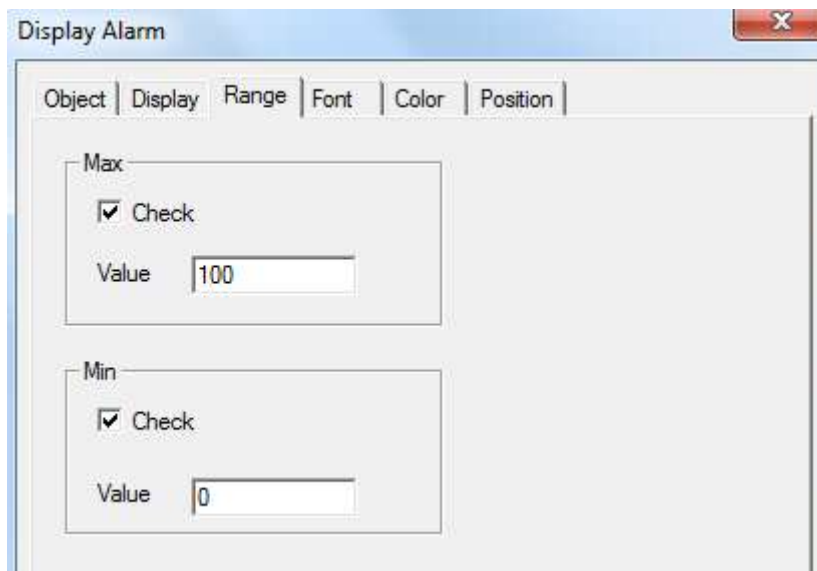


- Max
 - check set the alarm max of digital display. When the data is over the max, it will alarm by twinkling.
- Min
 - check set the alarm min of digital display. When the data is over Min, it will twinkling.

■ font

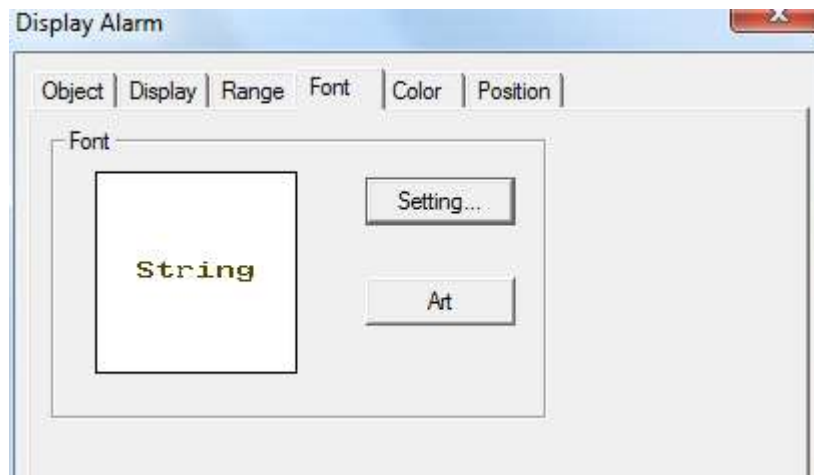


- setting it contains font, type, size, effect, example, color and character set. You can set it freely.
- art it contains projection, brink, fill and angle. You can set it freely.

■ color

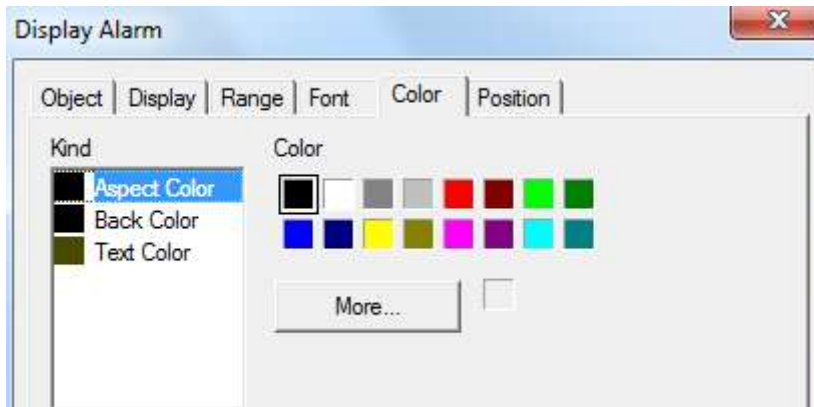

- kind choose the alarm digital display to modify the kind of color.
- color modify the color according to the kind.

■ position

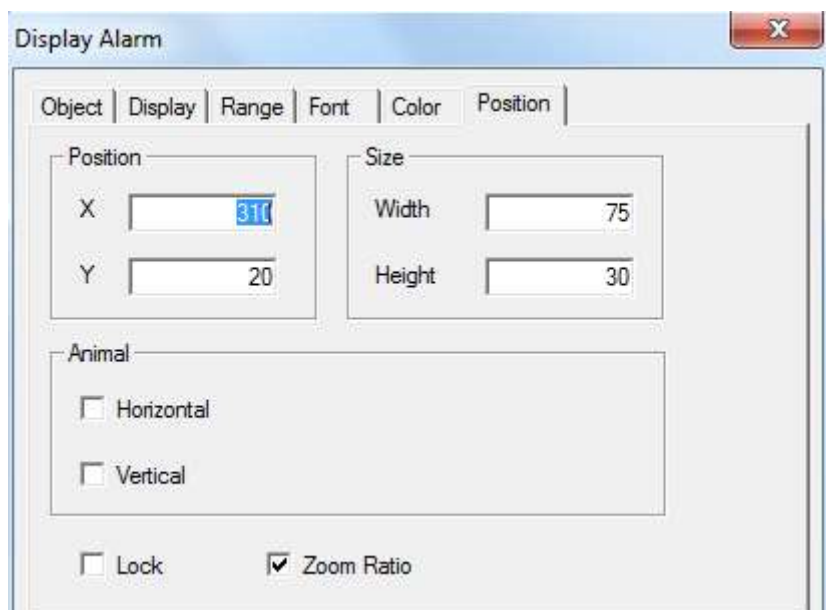


- position set the upper left point as the coordinate point(0, 0). Set the X and Y coordinate value of alarm digital display.
 - X position set the X coordinate value of alarm digital display.
 - Y position set the Y coordinate value of alarm digital display.
- size set the width and height of alarm digital display.
 - width (W) set the width of alarm digital display.
 - height (H) set the height of alarm digital display.
- animal set if the alarm digital display need to be moved.
 - horizontal set the alarm digital display in the horizontal position of HMI according to register value, modifying X coordinate value.


$$\text{X coordinate value} = \text{X position} + \text{current value of register}$$
 - Vertical set the alarm digital display in the vertical position of HMI according to register value, modifying Y coordinate value.

$$\text{Y coordinate value} = \text{Y position} + \text{current value of register}$$
- lock set if the alarm digital display in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.


4-3-10. Text display

Display the texts of register.

1. Click the “” icon in the component tool bar. Move the cursor in screen and click left mouse to set. Click right mouse or ESC button to cancel it. The size of data frame can be adjusted by boundary points.

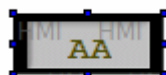


2. Double click “text display” or choose “text display” and click right mouse. Set the attribute by

choosing “attribute” or “” button.




One word (WORD) is consisted of two characters. One character occupies a bit. One register is a character. So you can change the displaying content of character by setting register number (displaying length). For example, register number is set to be one. It will display two characters. Character is showed by ASCII code and one character ASCII code is two bits hexadecimal.

■ object

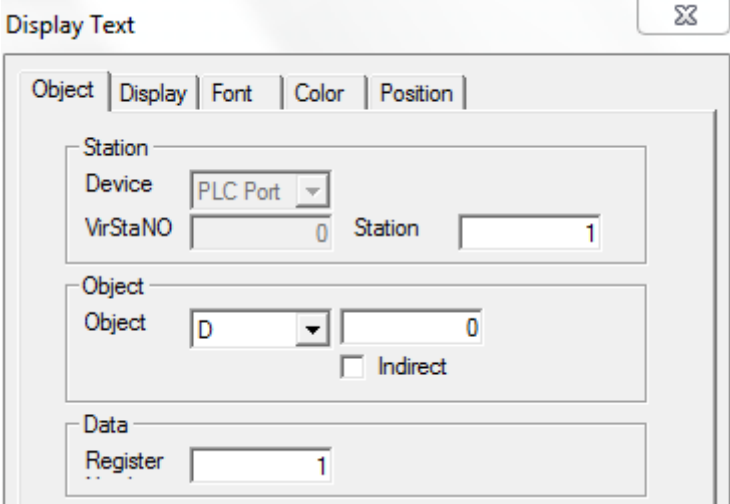


- station device current device port which is communicating.
- station address of communication device
- object set the object type and address of text display.
- indirect set the offset of current address as follow.

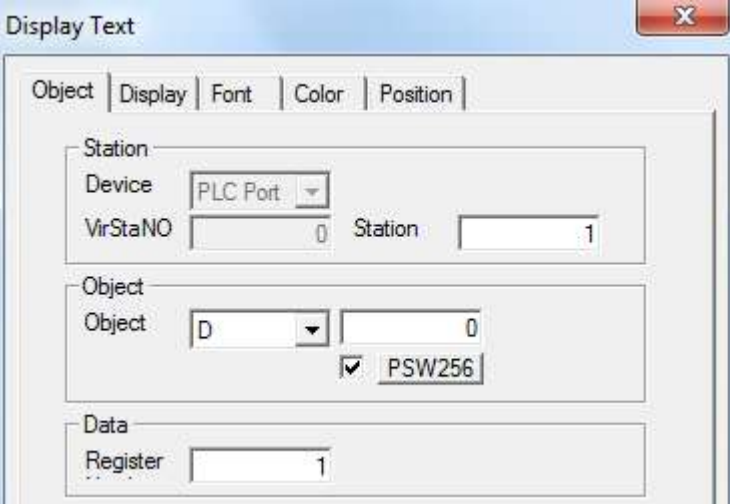


Current address of text display will change with register value PSW256. $D0[PSW256] = D[0 + PSW256 \text{ value}]$

- data set the length of text display. One register will display two characters

-
-  We suggest using internal address of HMI (PSW and PFW) for indirect address.
If not, the communication will be slow.

■ display

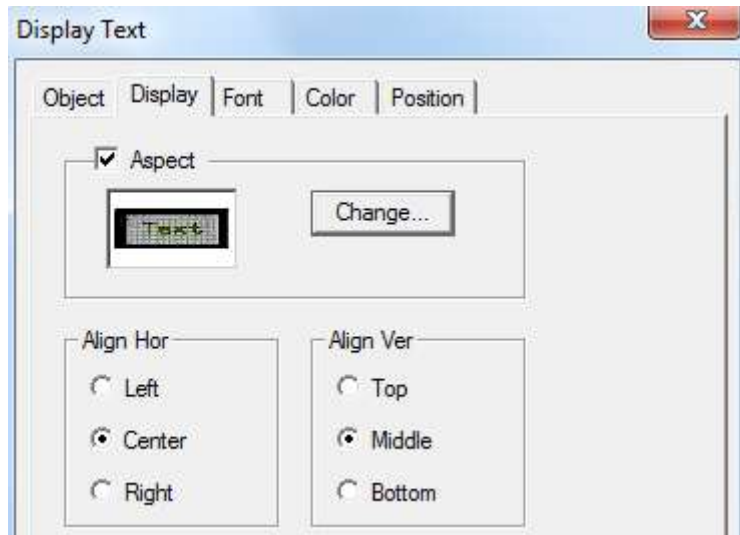


- aspect choose the aspect of text display frame and you can modify the aspect by “changing” button.
- Align hor it contains left, centre and right.
- Align ver it contains top, middle and bottom.

■ font




- setting it contains font, type, size, effect, example, color, character set and so on. You can set it freely.
- art it contains projection, brink, fill, angle and so on. You can set it freely.

■ color

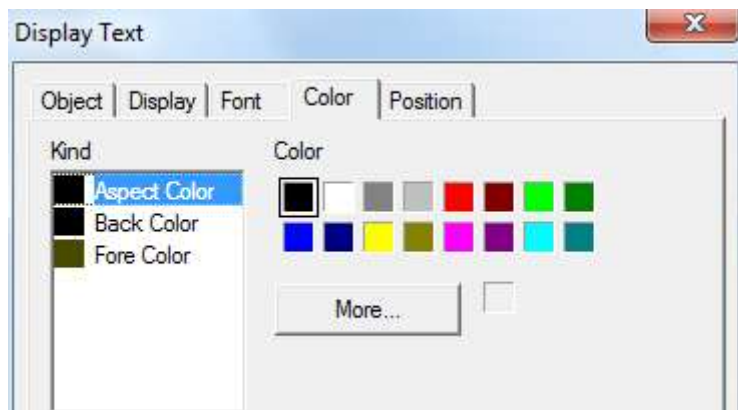

- kind choose the text display to modify the kind of color.
- color modify the color according to the kind.

■ position

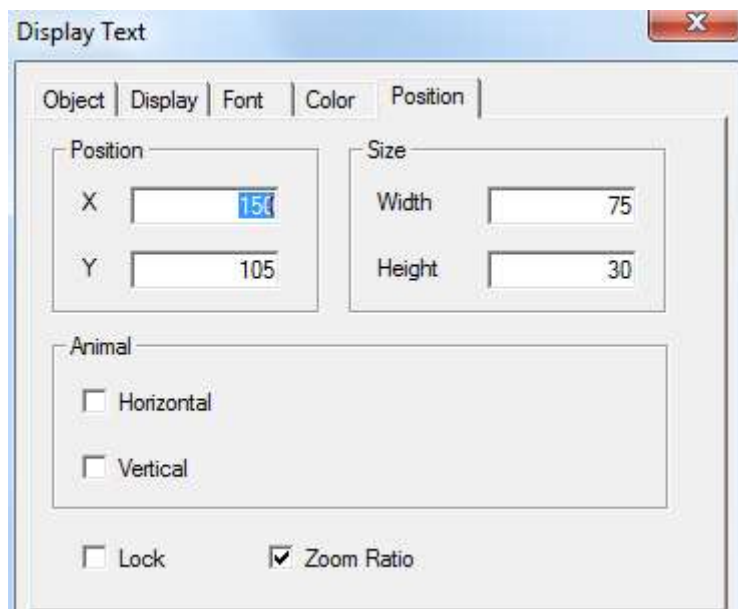



- position set the upper left point to be coordinate point(0, 0). Set the X and Y coordinate value of text display.
 - X position set the X coordinate value of text display.
 - Y position set the Y coordinate value of text display.
- size set the width and height of text display
 - width (W) set the width of text display
 - height (H) set the height of text display
- animal set if the text display need to be moved.
 - horizontal set the text display in the horizontal position of HMI according to register value, modifying X coordinate value.
 - X coordinate value=X position+current value of register
 - vertical set the text display in the vertical position of HMI according to register value, modifying Y coordinate value.
 - Y coordinate value=Y position+current value of register


-
- lock set if the text display in screen can be moved.
 - Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-11. Digital input

 Input digital value through digital keyboard.


1. Click “” icon in the component tool bar. Move the cursor to screen and click left mouse to set. Click right mouse or ESC button to cancel it. You can also set many components of digital input. You can adjust the size of input frame by boundary points.

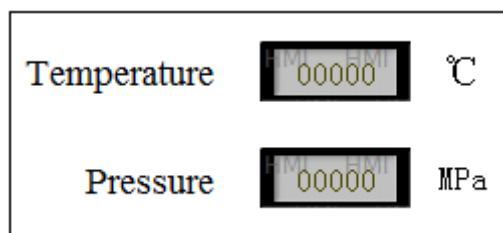


2. Double click “digital input” or choose “digital input” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

- (1) operate object object register of digital input

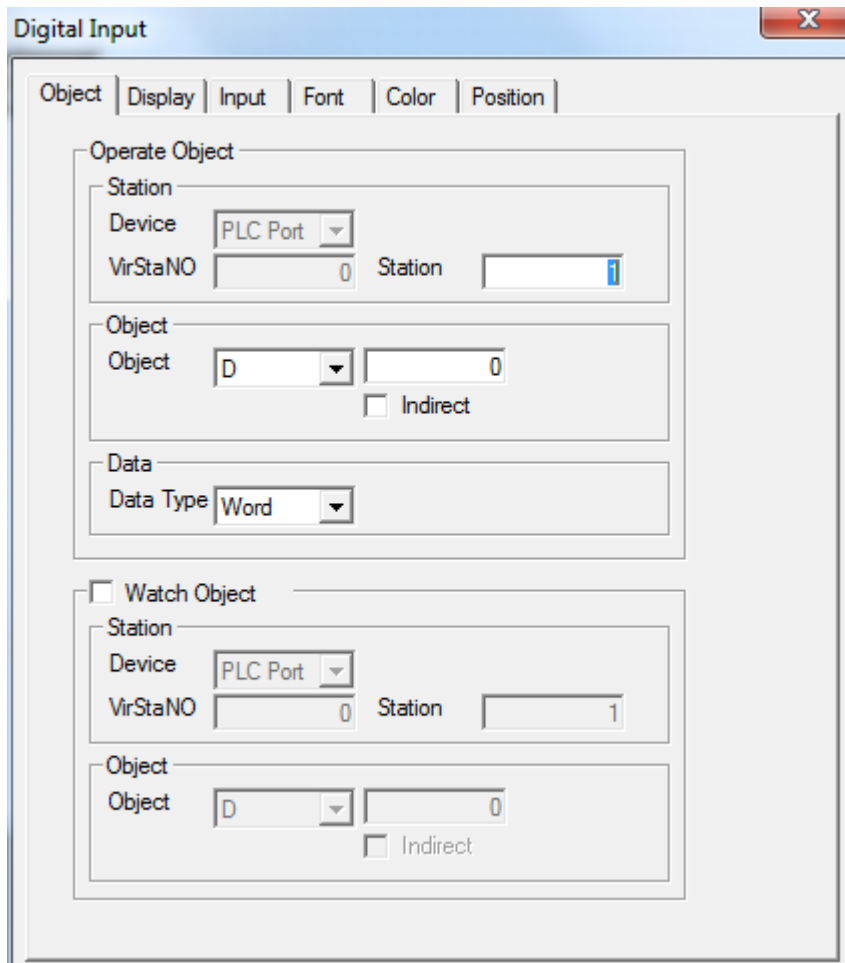

- station current device port which is communicating
- device address of communication device
- station address of communication device
- object set the object type and address of digital input
- indirect set the offset of current address as follow

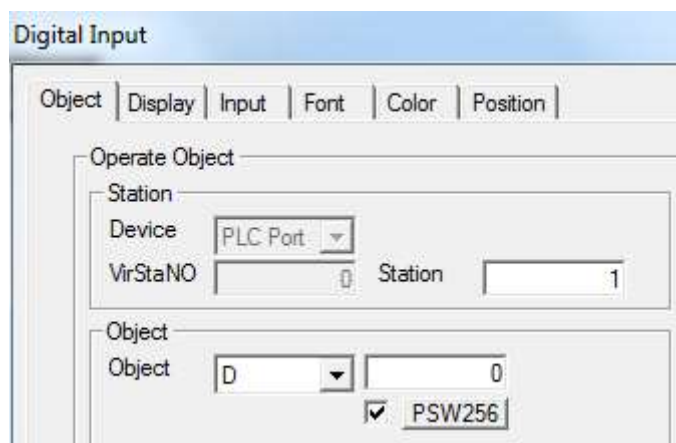

Current address of digital input will change with register value PSW256. $D0[PSW256] = D[0 + PSW256 \text{ value}]$.

- data set the data type to be WORD or D WORD.



We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.

(2) watch object when you are choosing, the digital input box will display the data of register.


- station
device current device port which is communicating
station address of communication device
- object set the watch object type and address of digital input
- indirect set the offset of current address as follow

Current watch object address of digital input will change with register value PSW256
 $D0[PSW256]=D[0+PSW256 \text{ value}]$.




We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.

- display

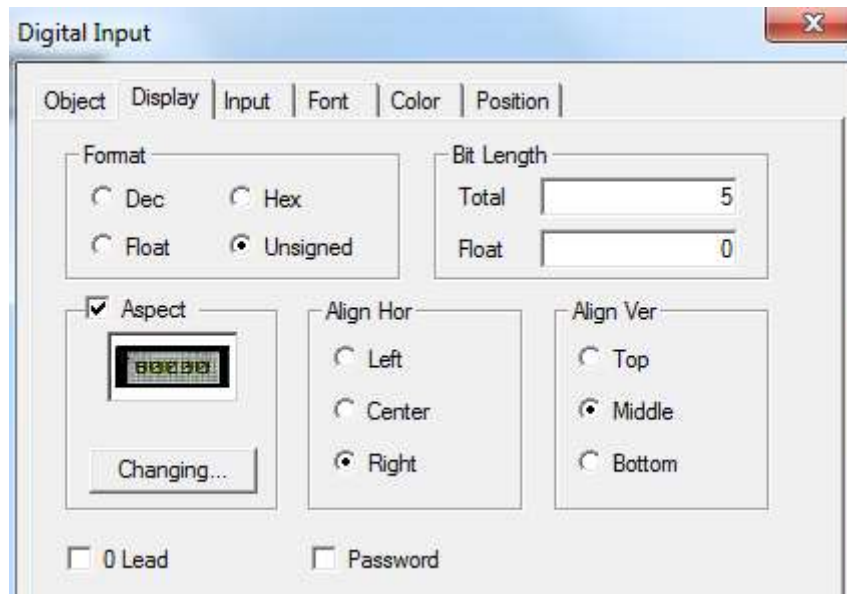


- format choose the format of digital display. It can be Dec, Hex, float and unsigned.
- Bit length total bit of digital display and the length setting of float.
- aspect choose if you need digital input frame and you can modify the aspect by “changing” button.
- Align hori it contains left, centre and right.
- Align vert it contains top, middle and bottom.
- 0 lead add 0 when data digits fails to meet figures
- password data is in the form of password. It will display “*”

■ input

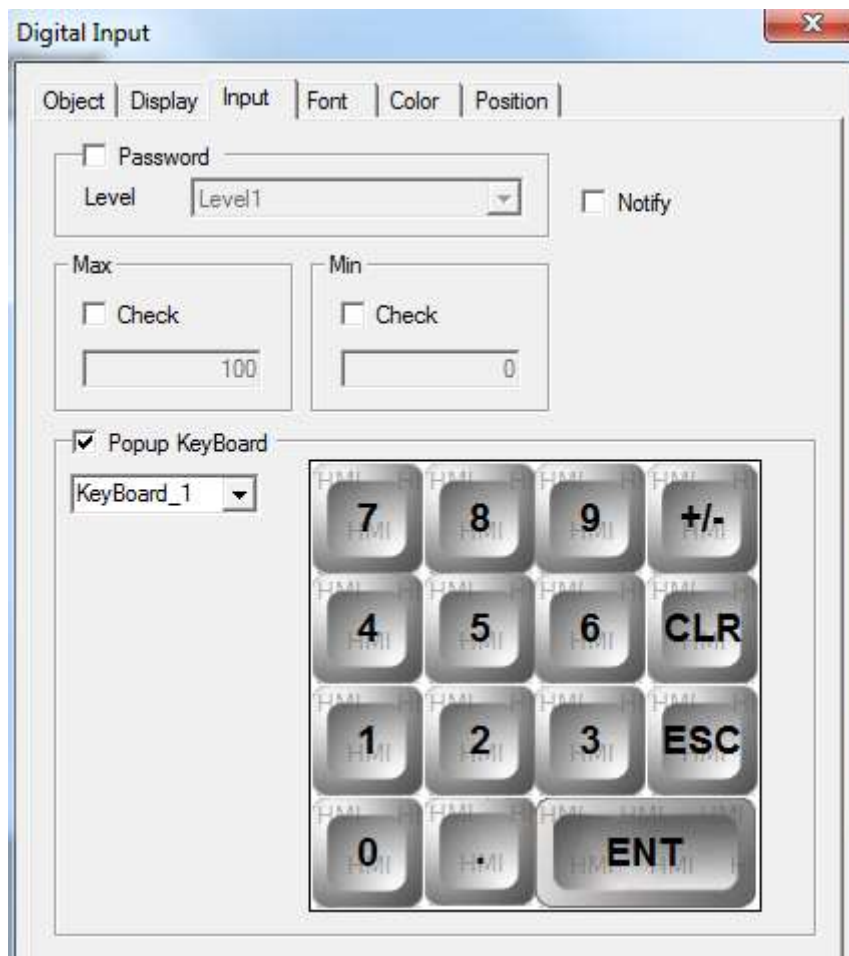


- password set if the digital input need to be protected by password. If you choose “password”, please use the password protection function. At the same time, please choose the relative password level.
- Notify make the target relay to be on after inputting. You can reset it manually.
- Setting of the range the limit data of digital input.
- Popup keyboard when you choose it, a small keyboard will appear. If not, the keyboard will not appear.
- font

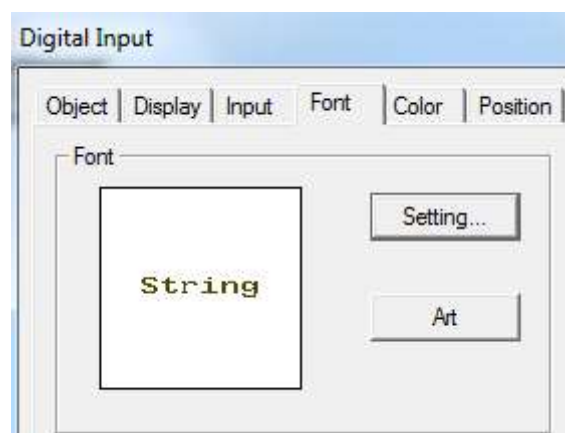


- setting it contains font, type, size, effect, example, color, character set and so on. You can set it freely.

- art it contains projection, brink, fill and angle, etc. you can set it freely.
- color

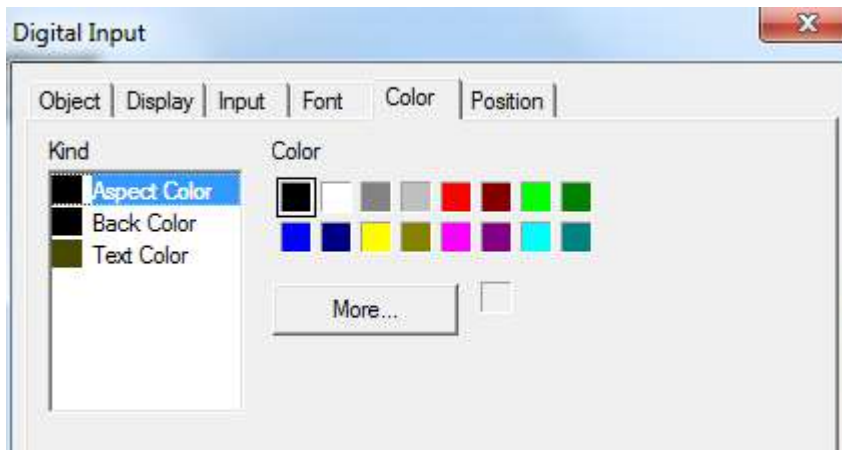


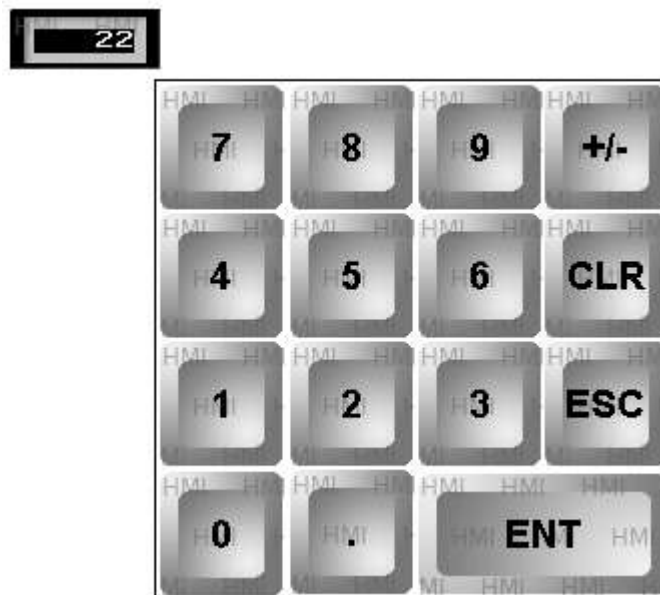
- kind choose digital input to modify the kind of color
- color modify the color according to the kind.
- position

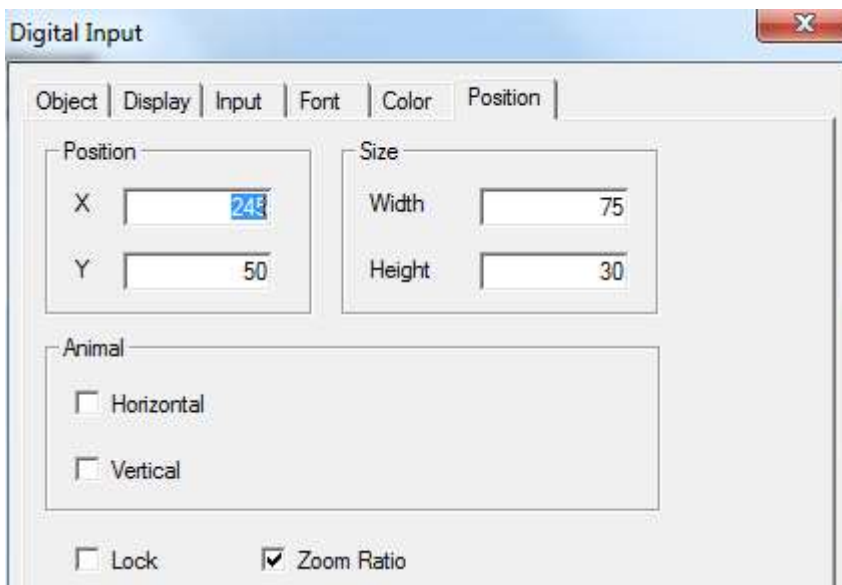

- kind set the upper left point to be coordinate point (0, 0). Set the X and Y coordinate value of digital input.
 - X position set the X coordinate value of digital input.
 - Y position set the Y coordinate value of digital input
- size set the width and height of digital input.
 - width (W) set the width of digital input
 - height (H) set the height of digital input
- animal set if the digital input need to be moved.
 - horizontal set the digital input in the horizontal position of HMI according to register value, modifying the X coordinate value.
 - X coordinate value=X position+current value of register
 - vertical set the digital input in the vertical position of HMI according to register value, modifying Y coordinate value.
 - Y coordinate value=Y position+current value of register

- Lock set if the digital input in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.


3. Enter the off-line status by component “”. When you don’t set password level in the processing, please press the digital input component and small keyboard will appear. The simulation operating is as follow.




After inputting data, please press “ENT” to confirm. If you need to input data again, press “CLR” to clear inputting box. If you don’t need to modify and you want to exit, please press “ESC”.

4-3-12. ASCII code input


Input ASCII code for target register by small keyboard. It is corresponded with character.

1. Click “” icon in the component tool bar. Move the cursor to the screen and click left mouse to set. You can click right mouse or ESC button to cancel it. You can set many ASCII input component. You can also adjust the size of input frame by boundary points.




2. Double click “ASCII input” or choose the “ASCII input” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

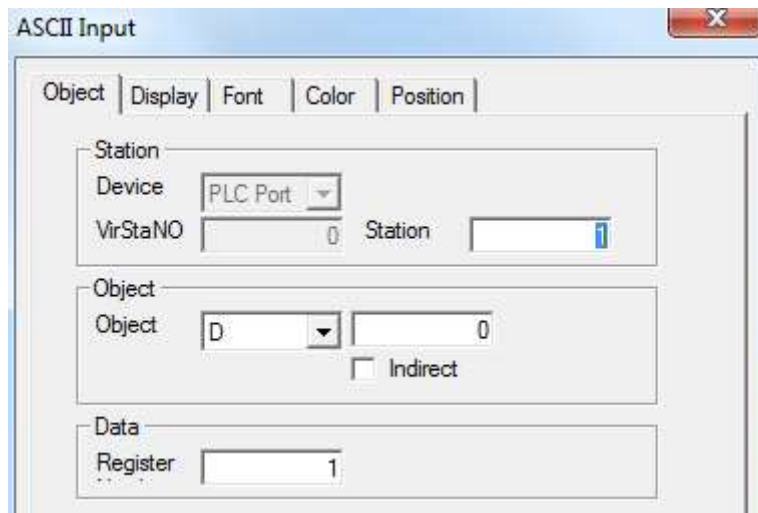

- station device current port which is communicating.
- station address of communication device.
- object set the object type and address of text input
- indirect set the offset of current address as follow.

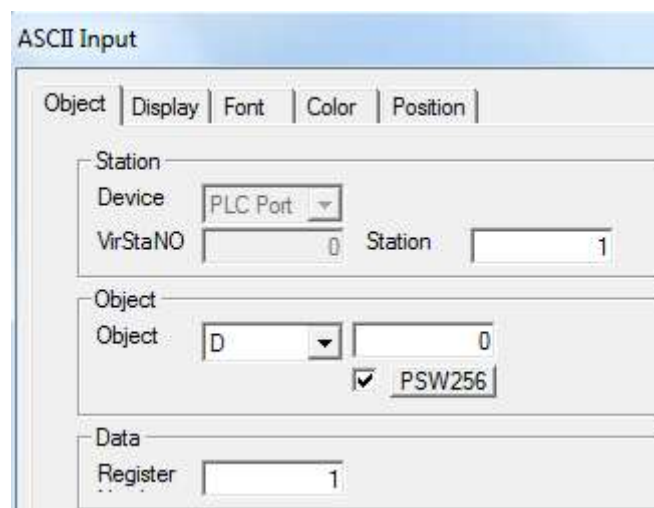

Current address of text input will change with register value PSW256

$D0[PSW256] = D[0 + PSW256 \text{ value}]$


- data set the length of text input. One register can display two characters



We suggest using the internal address of HMI (PSW and PFW) for indirect address.


If not, the communication will be slow.

■ display

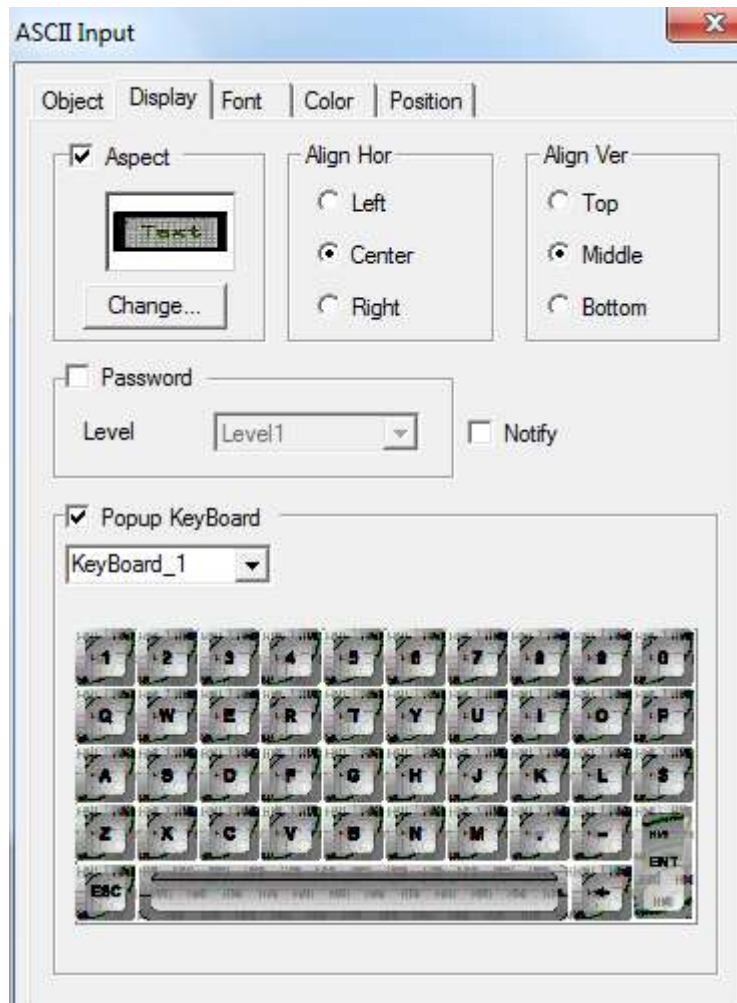


- Aspect choose if you need text input frame and you can modify the aspect by “changing” button.
- Align hor it contains left, centre and right.
- Align ver it contains top, middle and bottom.
- password set if the text input need to be protected by password. If you choose “password”, you need to use password protection. At the same time choose the relative password level.
- notify trigger the target relay to be on after inputting. You can reset it manually.
- Popup keyboard when you choose it, small keyboard will appear. If not, the keyboard will not appear.


■ font

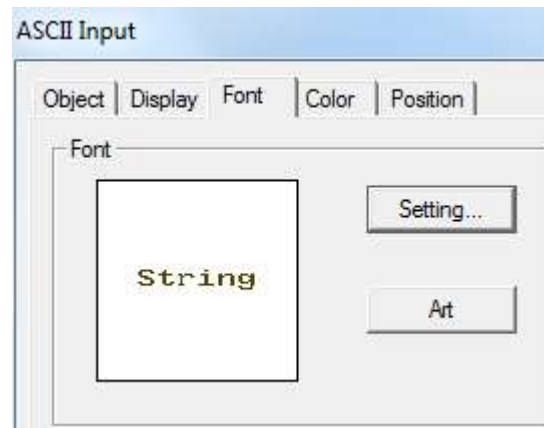


- setting it contains font, type, size, effect, example, color and character set. You can set it freely.
- art it contains projection, brink, fill, angle and so on. You can set it freely.
- color

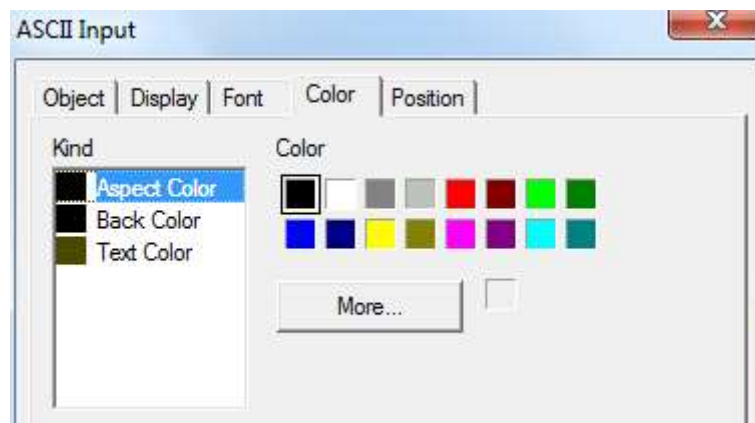

- kind choose the text input to modify the kind of color
- color modify the color according to the kind.
- position

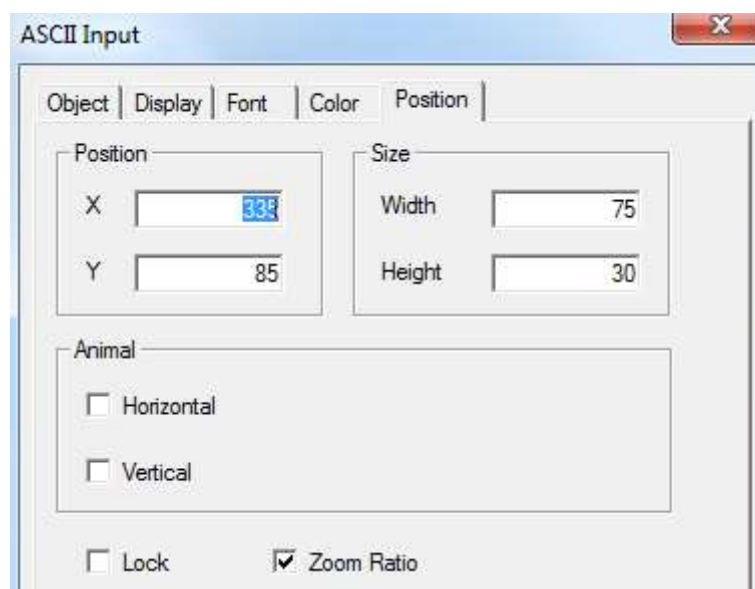

- position set the upper left point to be coordinate point(0, 0). Set the X and Y

 
-
- coordinate value of text input.
- X position set the X coordinate value of text input.
- Y position set the Y coordinate value of text input.
- Size set the width and height of text input.
 - width (W) set the width of text input.
 - height (H) set the height of text input.
 - animal set if the text input need to be moved.
 - horizontal set the text input in the horizontal position of HMI according to register value, modifying the X coordinate value.
 - $X \text{ coordinate value} = X \text{ position} + \text{current value of register}$
 - vertical set the text input in the vertical position of HMI according to register value, modifying the Y coordinate value.
 - $Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$
 - lock set if the text input in screen can be moved.
 - Zoom ratio set if it can be zoomed when editing its size. But this function can not work.
3. Enter the off-line simulation by the component “”. If you don’t set password level, please press the component of text input. Then the keyboard of text input will appear as follow.




Input character directly by keyboard button. Press “ESC” button to exit. Press “<-” to cancel it. Press “ENT” to confirm.

4-3-14. Set data

Do arithmetic calculation for register data.

1. Click “” icon in the component tool bar. Move the cursor to screen and click left mouse to set. You can click right mouse or ESC button to cancel it.



2. Double click “set data” or choose “set data” and click right mouse. You can set attribute by choosing “attribute” or “” button.

- object

- station device current device port which is communicating.
- station address of communication device
- object set the object type and address of setting data.
- Indirect set the offset of current address as follow.


Current address of set data changed with register value PSW256. $D0[PSW256]=D[0+PSW256 \text{ value}]$

- data set the word or D word of data type




We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.

- operate

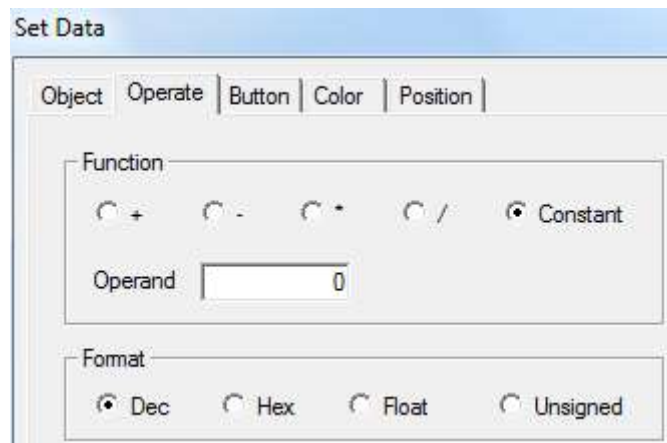


- function
 - add object register value + operand = object register value
 - subtract object register value - operand = object register value
 - multiply object register data X operand = register data
 - division object register data ÷ operand = register data
 - constant operand is the data of current object register
- format it contains decimal, hexadecimal, float and unsigned.

■ button

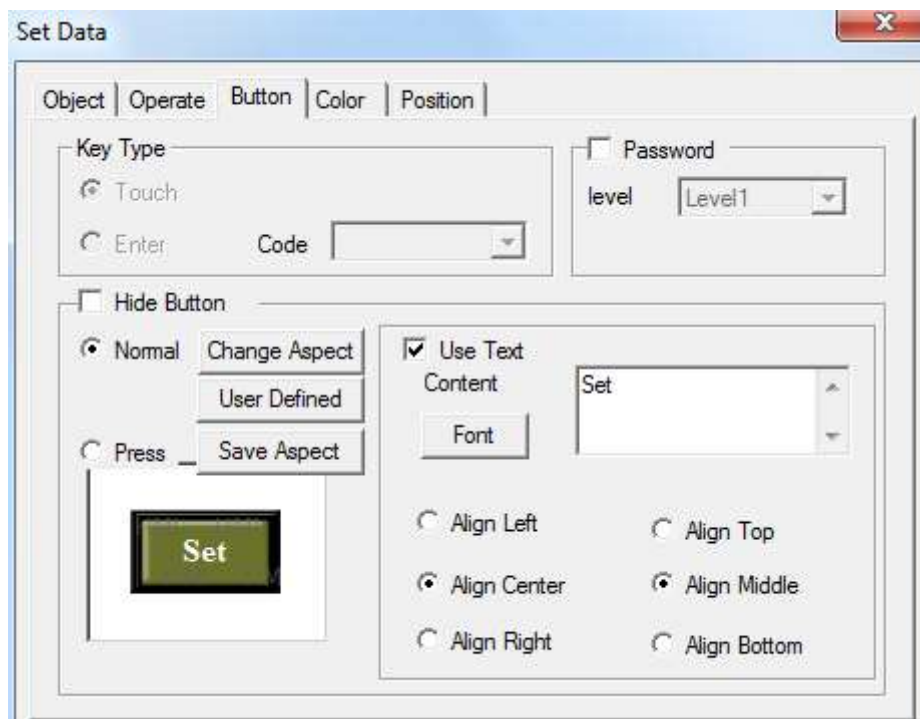


- Hide button set if the button can be visible when it is operating. Choose this option. The aspect and text cannot be operated.

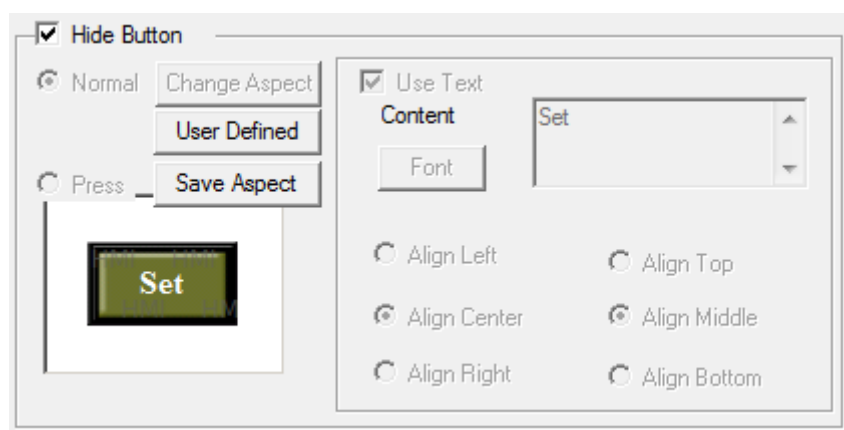

- normal set the normal display or the status picture after releasing the button.
- press set the status picture when pressing the button.
- Change aspect set the aspect. It belongs to software's material library. You can choose from it freely.
- User defined modify the data to set aspect. It belongs to user defined material library.
- Save aspect save data to set aspect. It is convenient when you are programming.
- font modify data to set the content, font and align type of text.
- content set the displaying content
- font set the size, font and type of text.
- align choose the align type according to your requirement.
- password set if it need to be protected by password. If you choose password, please use password protection. At the same time choose the password level.

■ color

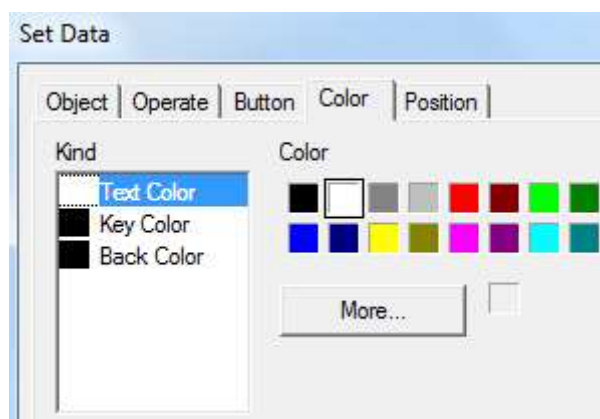

- kind modify the kind of color.
- color modify the color according to the kind.

■ position

The 'Set Data' dialog box is shown with the 'Position' tab selected. It contains the following fields and options:

- Position:** X (210), Y (100)
- Size:** Width (75), Height (42)
- Animal:**
 - ☐ Horizontal
 - ☐ Vertical
- Lock:** ☐
- Zoom Ratio:** ☐

- position set the X and Y coordinate value.
 - X position set the X coordinate value.
 - Y position set the Y coordinate value.
- size modify the data to set the width and height.
 - width (W) modify data to set width
 - height (H) modify data to set height
- animal set if it can be moved.
 - horizontal set in the horizontal position of HMI according to register value, modifying X coordinate value.
 - X coordinate value=X position+value of current register
 - vertical set in the vertical position of HMI according to register value, modifying Y coordinate value.
 - Y coordinate value=Y position+value of current register
- lock set if the set data in the screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-15. Digital keyboard

It is related to digital input component. When you don't choose "pop-up keyboard", digital keyboard will not appear in the process of input number and you need to add digital keyboard manually.

Click "🖱️" icon in the component tool bar. Move the cursor in the screen and click left mouse to set. Click right mouse or ESC button to cancel it.



The digital keyboard will connect to digital input button automatically. Press “ENT” key will finish the digital input. You only need to set one digital keyboard for all the digital input buttons.




Only one digital input component can be used when there are many digital input buttons. Digital keyboard will connect to them automatically.

■ position

- position set the upper left point in screen to be coordinate point(0, 0). Set the X and Y coordinate value.
 - X position set the X coordinate of digital keyboard.
 - Y position set the Y coordinate value of digital keyboard.
- size set the width and height of digital keyboard
 - width (W) set the width of digital keyboard
 - height (H) set the height of digital keyboard
- animal set if the digital keyboard need to be moved

horizontal set the digital keyboard in the horizontal position of HMI according to register value, modifying X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$


vertical  set the digital keyboard in the vertical position of HMI according to register value, modifying Y coordinate value.


$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$

- lock set if the digital keyboard in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. but this function can not work now.

4-3-16. ASCII keyboard

ASCII keyboard is corresponded to ASCII input component. When you don't choose "pop-up keyboard", ASCII keyboard will not appear. You need to add ASCII keyboard manually.

Click the  icon in the component tool bar. Move the cursor in screen and click left mouse to set. Click right mouse or ESC button to cancel it.

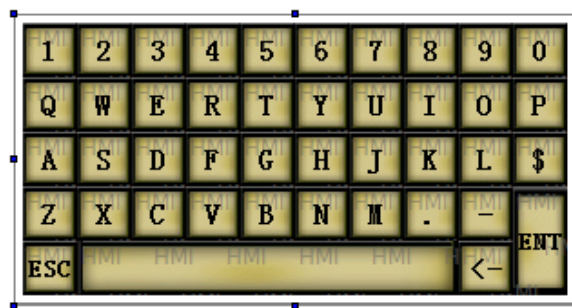

Only one ASCII input component can be used when there are many text input boxes in editing screen. ASCII keyboard will connect to it automatically.

■ position

 
- set the upper left point to be coordinate point(0, 0). Set the X and Y coordinate value of ASCII keyboard.

X position set the X coordinate value of ASCII keyboard.


- Y position set the Y coordinate value of ASCII keyboard.
- size set the width and height of ASCII keyboard.
 - width (W) set the width of ASCII keyboard
 - height (H) set the height of ASCII keyboard
- animal set if the ASCII keyboard need to be moved.
 - horizontal set the ASCII keyboard in the horizontal position of HMI according to register value, modifying the X coordinate value.
 - X coordinate value=X position+current value of register
 - vertical set the ASCII keyboard in the vertical position of HMI according to register value, modifying the Y coordinate value.
 - Y coordinate value=Y position+current value of register
- lock set if the ASCII keyboard in screen can be moved.
- Zoom ratio se if it can be zoomed when editing its size. But this function can not work now.

4-3-17. User input

The keyboard is formed by user input components. Every button value is corresponded to an ASCII code. Then the input data will be separated. Customer can use defined input keyboard of this component.

1. Click “” icon in component tool bar. Move the cursor in the screen and click left mouse to set. Click right mouse or ESC button to cancel it.



2. Double click the “user input” or choose “user input” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ operate




- input input relative ASCII code of button


The following are common ASCII code value of buttons.

1 — 0X31	2 — 0X32	3 — 0X33	4 — 0X34	5 — 0X35
6 — 0X36	7 — 0X37	8 — 0X38	9 — 0X39	0 — 0X30
ESC — 0X1D	CLR — 0X7F	ENT — 0XD		

■ button

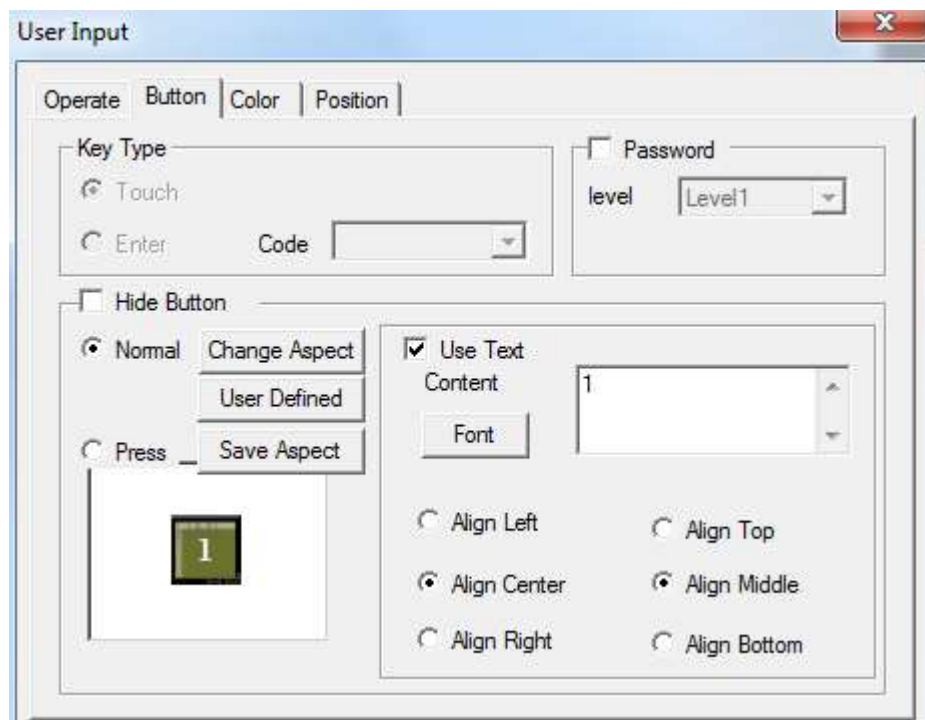


- hide button if it is visible when the button is operating. Choose this option. User input aspect and text cannot be operated.

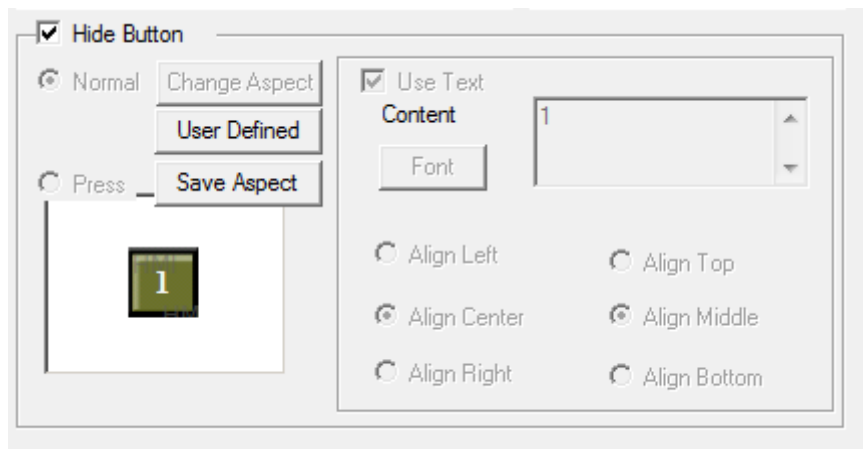


- normal the status picture after normal display or releasing button of user input.
- press displaying status picture when pressing the user button.
- Change aspect modify the aspect of user input.it belongs to its own material library. You can choose from it freely.
- User defined modify the aspect of user input. It belongs to user defined material library.
- Save aspect save the aspect of user input. It is convenient for programming.
- Use text modify the content, font and align type of user input.
 - content set the displaying content of user input.
 - font set the size, font and type of user input text.
 - align you can choose align type according to your requirement.
- password if the user input need to be protected by password. If you choose “password”, please use password protection. At the same time choose the relative password level.

■ color

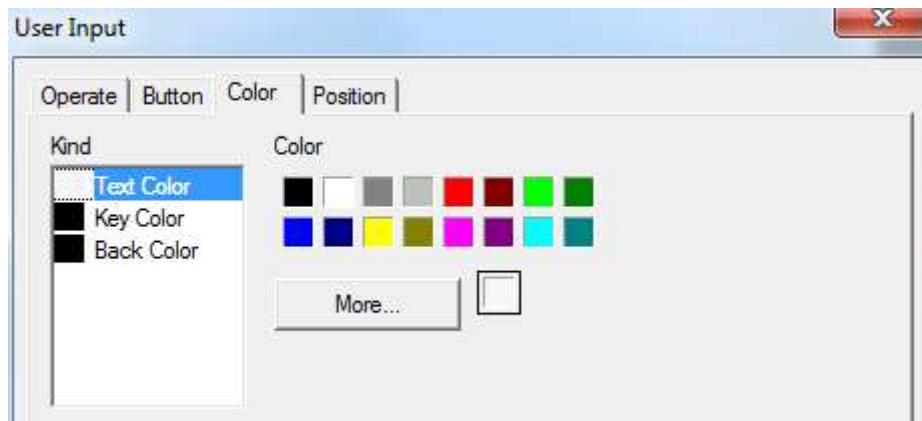

- kind choose the user input to modify the kind of color
- color modify the color according to the kind.

■ position

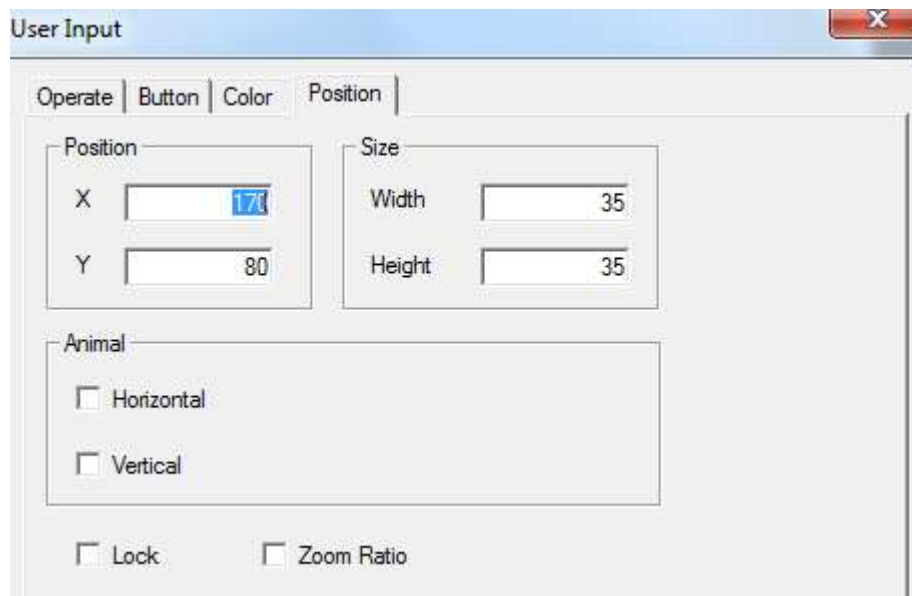

- position set the upper left point in screen to be coordinate point (0, 0). Set the X and Y coordinate value of user input.
 - X position set the X coordinate value of user input
 - Y position set the Y coordinate value of user input
- size set the width and height of user input
 - width (W) set the width of user input
 - height (H) set the height of user input
- animal set if the user input need to be moved.

horizontal set the user input in the horizontal position according to register value, modifying X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$

vertical set the user input in the vertical position according to register value,


modifying Y coordinate value.


Y coordinate value=Y position+current value of register

- lock set if the user input in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.


4-3-18. Bar

This function will display the bar of object data. It is direct to show it. It is usually for analog quantity such as pressure change, level change and temperature change. As the following picture, it shows the relation between current value and full scale value.

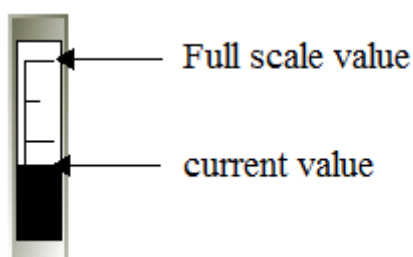


1. Click the “” icon in component tool bar. Move the cursor to screen and click left mouse to set. Click right mouse or ESC button to cancel it. You can also edit the size by adjusting boundary points.



2. double click “bar” or choose “bar” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

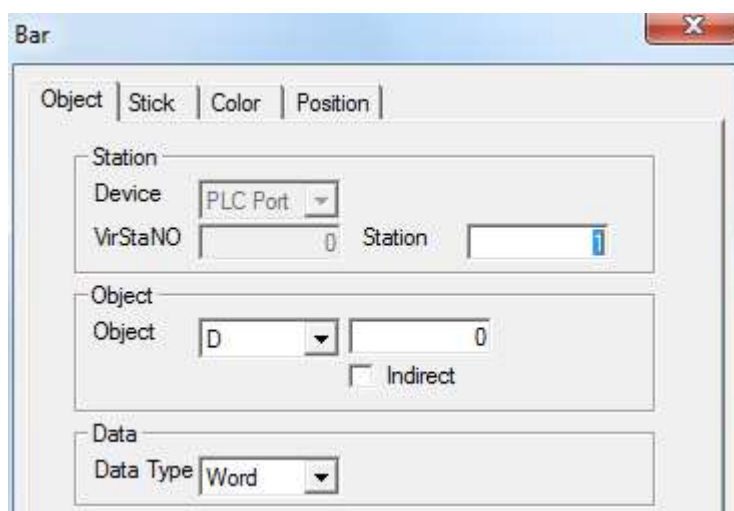

- station device current device port which is communicating.

- station address of communication device
- object set the object type and address of bar
- indirect set the offset of current address as follow.

Current address of bar will change with register PSW256. $D0[PSW256] = D[0 + PSW256 \text{ value}]$

- data set the data type to be word or D word.



We suggest using internal address of HMI (PSW, PFW internal address type) for indirect address. If not, the communication will be slow.


■ bar

- preview display simple picture of current bar
 - aspect aspect setting of bar
- For vertical bar, choose top or bottom type. For horizontal bar, choose the left or right type. Transform the horizontal and vertical display direction by “mode” button. You can also

choose aspect of bar.


- Scale set the centigrade of upper limit and lower limit. Set the main scale and slave scale.
- Data set the data format, max and min value.

■ color

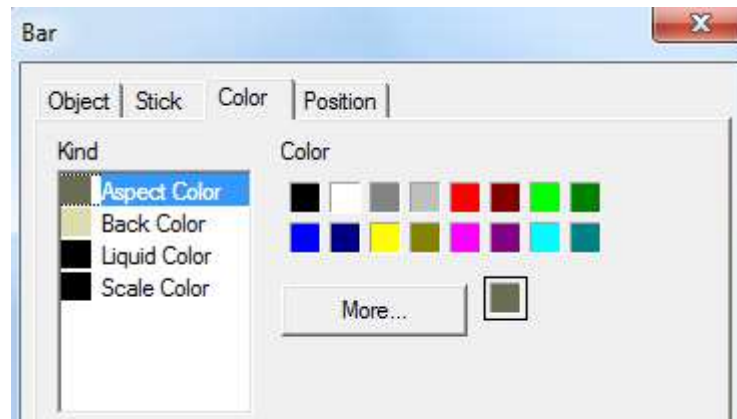

- kind choose the bar to modify the kind of color.
- color modify the color according to the kind.

■ position

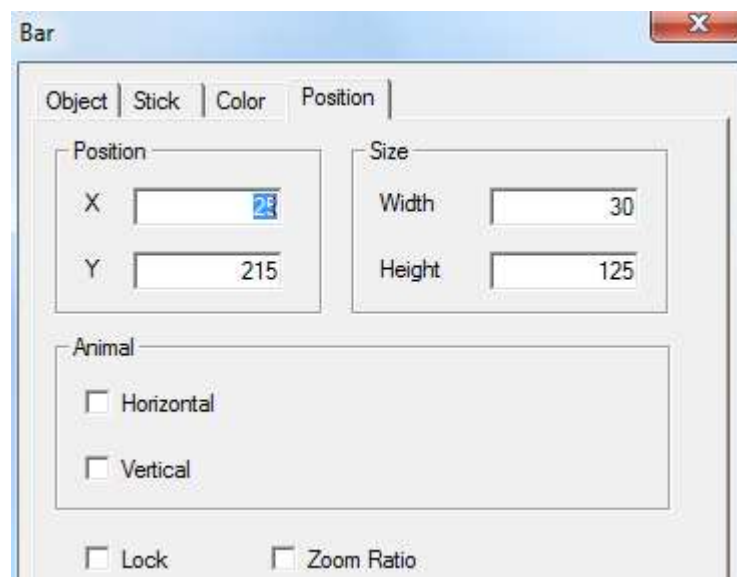

- position set the upper left point to be coordinate point (0, 0). Set the X and Y coordinate value of bar.
 - X position set the X coordinate value of bar
 - Y position set the Y coordinate value of bar
- size set the width and height of bar
 - width (W) set the width of bar
 - height (H) set the height of bar
- animal set if the bar need to be moved.
 - horizontal set the bar in the horizontal position of HMI according to register value, modifying X coordinate value.


X coordinate value=X position+current value of register
 vertical set the bar in the vertical position of HMI according to register value,
 modifying Y coordinate value.


Y coordinate value=Y position+current value of register

- lock set if the bar in screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.


4-3-19. Dynamic map

Switch the pictures according to register value. The range of register value and the status of picture are 0 to 15.

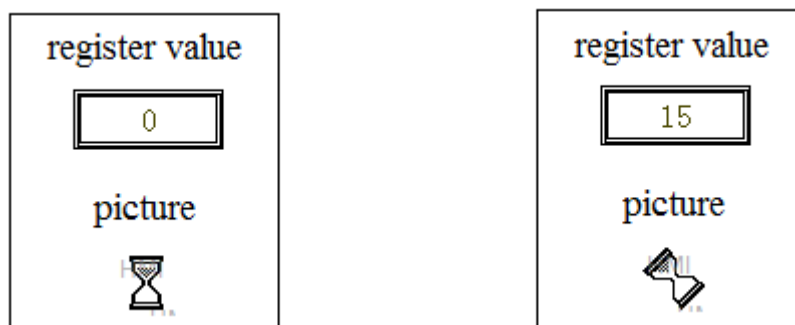


1. Click the “” icon in the component tool bar. Move the cursor to the screen and click left mouse to set. Click right mouse or ESC button to cancel it. You can edit its size by adjusting the boundary points.




2. Double click “dynamic map” or choose “dynamic map” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

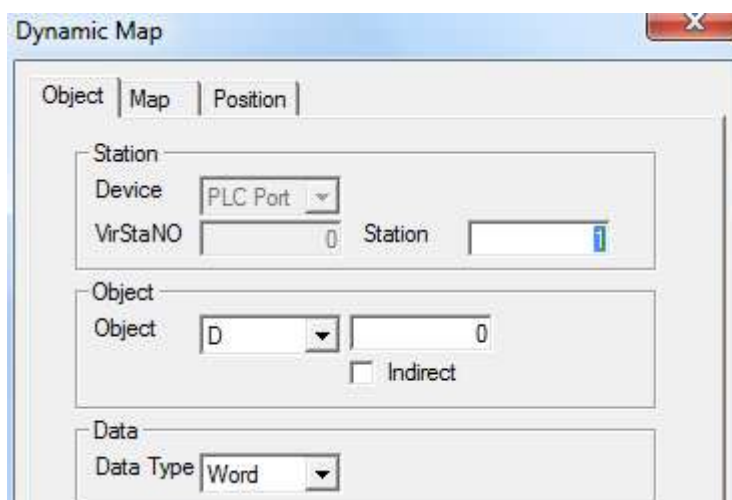

➤ station

- device current device port which is communicating.
- station address of communication device.
- object set the object type and address of dynamic map.
- indirect set the offset of current address as follow.

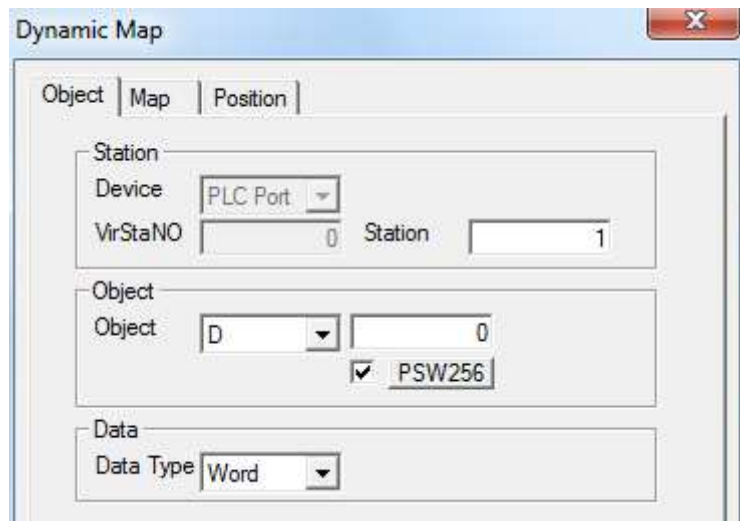

Current address of dynamic map change with register PSW256.


$D0[PSW256] = D[0 + PSW256 \text{ value}]$

- data set the data format to be word or D word.




We suggest using internal address of HMI (PSW and PFW internal address type) for indirect address. If not, the communication will be slow.

- picture

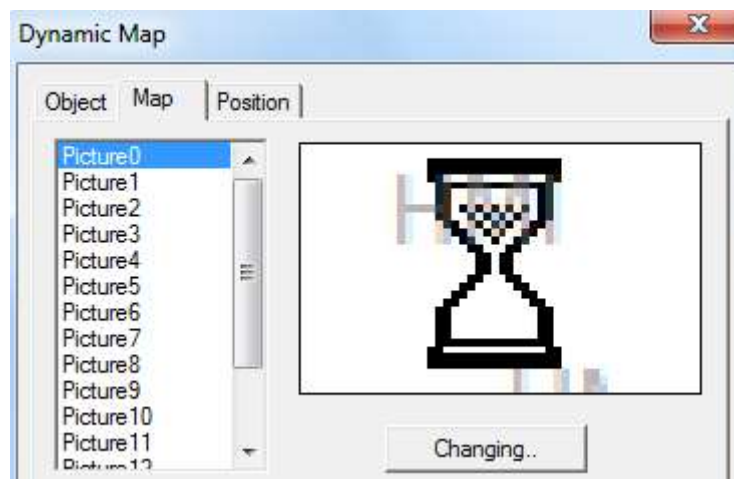

From picture 0 to picture 15. It is corresponded to “object” register value. (0~15) choose the object picture number. You can choose the object picture by “changing” (bmp and jpg picture) .

- position

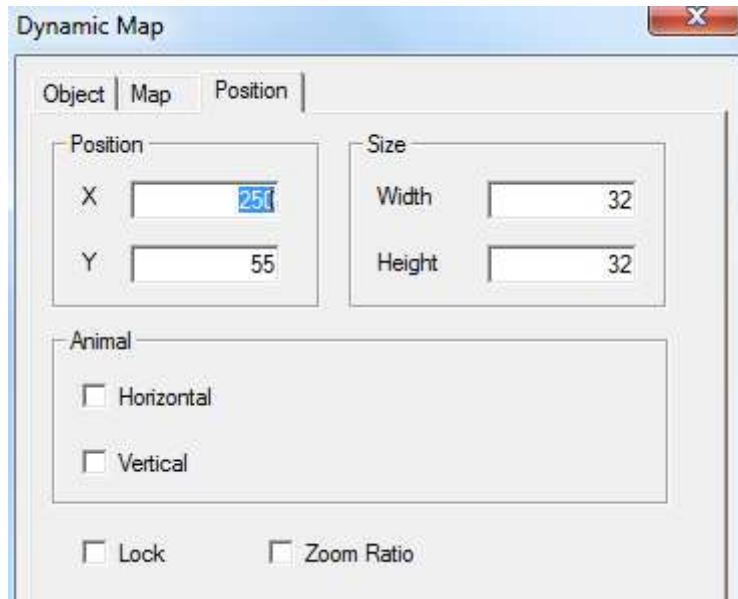

position set the upper left point to be the coordinate point (0, 0). Set the X and Y coordinate value of dynamic map.

X position set the X coordinate value of dynamic map.

Y position set the Y coordinate value of dynamic map.

➤ size set the width and height of dynamic map.

width (W) set the width of dynamic map

height (H) set the height of dynamic map

➤ animal set if the dynamic map need to be moved.

horizontal set the dynamic map in the horizontal position of HMI according to register value, modifying the X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$

vertical set the dynamic map in the vertical position of HMI according to register value, modifying the Y coordinate value.


$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$

➤ lock set if the dynamic map in screen can be moved.


➤ Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-20. Call window


Object window is called by controlling the ON/OFF of auxiliary relay.

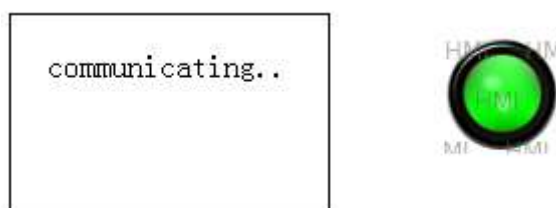


M0=1, call window ID60001

1. Click “

Call Window


2. Double click “call window” or choose “call window” and click right mouse. Set the attribute by choosing “attribute” or “

■ object

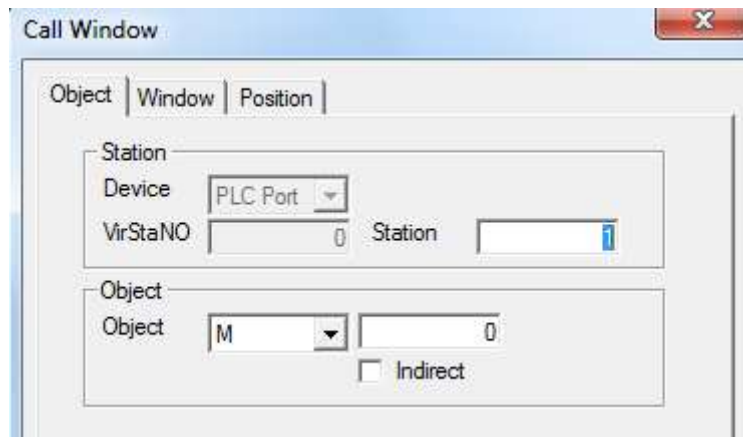

The 'Call Window' dialog box has three tabs: 'Object', 'Window', and 'Position'. The 'Object' tab is selected. It contains two main sections. The first section is for 'Station' configuration, with a 'Device' dropdown set to 'PLC Port', a 'VirStaNO' input field with '0', and a 'Station' input field with an information icon. The second section is for 'Object' configuration, with an 'Object' dropdown set to 'M', an input field with '0', and an 'Indirect' checkbox that is unchecked.

- station device current device port which is communicating
- station address of communication device
- object set the trigger signal object type and address of call window.
- indirect set the offset of current address as follow.

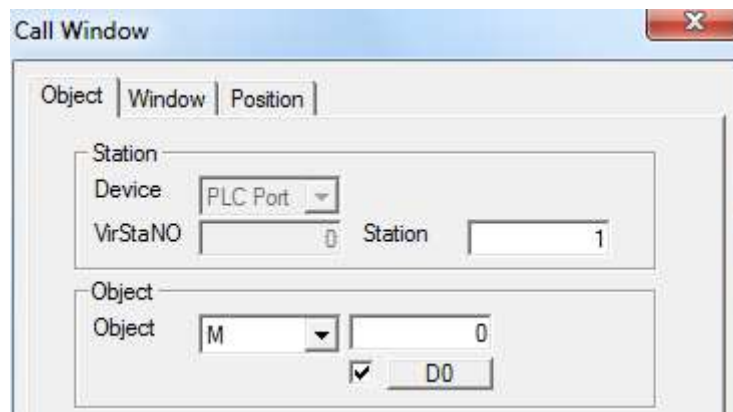

This 'Call Window' dialog box is identical to the previous one, but with the 'Station' input field set to '1'. In the 'Object' section, the 'Indirect' checkbox is now checked, and a 'D0' label is visible next to the '0' in the input field, indicating an indirect address offset.

Current trigger signal address of call window will change with register D0. $M0[D0]=M[0+D0 \text{ value}]$




When the auxiliary relay is ON, the called window will appear in screen. When it is OFF, this window will be closed. We suggest using internal address of HMI (PSW and PFW internal address type) for indirect address. If not, the communication will be slow.

■ window



- window set the call window ID

■ position

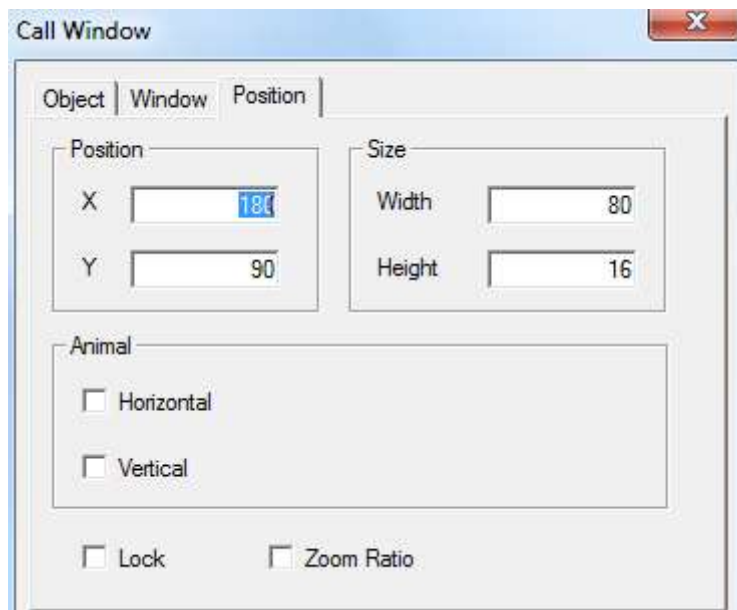

- Position set the upper left point to be the coordinate point (0, 0) . Set the X and Y coordinate value of call window.

X position set the X coordinate value of call window

Y position set the Y coordinate value of call window

Call window component is invisible after downloading to the HMI. So its size can not be edited.

- Animal set if the call window in screen can be moved.

horizontal set the call window in the horizontal position of HMI according to register value, modifying the X coordinate value

X coordinate value=X position+current value of register

vertical set the call window in the vertical position of HMI according to register value, modifying the Y coordinate value.


Y coordinate value=Y position+current value of register

- lock set if the call window in screen can be moved.


- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-21. Window button

Direct close or open the window without the controlling of auxiliary relay.

1. Click “” icon in the component tool bar. Move the cursor to screen and click left mouse to set. Click right mouse or ESC button to cancel it. You can edit its size by boundary points.




2. Double click the “window button” or choose “window button” and click right mouse. Set the attribute by choosing “attribute” or “” button.


■ operate

- Current window when you are choosing, please aim at the operation of current window.
- Window ID object window ID of inputting target.
- function choose the function for window operation
- type choose the current function to open window, close window or window status. You can choose the window status as hide or show.
- Position pop-up window is in the coordinate position of editing screen.
- X set the X coordinate value of pop-up window
- Y set the Y coordinate value of pop-up window

■ Button

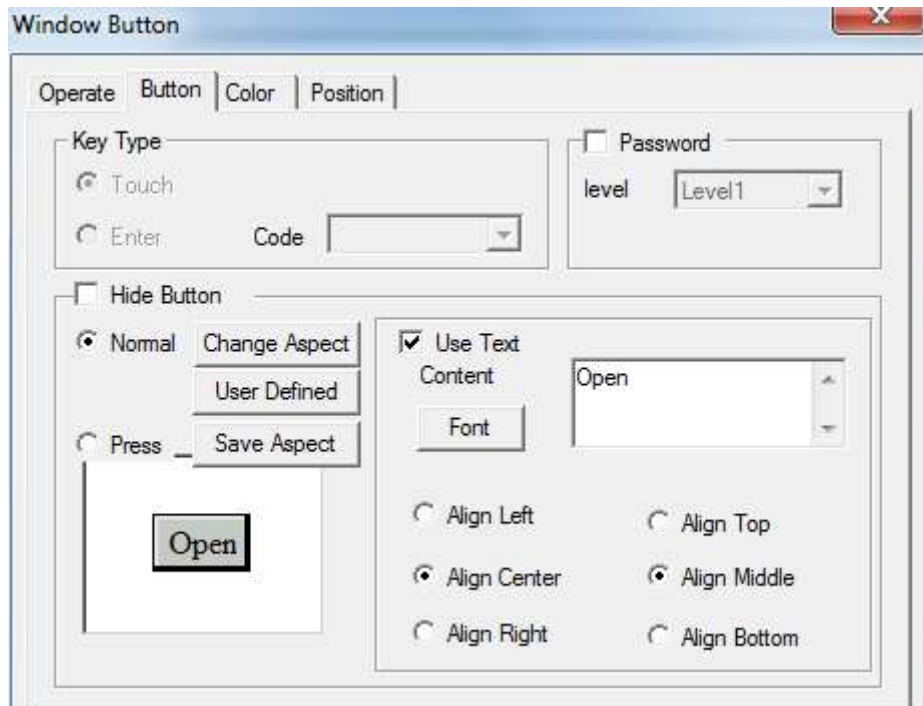


- Hide button set if it can be visible when button is operating. If you choose this option, the operation of window button aspect and text will be forbidden.

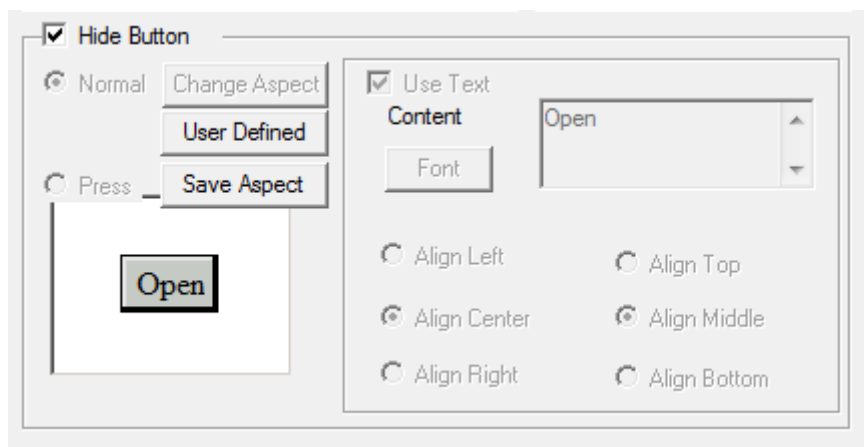

- normal displaying status picture after the window button display normal or releasing window button.
- press the displaying status picture when the window button is pressed.
- Change aspect modify the aspect of window button. It belongs to its own material library. You can choose from it freely.
- User defined modify the aspect of window button. It belongs to user defined material library.
- Save aspect save the aspect of window button. It is convenient for programming.
- Text modify the content, font and align type of window button text.
 - content set the display content of window button.
 - font set the size, font and type of window button font.
 - align you can choose the align type according to your requirement.
- Password set if the window button can be protected by password. If you choose


“password”, use password protection. At the same time choose the relative password level.

■ color

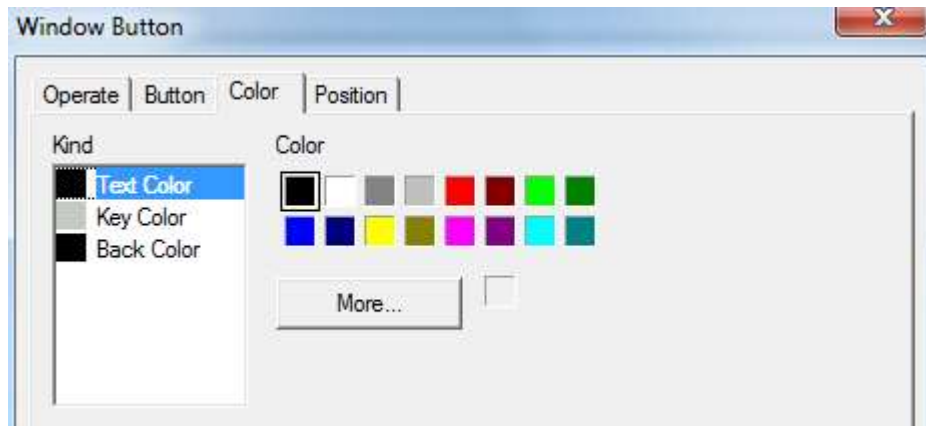

- kind choose the window button to modify the kind of color.
- color modify the color according to the kind.

■ position

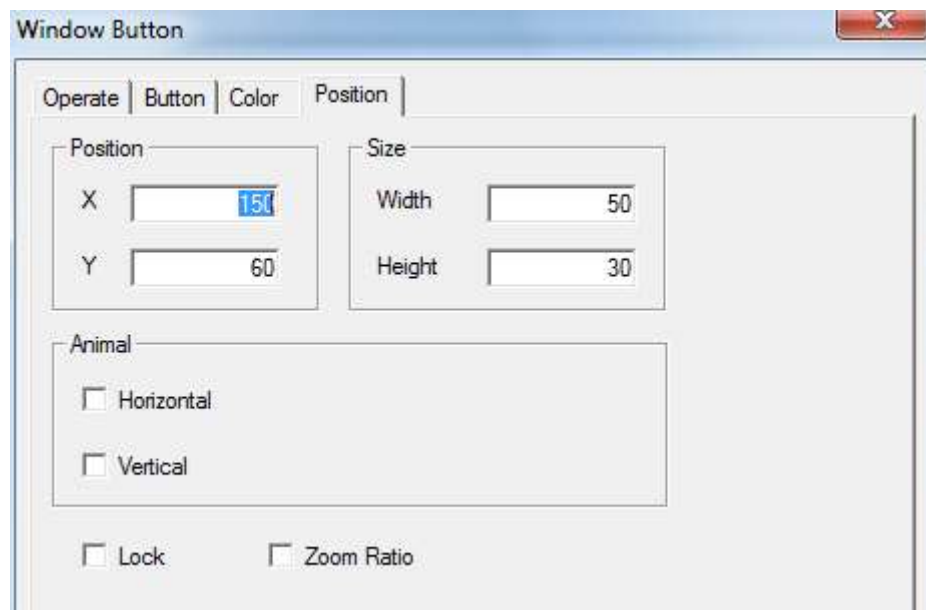

- position set the upper left point to be the coordinate point (0, 0). Set the X and Y coordinate value of window button.
 - X position set the X coordinate value of window button.
 - Y position set the Y coordinate value of window button.
- size set the width and height of window button
 - width (W) set the width of window button
 - height (H) set the height of window button
- animal set if the window button need to be moved.
 - horizontal set the window button in the horizontal position of HMI according to register value, modifying the X coordinate value.



X coordinate value=X position+current value of register
vertical set the window button in the vertical position of HMI according to register value,
modifying the Y coordinate value.

Y coordinate value=Y position+current value of register

- lock set if the window button in the screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

For example: open and close window ID60001.

Open window 60001

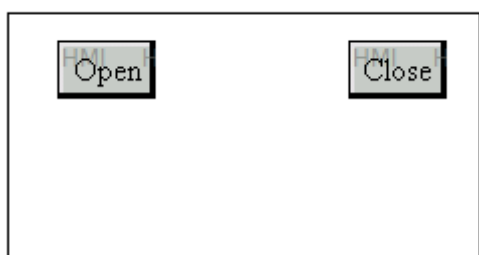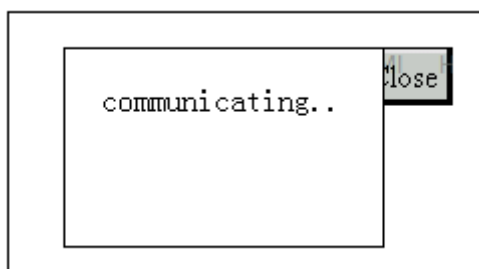


Close window 60001


4-3-22. Down recipe

Recipe is consisted of a group of similar type material. Because these materials are similar, you can edit them to be a group of recipe. It is convenient to deliver to object device. It will control it effectly. So when users find a group of similar materials, you can use this function to deliver the materials effectly and correctly.


In the practical application, because the HMI has large data storage space and at the same time it has the conveniences of displaying, users can use the recipe of HMI to control PLC. You can control the read and save function of PLC materials by the recipe function. They are upload and download function as the following picture.

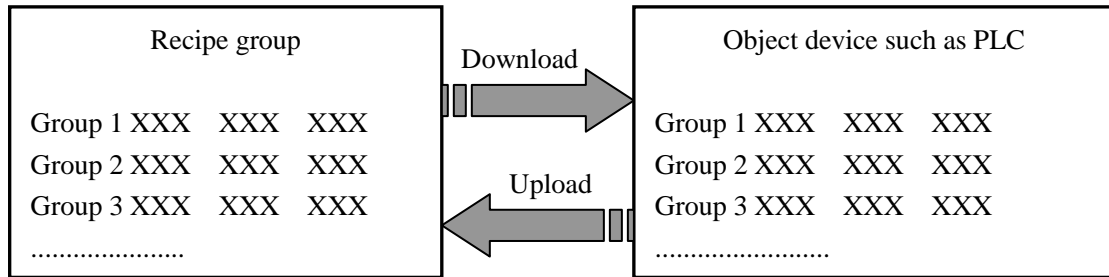

So the recipe function meets the requirement of industry control, transfer the data between device data and recipe data library. Down recipe function can transfer from recipe data library to device data section.

 1. Click the “” icon in the component tool bar. Move the cursor to the screen and click left mouse to set. Click right mouse use or ESC button to cancel it. You can also edit its size by adjusting boundary points.



2. Double click “Down recipe” or choose the “Down recipe” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

- device data the address information of data download object register.
- station set the connecting device and station
 - device current device port which is communicating
 - station address of communication device
- object address and serial number of download object register.
- indirect set the offset of current address as follow.

The screenshot shows a 'Down Recipe' dialog box with the following fields:

- Object**: Recipe (selected), Button, Color, Position
- Device Data**:
 - Station: []
 - Device: PLC Port (dropdown)
 - VirStaNO: [0]
 - Station: [1]
- Object**:
 - Object: D (dropdown)
 - [0]
 - ☒ PSW256

Device data address of current recipe download will change with register PSW256.
 $D0[PSW256]=D[0+PSW256data]$



We suggest using internal address (PSW and PFW internal address type) for indirect address. If not, the communication will be slow.

- Recipe data address and serial number of HMI internal data register.
- data set the recipe of recipe data according to actual data capacity.


■ recipe

The screenshot shows the 'Down Recipe' dialog box with the 'Recipe' tab selected. The 'Count' field is highlighted.


- count the total group of recipe data.




HMI has PSW and PFW registers. PSW is not power-loss retentive register and the PFW is power-loss retentive register. PFW is suitable for recipe data. Save the recipe data in a group of registers, then choose the recipe by reference number PSW40. It can be input only after PSW40 have been opened in advanced function.

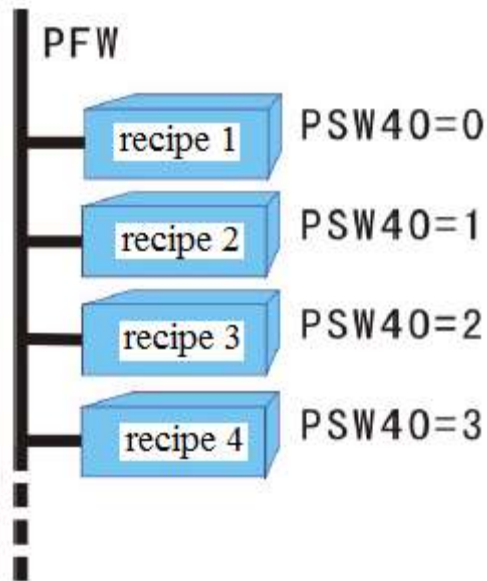

■ button

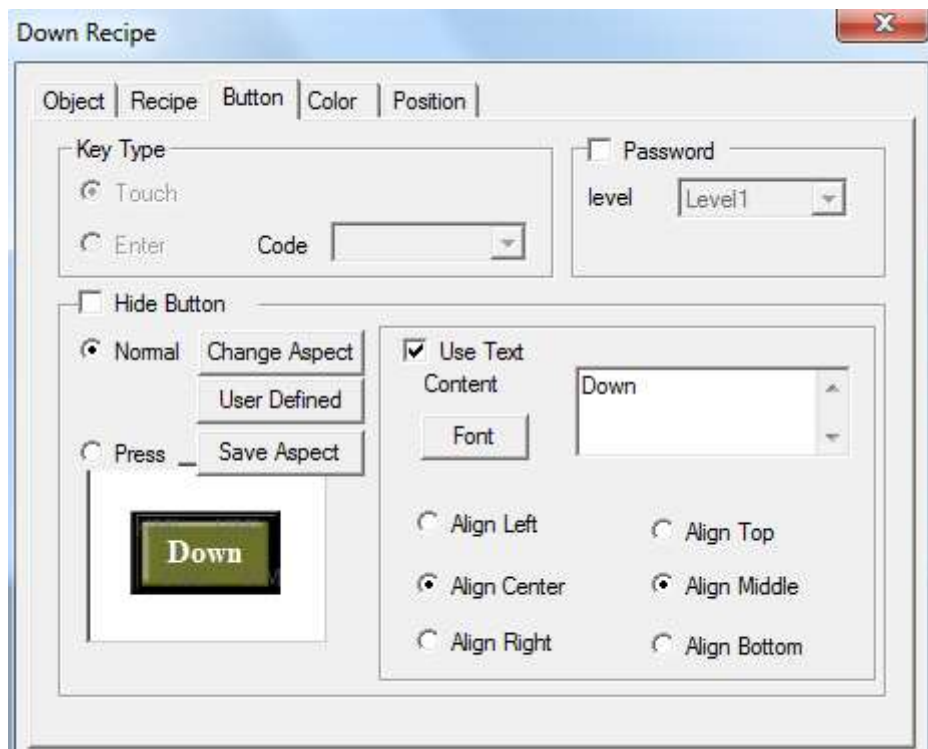


- key type define the key code of touch key or enter key. Enter key is only for OP560, MP360, MP760, XMP, XMH.
- hide button set if it can be visible when button is operating. Choose this option. Aspect of recipe download and character forbidden operation.

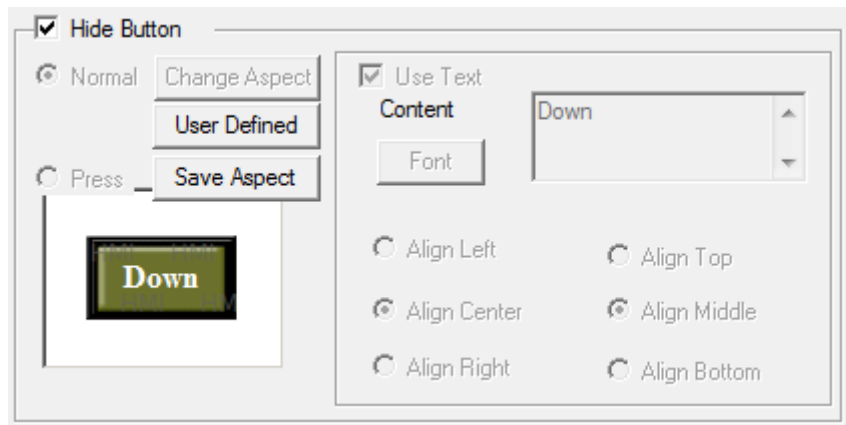


- normal displaying status picture when the recipe download button display normally or after releasing recipe download button.
- press displaying status picture when the recipe download button is pressed.
- Change aspect modify the aspect of recipe download button. It belongs to its own material library. You can choose from it freely.
- User defined modify the aspect of recipe download button. It belongs to user defined material library.
- Save aspect save the aspect of recipe download button. It is convenient for programming.
- text modify the content, font and align type of recipe download button.
- content set the displaying content of recipe download button.
- font set the size, font and type of recipe download button.
- align you can choose the relative align type according to your requirement.
- Password if the recipe download button need to be protected by password. If you choose “password” and use password protection. At the same time choose the relative password level.

■ color

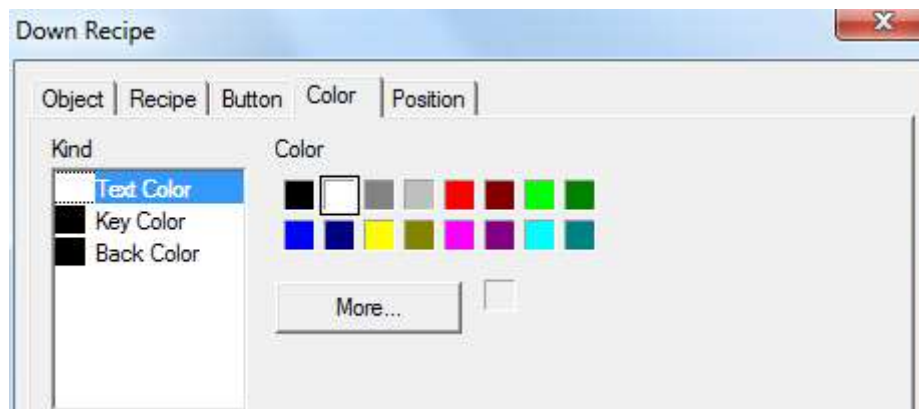


- kind choose the recipe download button to modify the kind of color.
- color modify the color according to the kind.

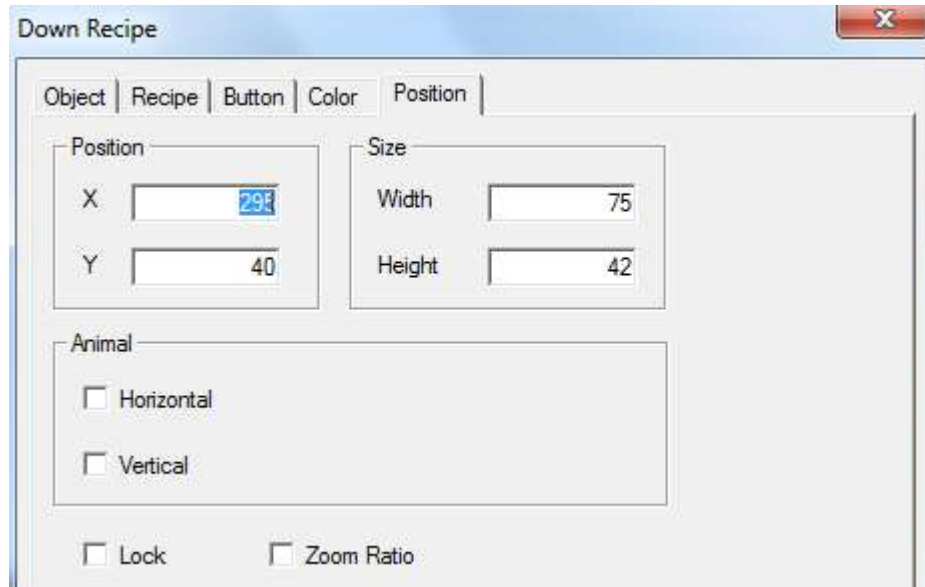


- position set the upper left point to be the coordinate point(0, 0). Set the X and Y coordinate value.
 - X position set the X coordinate value of recipe download button.
 - Y position set the Y coordinate value of recipe download button.
- size set the width and height of recipe download button.
 - width (W) set the width of recipe download button.
 - height (H) set the height of recipe download button.
- animal set if the recipe download button can be moved.
 - horizontal set the recipe download button in the horizontal position according to register value, modifying X coordinate value.
 - X coordinate value=X position+current value of register
 - vertical set the recipe download button in the vertical position according to register value, modifying the Y coordinate value.
 - Y coordinate value=Y position+current value of register
- lock set if the recipe download button in the screen can be moved.
- Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-23. Up recipe


It is corresponded to download recipe function. This function transfers the device data to internal register of HMI.

1. Click the “” icon in the component tool bar. Move the cursor to the screen and click left mouse to set. Click right mouse or ESC button to cancel it. You can modify its size by boundary points.




2. Double click “up recipe” or choose “up recipe” and click right mouse. Set the attribute by choosing “attribute” or “” button.

■ object

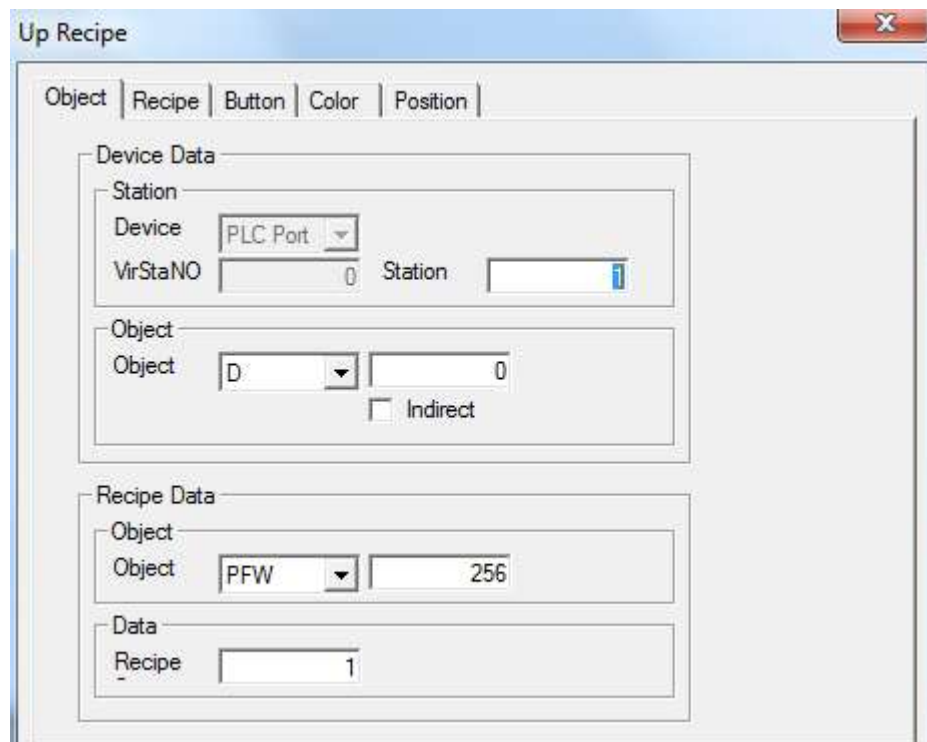

- device data the address information of up data object register.
- station set the connected device and station.
 - device current device port which is communicating.
 - station address of communication device.
- object address and serial number of upload source register
- indirect set the offset of current address as follow.

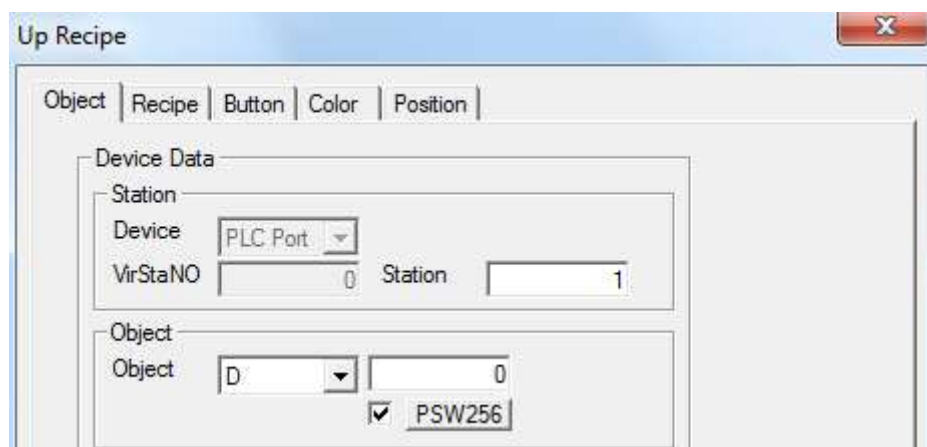

Current data address of up recipe will change with register value PSW256.

$D0[PSW256]=D[0+PSW256 \text{ value}]$



We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.

- Recipe data the address and serial number of HMI internal data register.


- data set the recipe of recipe data and confirm the recipe according to actual data capacity.

■ recipe




- count total group of recipe data

■ button

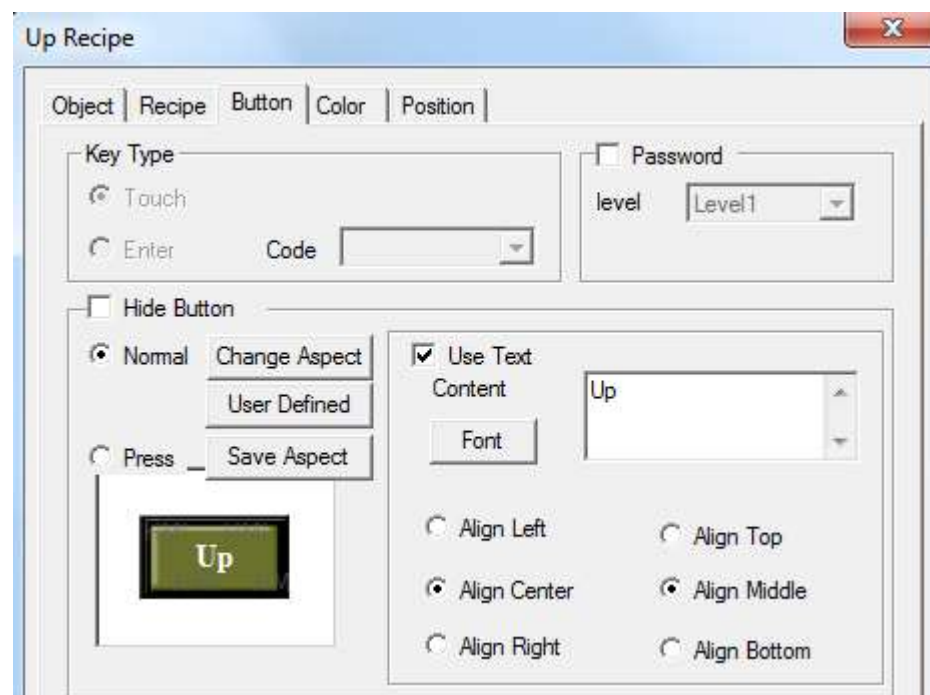


- Hide button hide the button when operating

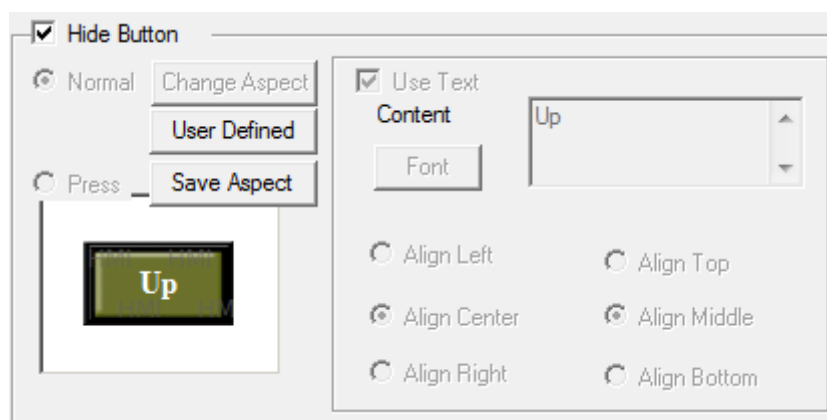

- normal displaying status picture when the button of up recipe display normally or after releasing the button of up recipe.


- press displaying status picture when the button of up recipe is pressed.
- Change aspect modify the button aspect of up recipe. It belongs to its own material library. You can choose from it freely.
- User defined modify the button aspect of up recipe. It belongs to user defined library.
- Save aspect save the button aspect of up recipe. It is convenient for programming.
- text modify the content, font and align type of up recipe button text.
- content set the displaying content of up recipe button.
- font set the size, font and type of up recipe button text.
- align you can choose align type according to requirement.
- Password set if the button of up recipe need to be protected by password. If you choose “password”, please use password protection.at the same time choose the password level.

■ color

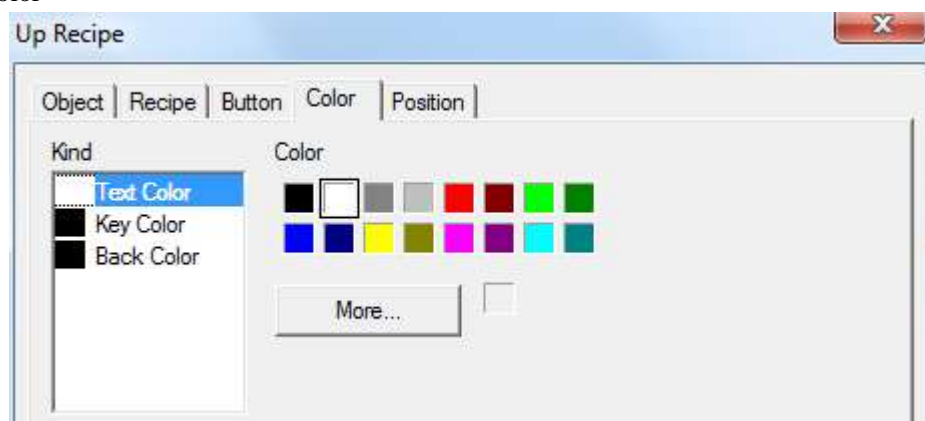

- kind choose the up recipe button to modify the kind of color
- color modify the color according to the kind.

■ position

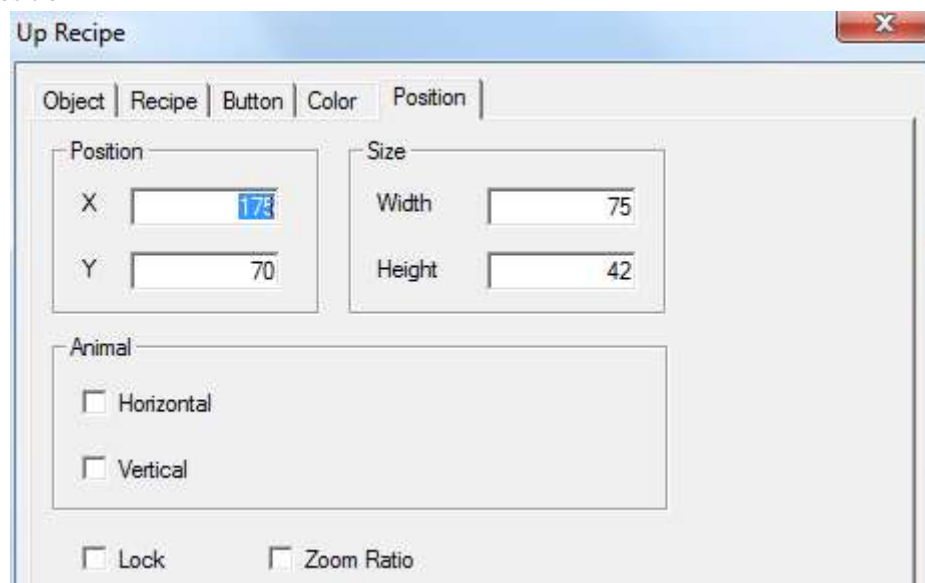

- position set the upper left point to be the coordinate point(0, 0). Set the X and Y coordinate value of up recipe button.


-
- X position set the X coordinate value of up recipe button.
 - Y position set the Y coordinate value of up recipe button.
 - size set the width and height of up recipe button.
 - width (W) set the width of up recipe button
 - height (H) set the height of up recipe button
 - animal set if the up recipe button need to be moved.
 - horizontal set the up recipe button in the horizontal position of HMI according to register value, modifying X coordinate value.

$$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$$
 - vertical set the up recipe button in the vertical position of HMI according to register value, modifying the Y coordinate value.


$$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$$
 - lock set if the up recipe button in screen can be moved.
 - Zoom ratio set if it can be zoomed when editing its size. But this function can not work now.

4-3-24. Function button


Function button contains many functions such as set ON/OFF the coil, copy register, import/export csv file, arithmetic and so on.

1. Click “” icon in the component tool bar. Mov the cursor to the screen and click left mouse to set. Click right mouse or ESC key to cancel it. You can also edit its size by boundary points.




2. Double click “function button” or choose “function button” and click right mouse. Set the attribute by choosing “attribute” or “”.

- function

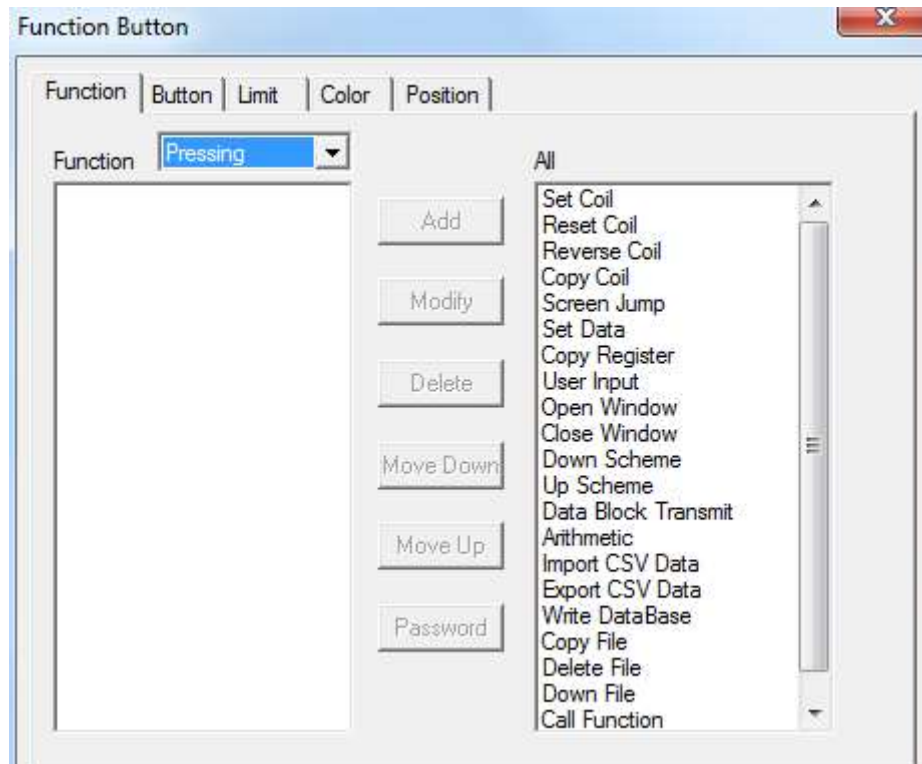


- function set the operation type. It contains released, pressed, releasing, pressing.

Pressed: ON

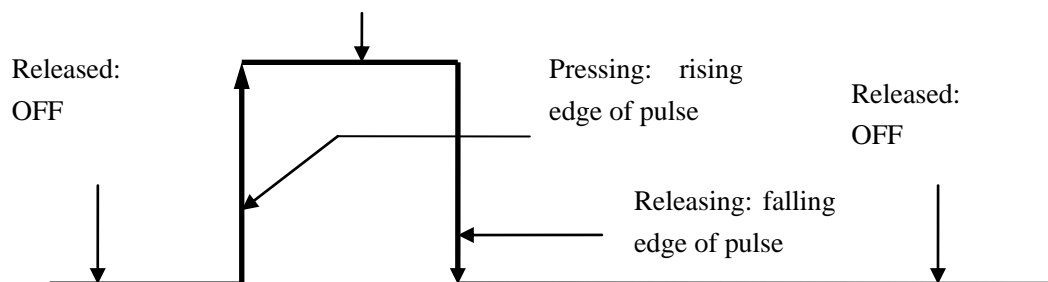

- function options
 - add add the selectable functions.
 - modify modify the relative function attribute
 - delete clear the relative optional function
 - move up move the object option up a physical location.
 - move down move the object option down a physical location.

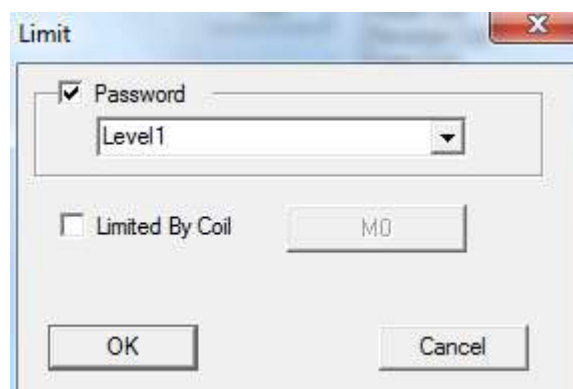

password operate the password protection function and choose the password level. At the same time please set the relative level in “system setting”.


Limited by coil when it is ON, the function button can be used.

- Selectable function choose the relative function. It contains 21 functions. Now the write data base, copy file, delete file and download file are in research. They can be used in the programming software of following version.


(1) set coil

Set ON the coil.

Choose the “set coil” and click “add” button to add this function to the left list. In the left list, please double click this option or click “modify” to enter the setting window. Then you can modify the relative coil address.

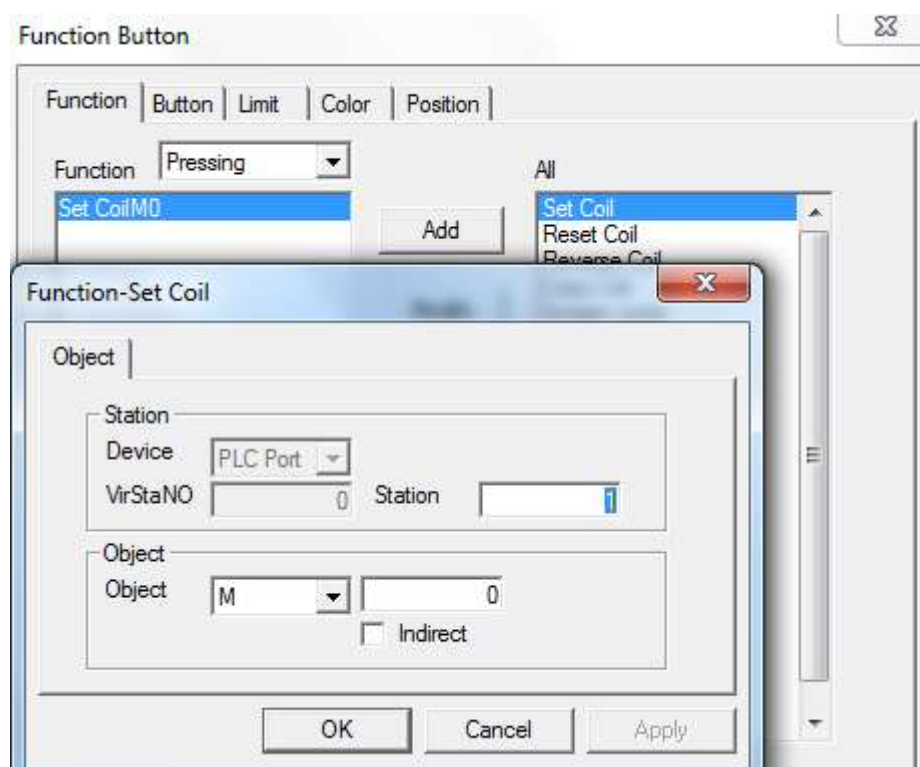

- station
device device port which is communicating
station address of communication device
- object set the coil address
- Indirect set the offset of current address

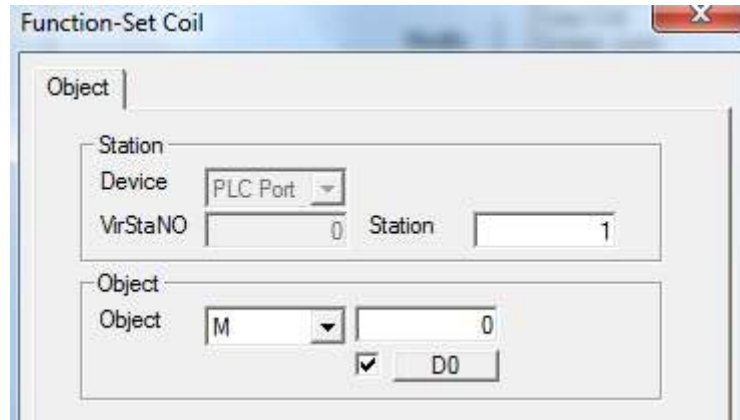


The object address is $M0[D0]=M[0+D0 \text{ value}]$




We suggest using internal address of HMI(PSW and PFW) for indirect address. If not, the communication will be slow.

(2) reset coil

Set OFF the coil

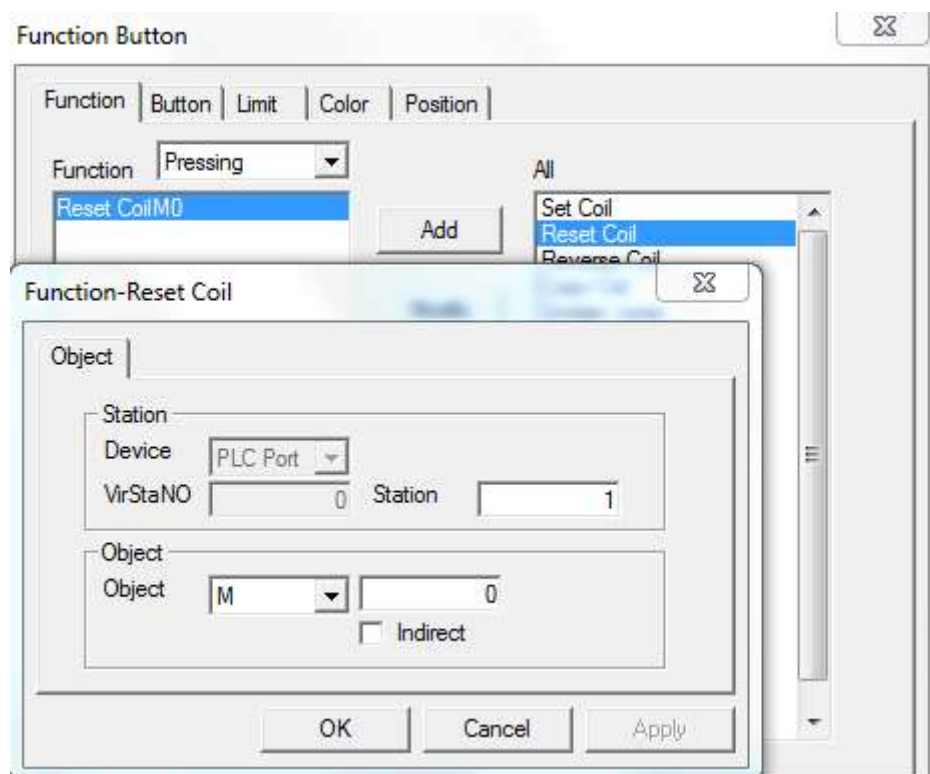

- station device station address of communication device
- object set the coil address
- indirect set the offset of current address

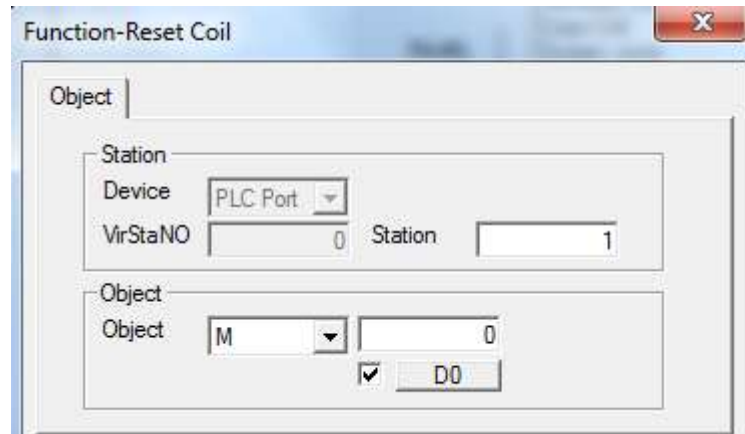


Object address: M0[D0]=M[0+D0 value]




We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.

(3) reverse coil

Set the relay or coil to be reverse status. If the coil is ON, set to OFF. If it is OFF, set to ON.

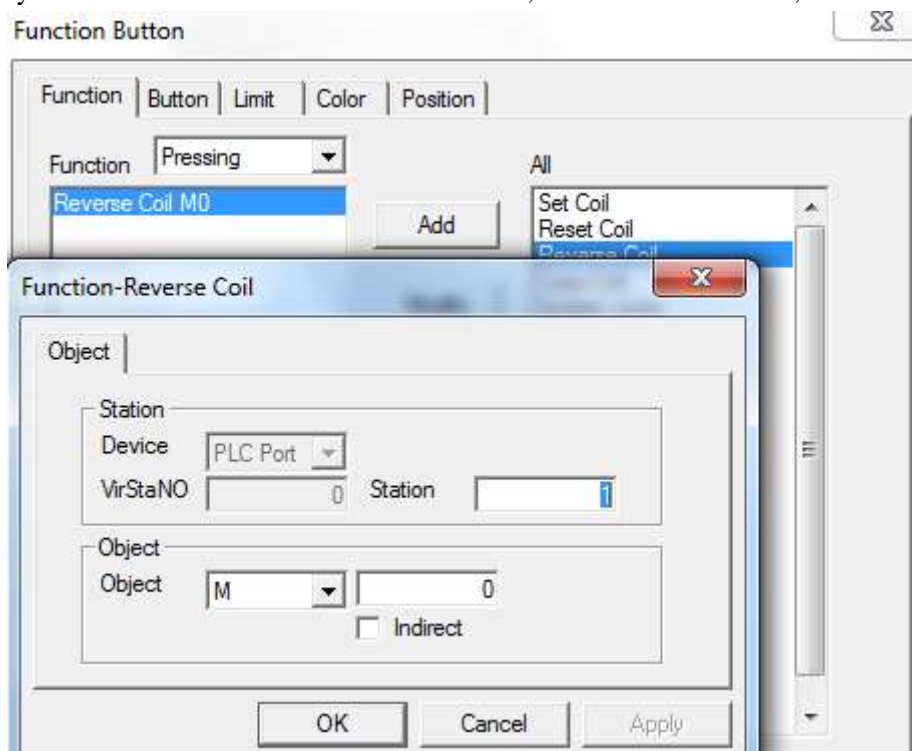

- station device station address of communication device
- object set the coil address
- indirect set the offset of current address

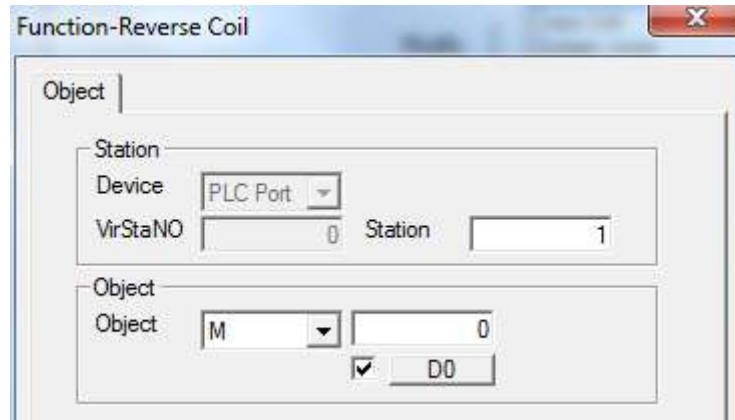


The object address: $M0[D0]=M[0+D0 \text{ value}]$



We suggest using internal address of HMI(PSW and PFW) for indirect address. If not, the communication will be slow.


(4) copy coil

Copy the status of source coil to target coil.

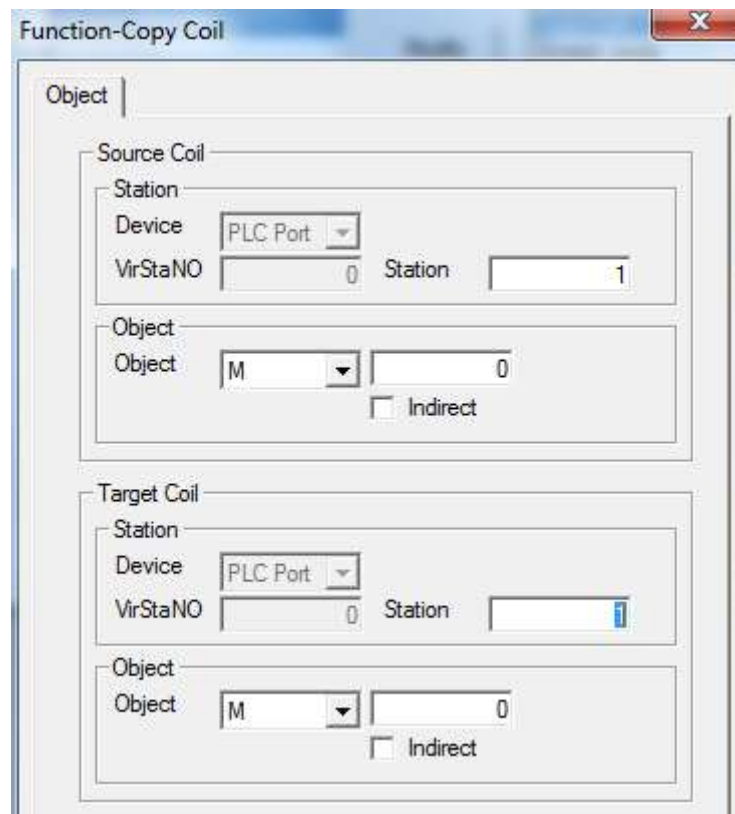

- source coil the address information of readed relay or bit
- target coil the address information of readed relay or bit
- station
- device device port which is communicating
- station address number of communication device
- object set the coil address

- indirect set the offset of current address

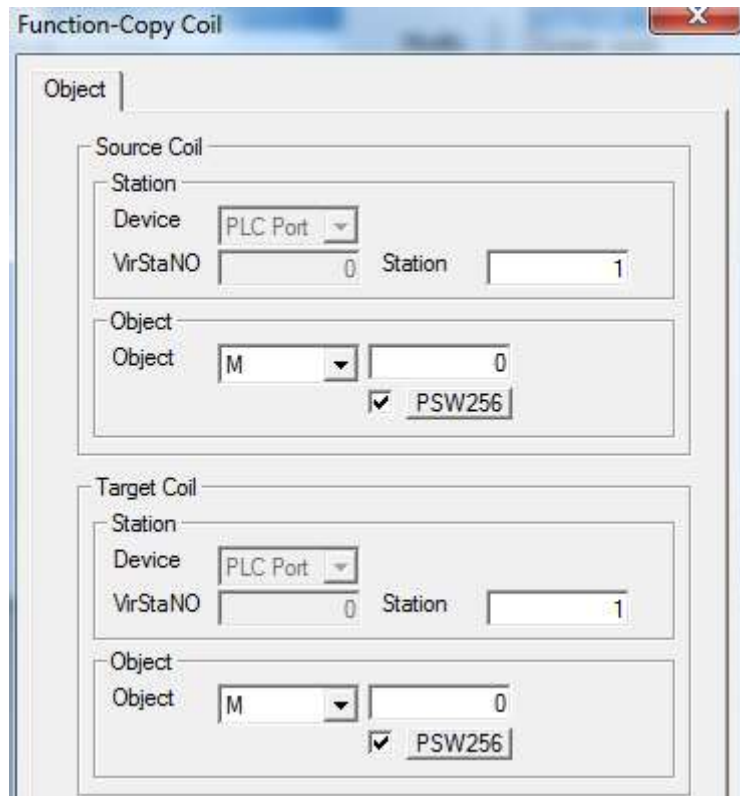

The image shows a 'Function-Copy Coil' dialog box with two main sections: 'Source Coil' and 'Target Coil'. Each section contains fields for 'Station', 'Device' (set to 'PLC Port'), 'VirStaNO' (0), and 'Station' (1). Below these, there is an 'Object' section with a dropdown set to 'M', a value of '0', and a checked checkbox labeled 'PSW256'.


The object address: $D0[PSW256]=D[0+PSW256 \text{ value}]$.



We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.

(5) screen jump

Jump to target screen. Click “modify” button, then you can set the target screen ID.

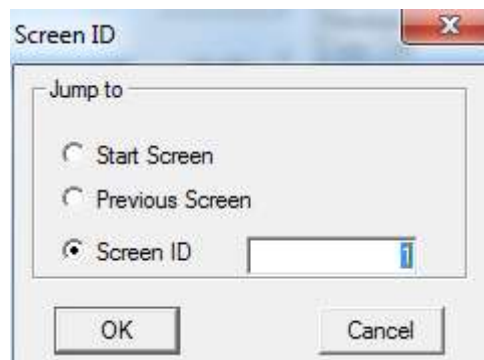

The image shows a 'Screen ID' dialog box with a 'Jump to' section containing three radio buttons: 'Start Screen', 'Previous Screen', and 'Screen ID' (which is selected). Next to the 'Screen ID' radio button is a text input field containing the number '1'. At the bottom are 'OK' and 'Cancel' buttons.

- start screen the screen when system is starting up.
- Previous screen jump to original screen
- Screen ID input the jumping screen number

(6) set data

Set the object value

The 'Function-Set Data' dialog box is shown with the following settings:

- Object** tab is selected.
- Station** section: Device is 'PLC Port', VirStaNO is '0', and Station is '1'.
- Object** section: Object is 'D', and the value is '0'. The 'Indirect' checkbox is unchecked.
- Data** section: Data Type is 'Word', and Set Data is '0'.

- station device device port which is communicating
- station address of communication device
- object set the object address
- indirect set the offset of current address

The 'Function-Set Data' dialog box is shown with the following settings:

- Object** tab is selected.
- Station** section: Device is 'PLC Port', VirStaNO is '0', and Station is '1'.
- Object** section: Object is 'D', and the value is '0'. The 'Indirect' checkbox is checked, and 'PSW256' is entered in the adjacent field.
- Data** section: Data Type is 'Word', and Set Data is '0'.

The object address: $D0[PSW256]=D[0+PSW256 \text{ value}]$


- data
- data type set if the data type is Word or DWord
- set data set the assigned data



We suggest using internal address of HMI (PSW and PFW) for indirect address. If not, the communication will be slow.


(7) copy register

Copy the source register data to the target register

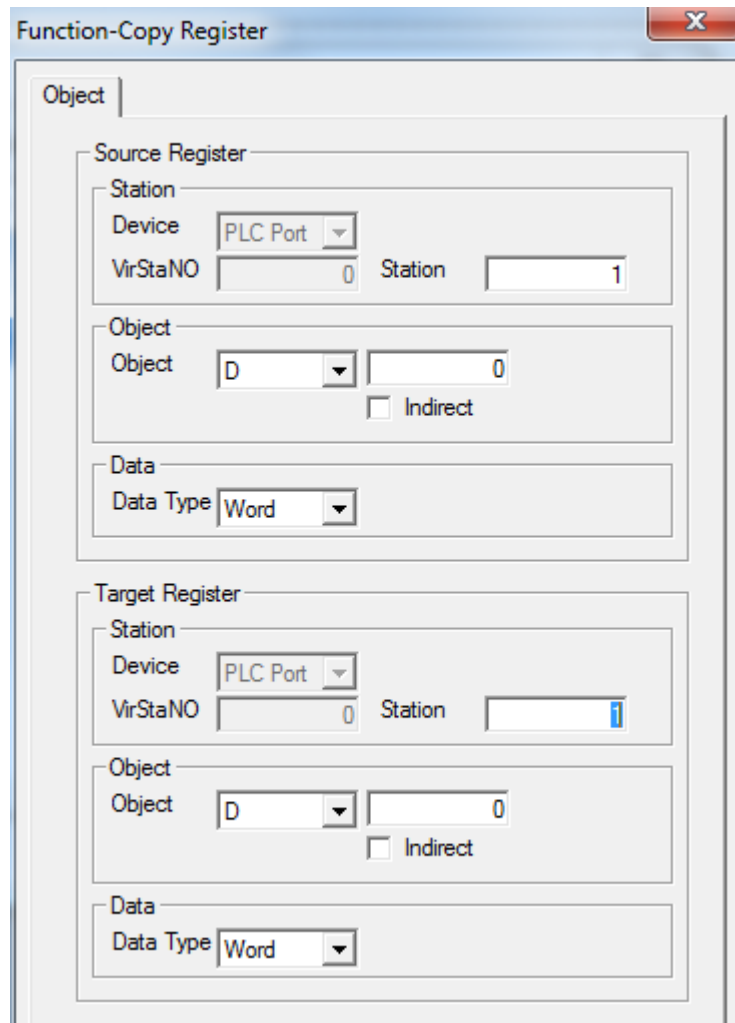

The image shows a software dialog box titled "Function-Copy Register". It is divided into two main sections: "Source Register" and "Target Register". Each section contains three sub-sections: "Station", "Object", and "Data". In the "Source Register" section, the "Station" sub-section has "Device" set to "PLC Port", "VirStaNO" set to "0", and "Station" set to "1". The "Object" sub-section has "Object" set to "D", "Object" set to "0", and the "Indirect" checkbox is unchecked. The "Data" sub-section has "Data Type" set to "Word". The "Target Register" section has identical settings: "Device" is "PLC Port", "VirStaNO" is "0", "Station" is "1", "Object" is "D", "Object" is "0", "Indirect" is unchecked, and "Data Type" is "Word".

- source register read the address information of register
- target register write the address information of register
- station
 - device device port which is communicating
 - station address of communication device
- object set the object address
- indirect set the offset of current address

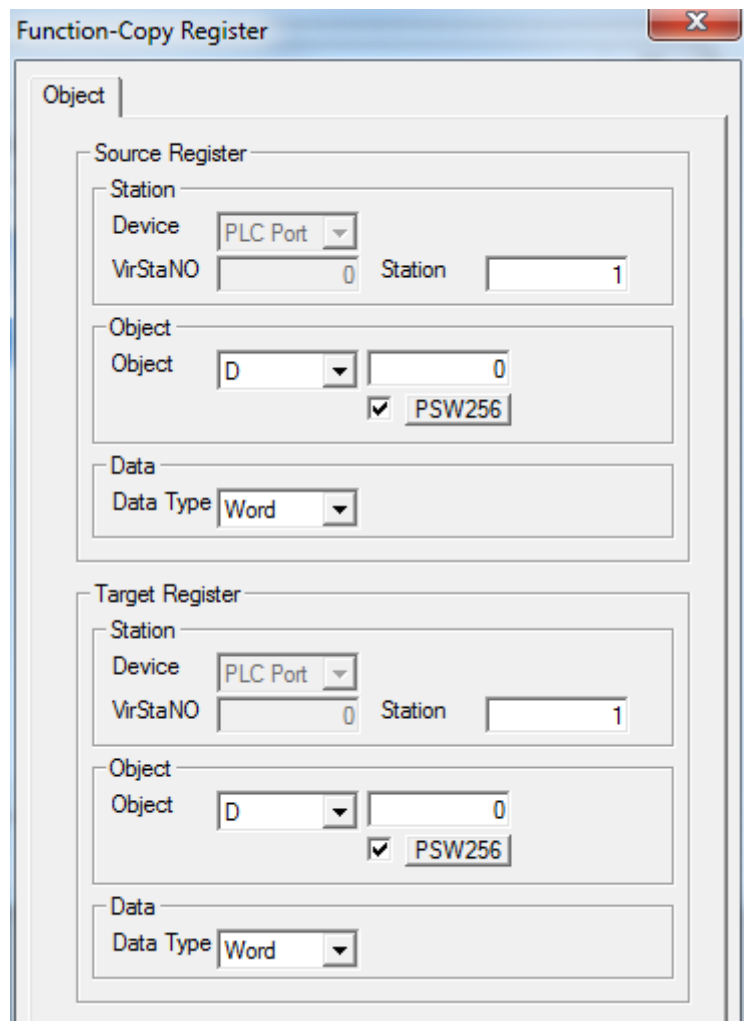

The dialog box is titled "Function-Copy Register". It contains two main sections: "Source Register" and "Target Register". Each section has a "Station" group with "Device" (set to "PLC Port") and "VirStaNO" (set to "0") fields, and a "Station" field (set to "1"). Below these is an "Object" group with an "Object" dropdown (set to "D"), a value field (set to "0"), and a checked checkbox labeled "PSW256". At the bottom of each section is a "Data" group with a "Data Type" dropdown (set to "Word").

The object address: $D0[PSW256]=D[0+PSW256 \text{ value}]$

- data set the data type to be Word or Dword.



**We suggest using the internal address of HMI (PSW and PFW) for indirect address.
If not, the communication will be slow.**

(8) user input

Set the ASCII code of input button.




The dialog box is titled "Key Code". It contains a single text input field labeled "Input Key Code(0x)". Below the field are two buttons: "OK" and "Cancel".


- input key code the corresponding ASCII code of input button

(9) open window

Open the target window ID

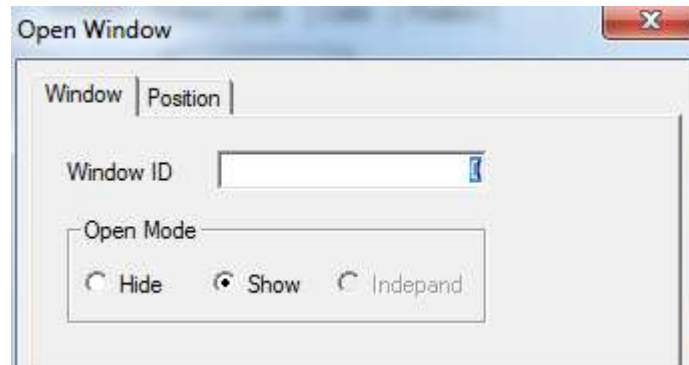


- window ID set the target pop-up window ID
- open mode choose the target window to be hide or show
- hide the opened window is not visible, but the component in window can still be effective.
- show the opened window is visible in project screen.

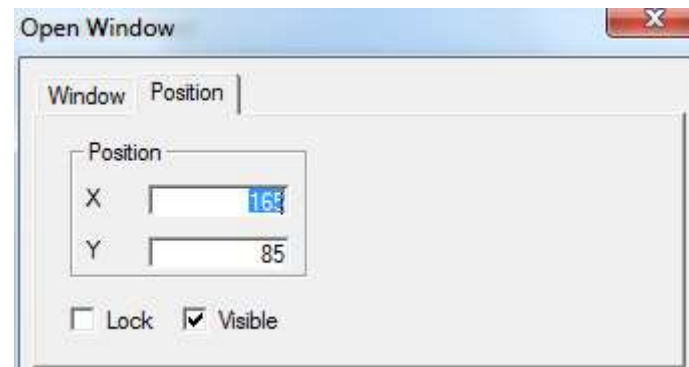

- position set the upper left corner of pop-up window in the coordinate position of programming screen.
- lock set if the function button-open window in the screen can be moved.

(10) close window


Close the target window.

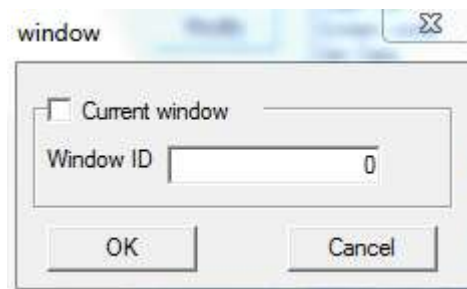

- current window the window will be closed.
- Window ID target closed window ID

(11) down recipe

Download the recipe data saved in HMI to relative device.

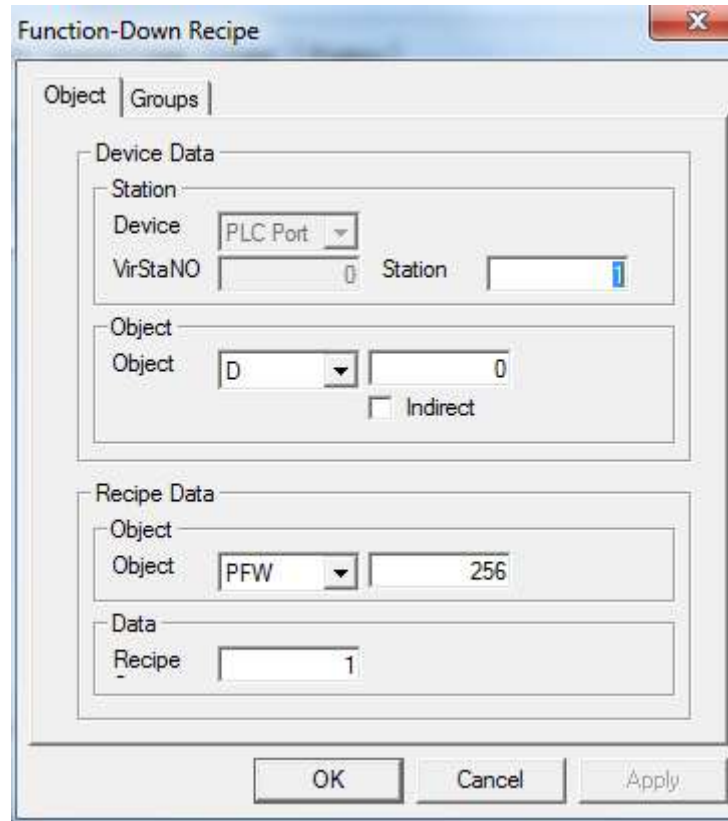

The image shows a software dialog box titled "Function-Down Recipe". It has two tabs at the top: "Object" (selected) and "Groups". The dialog is divided into three main sections: "Device Data", "Object", and "Recipe Data".

- Device Data:** Contains fields for "Station", "Device" (a dropdown menu showing "PLC Port"), "VirStaNO" (a text box with "0"), and "Station" (a text box with "1").
- Object:** Contains an "Object" dropdown menu showing "D", a text box with "0", and an "Indirect" checkbox which is unchecked.
- Recipe Data:** Contains an "Object" dropdown menu showing "PFW", a text box with "256", and a "Data" section with a "Recipe" text box containing "1".

At the bottom of the dialog are three buttons: "OK", "Cancel", and "Apply".

- Device data address information of down recipe object register
- station
- device device port which is communicating
- station address of communication device
- object address and serial number of download target register
- indirect set the offset of current address as follow.

Current address will change with the register value PSW256.

Object address: $D0[PSW256]=D[0+PSW256 \text{ value}]$

- recipe data address and serial number of internal data register of HMI.
- recipe set the recipe data according to actual data capacity.



We suggest using the internal address of HMI (PSW and PFW interna address type) for indirect address. If not, the communication will be slow.

(12) up recipe

Upload the recipe data from relative device to the HMI.

Function-Up Recipe

Object Groups

Device Data

Station

Device PLC Port

VirStaNO 0 Station 1

Object

Object D 0

☐ Indirect

Recipe Data

Object

Object PFW 256

Data

Recipe 1

- device data address information of up recipe object register
- station
 - device device port which is communicating
 - station address of communication device
- object address and serial number of upload target register
- indirect set the offset of current address as follow.

Function-Up Recipe

Object Groups

Device Data

Station

Device PLC Port

VirStaNO 0 Station 1

Object

Object D 0

☒ PSW256

Recipe Data

Object

Object PFW 256

Data

Recipe 1

Current address will change with register value PSW256.

Object address: $D0[PSW256]=D[0+PSW256 \text{ value}]$

- recipe data address and serial number of HMI internal digital register
- recipe set the recipe data according to actual data capacity.



We suggest using internal address of HMI (PSW and PFW internal address type) for indirect address. If not, the communication will be slow.

(13) data block transmit

Transmit the register data group from source address to the target address.

- source address read register first address
- target register write register first address
- station
 - device device port which is communicating
 - station address of communication device
- object set the object type and address of function button-data block transmit
- indirect set the offset of current address as follow.

Function-Data Block Transmitted

Object

Source Address

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: D 0

☒ PSW256

Target Address

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: D 0

☒ PSW256

Data

Register: 1

Current object address will change with register PSW256.

Object address: $D0[PSW256] = D[0 + PSW256 \text{ value}]$

➤ data set the register number of data block transmit



We suggest using internal address of HMI(PSW and PFW internal address type) for indirect address. If not, the communication will be slow.

(14) arithmetic

Operate arithmetic for target register data and save the value to target register. The object of arithmetic can be constant or variable.

- station device station address of communication device
- object set the object type and address of function button-arithmetic storage.
- indirect set the offset of current address as follow.


Current object address will change with register PSW256.

Object address: $D0[PSW256]=D[0+PSW256 \text{ value}]$


- data set the data type to be Word or DWord.



We suggest using internal address of HMI(PSW and PFW internal address type) for indirect address. If not, the communication will be slow.

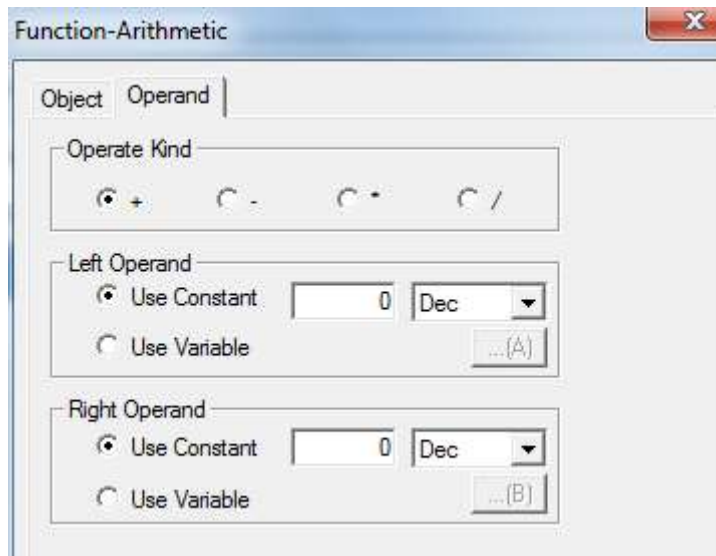



- operate kind plus, subtract, multiply and divide
 - Left operand it contains the setting of constant and variable
 - Right operand it contains setting of constant and variable
- When you choose constant, you can set the variable by “...” button.

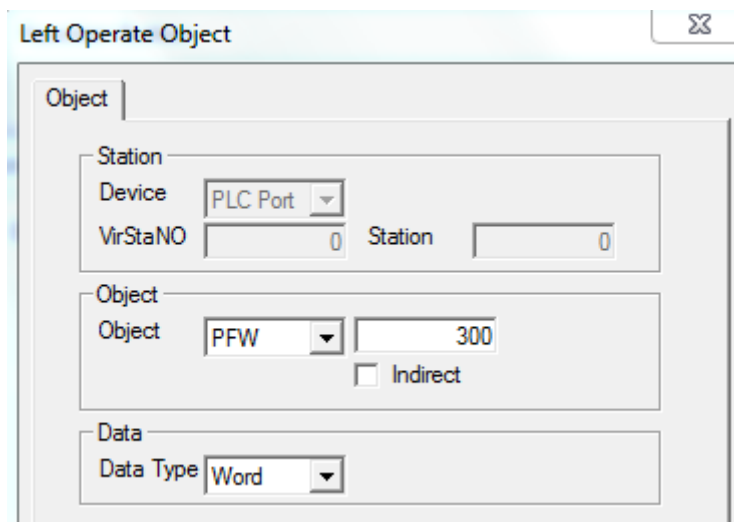


- Device ID U disk number. To mark up different U disk (in order to mark up different disk in SCADA function, C disk no. is 0, D disk is 1, E disk is 2...)
- Import ctrl the bit to control the import operation. when this bit is ON, the import is allowed.
- Path/file the CSV file name need to import
- Fix name only use the name in path/file
- Add ID after name choose the file by name and number mode. number can be inputted manually or set through register
- Start ID CSV file has many rows. Start ID defines importing from which rows. 0 means the first row. The row no. can be set through register or input directly.

■ Button

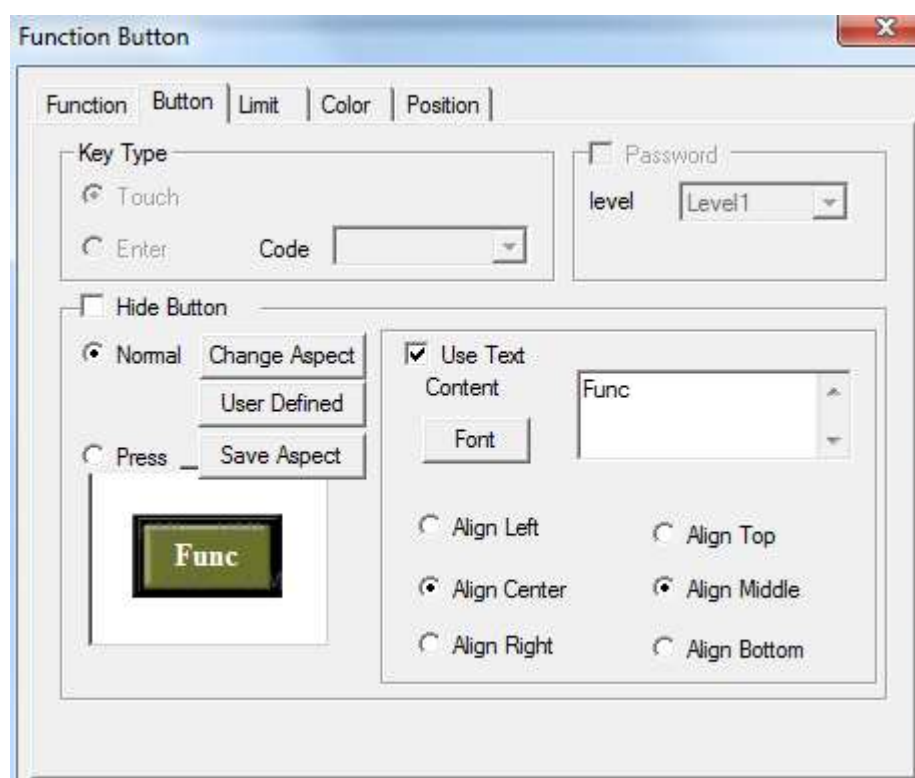

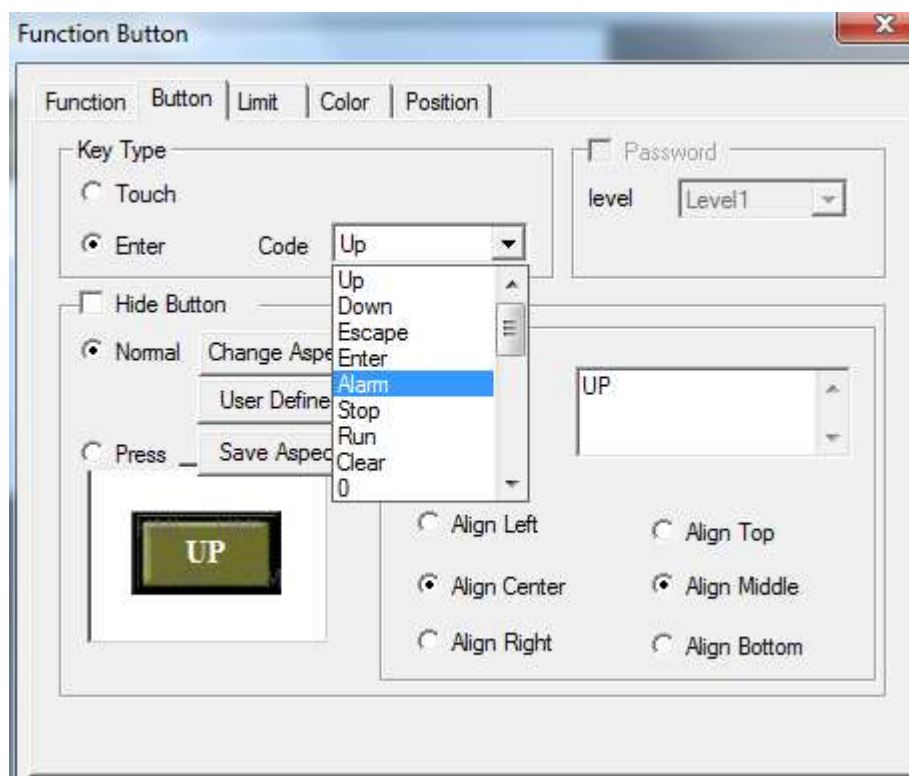

- Hide button set if the button is visible. After choose hide button, text and button aspect can not be changed.

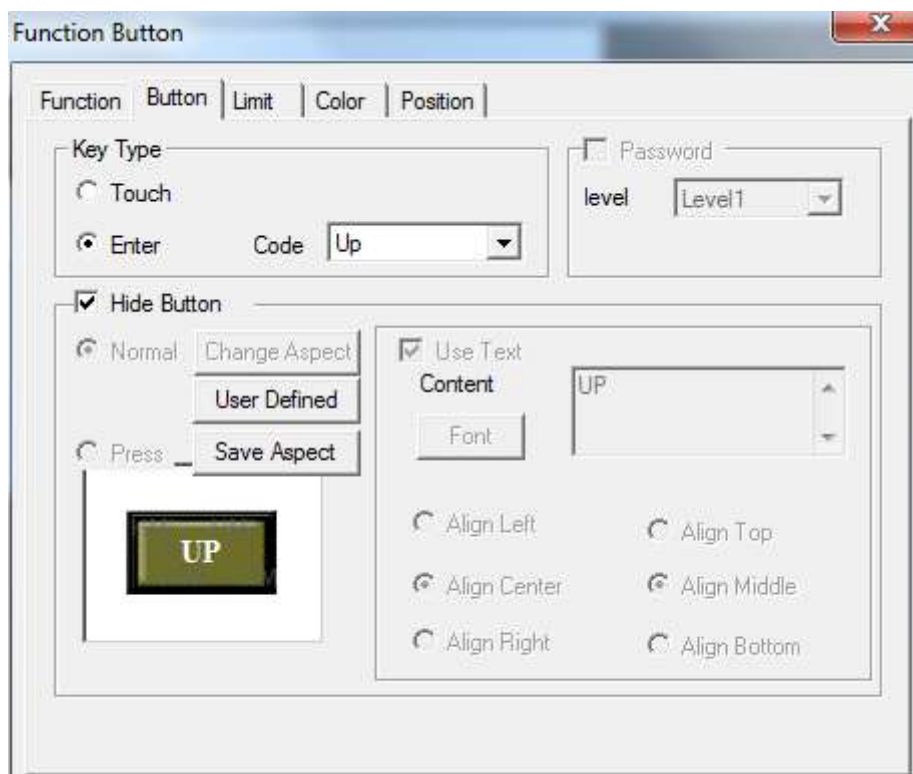

- normal the button appearance
- press the button appearance when the button is pressed
- Change aspect modify the aspect of function button. You can choose the pictures in default library


- User defined aspect modify the aspect of function button. The picture library is from user.
- Save aspect save the aspect of function button. It is convenient for programming.
- Use text modify the content, font and align type of function button.
 - content set the displaying content of function button.
 - font set the size, font and type of function button
 - align you can choose the align type freely according to your requirement.

■ limit

Support the limit function. The function button will be effective when the control bit is ON. Otherwise, the hide button function cannot be operated.




■ color

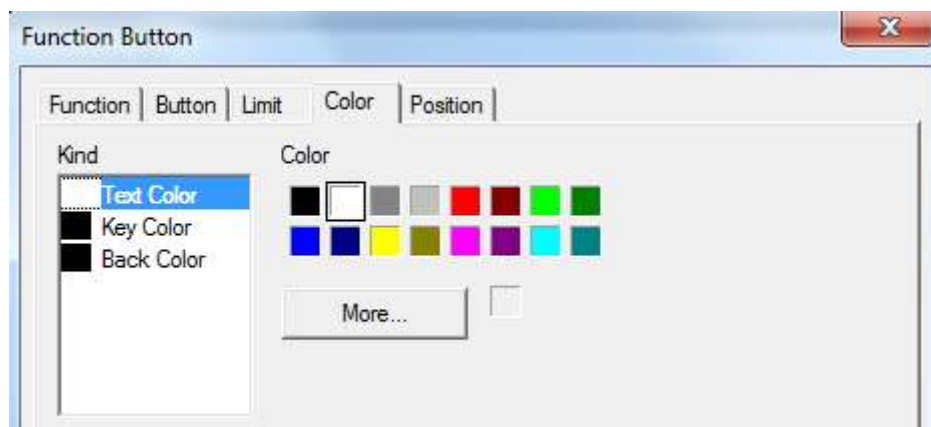


- kind choose the button color type
- color modify the color according to the kind.

■ position

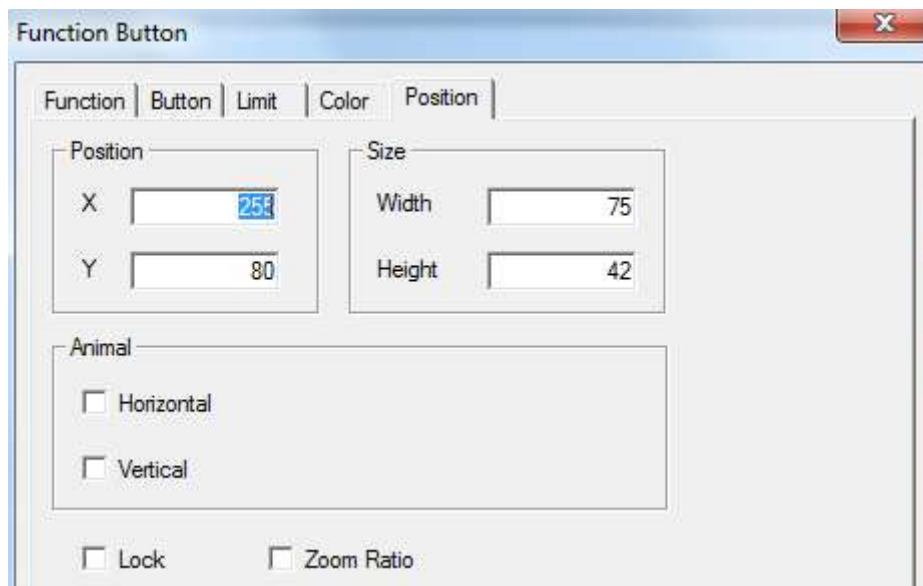

- position set the upper left point to be the coordinate point (0, 0). Set the X and Y coordinate value of function button
 - X position set the X coordinate value of function button.
 - Y position set the Y coordinate value of function button.
- size set the width and height of function button.
 - width (W) set the width of function button
 - height (H) set the height of function button
- animal set if the function button need to be moved.

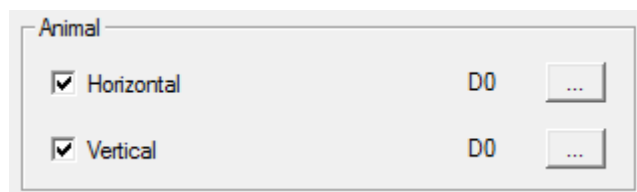

horizontal set the function button in the horizontal position of HMI according to register value, modifying X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$

vertical set the function button in the vertical position of HMI according to register value, modifying Y coordinate value.

$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$

- lock if choose this item, the button cannot be moved in the screen
- Zoom proportion set if it can be zoomed when editing its size. But this function can not work now.


4-3-25. Function field


The operation is activated by internal system or logical conditions. This is similar to function

button. But the differences are as below.




The difference is: function field will activate automatically when the condition is satisfied. But the function field button is invisible in the screen.

1. click the “” icon in component tool bar. Move the cursor to the screen and click left mouse to confirm. Click right mouse or ESC button to cancel it. “Function field” component is invisible button and it will be invisible in HMI.

2. Double click “function field” or choose “function field” and click right mouse. Set the attributes by choosing “attribute” or “” button.

■ Mode

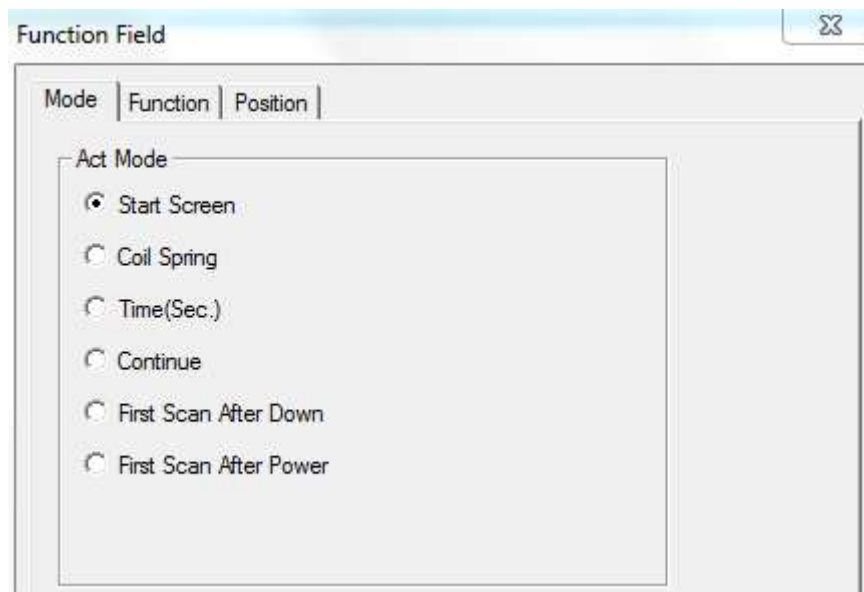


- Start screen when the screen of function field is called, the relative function will be executed once.
- Coil spring when the coil change from OFF to ON, the relative function will be executed once.
- Time(sec.) it will execute relative function when the screen is called. It will execute function by certain time (it can be set).




Time (sec) the time, the unit is second

Run immediately execute the function immediately every certain time. If not choose “run immediately”, it will execute the function every certain time from the second period.

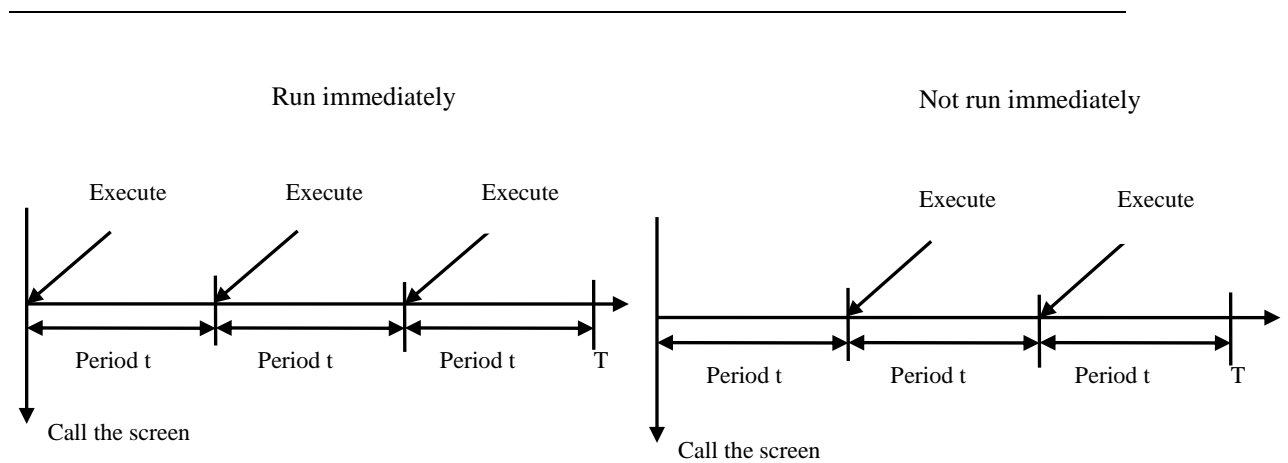

- **Continue** when the screen is called, every scan will execute relative function.
When you choose “time” or “continue”, you can choose

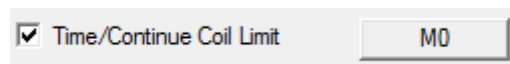


to set control coil. This function can be executed only when this coil is ON.

- **First scan after down** this function will be executed when the screen is scanned first time after downloading.
- **First scan after power** this function will be executed when the system is scanned after power on.




Only one of the act modes can be choosed.

- **function**

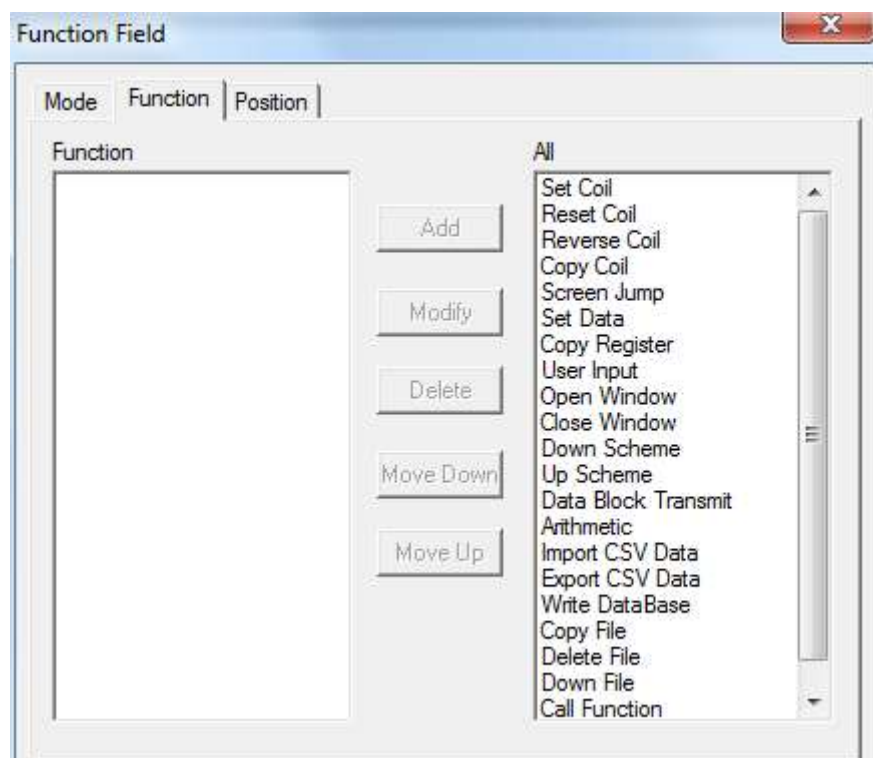

The setting of this function is the same to “function button”. Please refer to “function button”.


■ position

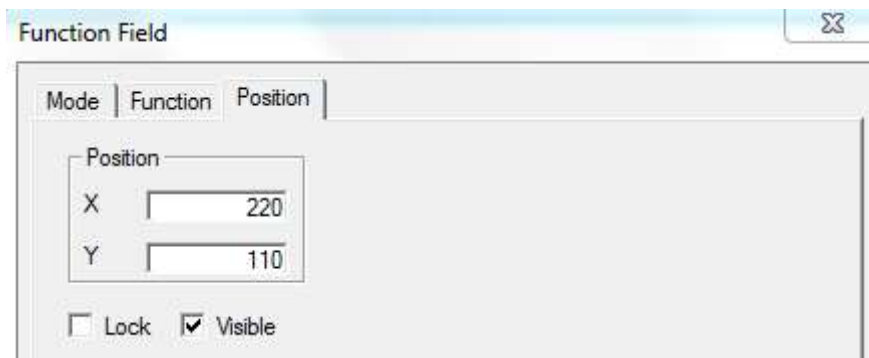

- position set the upper left point to be the coordinate point (0, 0) . Set the X and Y coordinate value of function field.
- X position set the X coordinate value of function field.
- Y position set the Y coordinate value of function field.
- lock set if the function field in screen can be moved.


4-3-26. Discrete column map


Show the data of the discrete register in the form of column map or line graph

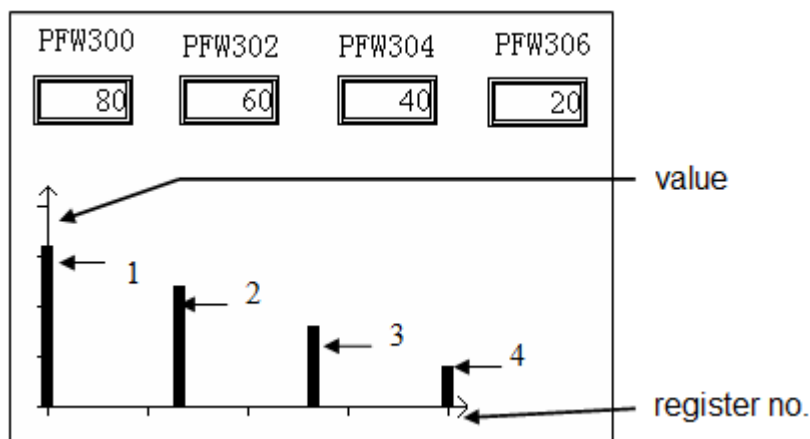


X axis is register no., the Y axis is the value in register.

 The serial number 1~4 from left to right stand for PFW300, PFW302, PFW304, PFW306.


1. Click “” icon in component tool bar. Move the cursor to screen and click left mouse to confirm. Click right mouse or ESC button to cancel it. You can edit the size by the boundary points.

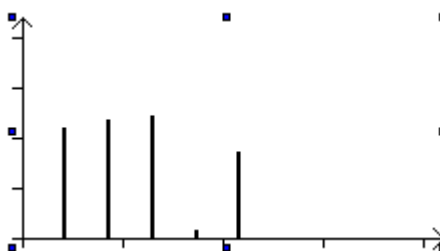

2. Double click “discrete column map” or choose “discrete column map” and click right mouse.


Set the attribute by choosing “attribute” or “” button.

■ object

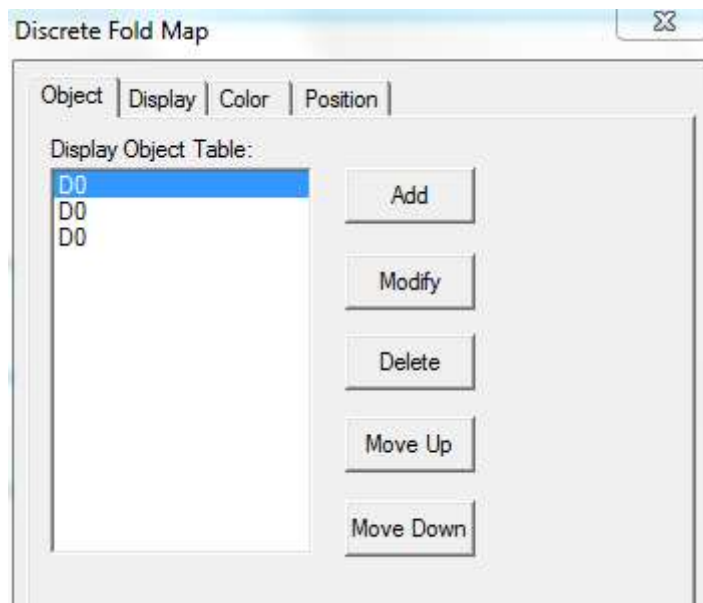


- Add/delete add/delete data register
- Move up/move down change the order of register
- modify modify the attribute of corresponded register

■ display

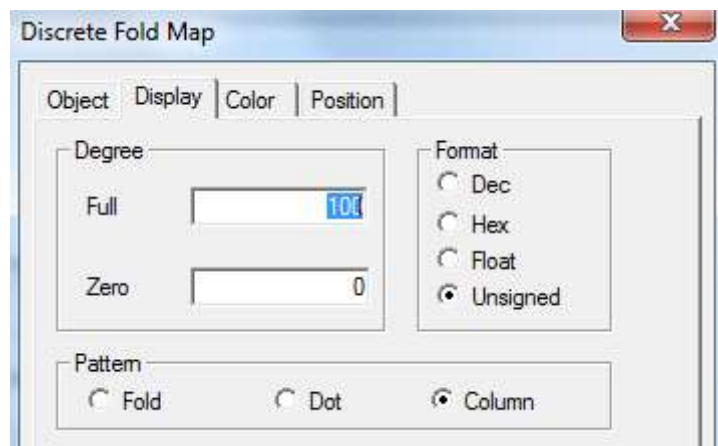


- Degree set the max and min value of Y axis.
- Format it contains decimal, hex, float and unsigned.
- Pattern data is showed in the pattern of fold, dot and column.

■ color

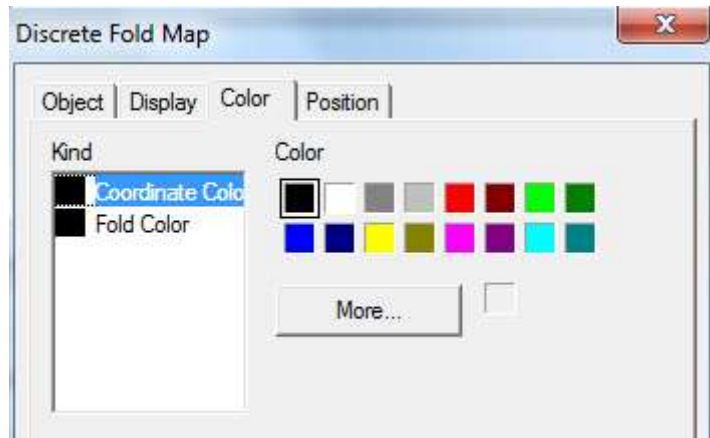


- kind choose the discrete column map to modify the kind of color.
- color modify the color according to the kind.

■ position

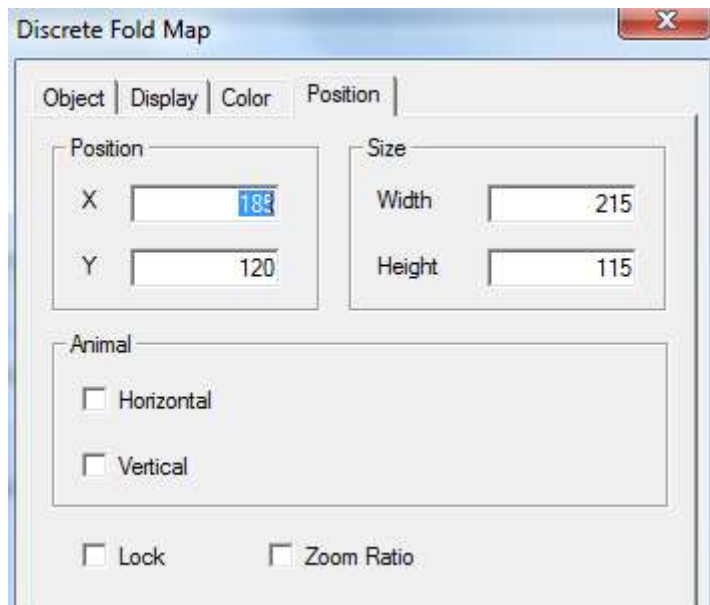

- position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of discrete column map.
- X position set the X coordinate value of discrete column map.
 - Y position set the Y coordinate value of discrete column map.
- size set the width and height of discrete column map.
- width (W) set the width of discrete column map
 - height (H) set the height of discrete column map
- animal set if the discrete column map need to be moved.

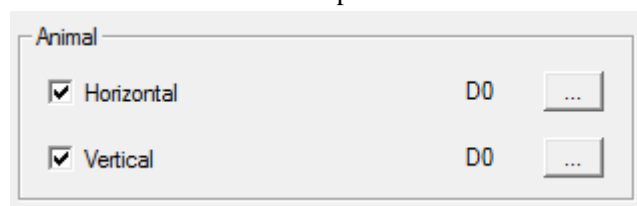

horizontal set the discrete column map in the horizontal position of HMI according to

register value, modifying the X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$


vertical set the discrete column map in the vertical position of HMI according to register value, modifying the Y coordinate value.

$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$


- lock lock the column map in the screen, then it cannot move
- Zoom proportion set if it can be zommed by proportion when editing the size. But this function can not work now. This function is canceled in MOP Soft 2012.


4-3-27. Continue column map


Display the value of continuous register in column map.

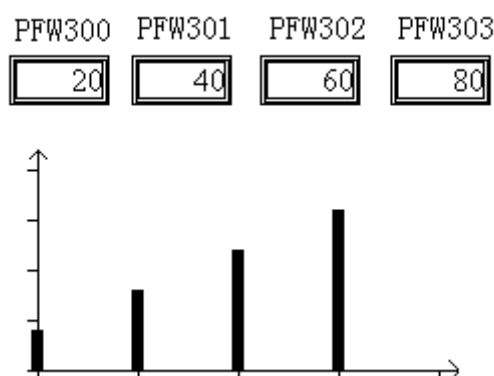

The four columns are PFW300, PFW301, PFW302, PFW303.


1. Click “” in the software menu, move the cursor in the screen, click left mouse to confirm, click ESC to cancel. Modify the map size through the boundary point.

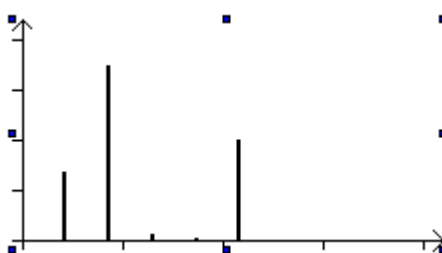

2. Double click the continue column map or right click the mouse then choose property or “” to set the parameters.

■ Object

The differences from discrete column map: continue column map only needs to set the start register address.

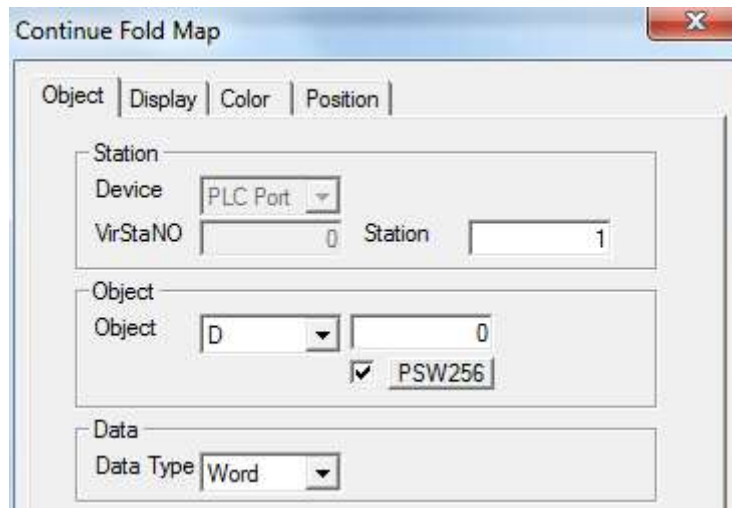


- Station
 - Device the device port
 - station device station no.
- object set the register type and address
- indirect set the address offset

The object address is $D0[PSW256] = D[0+PSW256 \text{ value}]$.

- Data set the data type: word or Dword

■ Display

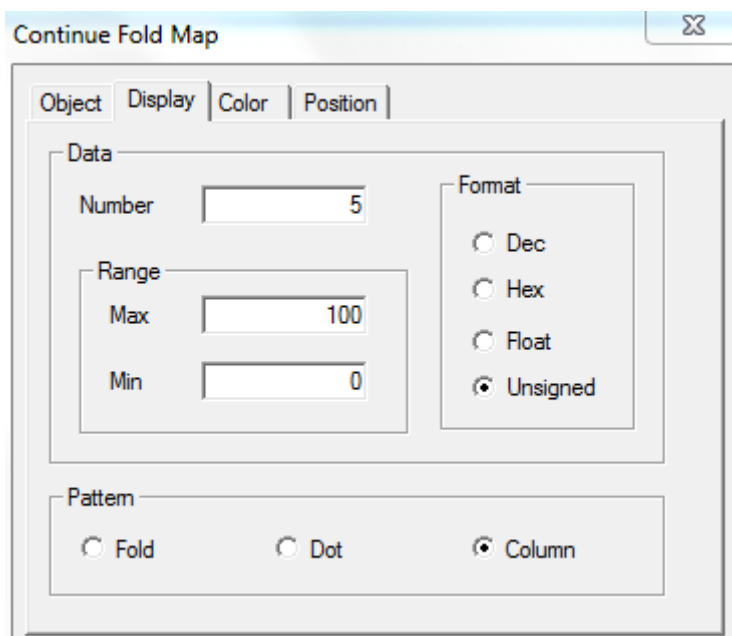


- Data the register quantity

For example, the object is PFW300, data number is 5. The continue column map will display the value of PFW300, PFW301, PFW302, PFW303, PFW304.


Range, format, pattern please refer to discrete column map.

■ Color

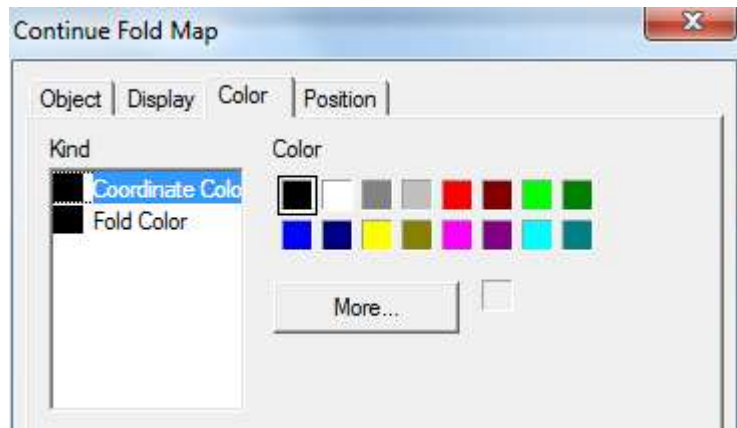

- kind choose the color type
- color choose the colors of column map

■ Position

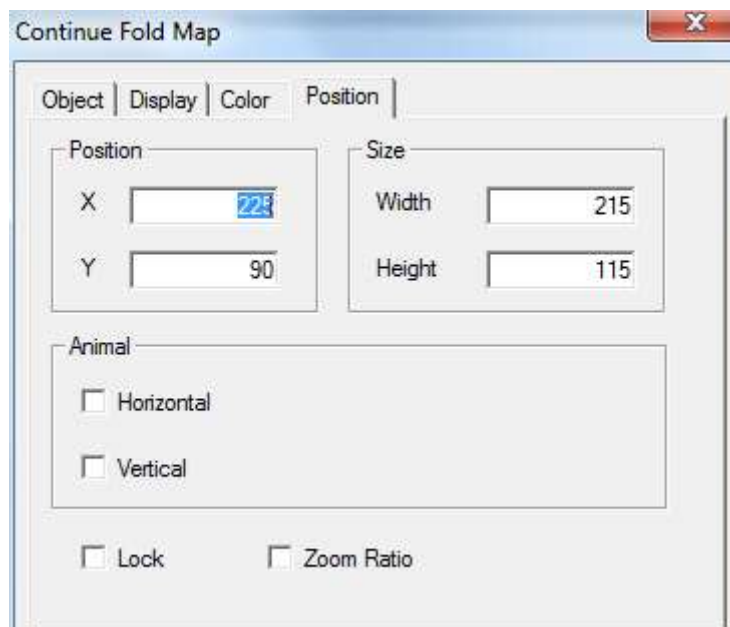

- position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of continue column map.
- X position set the X coordinate value of continue column map.
- Y position set the Y coordinate value of continue column map.
- size set the width and height of continue column map.
- width (W) set the width of continue column map
- height (H) set the height of continue column map
- animal set if the continue column map need to be moved.



horizontal set the continue column map in the horizontal position of HMI according to register value, modifying the X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$

vertical set the continue column map in the vertical position of HMI according to register value, modifying the Y coordinate value.

$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$

- lock lock the continue column map in the screen, then it cannot move
- Zoom proportion set if it can be zommed by proportion when editing the size. But this function can not work now. This function is canceled in MOP Soft 2012.


4-4. Display tool bar



The buttons from left to right are: date, clock, buzzer, backlight, scale, meter, valve, pipe, pump, fan, motor, retort, inverter alarm information, scroll text, real time trend map, history trend map, XY trend map, time trend map, event button, alarm list, real time event, history event, common grid control, data grid control, sample save, sample export.

4-4-1. Date

Display the date.

1. click  and move the cursor in the screen, click left mouse to confirm, click ESC to cancel.

FFFF / FF / FF


2. Double click date button or right click mouse then choose property to modify the parameters.

■ display




- Manner the date display mode

■ Font

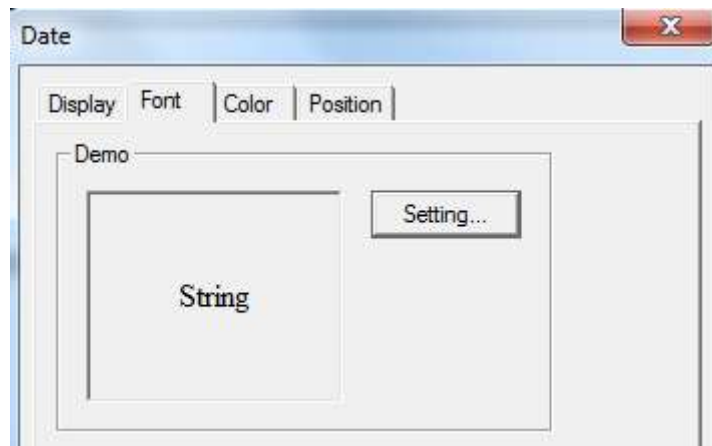

- setting set the font of date

■ color

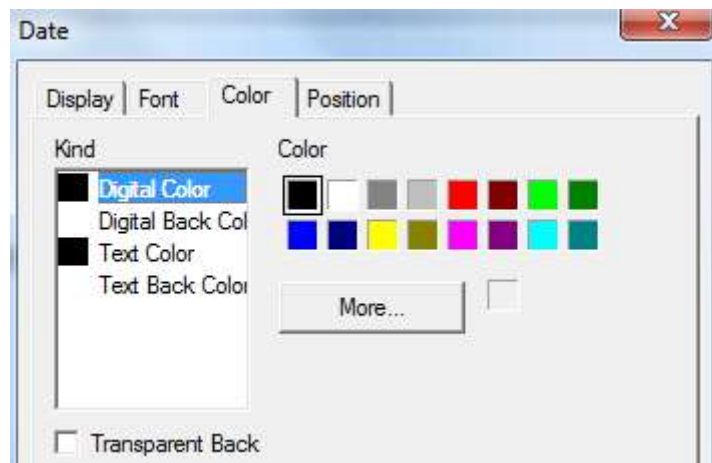


- kind choose the color type
- color set the colors
- transparent back the background of date is transparent




Digital back color and text back color are valid when the transparent back is not choosen.

■ Position

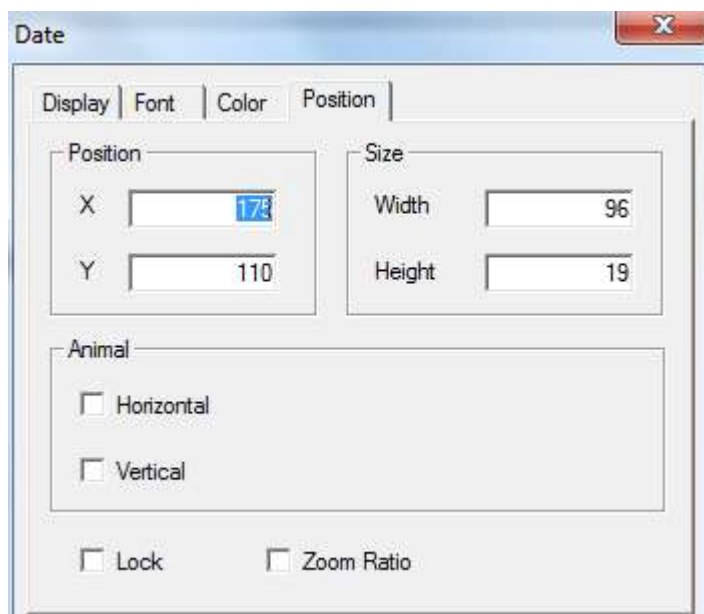

- position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of date
 - X position set the X coordinate value of date
 - Y position set the Y coordinate value of date
- size set the width and height of date
 - width (W) set the width of date
 - height (H) set the height of date
- animal set if the date need to be moved.

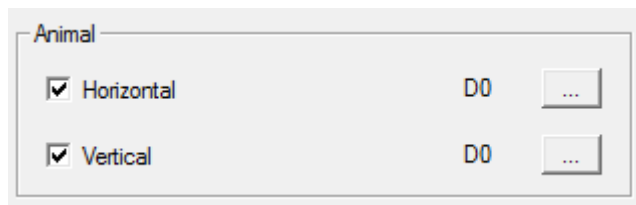

horizontal set the date in the horizontal position of HMI according to register value, modifying the X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$


vertical set the date in the vertical position of HMI according to register value, modifying the Y coordinate value.

$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$


- lock lock the date in the screen, then it cannot move
- Zoom proportion set if it can be zommed by proportion when editing the size. But this function can not work now. This function is canceled in MOP Soft 2012.

4-4-2. Clock


Display the time.

1. Click  and move the cursor in the screen. Click left mouse to confirm and click ESC to

cancel.

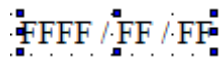


2. Double click clock or right click mouse then choose property to modify the parameters.

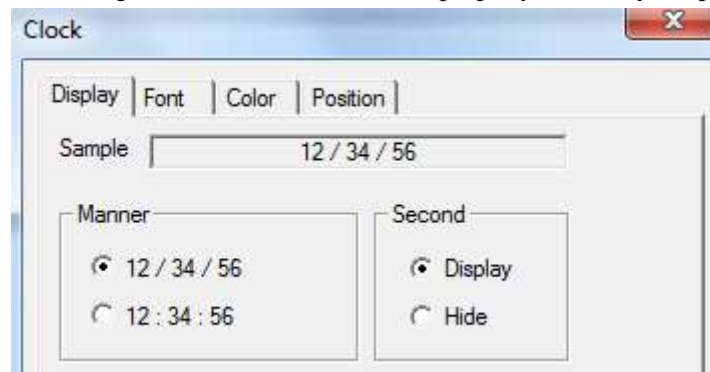


- Sample preview the clock display format
- Manner set the clock display format
- second display the second

■ Font

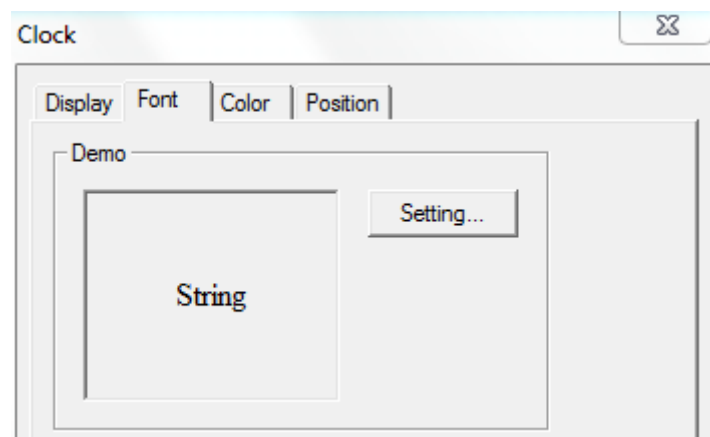

- Setting set the font of time

■ Color

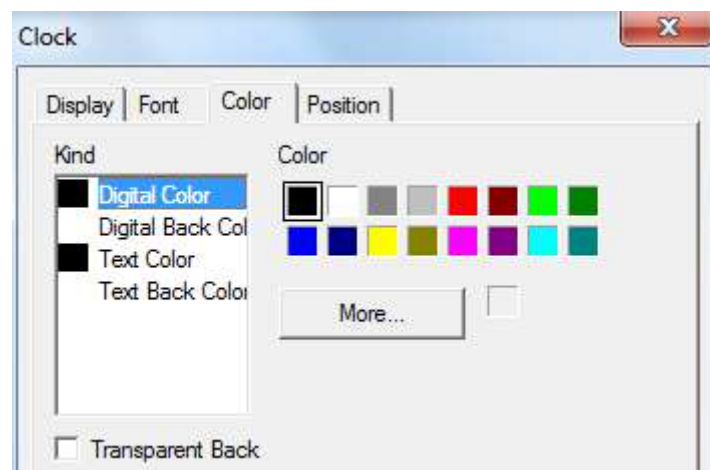


- kind choose the color type
- color set the colors
- transparent back the background of date is transparent




Digital back color and text back color are valid when the transparent back is not choosen.

■ Position

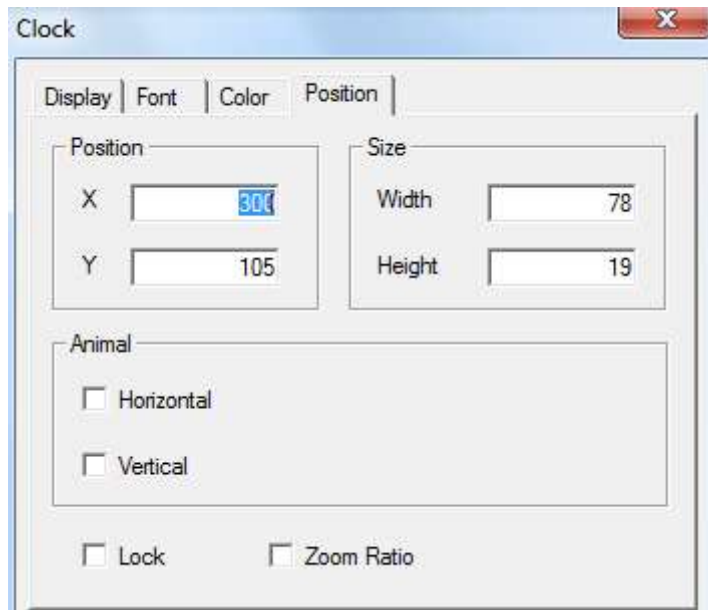

- Position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of clock
 - X position set the X coordinate value of clock
 - Y position set the Y coordinate value of clock
- Size set the width and height of clock
 - width (W) set the width of clock
 - height (H) set the height of clock
- Animal set if the clock needs to be moved.

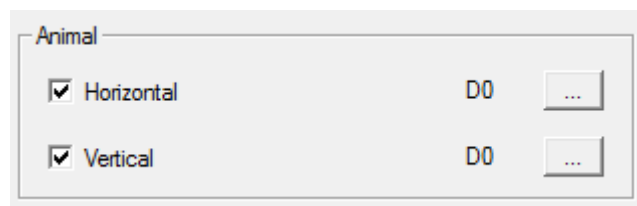

Horizontal set the clock in the horizontal position of HMI according to register value, modifying the X coordinate value.

X coordinate value=X position+current value of register

Vertical set the clock in the vertical position of HMI according to register value, modifying the Y coordinate value.


Y coordinate value=Y position+current value of register

- lock lock the clock in the screen, then it cannot move
- Zoom proportion set if it can be zommed by proportion when editing the size. But this


function can not work now. This function is canceled in MOP Soft 2012.

4-4-3. Buzzer

The Buzzer will ring when the activate condition is satisfied.


1. Click “”, move the cursor in the screen, click left mouse to confirm, click ESC to cancel.

Buzzer is invisible in the screen.

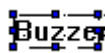


2. Double click buzzer or right click mouse then choose property to modify the parameters.

■ Object

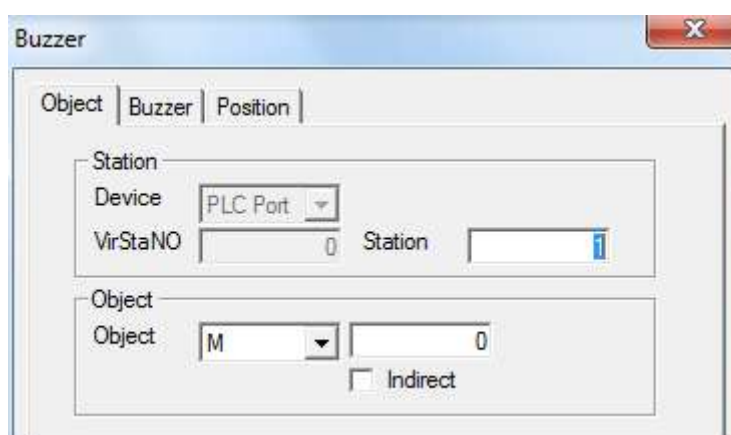

- Station the HMI port no. communicate to the device
- Device the device station no.
- Object the buzzer object address
- Indirect set the address offset

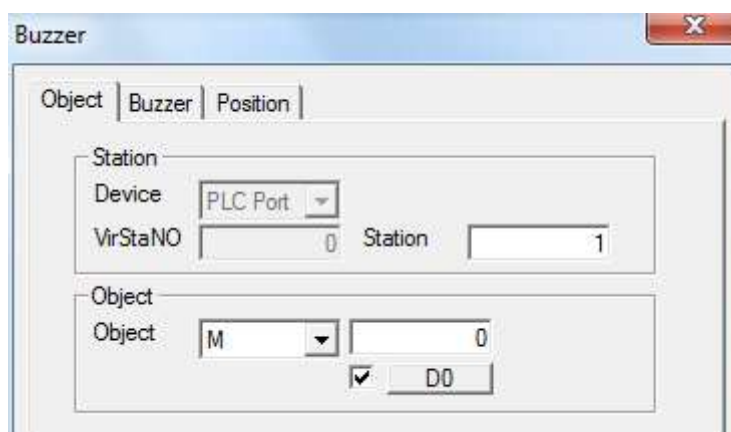

The object address is $M0[D0]=M[0+D0 \text{ value}]$




Please choose HMI internal register for indirect address (PSW, PFW).

■ Buzzer



- Bell mode set the ring mode
- One ring once
- Continue continue ring

■ Position

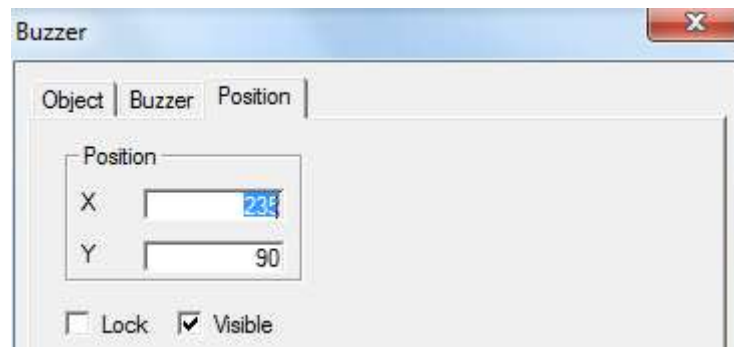

- Position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of buzzer
- X position set the X coordinate value of buzzer
- Y position set the Y coordinate value of buzzer
- Lock lock the buzzer in the screen, it cannot be moved
- Visible the buzzer is visible when editing

4-4-4. Backlight

Turn on the backlight.

1. Click “☀️”, move the cursor in the screen. Click left mouse to confirm, click ESC to cancel.

Backlight is invisible in the screen.

LCD Light Control

2. Double click backlight or click right mouse then choose property to modify the parameters.

■ Object

LCD Light Control

Object | Position

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: M 0

☐ Indirect

- Station Device station the port no. communicate with device device station no.
- Object the backlight object address
- Indirect set the offset of object address

LCD Light Control

Object | Position

Station

Device: PLC Port

VirStaNO: 0 Station: 1

Object

Object: M 0


☒ D0

The object address is, $M0[D0] = M[0+D0 \text{ value}]$




Please choose HMI internal register for indirect address. (PSW, PFW)

■ Position

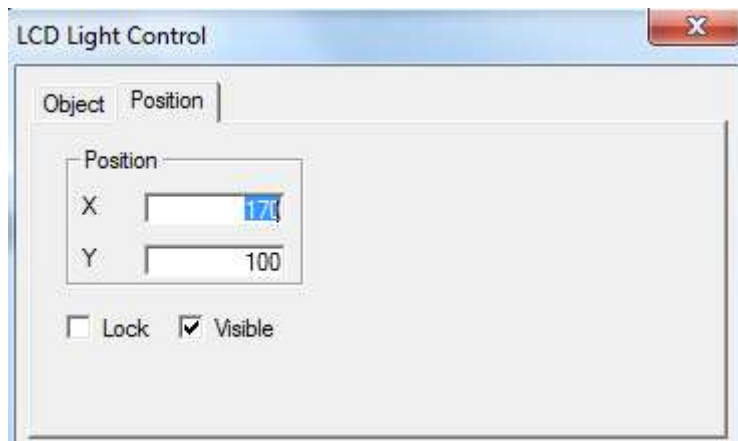

- **Position** set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of backlight
- X position set the X coordinate value of backlight
- Y position set the Y coordinate value of backlight
- **Lock** lock the backlight in the screen, it cannot be moved
- **Visible** the backlight is visible when editing


4-4-5. Scale

1. Click “” and move the cursor in the screen. Click left mouse to confirm and click ESC to cancel. Modify the scale size through the boundary point.




2. Double click scale or right click scale then choose property to modify the parameters.

- Scale

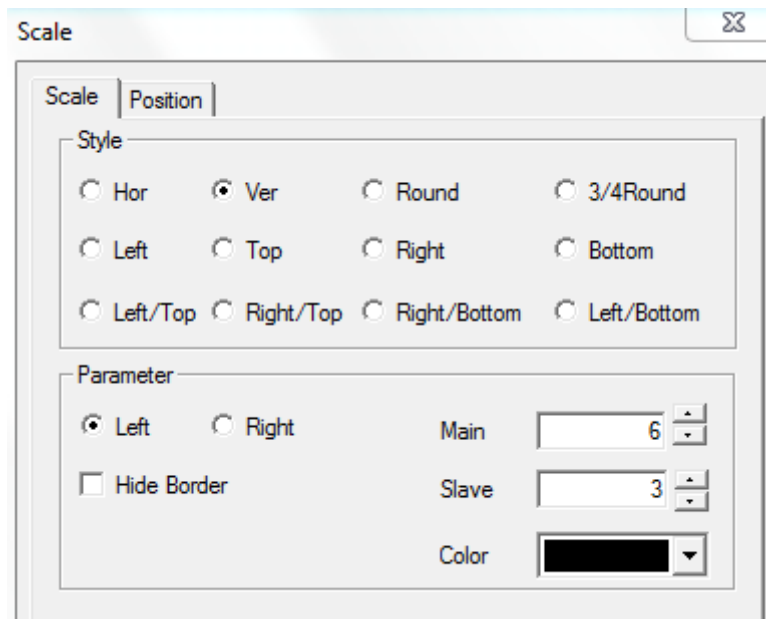

- Style the scale style: vertical, horizontal, round, ¾ round, etc.
- Parameter display mode, main and slave scale display, scale colors
 - Left the scale display on the left
 - Right the scale display on the right
 - Hide border hide the boundary of scale
 - Main the segments of main scale
 - Slave the segments of vice scale
 - Color the colors of scale

■ Position

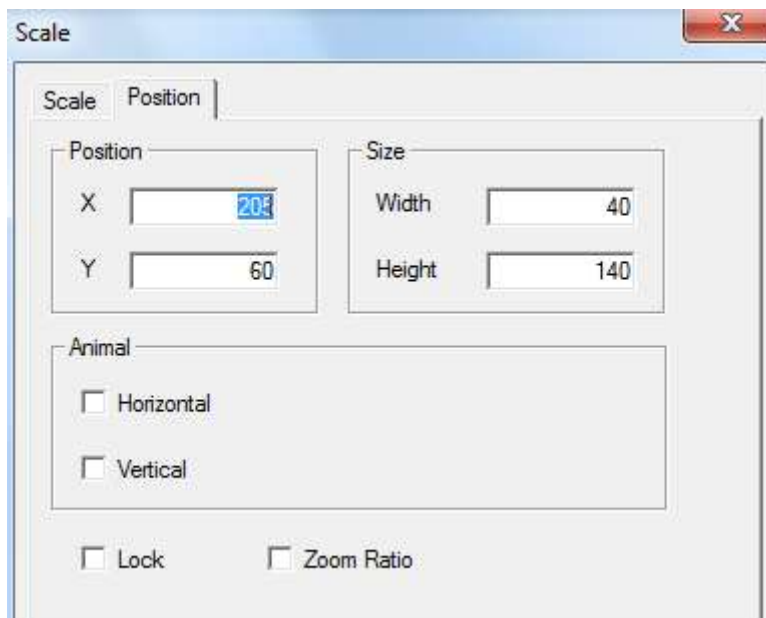

- Position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate value of scale
 - X position set the X coordinate value of scale
 - Y position set the Y coordinate value of scale

- Size set the width and height of scale
 - width (W) set the width of scale
 - height (H) set the height of scale
- Animal set if the scale needs to be moved.



Horizontal set the scale in the horizontal position of HMI according to register value, modifying the X coordinate value.

$X \text{ coordinate value} = X \text{ position} + \text{current value of register}$


Vertical set the scale in the vertical position of HMI according to register value, modifying the Y coordinate value.


$Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$

- lock lock the scale in the screen, then it cannot move
- Zoom proportion set if it can be zommed by proportion when editing the size. But this function can not work now. This function is canceled in MOP Soft 2012.

4-4-6. Instrument


The register value will show in the instrument.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

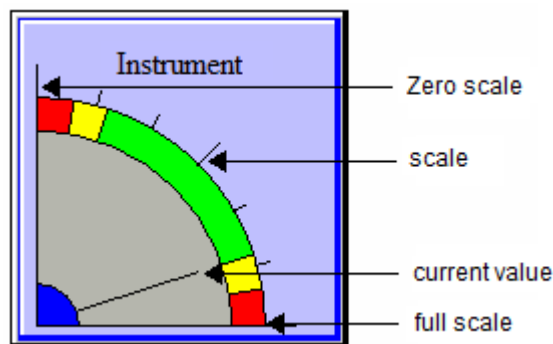


2. Double click the instrument, it will show the attribute window.

■ Object

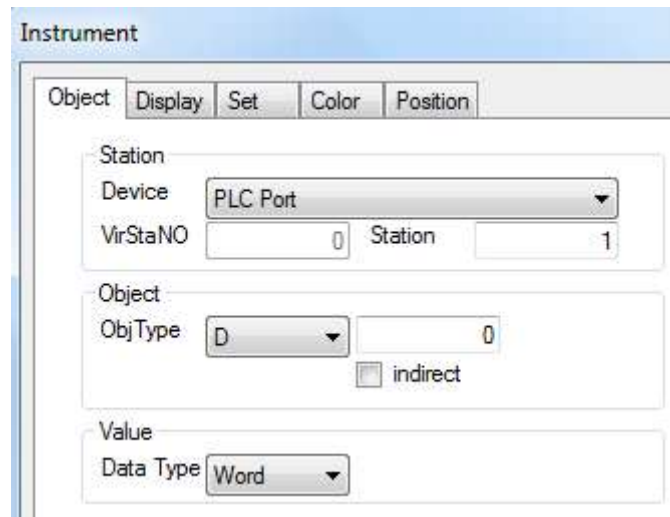

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the instrument object address
- Indirect set the offset of object address

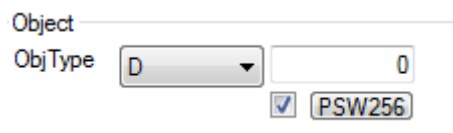


The object address = D [0+ the value of PSW256]

Value set the value format (Dword or word)




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Display

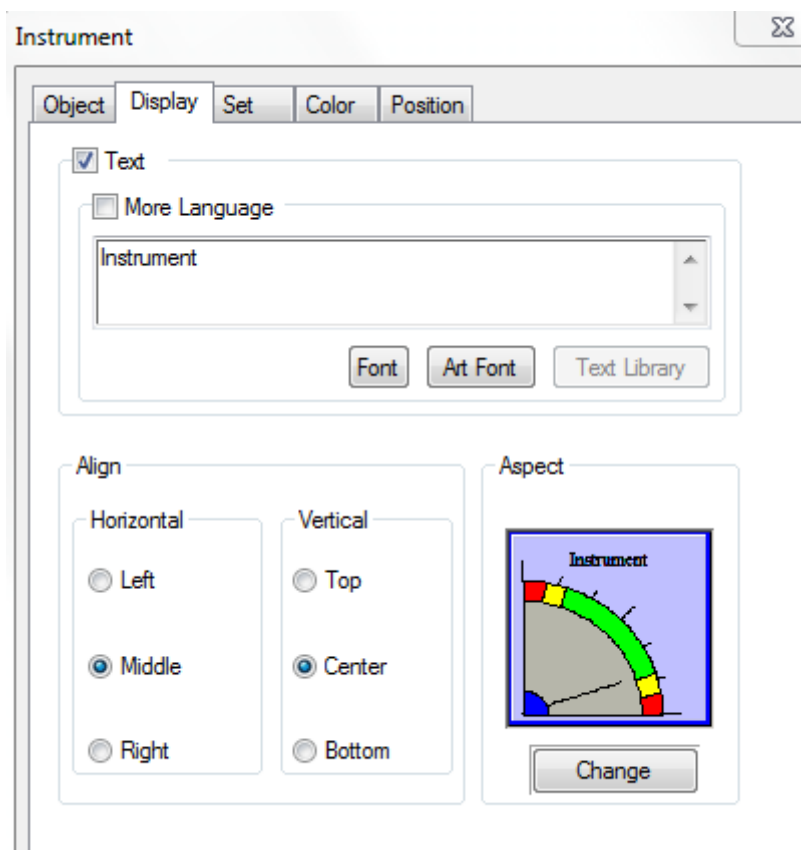

- Text the text on the instrument, user can set many language
- Horizontal align horizontal align the text
- Vertical align vertical align the text
- Aspect change the appearance of instrument

■ Set

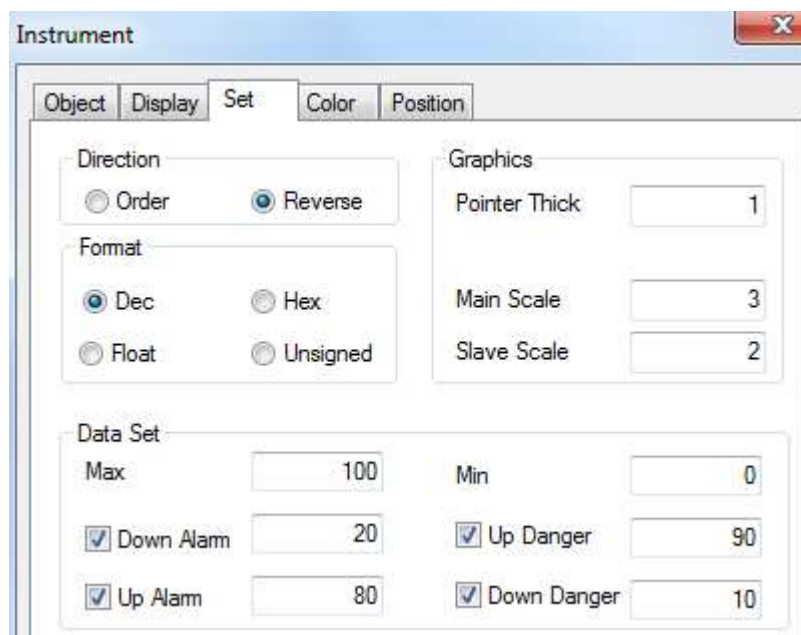


- Direction the instrument pointer rotating direction

- Graphics the pointer width and the scale quantity
- Data set set the range of scale, alarm value, danger value
 - Up danger between setting value and max scale,
 - Up alarm between setting value and up danger
 - Down alarm between down danger and setting value
 - Down danger between min scale and setting value




Up danger value is larger than up alarm value, down alarm value is larger than down danger.

■ Color

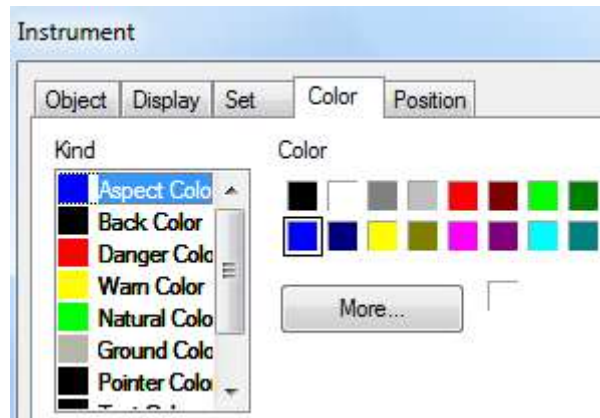


- Kind the color type
- Color set the color

■ Position

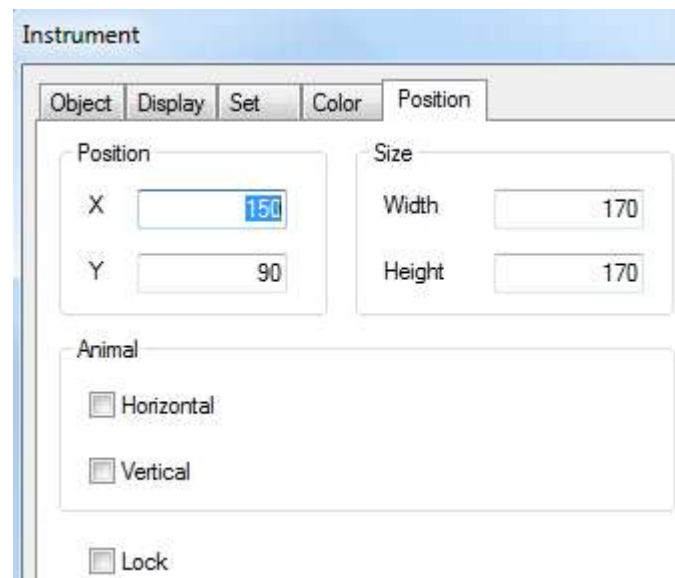

- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
 - X position set the X coordinate of instrument
 - Y position set the Y coordinate of instrument

- Size set the width and height of instrument
 - width (W) set the width of instrument
 - height (H) set the height of instrument
- Animal the instrument can move

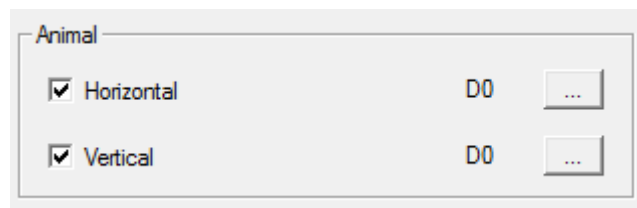

- Horizontal the instrument can horizontal move according to register value,
X coordinate value =X position+current value of register
- Vertical the instrument can vertical move according to register value,
Y coordinate value=Y position+current value of register
- Lock lock the instrument in the screen, then it cannot move


4-4-7. Valve

Simulate the valve status in process control system.


For example: the following valve is in close status and open status.




Close status

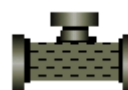

open status

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel.

Drag the boundary to change the size.

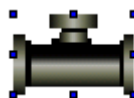

2. Double click the valve, it will show the attribute window.

■ Object

- (1) Valve object set the trigger signal. When the signal is ON, the valve open; when the signal is OFF, the valve close.

- Station
- Device the communication port connect the HMI
- Virstano the station no. of the communication device
- Object the valve object address
- Indirect set the offset of object address

The object address = M [0+ the value of PSW256]



We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

(2) Flow object

Control the liquid flowing in the valve. When the flow object is ON, the liquid is flowing. When the flow object is OFF, the liquid stop flowing.


- Station
- Device the communication port connect the HMI
- Virstano the station no. of the communication device
- Object the flow object address
- Indirect set the offset of flow object address

The object address = M [0+ the value of PSW256]




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Valve

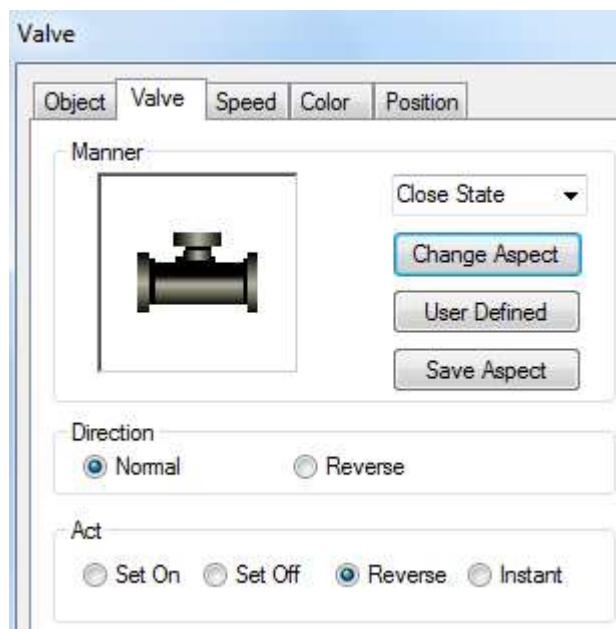


- Manner
 - Change aspect preview the appearance of valve
 - Change aspect change the appearance of valve
 - User defined user can define the appearance of valve
 - Save aspect save the appearance of valve
- Direction
 - the liquid flowing direction in the valve
- Act
 - the action of valve
 - Set on the valve always open when trigger signal is ON
 - Set off the valve always close when trigger signal is ON
 - Reverse the valve status will reverse when trigger signal is ON
 - Instant the valve open when keep pressing the trigger signal

■ Speed

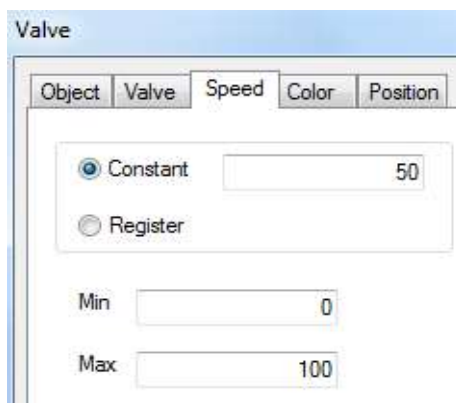


- Constant the flowing speed in the valve is constant value, the value should be in the range of max and min value
- Register the flowing speed is controlled through the register, the speed should be in the range of max and min value
- Min the min speed
- Max the max speed

■ Color

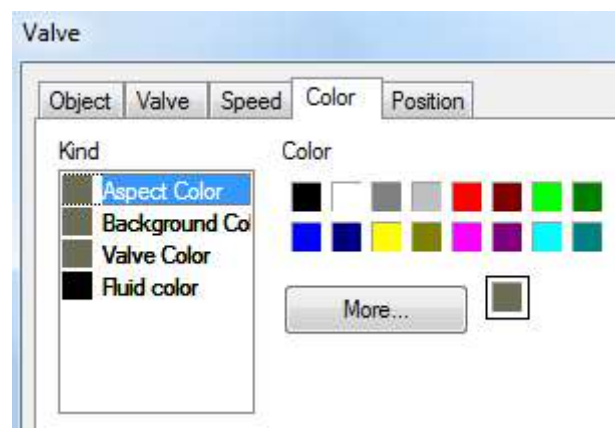

- Kind set the color type
- Color set the color

■ Position

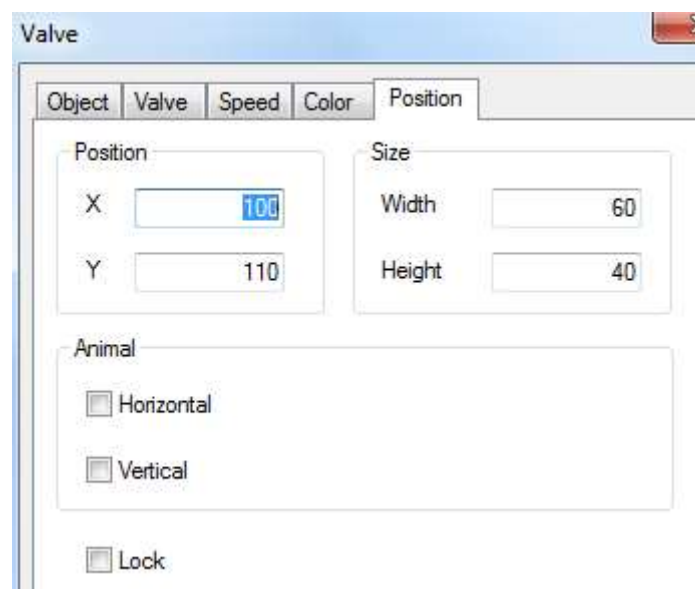


- Position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
- X position set the X coordinate of valve
- Y position set the Y coordinate of valve
- Size set the width and height of valve
- Width (W) set the width of valve


- Height (H) set the height of valve
- Animal the valve can move

- Horizontal the valve can horizontal move according to register value,
X coordinate value = X position + current value of register
- Vertical the valve can vertical move according to register value,
Y coordinate value = Y position + current value of register
- Lock lock the valve in the screen, then it cannot move

4-4-8. Pipe

Simulate the pipe function in process control system.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

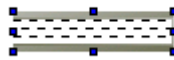

2. Double click the pipe, it will show the attribute window.

■ Object

When the coil is ON, the liquid is flowing in the pipe. When the coil is OFF, the liquid stops flowing in the pipe.

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the pipe object address
- Indirect set the offset of object address

Object
ObjType M 0
☒ PSW256

The object address = M [0+ the value of PSW256]



We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Aspect

Pipe

Object Aspect Speed Color Position

Aspect

State1

Change Aspect

User Defined

Save Aspect

Direct

☒ Order ☐ Reverse

- Aspect
 - Change aspect preview the appearance of pipe
 - User defined change the appearance of pipe
 - Save aspect user can define the appearance of pipe
- Direction
 - the liquid flowing direction in the pipe

■ Speed

Pipe

Object Aspect Speed Color Position

☒ Constant 50

☐ Register

Min 0


Max 100

- Constant
 - the flowing speed in the pipe is constant value, the value should be in the

range of max and min value


- Register the flowing speed is controlled through the register, the speed should be in the range of max and min value
- Min the min speed
- Max the max speed

■ Color

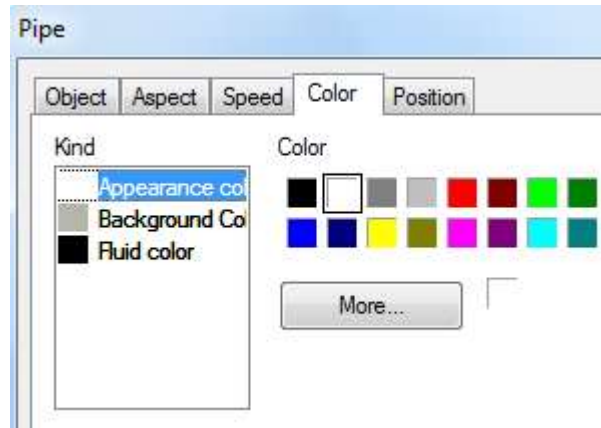

- Kind set the color type
- Color set the color

■ Position

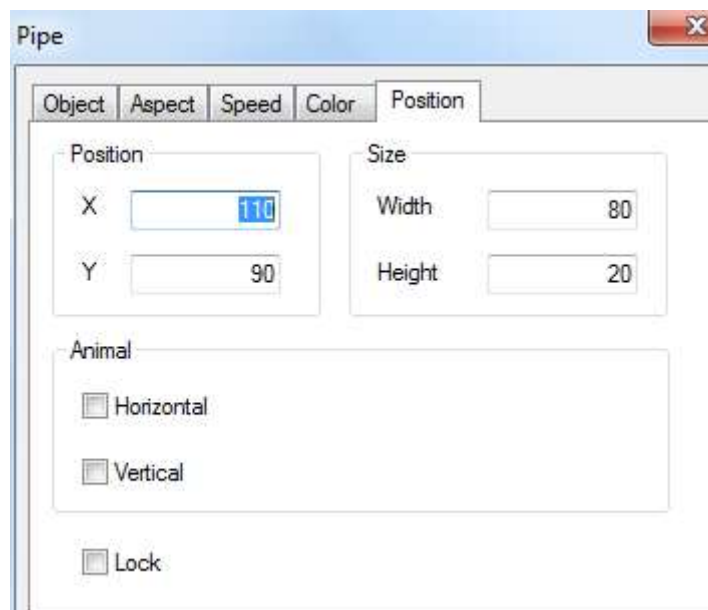

- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
- X position set the X coordinate of pipe
- Y position set the Y coordinate of pipe
- Size set the width and height of pipe
- Width (W) set the width of pipe
- Height (H) set the height of pipe

- Animal the pipe can move


Horizontal the pipe can horizontal move according to register value,
X coordinate value = X position + current value of register


Vertical the pipe can vertical move according to register value,
Y coordinate value = Y position + current value of register

- Lock lock the pipe in the screen, then it cannot move

4-4-9. Pump

Simulate the running status of pump.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

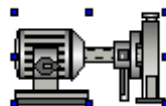

2. Double click the pump, it will show the attribute window.

■ Object

When the coil is ON, the liquid is flowing in the pump. When the coil is OFF, the liquid stops flowing in the pump.

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the pump object address
- Indirect set the offset of object address

Object
ObjType M 0
☒ PSW256

The object address = M [0+ the value of PSW256]



We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Aspect

Pump

Object Aspect Speed Color Position

Aspect

State1

Change Aspect

User Defined

Save Aspect

Direct

☐ Order ☒ Reverse

- Aspect
 - Change aspect preview the appearance of pump
 - User defined change the appearance of pump
 - Save aspect user can define the appearance of pump
- Direction the liquid flowing direction in the pump

■ Speed

Pump

Object Aspect Speed Color Position

☒ Constant 50

☐ Register


Min 0

Max 100

- Constant the flowing speed in the pump is constant value, the value should be in the range of max and min value


- Register the flowing speed is controlled through the register, the speed should be in the range of max and min value
 - Min the min speed
 - Max the max speed

■ Color

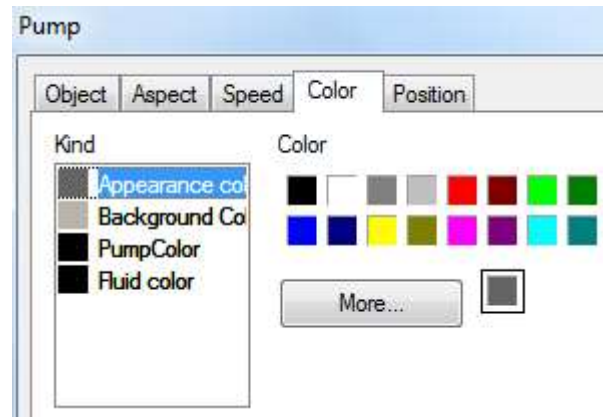

- Kind set the color type
- Color set the color

■ Position

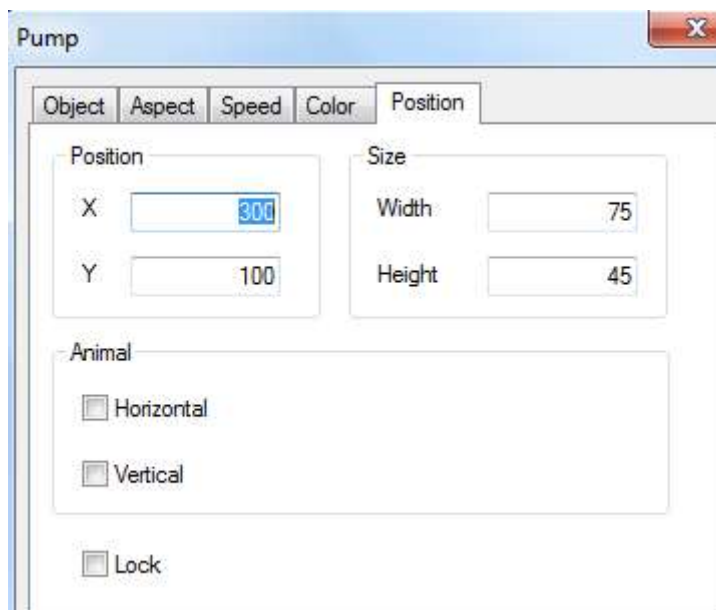

- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y
 - X position set the X coordinate of pump
 - Y position set the Y coordinate of pump
- Size set the width and height of pump
 - Width (W) set the width of pump
 - Height (H) set the height of pump
- Animal the pump can move




Horizontal the pump can horizontal move according to register value,
X coordinate value =X position+current value of register


Vertical the pump can vertical move according to register value,
Y coordinate value=Y position+current value of register

- Lock lock the pump in the screen, then it cannot move

4-4-10. Fan

Simulate the running status of fan.


1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

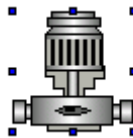


2. Double click the fan, it will show the attribute window.

■ Object

When the coil is ON, the fan is running. When the coil is OFF, the fan stops running.

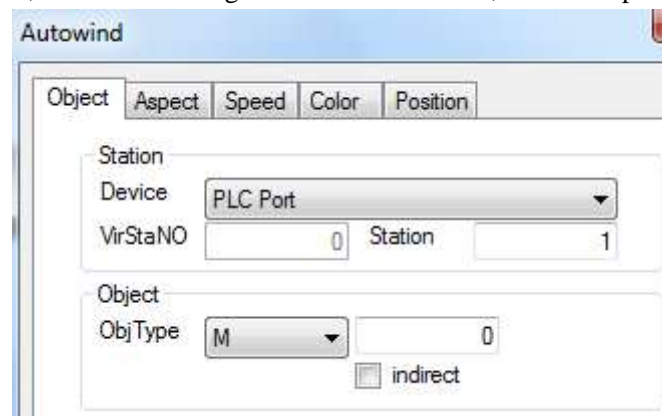

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the fan object address
- Indirect set the offset of object address

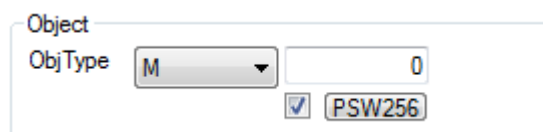


The object address = M [0+ the value of PSW256]




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Aspect

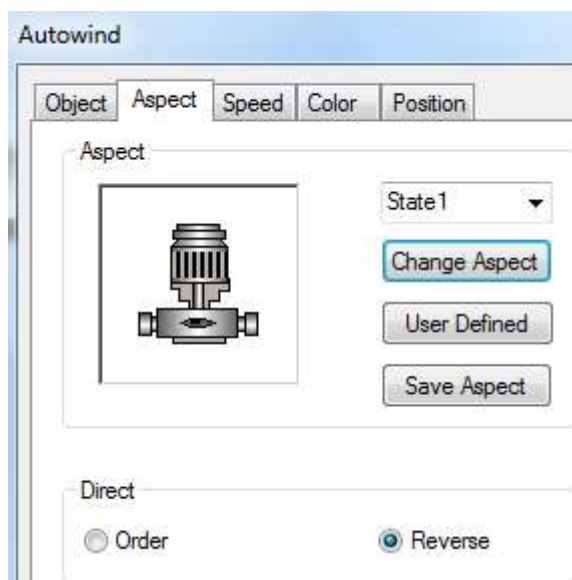


- Aspect
 - Change aspect preview the appearance of fan
 - Change aspect change the appearance of fan
 - User defined user can define the appearance of fan
 - Save aspect save the appearance of fan
- Direction the running direction of fan

■ Speed

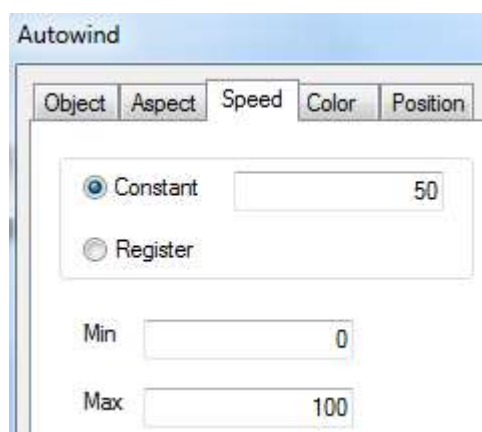


- Constant the running speed of fan is constant value, the value should be in the range of max and min value
- Register the running speed is controlled through the register, the speed should be in the range of max and min value
 - Min the min speed
 - Max the max speed

■ Color

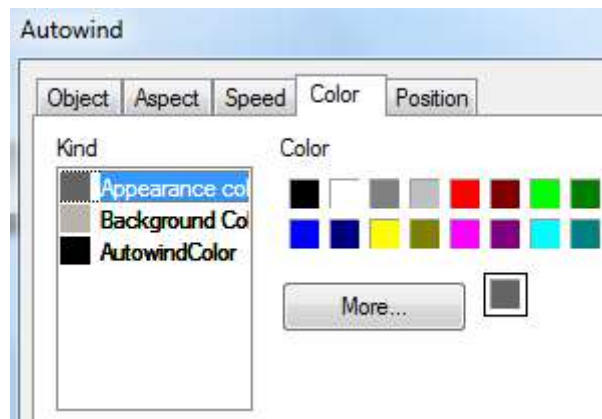


- Kind set the color type
- Color set the color

■ Position

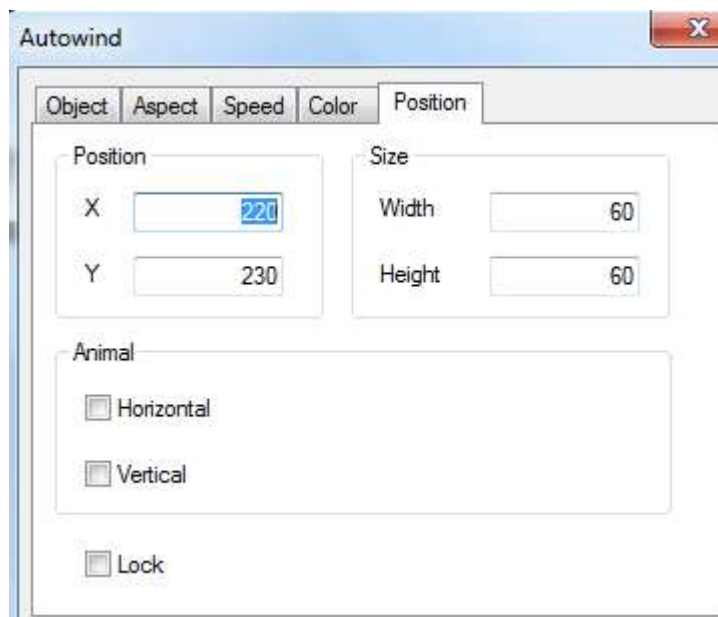

- Position coordinate
 - X position set the X coordinate of fan
 - Y position set the Y coordinate of fan
- Size
 - Width (W) set the width of fan
 - Height (H) set the height of fan
- Animal
 - the fan can move

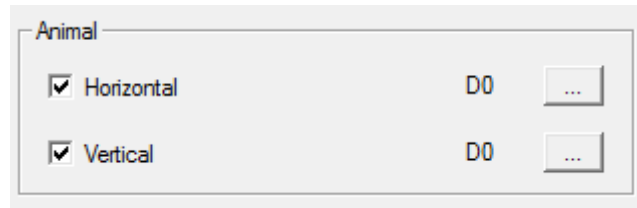


Horizontal the fan can horizontal move according to register value,
X coordinate value =X position+current value of register


Vertical the fan can vertical move according to register value,
Y coordinate value=Y position+current value of register

- Lock lock the fan in the screen, then it cannot move

4-4-11. Motor

Simulate the running status of motor.


1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

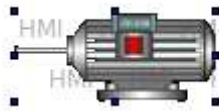


2. Double click the motor, it will show the attribute window.

■ Object

When the coil is ON, the motor is running. When the coil is OFF, the motor stops running.

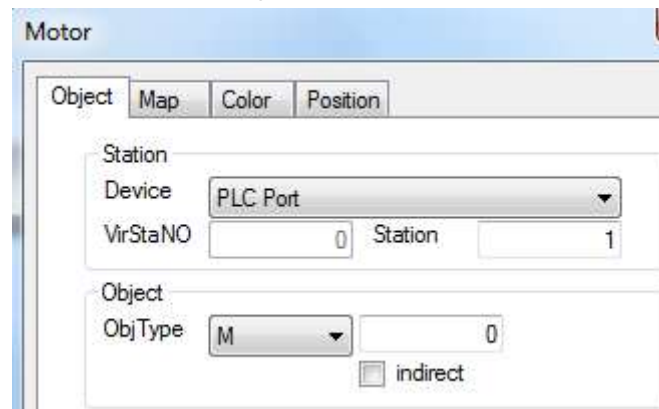

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the motor object address
- Indirect set the offset of object address

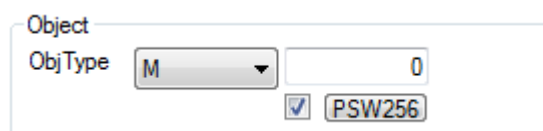


The object address = M [0+ the value of PSW256]




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Map

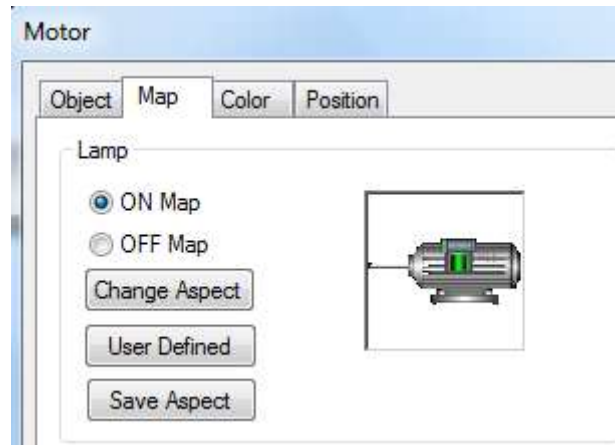


- ON Map Preview the running image of motor
- OFF Map Preview the stop status image of motor
- Change aspect change the appearance of motor
- User defined user define the motor appearance
- Save aspect save the appearance of motor

■ Color

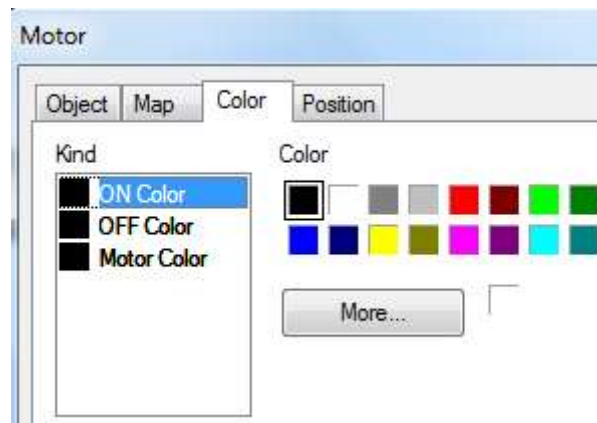


- Kind choose the color type
- Color set the color

■ Position

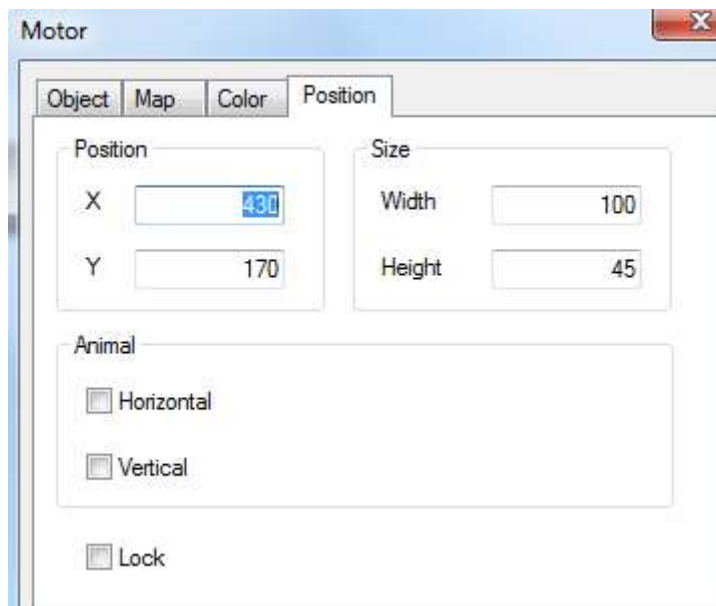


- Position coordinate
 - X position set the X coordinate of motor
 - Y position set the Y coordinate of motor
- Size
 - Width (W) set the width of motor
 - Height (H) set the height of motor
- Animal
 - the motor can move

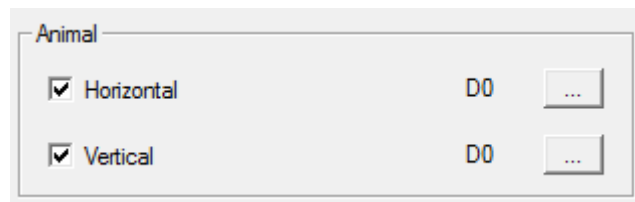

- Horizontal the motor can horizontal move according to register value,
X coordinate value = X position + current value of register
- Vertical the motor can vertical move according to register value,
Y coordinate value = Y position + current value of register
- Lock lock the motor in the screen, then it cannot move

4-4-12. Retort

Simulate the running status of retort.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.



2. Double click the retort, it will show the attribute window.

■ Object

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the retort object address
- Indirect set the offset of object address


The object address = D [0+ the value of PSW256]

Value set the value format (Dword or word)




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Range

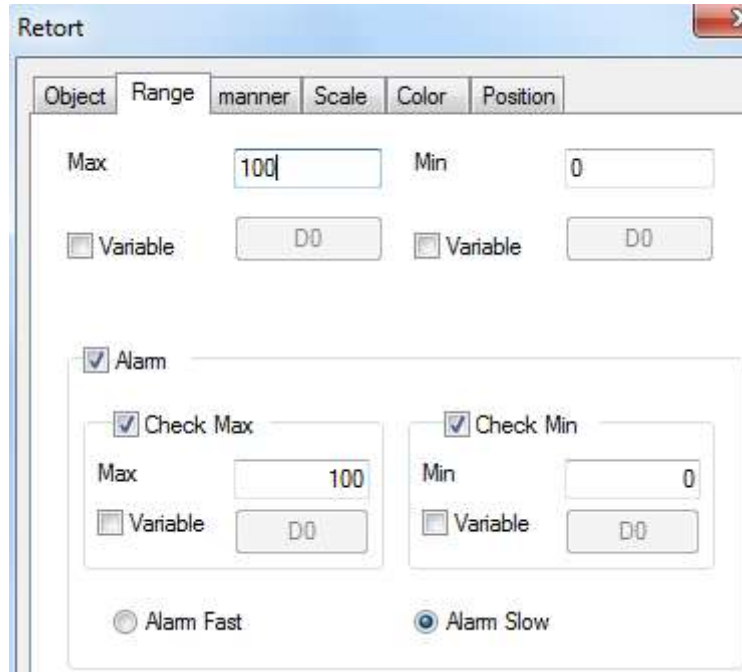


- Max the max value of retort, it can be set through the register
 - Min the min value of retort, it can be set through the register
 - Alarm display the liquid level in the retort according to the alarm information
 - Upper limit value < max value
 - Upper limit alarm: in the range of upper limit to max value
 - Lower limit value > min value
 - Lower limit alarm: in the range of min value and lower limit value
- Alarm mode: fast mode and slow mode

■ Manner

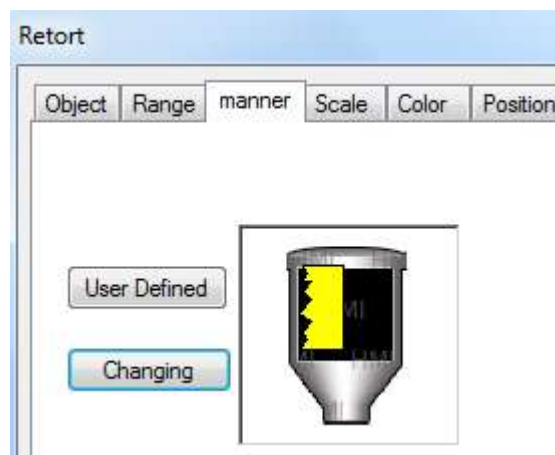


- User defined user define the retort appearance
- Changing change the appearance of retort

■ Scale

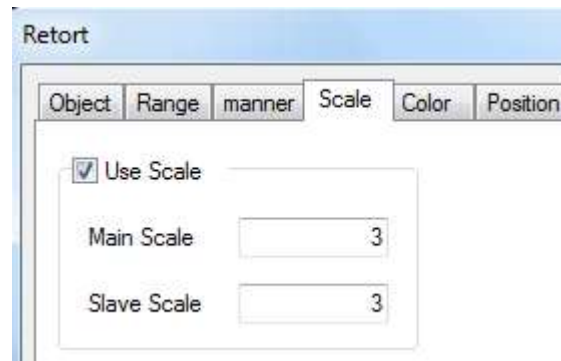


- Use scale
 - Main scale set the main scale of retort
 - Slave scale set the vice scale of retort

■ Color

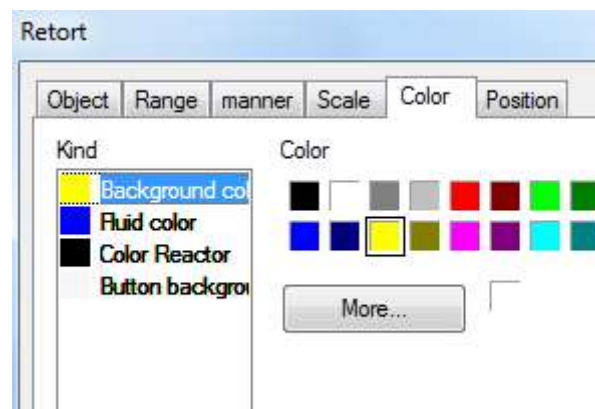


- Kind set the color type
- Color set the color

■ Position

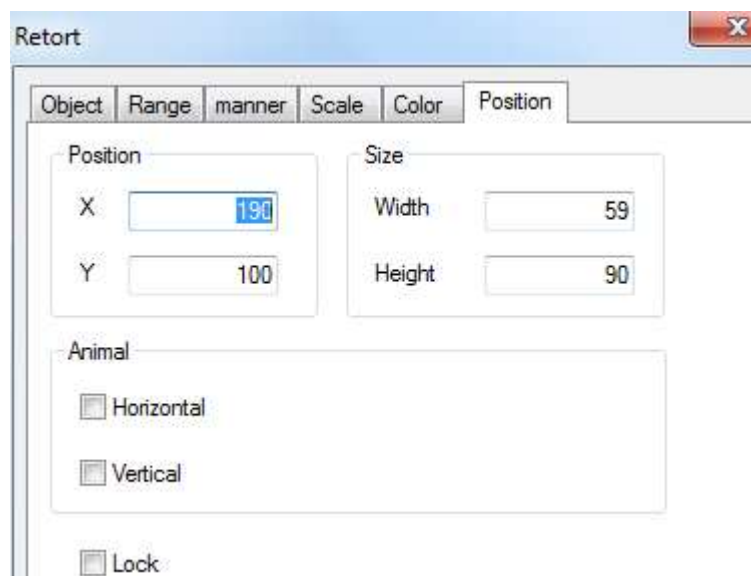

- Position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate


- X position set the X coordinate of retort
- Y position set the Y coordinate of retort
- Size set the width and height of retort
- Width (W) set the width of retort
- Height (H) set the height of retort
- Animal the retort can move

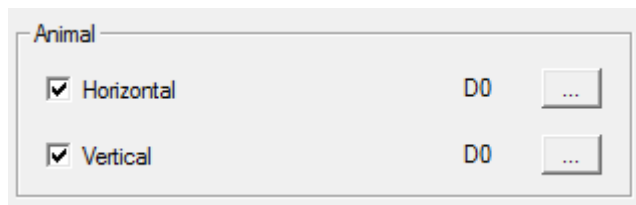


- Horizontal the retort can horizontal move according to register value,
X coordinate value = X position + current value of register
- Vertical the retort can vertical move according to register value,
Y coordinate value = Y position + current value of register
- Lock lock the retort in the screen, then it cannot move

4-4-13. Inverter alarm information

 
This function can show the string contents according to the register value when the PLC port device is frequency inverter.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

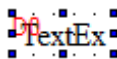

2. Double click the variable string, it will show the attribute window.

■ Object

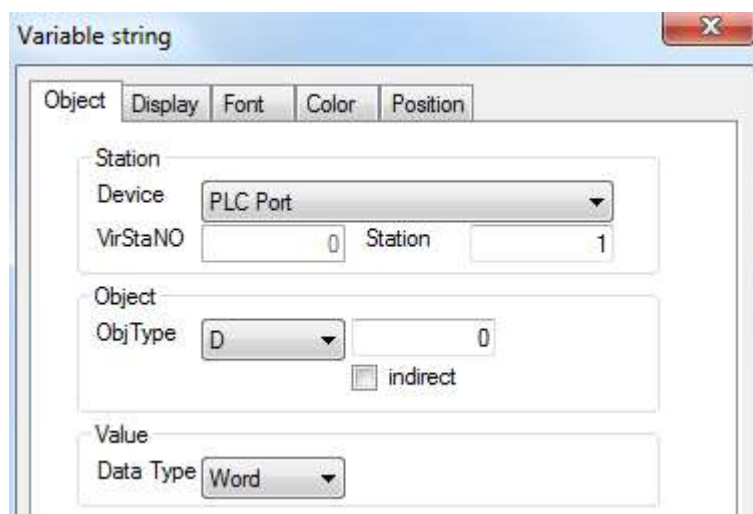

- Station
- Device the communication port connect the HMI
- Virstano the station no. of the communication device

- Object the object address
- Indirect set the offset of object address

Object _____

ObjType

☒ PSW256

The object address = D [0+ the value of PSW256]

Value set the value format (Dword or word)




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

■ Display


- Content the contents of variable string
- Value the value to show the string
- Text des... the string contents
- Add add one text
- Delete delete one text
- Aspect the background of text
- Alignment the alignment mode of text

■ Font

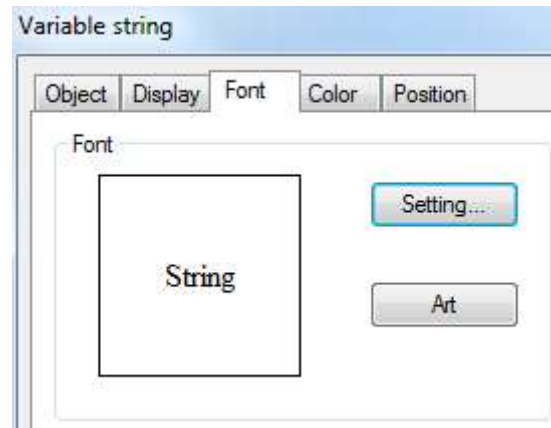


- Setting set the font, size of string
- Art set art style of string

■ Color

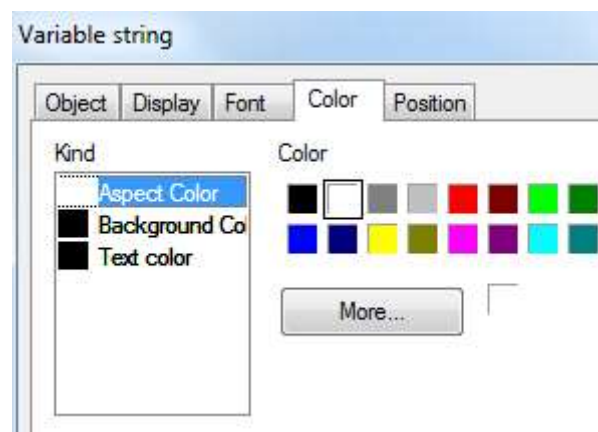


- Kind set the color type
- Color set the color

■ Position

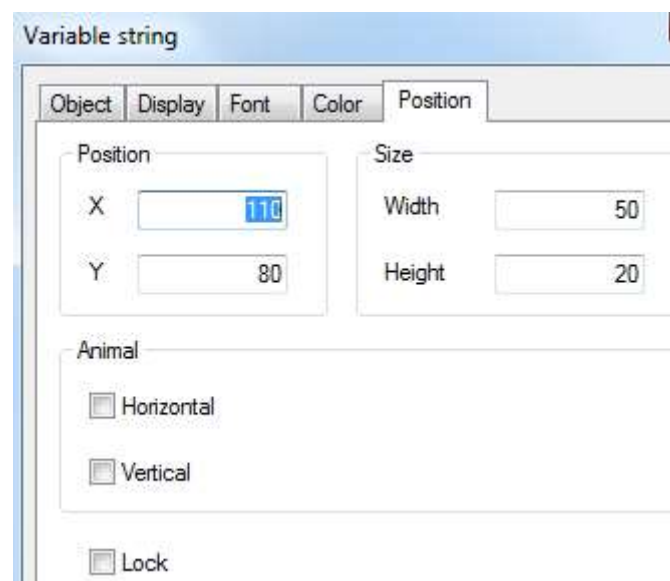


- Position set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
 - X position set the X coordinate of string
 - Y position set the Y coordinate of string
- Size set the width and height of string
 - Width (W) set the width of string
 - Height (H) set the height of string
- Animal the string can move

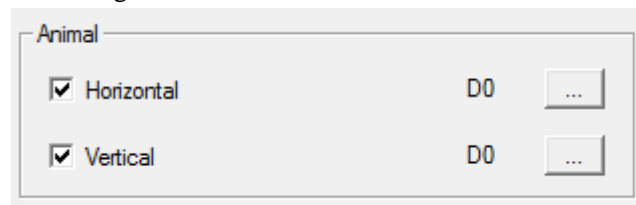

- Horizontal the string can horizontal move according to register value,
X coordinate value =X position+current value of register
- Vertical the string can vertical move according to register value,
Y coordinate value =Y position+current value of register
- Lock lock the string in the screen, then it cannot move

4-4-14. Scroll text


The text can move from left to right.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel.

Thank you very much !


2. Double click the scroll text, it will show the attribute window.

■ Message

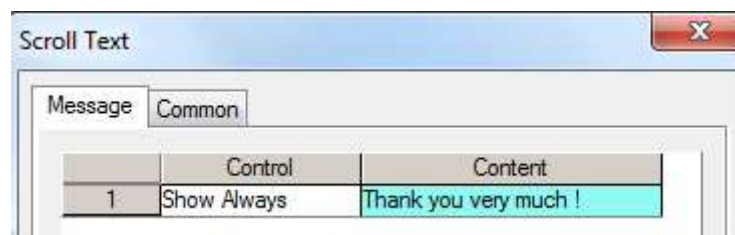


- Control it includes show always and limited by coil
 - Show always input the contents in it
 - Limited by coil the contents will display when the coil is ON
- Content right click the text to copy, delete and build new text, double click the text to change the contents

Right click the content number to add new message.

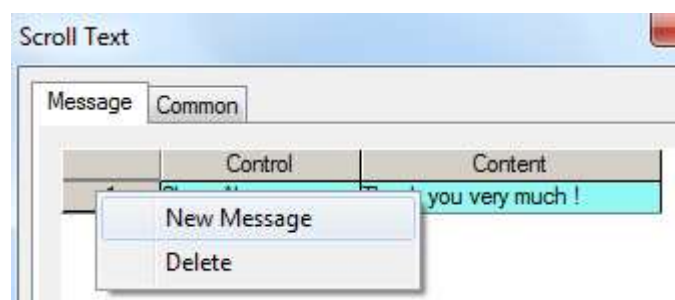

■ Common

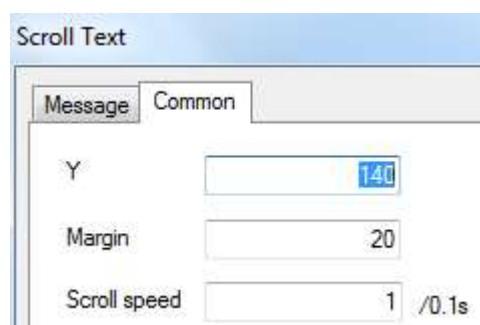



- Y the text coordinate of Y-axis
- Margin the space between message, the unit is pixel
- Scroll speed the moving speed of text


4-4-15. Real trend map

The real trend map can collect the data and display on the trend map. The data include temperature, pressure, and liquid level.

For the following application, it collects the value of register D0, value quantity is 20, collection period is 1 second, storage address starts from PSW301. The real-time trend map is shown as below:

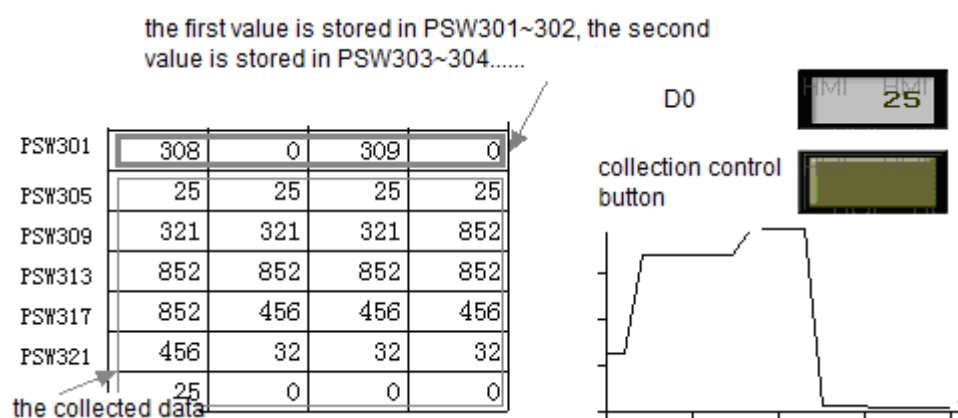


1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

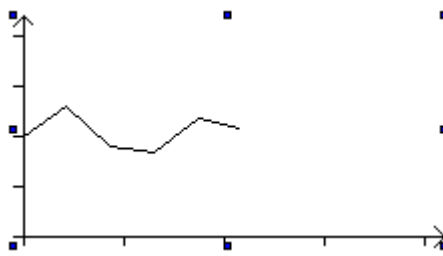


2. Double click the real trend map, it will show the attribute window.

■ Trend map

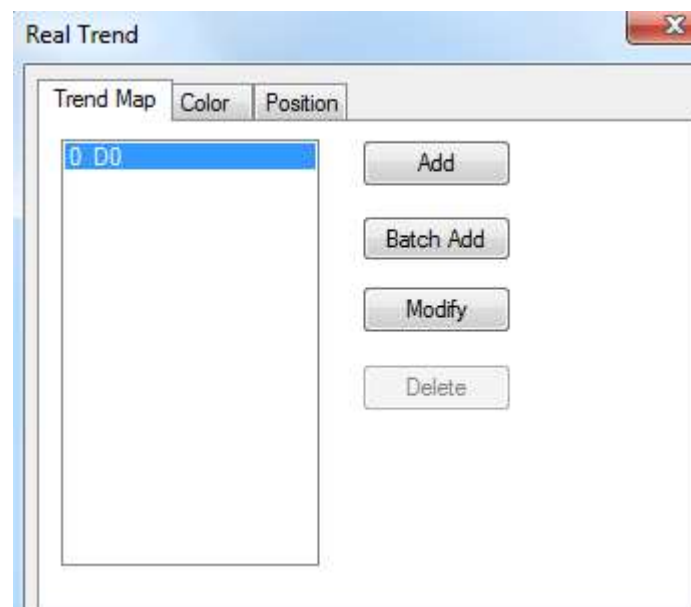


- Add add the collection object
- Delete delete the collection object
- Modify modify the collection object

(1) Object

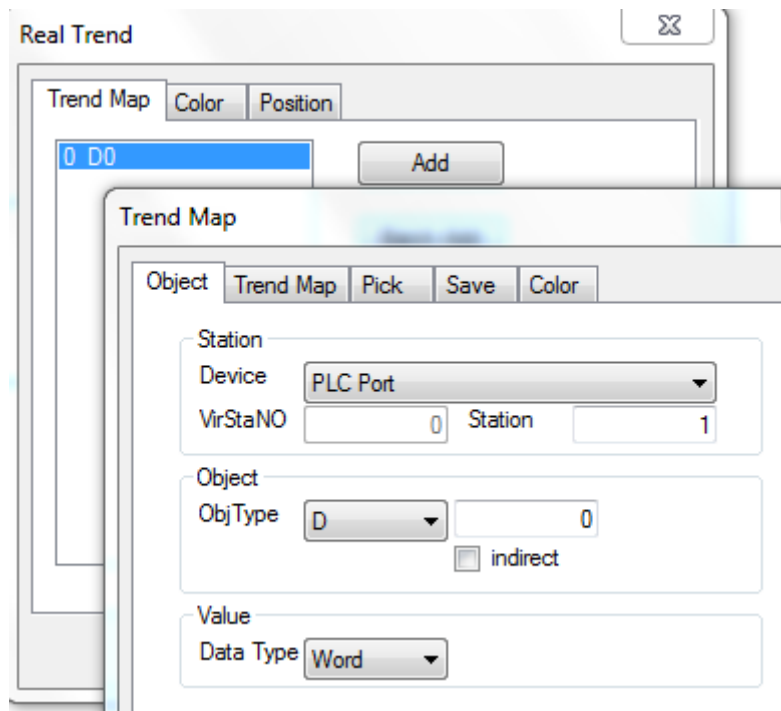

- Station
 - Device the communication port connect the HMI
 - VirStano the station no. of the communication device
- Object the object address
- Indirect set the offset of object address

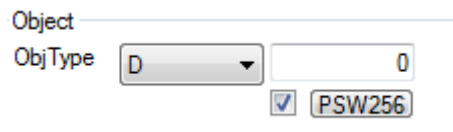


The object address = D [0+ the value of PSW256]

Value set the value format (Dword or word)




We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.

(2) Trend map

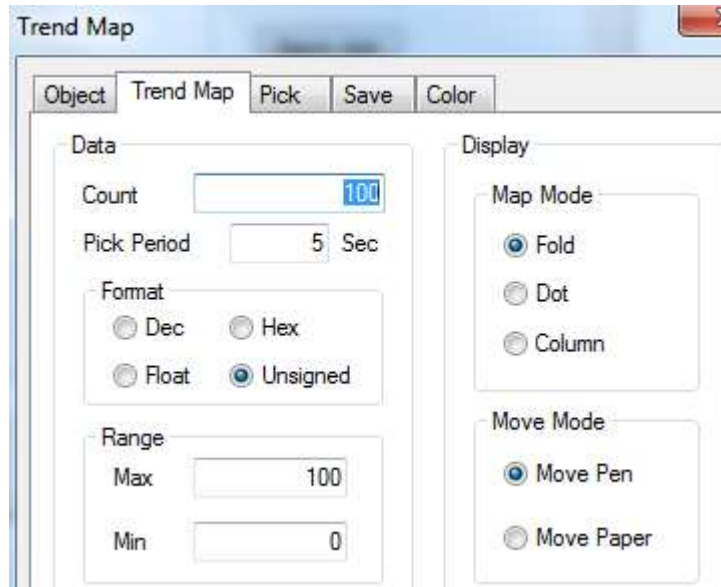


- Data
 - Count the collection data quantity
 - Pick period the collection period
- Format decimal, hex, float, unsigned value
- Range max and min value of Y-axis coordinate
- Display the display mode of map: fold, dot, column
- Move mode
 - Move pen the curve will move according to the value
 - Move paper the coordinate axis will move according to the value

(3) Pick

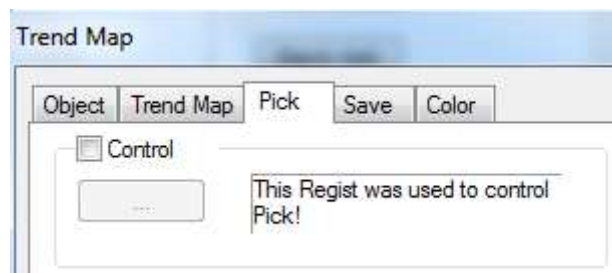


- Control when the coil is ON, the map starts collecting data

(4) Save

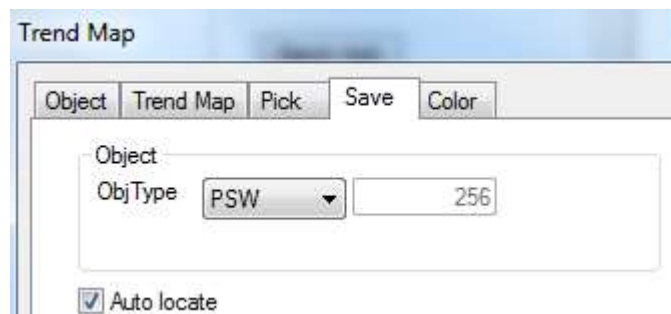

-
- Object the storage address of collection data
 - Auto locate the system will auto store the collection data in the HMI


(5) Color

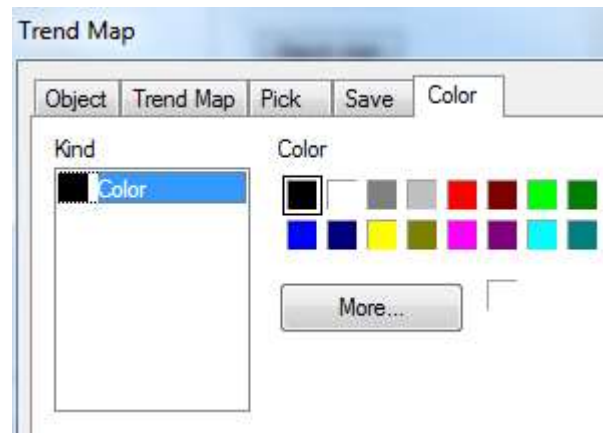


Set the the color of curve in the map

■ Color


Set the coordinate axis color

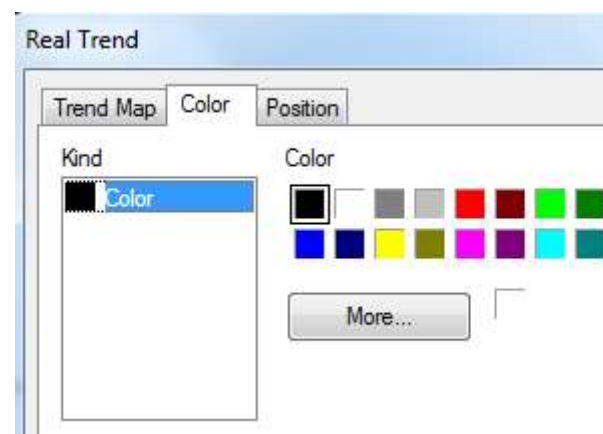

■ Position

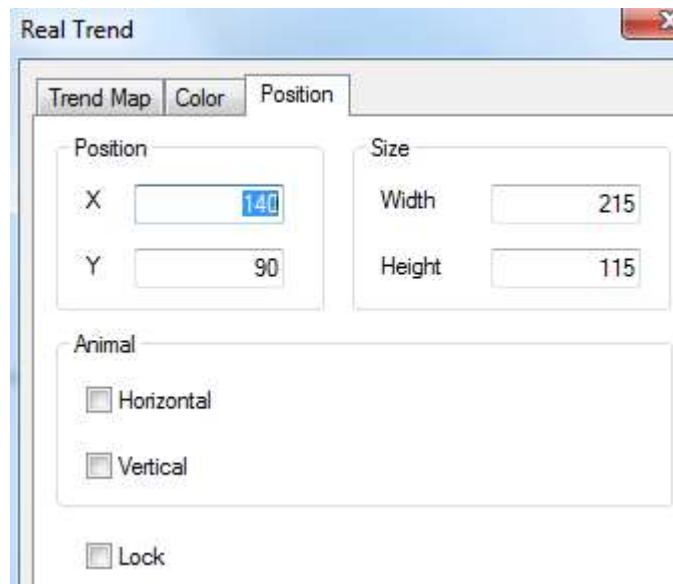


- Position coordinate
 - X position set the X coordinate of real trend map
 - Y position set the Y coordinate of real trend map
- Size
 - Width (W) set the width of real trend map
 - Height (H) set the height of real trend map
- Animal
 - the real trend map can move

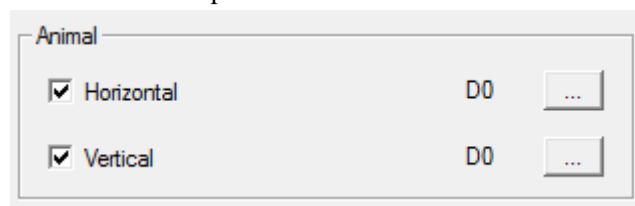


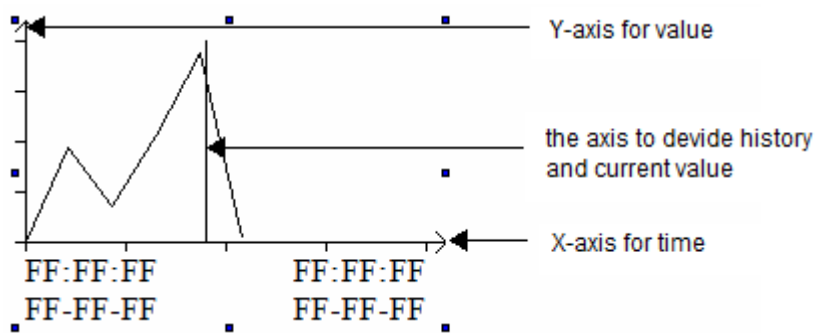
- Horizontal the real trend map can horizontal move according to register value,
X coordinate value = X position + current value of register
- Vertical the real trend map can vertical move according to register value,
Y coordinate value = Y position + current value of register
- Lock lock the real trend map in the screen, then it cannot move

4-4-16. History trend map

The history trend map can display the history data and real-time data at the same time. The history data can be seen through event button.

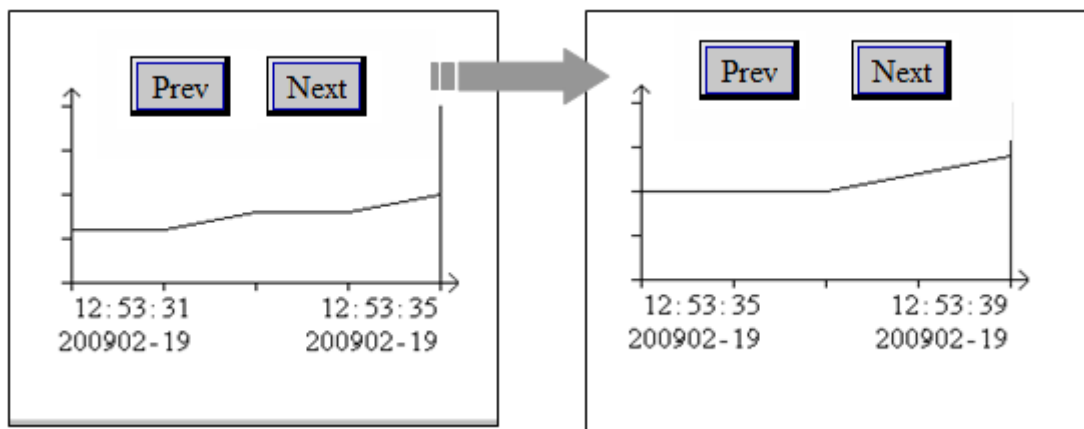

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.




2. Double click the history trend map, it will show the attribute window.

■ Trend source


NO	Object	Lower limit	Upper limit
1	D0	0	1024

- Add add the collection object
- Delete delete the collection object
- Modify modify the collection object, double click the object to modify

Register

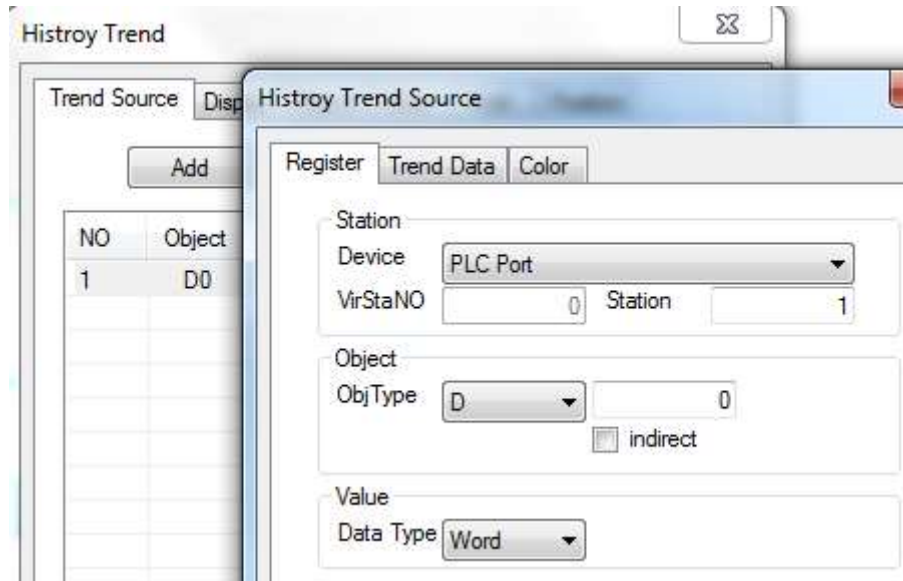

- Station
 - Device the communication port connect the HMI
 - Virstano the station no. of the communication device
- Object the object address
- Indirect set the offset of object address

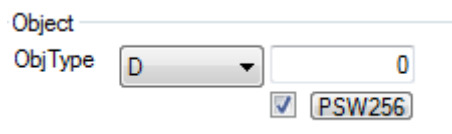


The object address = D [0+ the value of PSW256]

Value set the value format (Dword or word)



We suggest using internal register for indirect address (PSW, PFW), otherwise the communication speed will be slow.


(2) Trend data

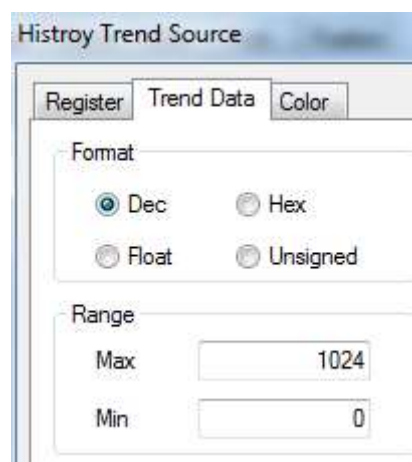

- Format the data format: decimal, hex, float, unsigned value


- Range the max and min value of value, the default value is 1024 and 0

(3) Color

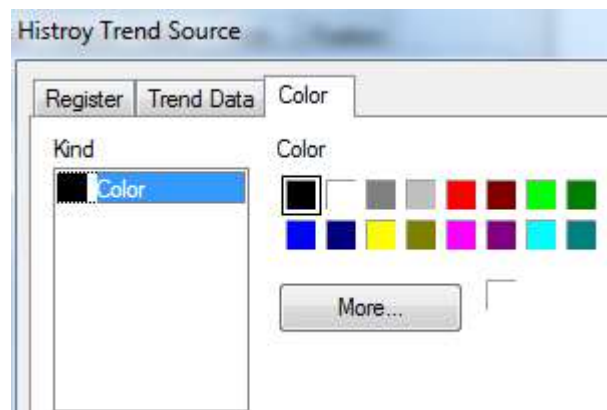


Set the curve color

■ Display

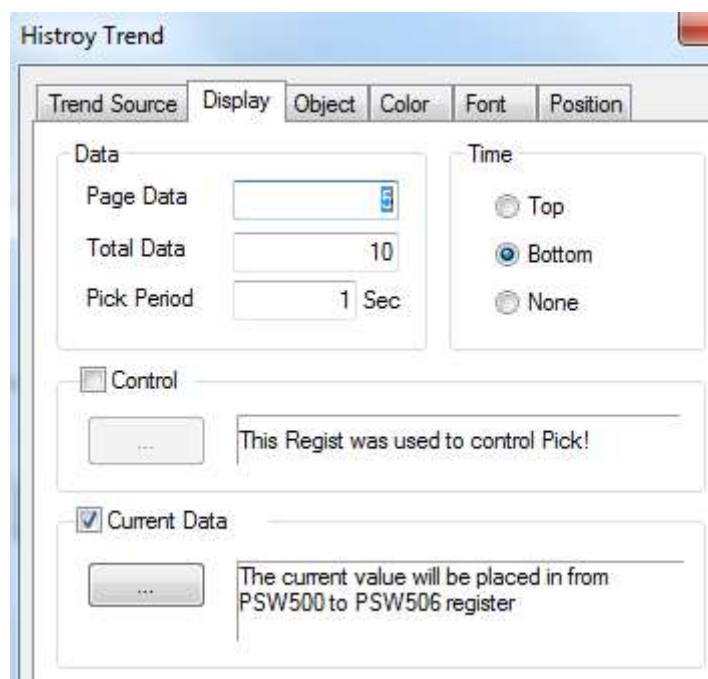


- Page data the data quantity displayed in the map, for example the following map displayed 5 page data

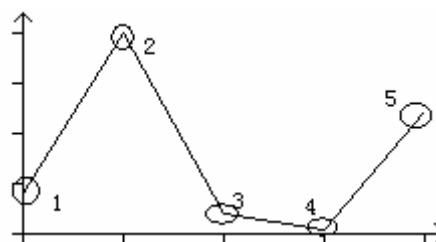


- Total data the total collection data quantity. For example total data is 10,
Each collection value occupied register quantity = (collection data quantity n + collection time

6)*data capacity

- Pick period the collection period
- Time the time display format
- Control control the collection action through coil
- Current data store the first group of data on every page. Occupied registers = current collection objects $n + \text{collection time } 6$

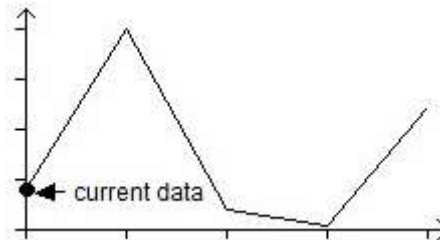


■ Object

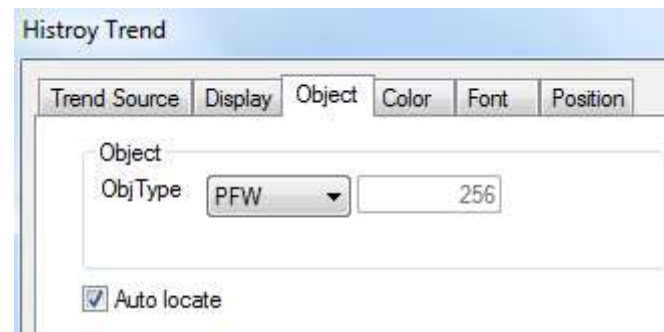


- Object type the register address to store the data
- Auto locate the HMI will auto-store the data in registers

■ Color

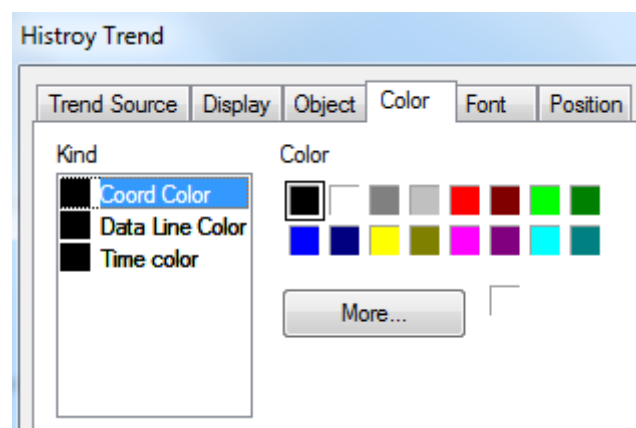


- Kind set the color type
- Color set the colors

■ Font

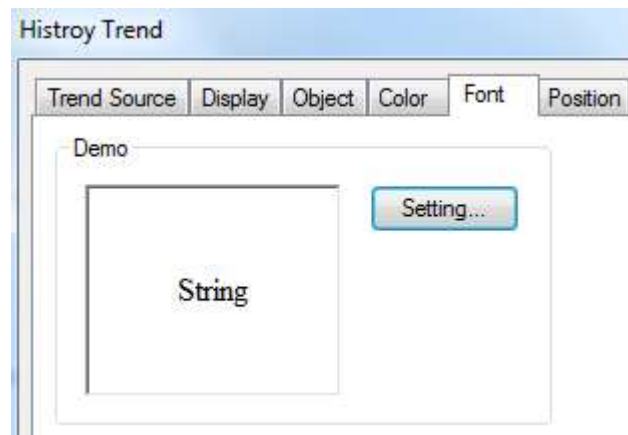


- Setting set the font and size

■ Position

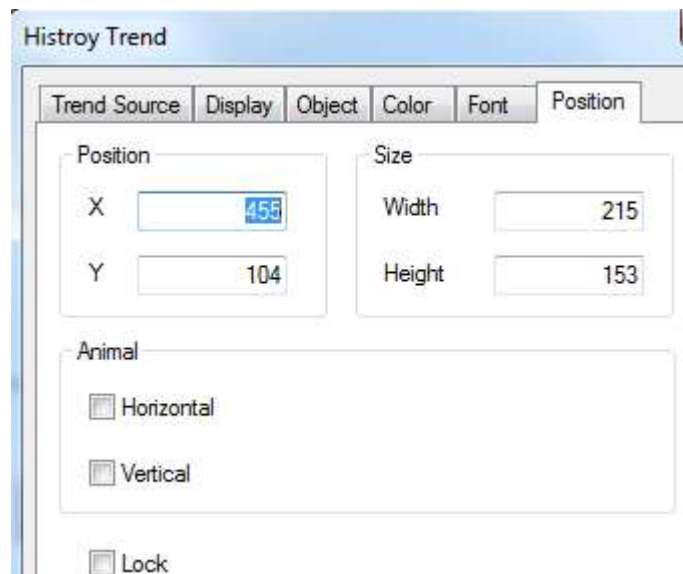

- Position coordinate
 - X position set the X coordinate of history trend map
 - Y position set the Y coordinate of history trend map
- Size
 - Width (W) set the width of history trend map
 - Height (H) set the height of history trend map
- Animal
 - the history trend map can move

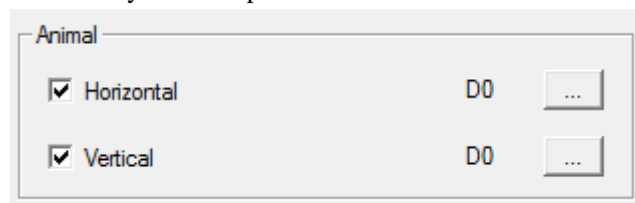


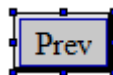
- Horizontal the history trend map can horizontal move according to register value,
X coordinate value =X position+current value of register

Vertical	the history trend map can vertical move according to register value, Y coordinate value = Y position + current value of register
➤ Lock	lock history trend map in the screen, then it cannot move

4-4-17. Event button

Event button has page up and page down function for data storage function. This button is used together with history trend map, history event, time trend map, XY trend map.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.



2. Double click the event button, it will show the attribute window.

■ Event

Event Button

Event **Button** Color Position

Trend Type Function

☒ Trend/Event Prev Page

☐ Time Trend

☒ Time Axis Left (Thin) Rate /10

☐ Y Axis Up (Thin)


ID All Trends

☐ XY Poly Trend Clear

- Trend type choose trend/event, time trend or XY poly trend according to the requirements


(1) Trend/event

This item is for history event and all the trend maps

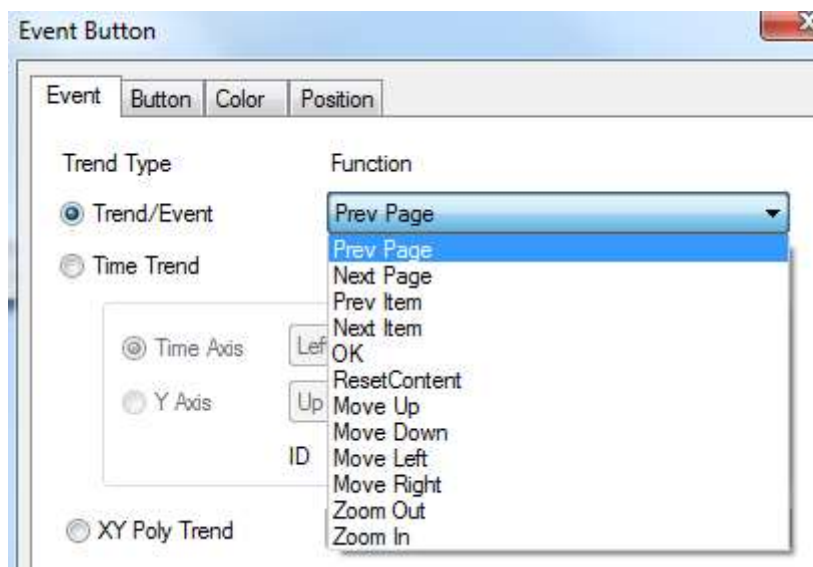


- Prev page page up (this function is also fit for common grid and data grid)
- Next page page down (this function is also fit for common grid and data grid)
- Prev item last item (this function is also fit for common grid and data grid)
- Next item next item (this function is also fit for common grid and data grid)
- Ok confirm the current value and record the current time (only fit for history event)
- Reset content clear all the collection data
- Move up move up the current coordinate scale (only fit for trend map)
- Move down move down the current coordinate scale (only fit for trend map)
- Move left move left the current coordinate scale (only fit for trend map)
- Move right move right the current coordinate scale (only fit for trend map)
- Zoom out zoom out the current coordinate scale (only fit for trend map)
- Zoom in zoom in the current coordinate scale (only fit for trend map)

(2) Time trend

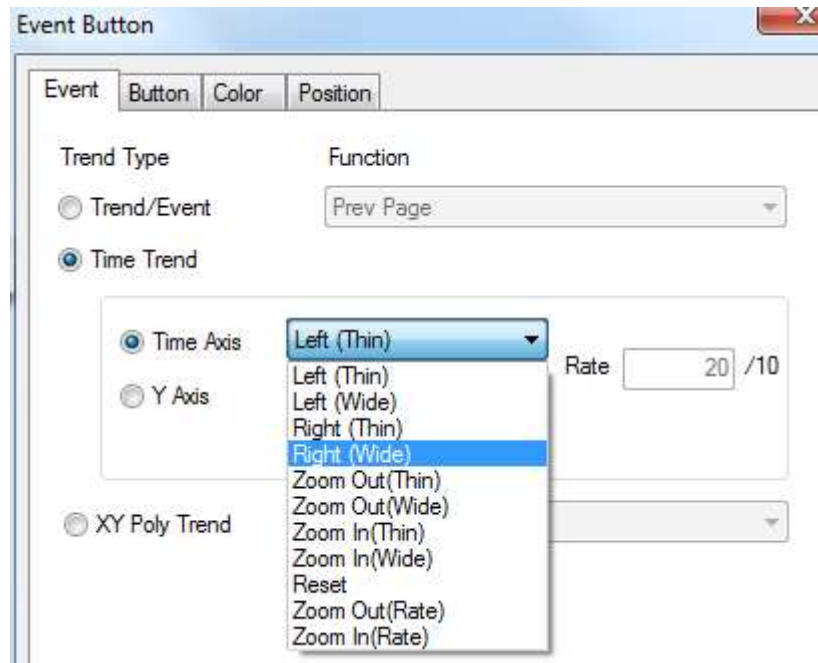


- Left (Thin/wide) move left the current coordinate scale (thin/wide means the move distance)
- Right (Thin/wide) move right the current coordinate scale (thin/wide means the move distance)
- Zoom out (Thin/wide) zoom out the current coordinate scale (thin/wide means the zoom rate)
- Zoom in (Thin/wide) zoom in the current coordinate scale (thin/wide means the zoom rate)
- Show show the curve
- Hide hide the curve
- Reset reset the curve
- Zoom out/in (rate) zoom out/in the current coordinate scale according to the rate

(3) XY poly trend

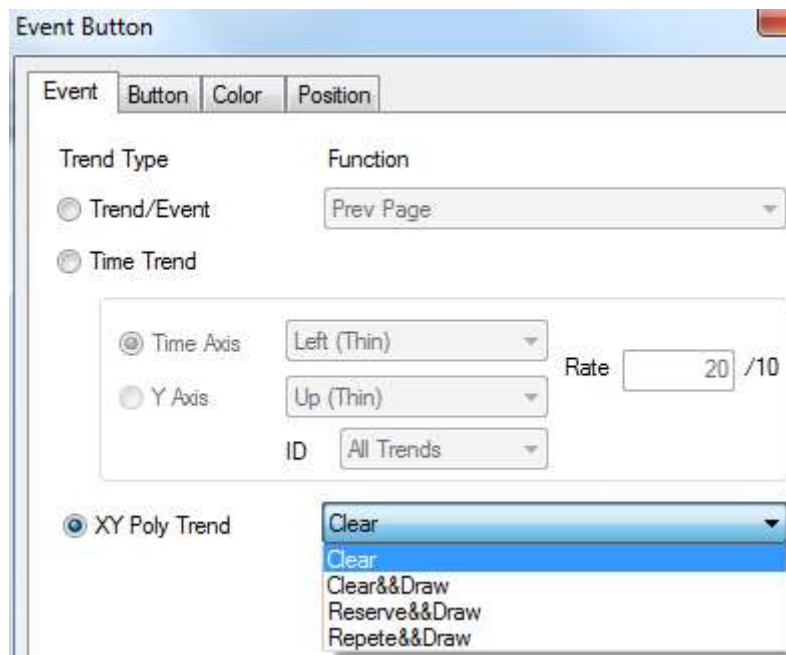


- Clear clear all the fold line
- Clear&draw clear the fold line, and draw new fold line
- Reserve&draw reserve the old fold line and draw the new fold line
- Repeat&draw draw new line and cover the old fold line once the data coordinate changed

■ Button

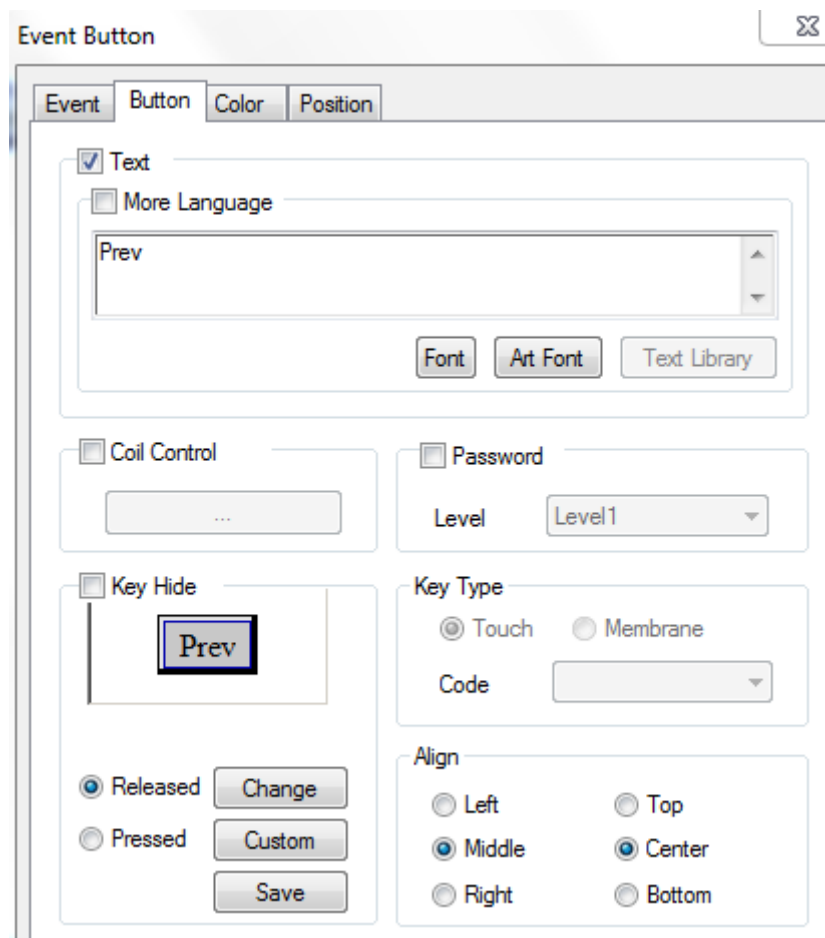


- More language the text showing on the button can be set to multi-language, click “text library” to add language
- Coil control when the coil is ON, the button is functional
- Password the button will be protected by password. Please choose the password level. Please refer to “MOP Soft special function component” manual
- Key type touch key (only)
- Key hide hide the button
- Released/pressed set the released and pressed button appearance
Change: change the appearance; custom: user defines the appearance; save: save the appearance
- Align choose the button alignment mode

■ Color

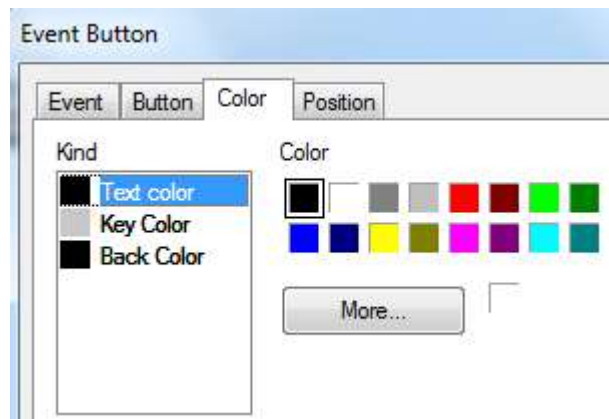


- Kind set the color type
- Color set the colors

■ Position

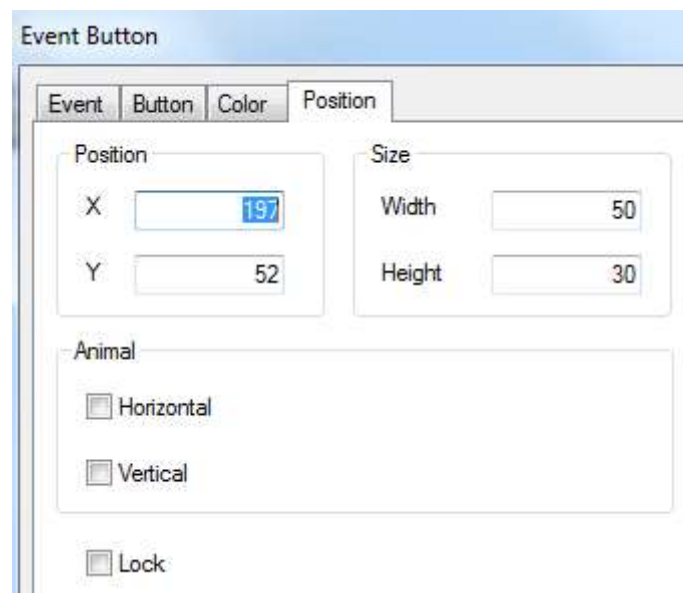

- Position coordinate
 - X position set the X coordinate of event button
 - Y position set the Y coordinate of event button
- Size
 - Width (W) set the width of event button
 - Height (H) set the height of event button
- Animal
 - the event button can move

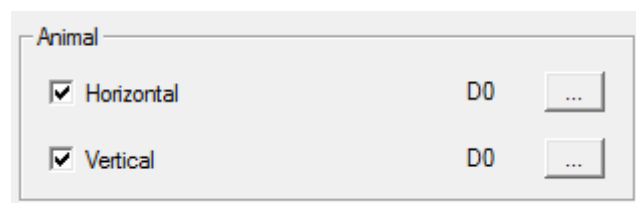

- Horizontal the event button can horizontal move according to register value,
X coordinate value =X position+current value of register

- Vertical the event button can vertical move according to register value,
 Y coordinate value =Y position+current value of register
- Lock lock event button in the screen, then it cannot move

4-4-18. XY trend map


User sets the reference curve in advance and compares it to the actual curve to analysis the stability of actual curve.

For example:


X-axis object is PSW300, Y-axis object is PSW301. This curve compares to the reference curve.

Reference curve: $Y = X$;


Actual curve: $Y = \frac{5}{2}X$;

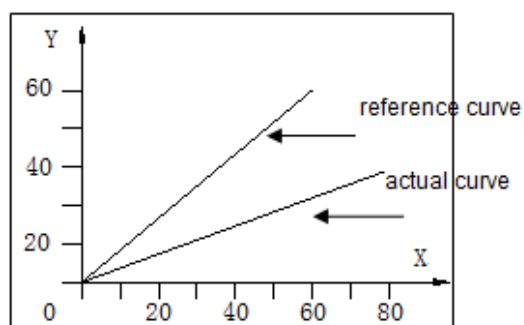


Display in fold line mode

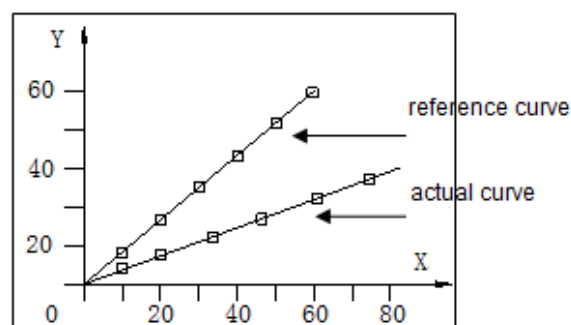


display in point mode

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

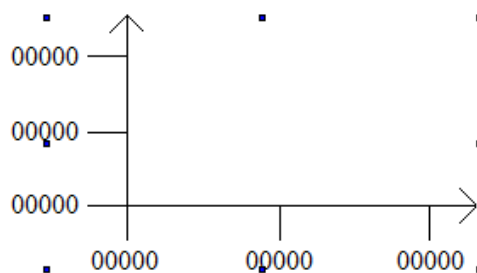


2. Double click the XY trend map, it will show the attribute window.

■ Coordinates

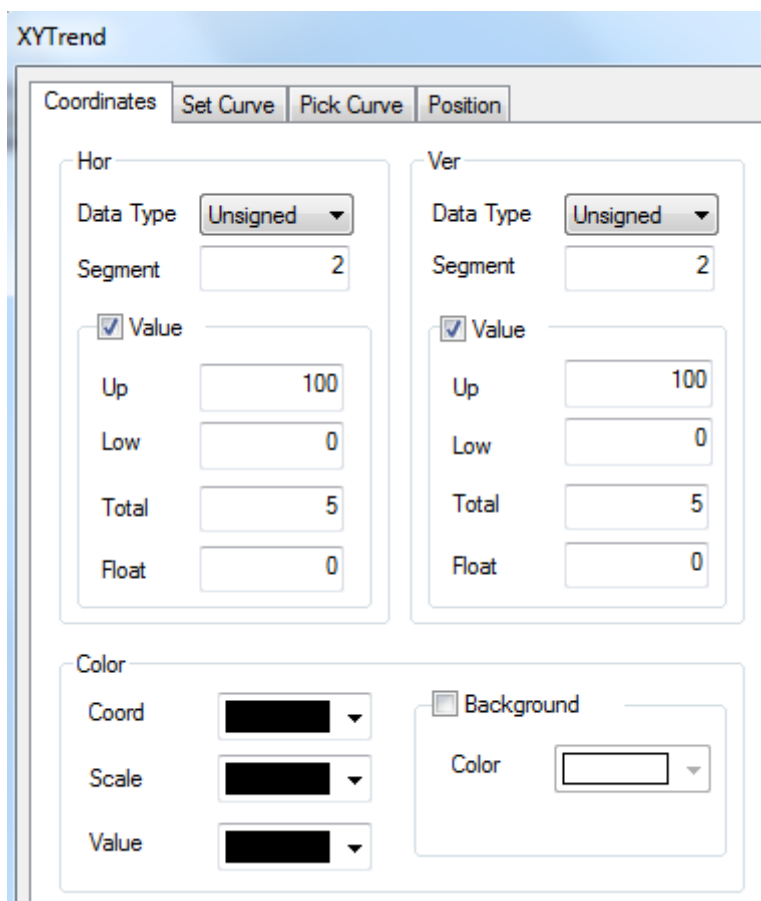


- Horizontal
 - Data type the data type include unsigned, decimal, hex, float number
 - Segment the X-axis scale
 - Value show the X-axis scale value
 - Up the max X-axis scale
 - Low the min X-axis scale
 - Total the total bit of data
 - Float the decimal bit of data
- Vertical please refer to horizontal settings
- Color
 - Coordinate the color of X-axis and Y-axis
 - Scale the color of scale
 - Value the color of the coordinate value
 - Background the color of background

■ Set curve

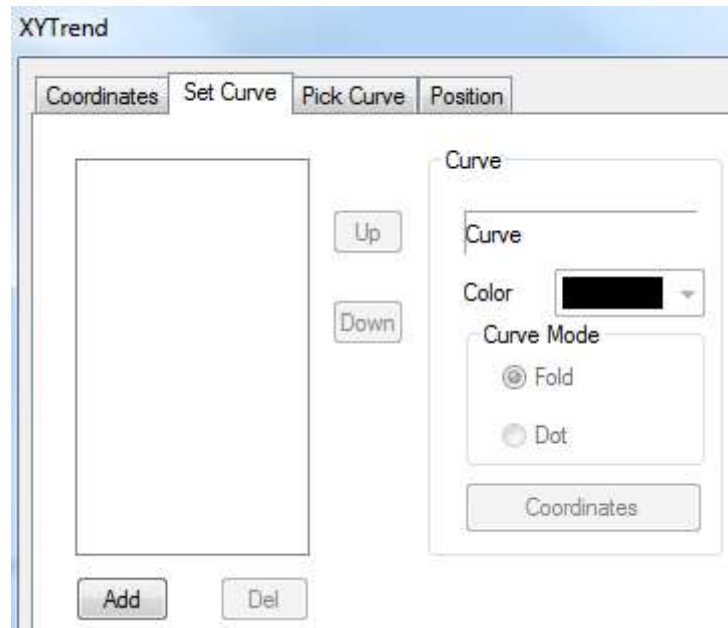


- Add/delete add or delete the curve
- Color the curve color
- Curve mode fold line or dot
- Coordinates add coordinate for curve

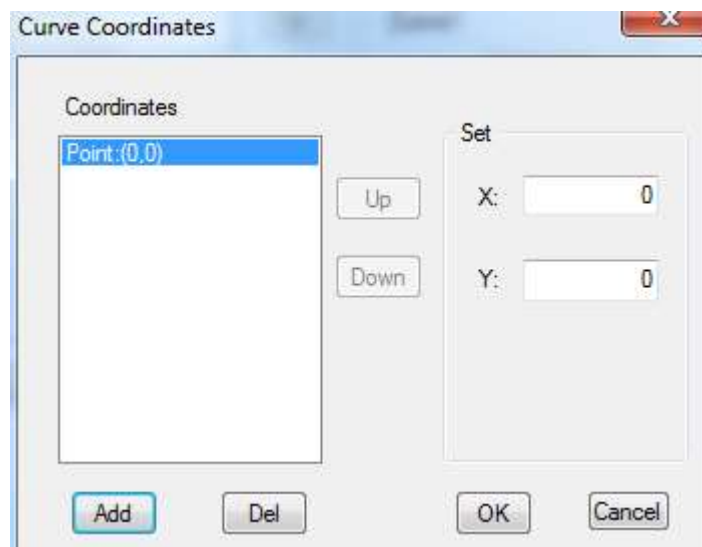


Choose the coordinate point and set the X, Y coordinates.

■ Pick curve

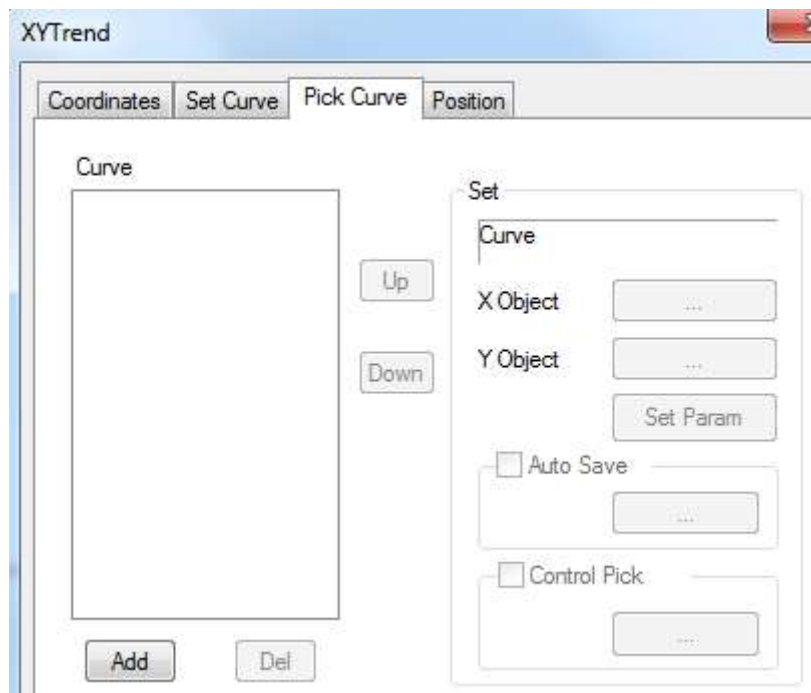


- Add/delete add or delete the curve
- X/Y object the register to store the XY axis coordinates
- Set parameter the parameters include update mode, color

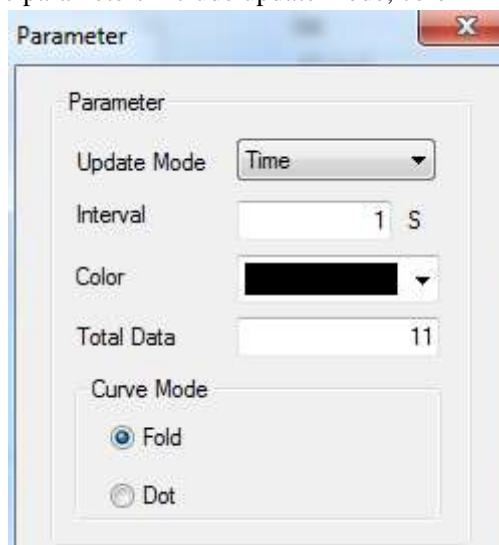


- Update mode the drawing curve mode
- Interval the updating period
- Color the curve color
- Total data the max coordinates
- Curve mode fold line and dot
- Auto save the HMI will auto-store the data in the system
- Control pick control the data collection process through coil

■ Position

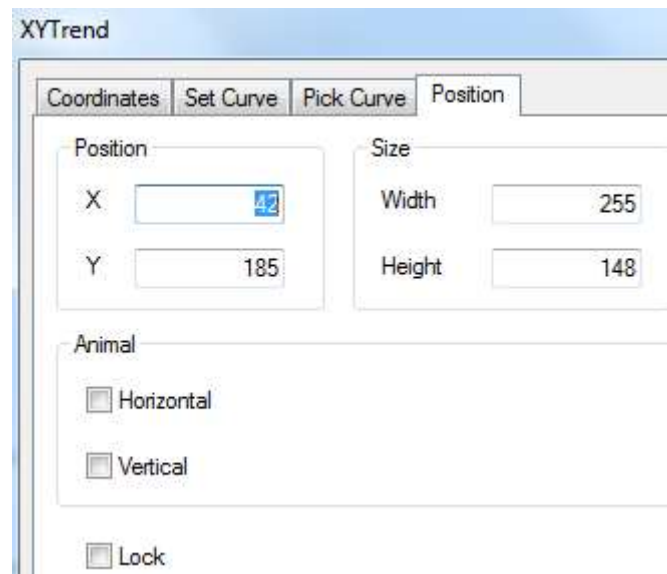

- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
- X position set the X coordinate of XY trend map
- Y position set the Y coordinate of XY trend map
- Size set the width and height of XY trend map
- Width (W) set the width of XY trend map
- Height (H) set the height of XY trend map
- Animal the XY trend map can move

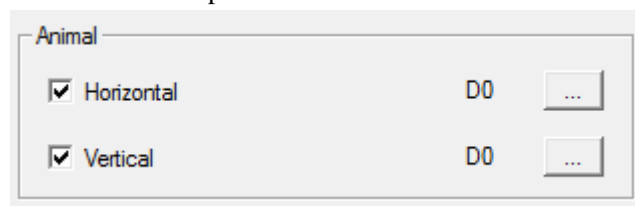


- Horizontal the XY trend map can horizontal move according to register value,
X coordinate value =X position+current value of register
- Vertical the XY trend map can vertical move according to register value,
Y coordinate value =Y position+current value of register
- Lock lock XY trend map in the screen, then it cannot move

4-4-19. XY fold map

The XY fold map can collect two groups of register and draw the curve in point, line mode.

For example: the two groups of register are PSW300~PSW309, PSW310~PSW319.

PSW256 is drawing mode. PSW256=1 clear and re-draw; PSW256=2 save and re-draw; PSW256=3 clear; PSW256=4 repeat re-draw.

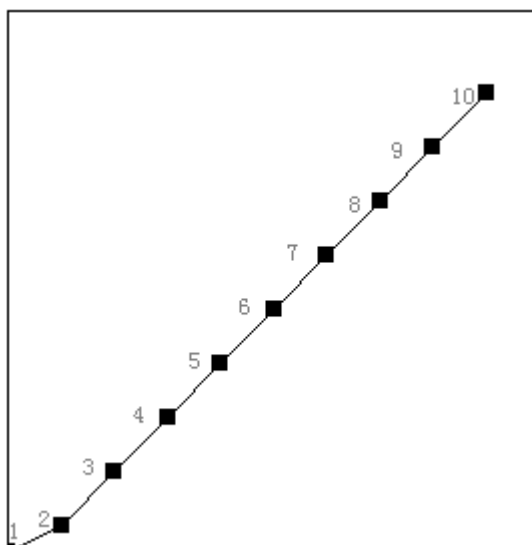

PSW256 drawing mode:




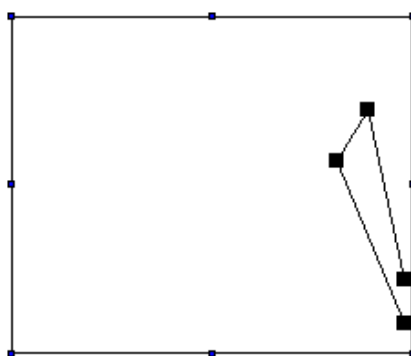
X-axis

= PSW300	0
PSW301	10
PSW302	20
PSW303	30
PSW304	40
PSW305	50
PSW306	60
PSW307	70
PSW308	80
PSW309	90

Y-axis


= PSW310	0
PSW311	5
PSW312	15
PSW313	25
PSW314	35
PSW315	45
PSW316	55
PSW317	65
PSW318	75
PSW319	85

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.




2. Double click the XY fold map, it will show the attribute window.


■ Graph

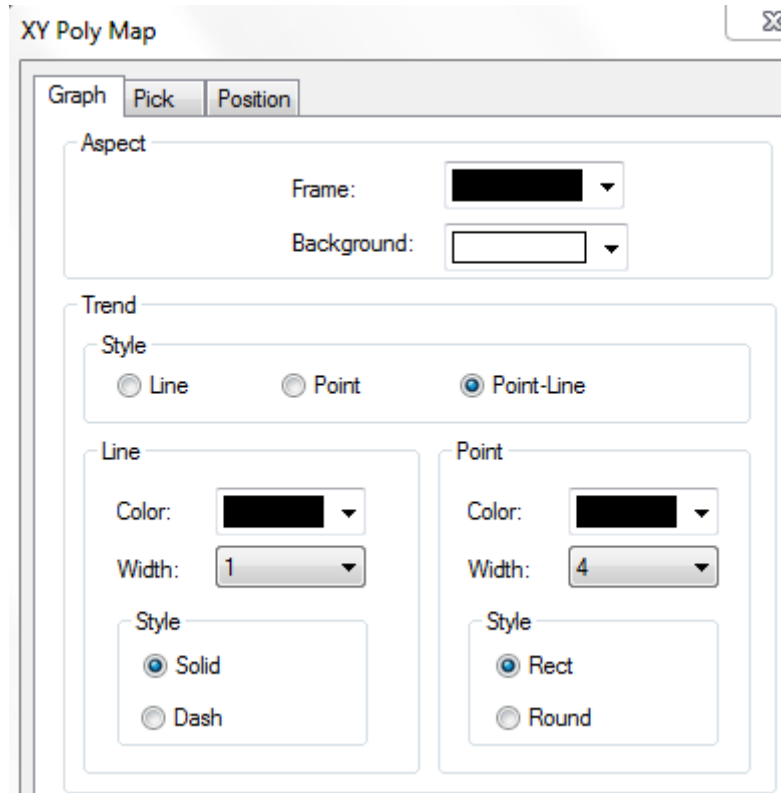

- Aspect set the frame and background color of curve
- Trend
 - Style the curve display mode: point, line, point-line
 - Line the color/width/curve style
 - Style solid line and dash line
 - Point the color/width/curve style
 - Style rectangle point, round point
- Pick

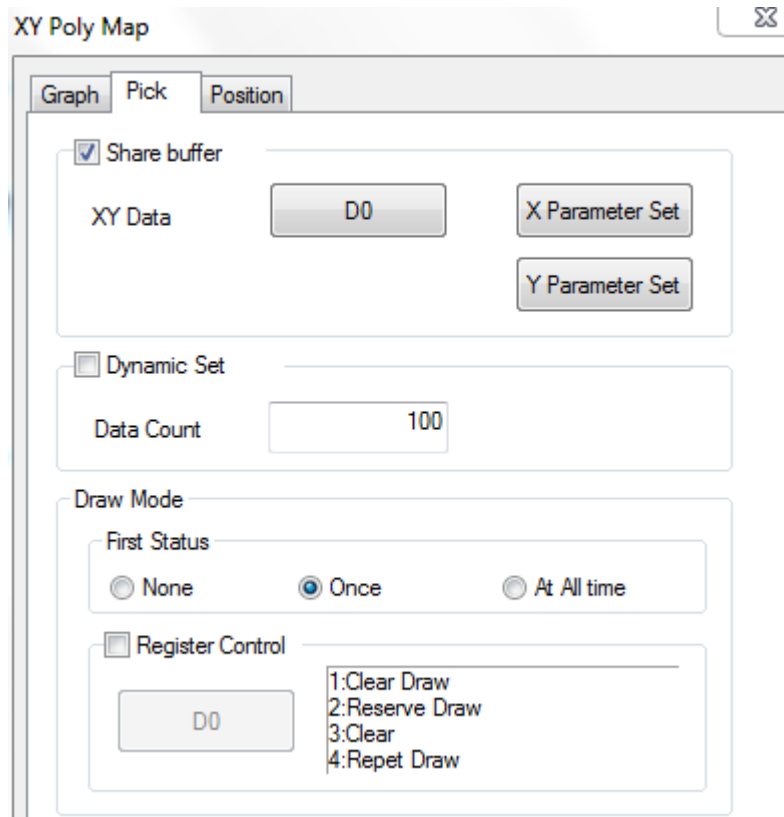


- Share buffer the X/Y axis data are from the same register
- (1) If share buffer is effective, the (X, Y) coordinates are the value starting from PSW300. First coordinate is (PSW300, PSW300), the second is (PSW301, PSW301)....
- (2) If share buffer is not effective, the coordinates of X and Y are from different register groups.

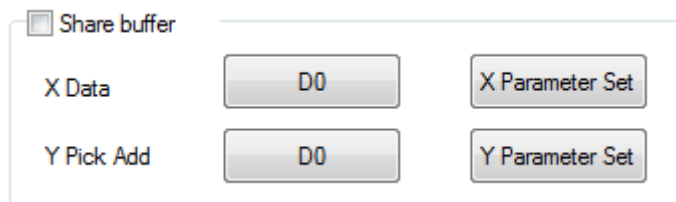


- X data set the X-axis data type, min and max value
- Y pick add set the Y-axis data type, min and max value
- Dynamic set this function is selected: set the coordinates quantity through register
This function is not selected: set the coordinates quantity directly
- Draw mode
 - First status set the drawing mode at the beginning. The modes can be never draw, draw once, and repeat drawing
 - Register control set the drawing mode through the register
 - Register value=1 clear the drawing and draw the new one
 - Register value=2 reserve the old one and continue drawing behind the old fold line
 - Register value=3 clear the current fold line
 - Register value=4 repeat drawing

The drawing mode can be set through event button, please refer to chapter 4-4-17.

■ Position

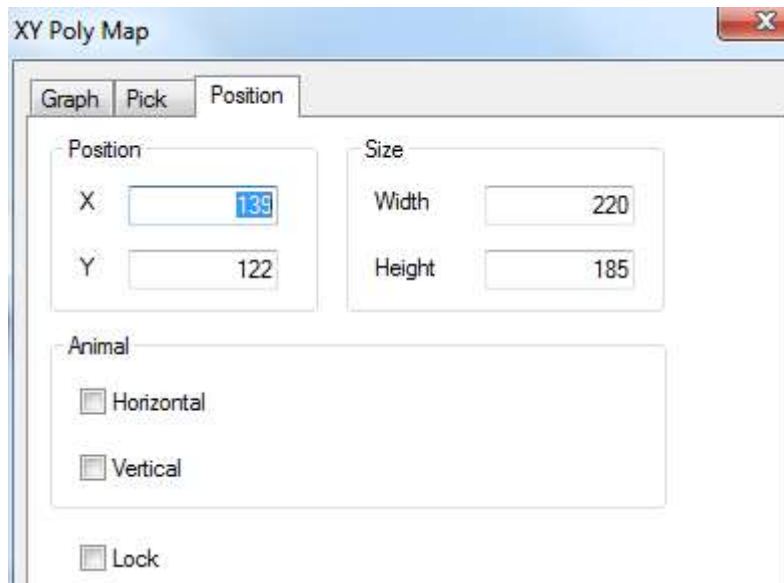


- Position coordinate
 - X position set the X coordinate of XY fold map
 - Y position set the Y coordinate of XY fold map
- Size
 - Width (W) set the width of XY fold map
 - Height (H) set the height of XY fold map
- Animal
 - the XY fold map can move

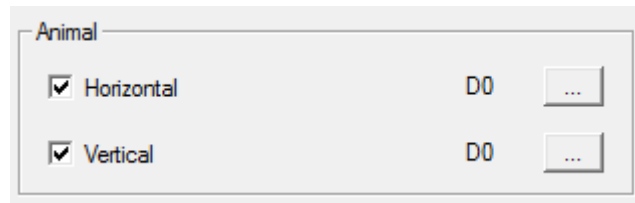


- Horizontal the XY fold map can horizontal move according to register value,
X coordinate value = X position + current value of register
- Vertical the XY fold map can vertical move according to register value,
Y coordinate value = Y position + current value of register
- Lock lock XY fold map in the screen, then it cannot move


4-4-20. Time trend map


The curve collects the data according to the time. For example, the collection period of the following curve is 1s. The storage mode is continuous storing until full.

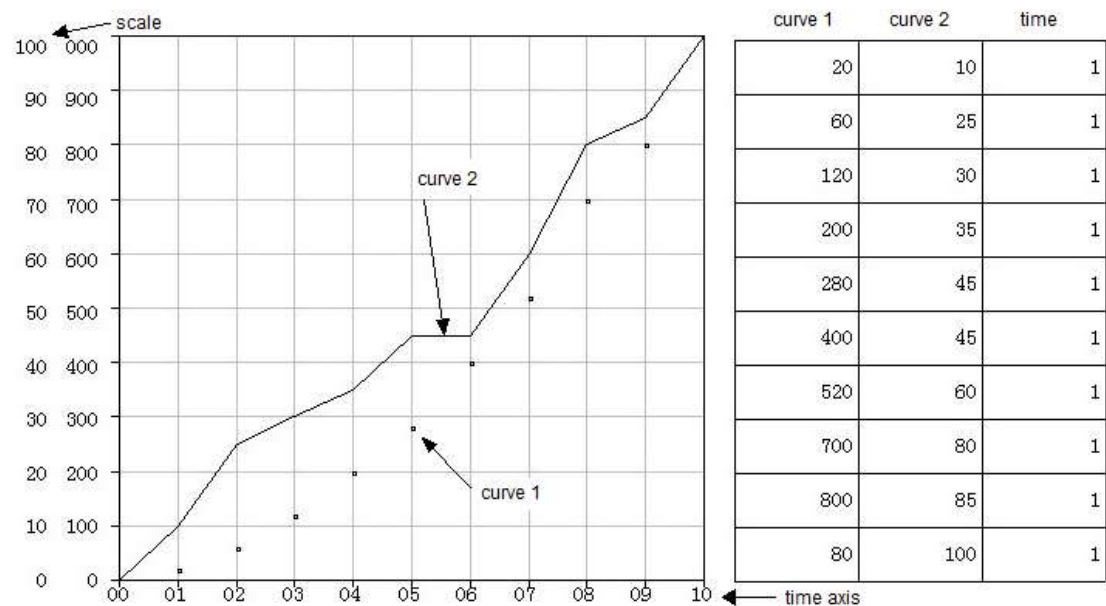

 The collection period of following curve is 3s; the storage mode is cyclic covering.

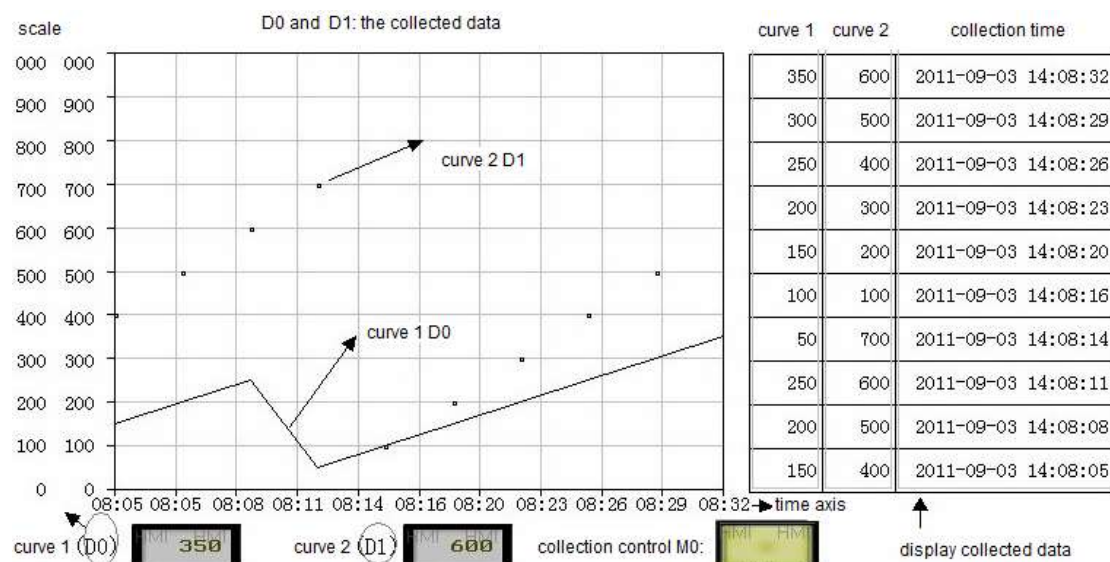

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.
 2. Double click the time trend map, it will show the attribute window.
- Common

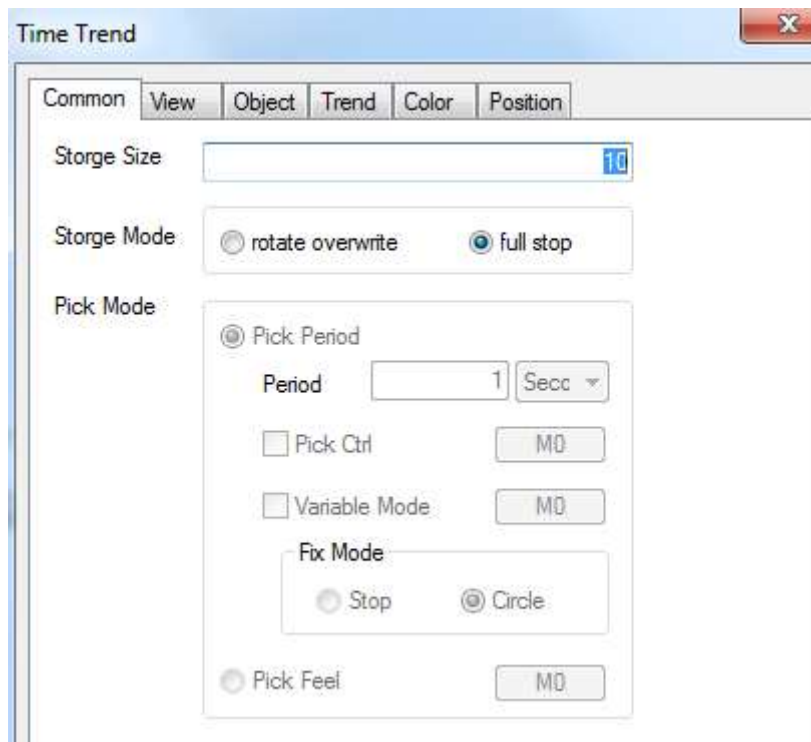

- Storage size the data quantity. For example: the storage size 10 means 10 groups of data. Each group of data occupies some registers.
 Rotate overwrite registers=curve quantity n+time 6(year/month/day/hour/minute/second)
 Full stop registers=curve quantity n+ time (according to time axis)
- Storage mode the mode to store the data
 Rotate overwrite store from the beginning address when the data is full and cover the original data. If the fix mode is stop or the variable mode coil is OFF, it will stop collecting when the data is full.
 Full stop stop storing when the data is full
- Pick mode the data collection mode, this mode is effective when the storage mode is rotate overwrite
 Pick period the data collection period, the unit is 1s; if the pick control is effective, it starts to collect data when the coil is ON
 Variable mode and fix mode
 If variable mode coil is ON or fix mode is circle, the storage mode will be rotate overwrite
 If variable mode coil is OFF or fix mode is stop, the storage mode will be full stop



Variable mode and fix mode cannot be selected at the same time.

- Pick feel when the rising edge of coil is coming, it will collect the data once

■ View

Time Trend

Common View Object Trend Color Position

☐ Grid Style Time Grid Y Grid

Time Info ☐ Year ☐ Month ☐ Day
☐ Hour ☐ Minute ☒ Second

Init Time

Time Section


Scale Section

Y Section

Scale Section

- Grid style display the grid for time axis and Y axis
- Time info the time type displaying on the time axis
- Init time the range of time axis, the min unit is second
- Time section divide the time axis in sections
- Scale section display the scale value for each time axis section
- Y section divide the Y axis in sections
- Scale section display the scale value for each Y axis section

Y axis sections

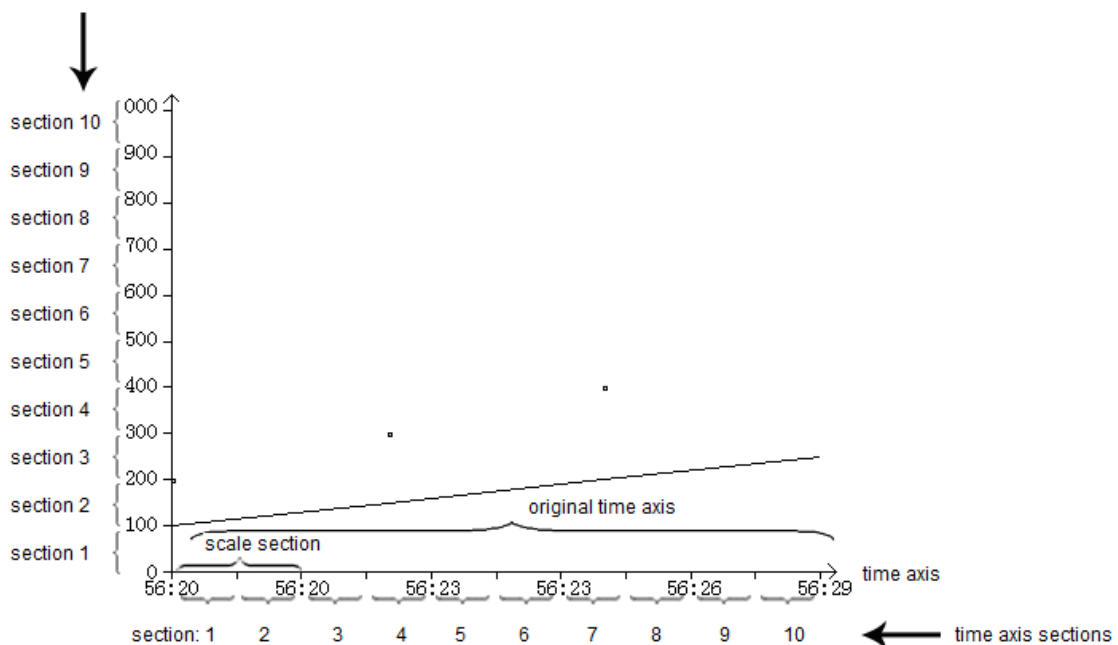

■ Object

The object registers are used to store the collection data. The storage data type depends on the storage mode.

(1) Storage mode is rotate overwrite: store the collection data and time

Time Trend

Common View **Object** Trend Color Position

Station

Device Local registers

VirStaNO 0 Station 0

Object

ObjType PSW 256

☐ Auto locate

- Object type the register type and first address
- Auto locate auto-allocate the register address according to the object type

(2) Storage mode is full stop: set the collection data register address

Time Trend

Common View **Object** Trend Color Position

Station

Device Local registers

VirStaNO 0 Station 0

Object

ObjType PSW 256


☐ Auto locate

- Object type the register type and address




The auto locate is unavailable in full stop mode.


■ Trend

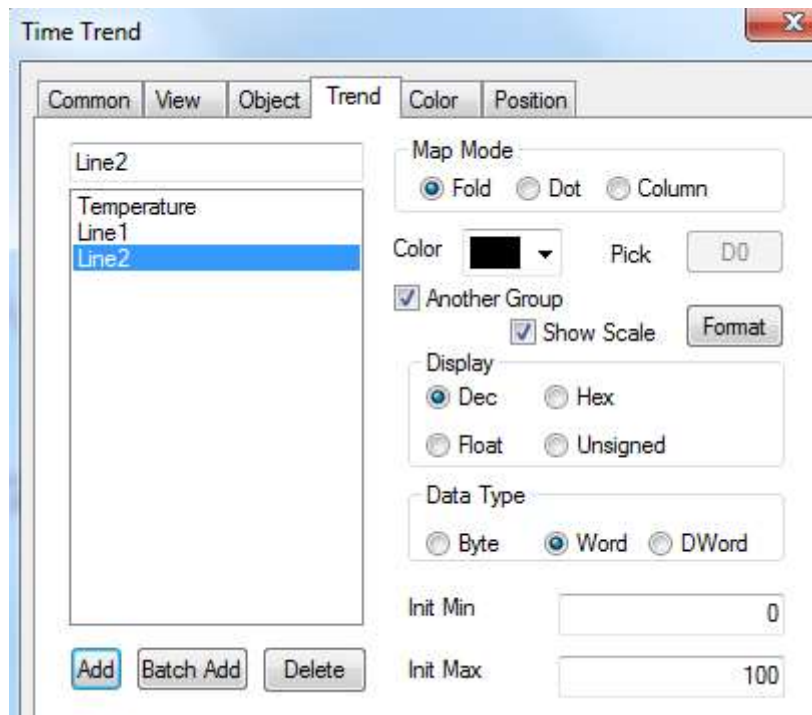

- Add/delete add or delete the curve
- Batch add add the curve in batch
- Map mode
 - Fold/dot/column display the data in the mode of fold line, dot, or column curve
- Color the color of curve
- Pick the collection data register

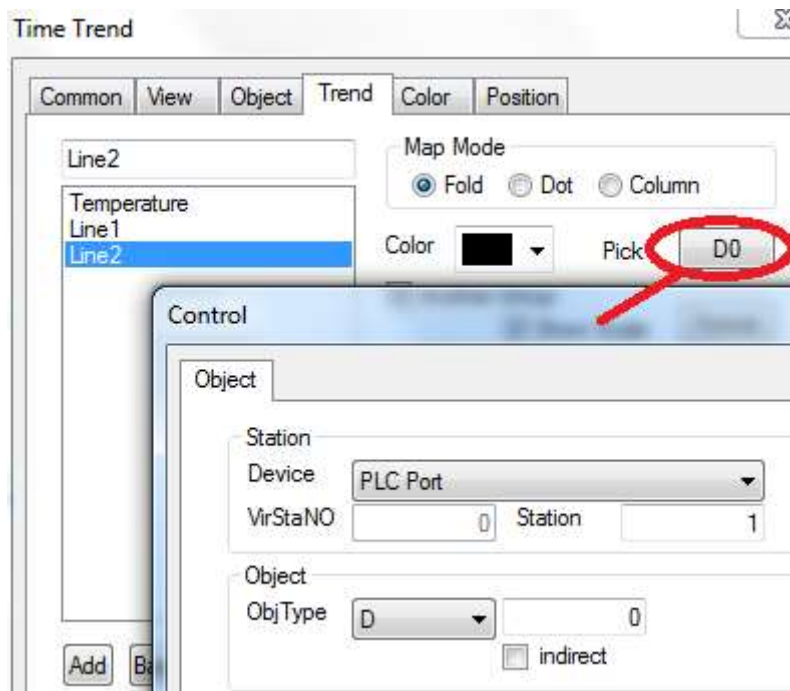

Indirect set the address offset

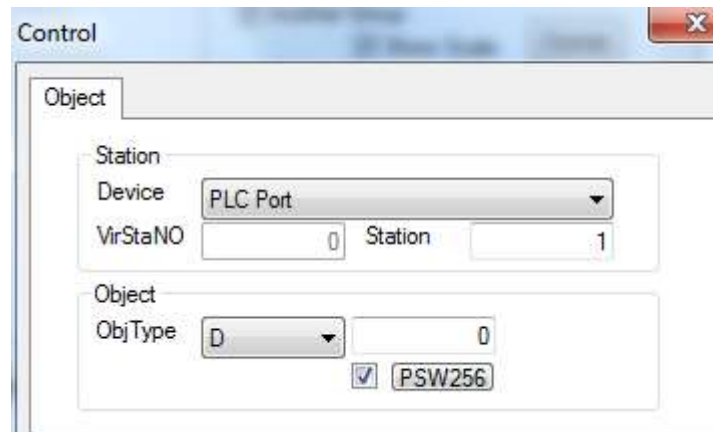


The object address changed with PSW256. The address = D[0+PSW256 value]



We suggest using the internal register of HMI for indirect address (PSW, PFW), otherwise the communication speed will be slow.

- Another group display the scale data of Y axis

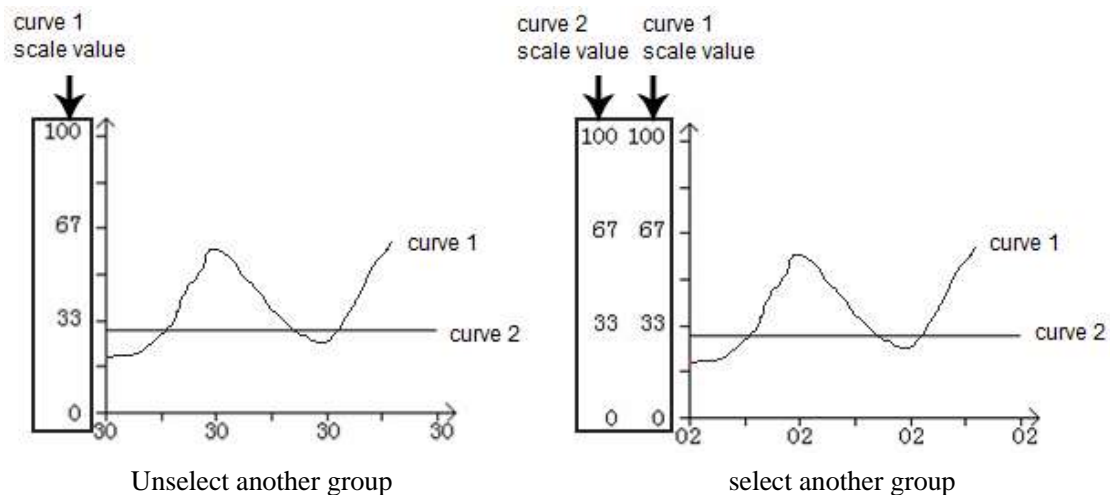


Note: (1) The first curve cannot set another group

(2) If “another group” is not selected, the initial max and min value will refer to the last curve

- Show scale set the scale value format
- Data type the data type: byte, word, Dword
- Initial min the min value of curve
- Initial max the max value of curve

■ Color

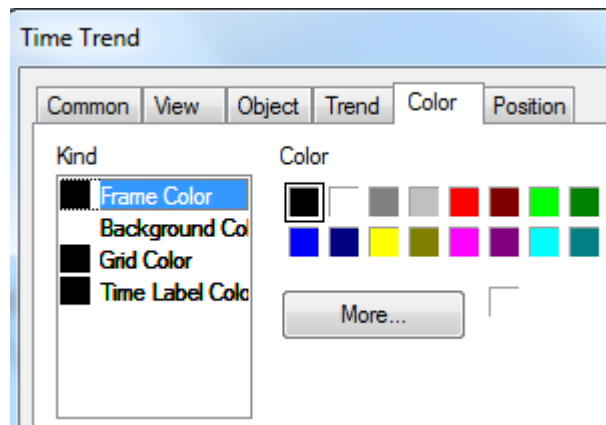


- Kind the color type
- Color the color of frame, background, grid or time label




The color of background and grid is effective if “display grid” is selected.

■ Position

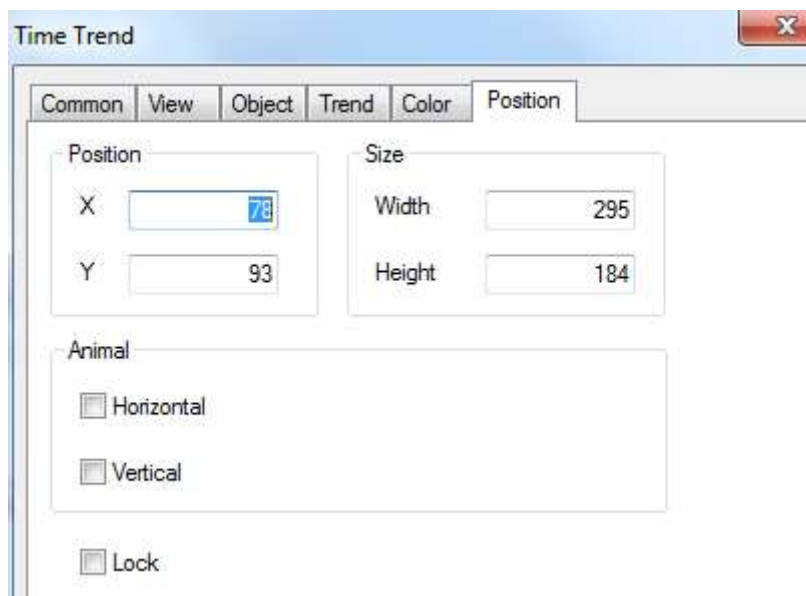

- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
 - X position set the X coordinate of Time trend map
 - Y position set the Y coordinate of Time trend map
- Size set the width and height of Time trend map
 - Width (W) set the width of Time trend map
 - Height (H) set the height of Time trend map
- Animal the Time trend map can move

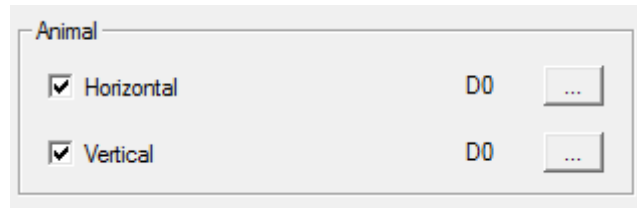


Horizontal the Time trend map can horizontal move according to register value,
 $X \text{ coordinate value} = X \text{ position} + \text{current value of register}$


Vertical the Time trend map can vertical move according to register value,
 $Y \text{ coordinate value} = Y \text{ position} + \text{current value of register}$

➤ Lock lock Time trend map in the screen, then it cannot move

4-4-21. Alarm list


The alarm list will show the alarm information when there is trigger signal of controller.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

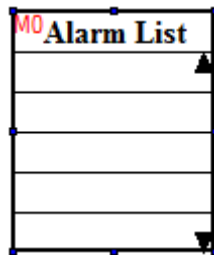


2. Double click the alarm list, it will show the attribute window.

■ Common

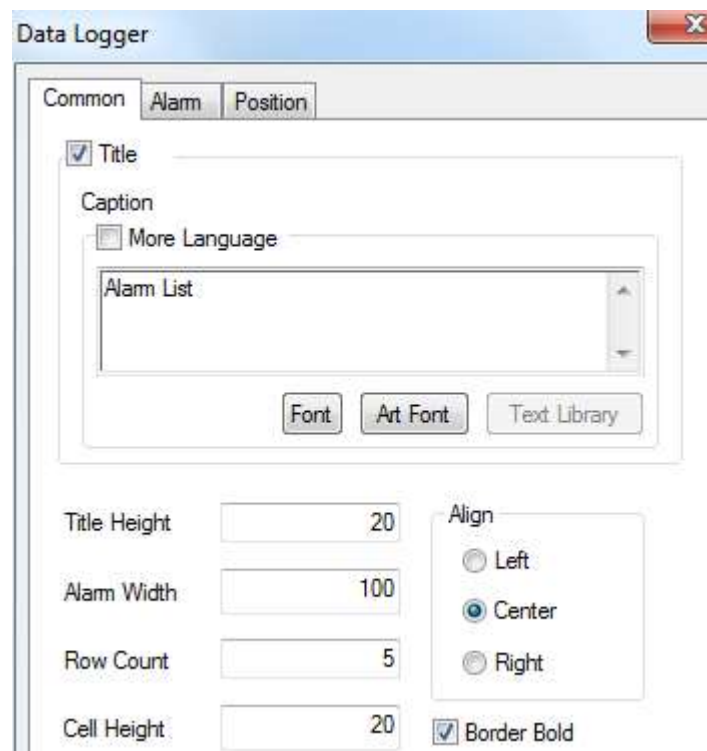

- Title display the alarm title
- More language the title can be set to 8 different languages
- Title height the size of title
- Alarm width the row width of alarm information
- Row count the row quantity of alarm information
- Cell height the row height of alarm information
- Align the alignment mode of alarm information
- Border bold the frame of list is bold


■ Alarm

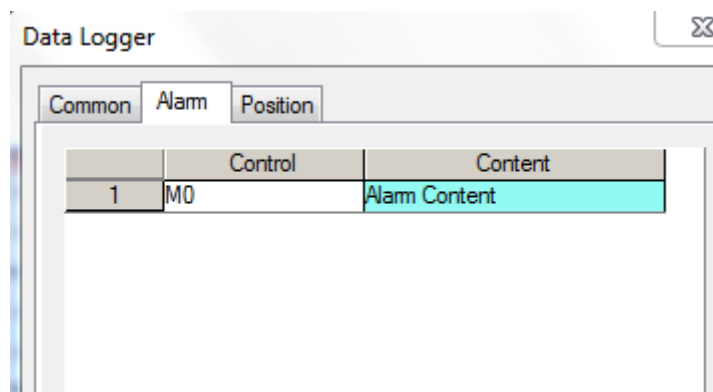

- Control set the coil to control the alarm information
- Content the contents of alarm information


(1) Add, delete alarm information

Right click the information number to add or delete information.

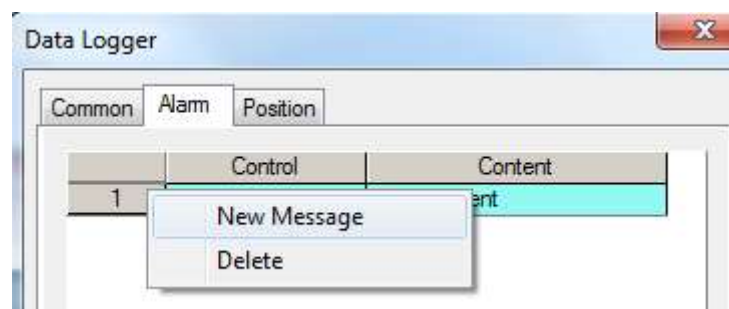


(2) Modify the control coil

Double click the coil to modify the information

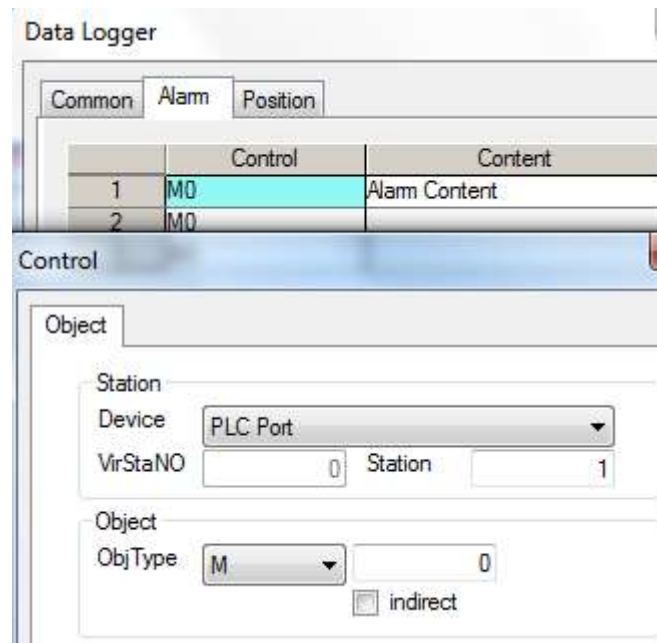


(3) Modify the alarm information

Double click the alarm content to modify the information

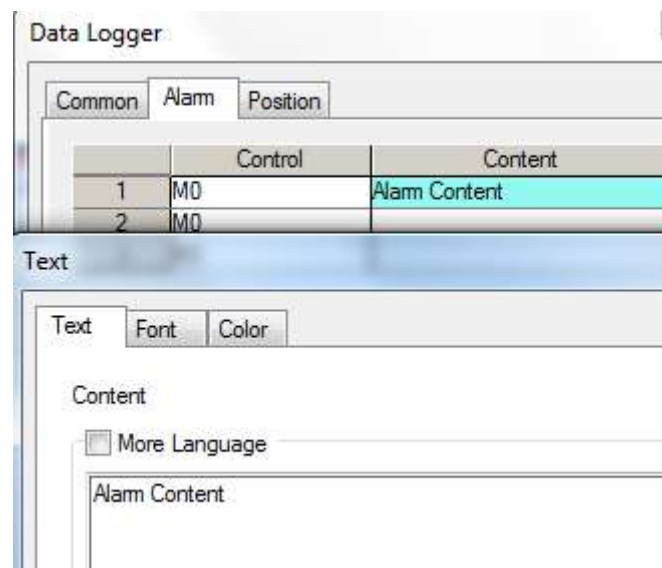


(4) Add alarm contents

Right click the alarm contents to add new text, variational text and data.

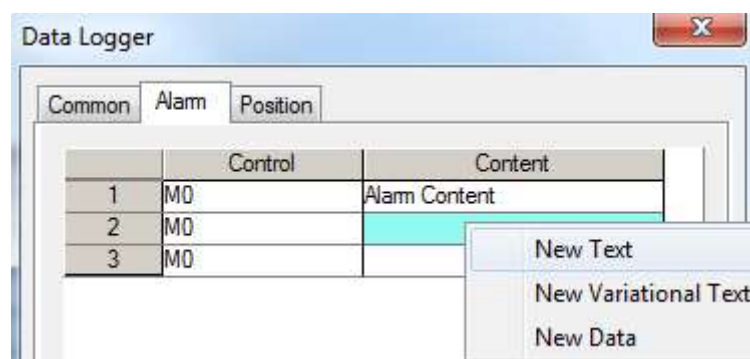


① Text

Double click the text to modify the contents, font and color.

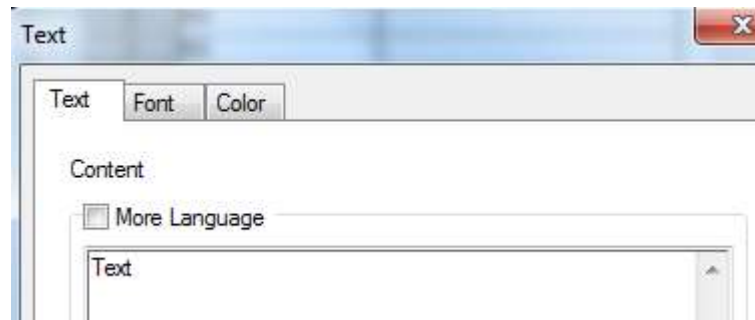


② Variable text

It displays the text according to the register value.

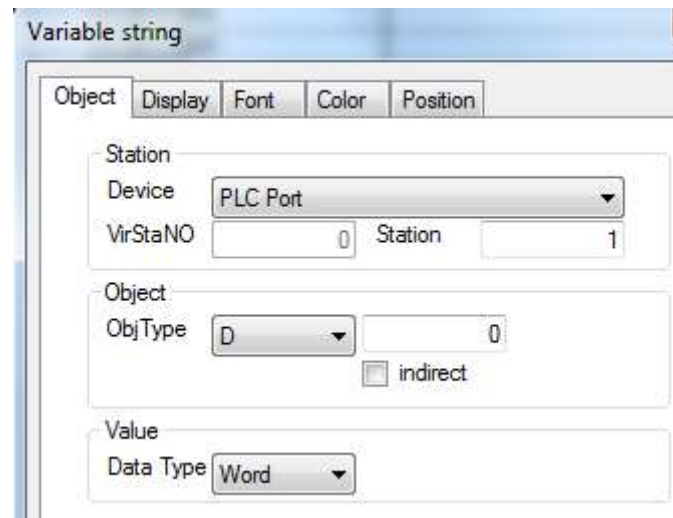


③ Data

It will display the register value when the alarm occurs.

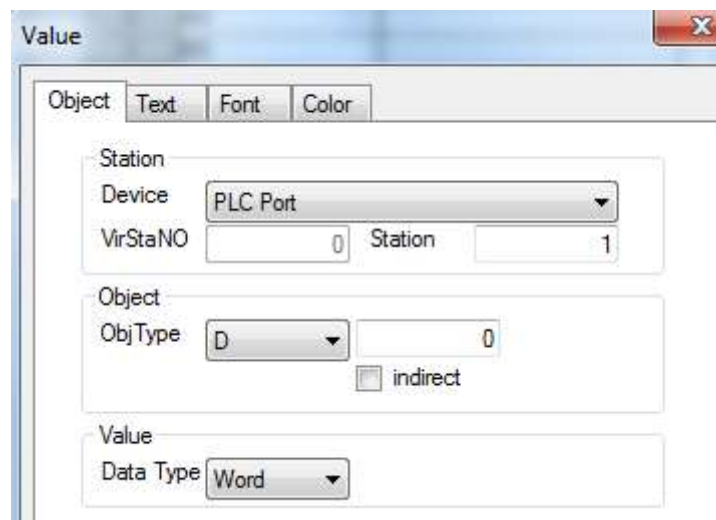


(5) Copy, delete the contents

Right click the alarm contents to copy and delete the contents.

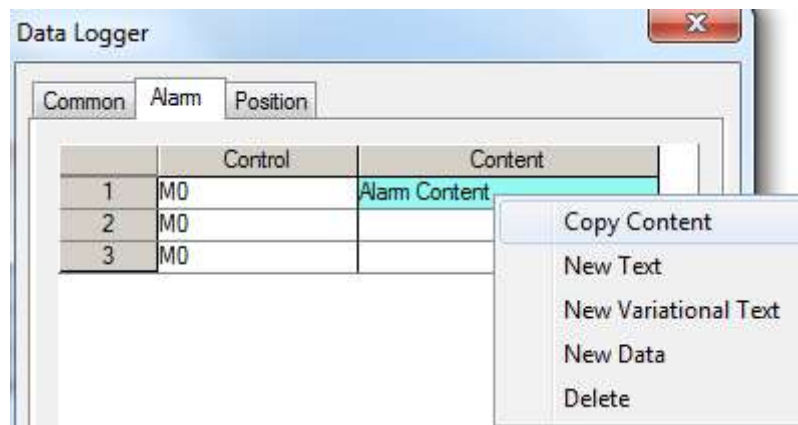

Each piece of contents can add different kinds of information including text, variable text, and data.


■ Position

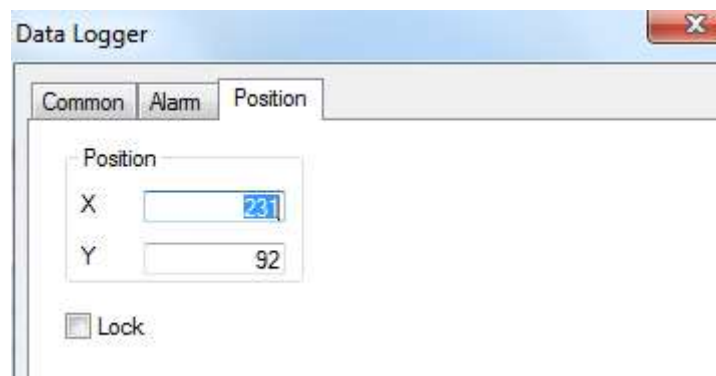


- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
- X position set the X coordinate of alarm list
- Y position set the Y coordinate of alarm list
- Lock the alarm list cannot move

4-4-22. Display real time event


This function is to real-time show the information.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

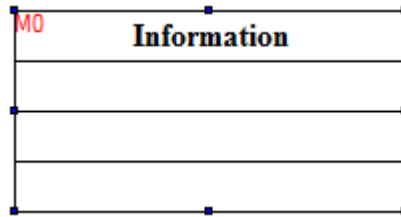


2. Double click the real time event, it will show the attribute window.

■ Aspect

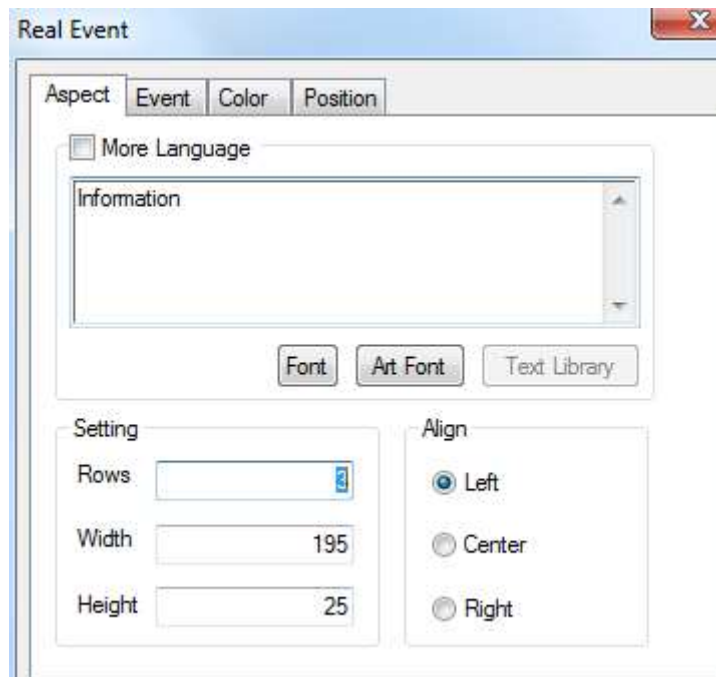

- More language the title can be set to 8 languages
- Rows the row number
- Width the width of information
- Height the height of information
- Align the alignment mode of information

■ Event

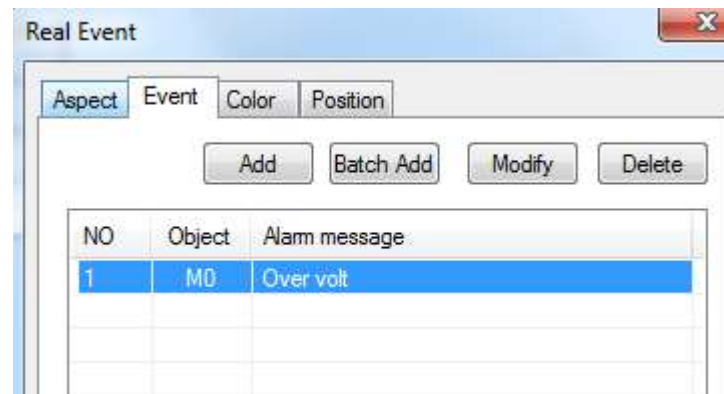

- Add add information
- Batch add batch add information

- **Modify** modify the information

Note: double click the information to modify the contents

- **Delete** delete the information

(1) Coil

The screenshot shows the 'Event Source' dialog box with the 'Coil' tab selected. Under the 'Station' section, 'Device' is set to 'PLC Port', 'VirStaNO' is '0', and 'Station' is '1'. Under the 'Object' section, 'ObjType' is 'M', followed by '0'. There is an unchecked checkbox labeled 'indirect'.

- **Station**
Device the communication port
Station the device station
- **Object** the coil address
- **Indirect** the offset of address


This screenshot is similar to the previous one, but the 'indirect' checkbox is now checked and labeled 'PSW256'.

Object address=M[0+PSW256]




We suggest using internal register of HMI (PSW, PFW) for indirect address otherwise the communication speed will be slow.

(2) Information

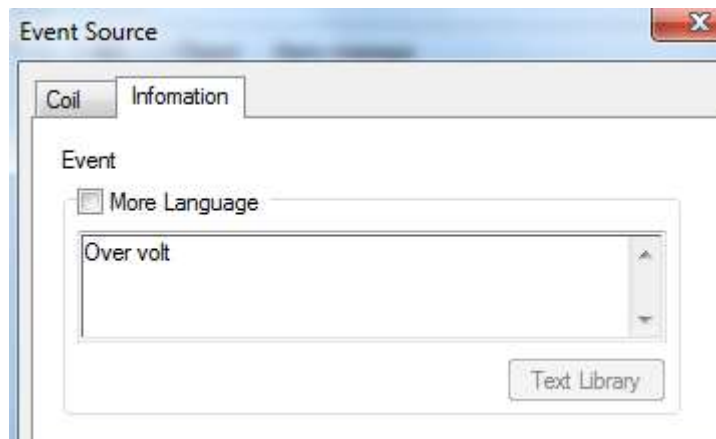

- Event add or modify the contents displayed in the real time event

■ Color

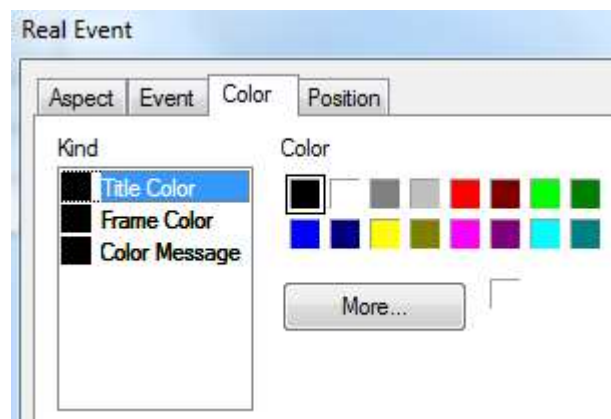

- Kind the color kind
- Color the color of title, frame, message


■ Position



- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y
- X position set the X coordinate of real-time event
- Y position set the Y coordinate of real-time event
- Lock the real-time event cannot move

4-4-23. Display history event


History event will real-time show the event information and store the state and data.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. Drag the boundary to change the size.

PFW256 PFW256 PFW256 M0	Spring Time	Info	Affirm Time

2. Double click the history event, it will show the attribute window.

■ Aspect

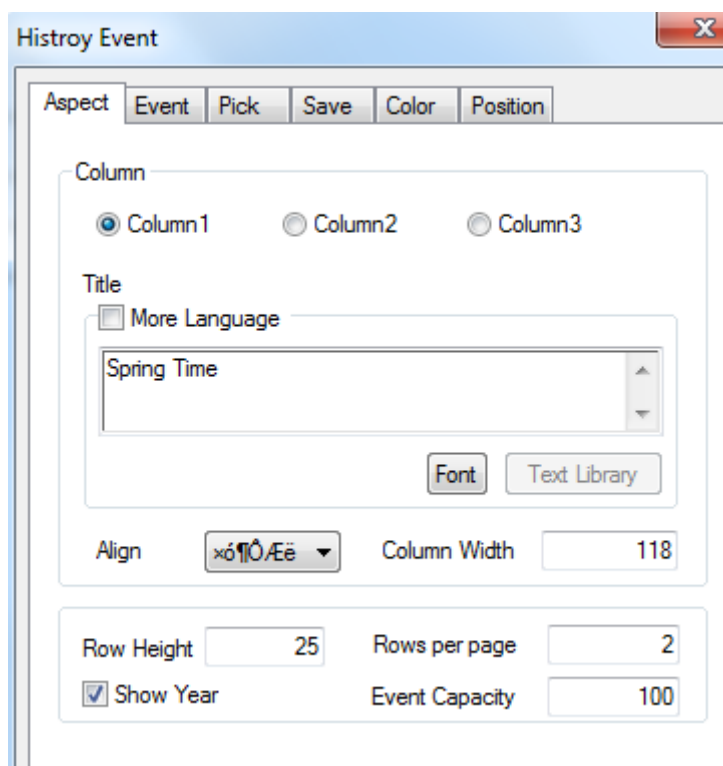

- Column set each column title, alignment mode and column width
- Title set the title name
- More language the title can be set to 8 kinds of language
- Align the alignment mode of title
- Column width change the column width
- Row height change the row height
- Rows per page set the row numbers on each page
- Show year display the year behind information
- Event capacity the total event numbers

The event will occupy register numbers = [event capacity n+start end code 1]*

Every event occupied register numbers 13 + start end pointer 4

Which is (n+1)*13+4

Each event occupied register numbers =trigger time 6+event information 1+confirm time 6=13

■ Event

NO	Object	Alarm message	Trigger
1	M0	Over volt	Up Edge

☐ Support Unicode

- Add/batch add/modify/ delete add/batch add/modify or delete the event information
- Double click the information in the event list to modify the objects:


Event Source

Coil Event

Station
Device: PLC Port
VirStaNO: 0 Station: 1

Object
ObjType: M 0
☐ indirect


- Station set the communication port device and station no.
- Object the coil address to trigger the history event

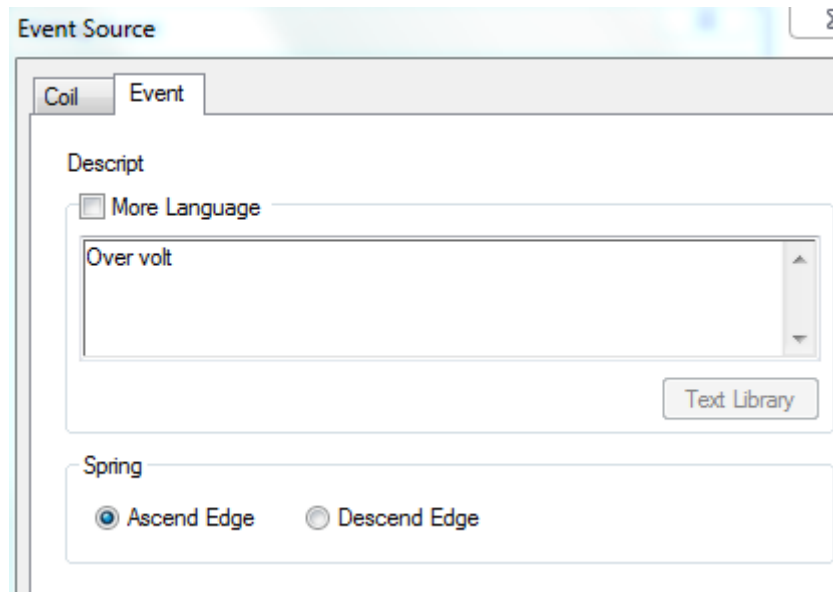


- Descript the contents of history event
- Spring the event will be activated by rising edge or falling edge of coil signal

■ Pick

The history event will collect data when this item is chosen. When the coil is ON, the data will be collected.

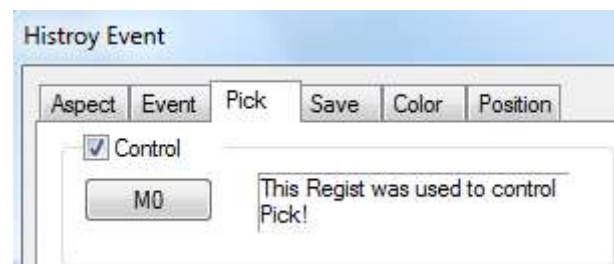


■ Save

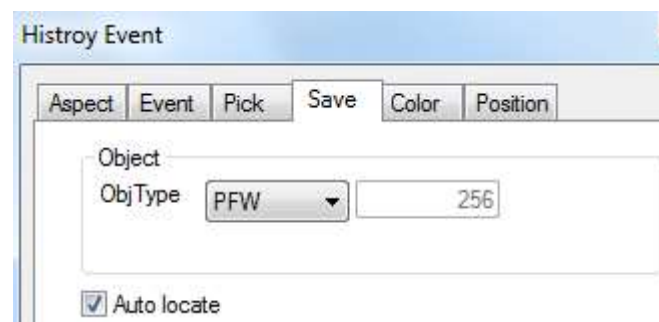

- Object the object address to store the history event data
- Auto locate the system will auto-assign the registers to store the data

■ Color

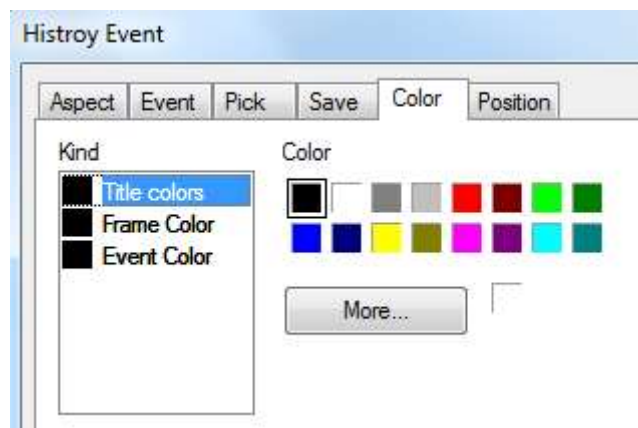

- Kind choose the kind of color
- Color set the color

■ Position




- Position coordinate set the upper left point to be the coordinate point (0, 0) and set the X and Y coordinate
- X position set the X coordinate of history event
- Y position set the Y coordinate of history event
- Lock the history event cannot move

4-4-24. Common grid

Common grid can display and input data in the table. It can be used together with column map, XY fold map for data input function. For display function, it is used together with sample save and sample export.

Note: please use event button to make the operations including prev item, next item, prev page, next page. Please refer to chapter 4-4-17.


1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel.

NO	Name	year	month	day	hour	minute	second	quantity	amount
000	A	000	000	000	000	000	000	000	000
000	B	000	000	000	000	000	000	000	000
000	C	000	000	000	000	000	000	000	000
000	D	000	000	000	000	000	000	000	000
000	E	000	000	000	000	000	000	000	000

Note: don't change the table size by dragging the boundary of table. Otherwise the table cannot be touched correctly. Please modify the column width and row height in the grid control property.


2. Double click the common grid, it will show the property window.

■ Object

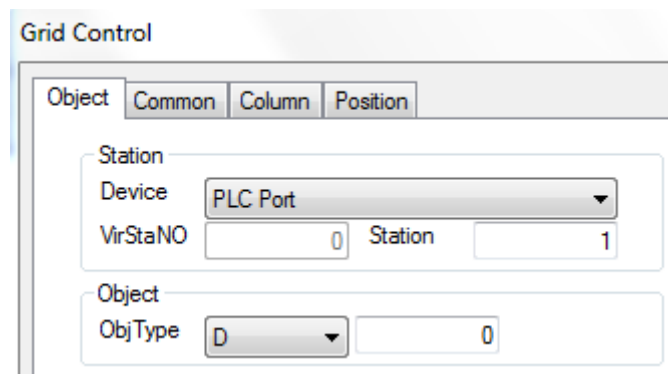

- Station communication port device and station no.
- Object the first address of the common grid

The address arrangement of grid object

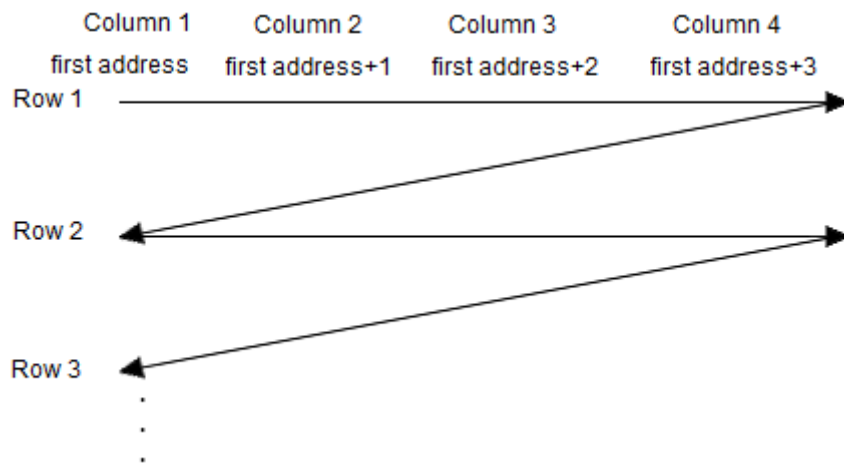

The address order in the table is from left to right, up to down

■ Common

Grid Control

Object Common Column Position

Total Rows 3 Title Height 20

Visible lines 3 Cell Height 20

☒ Title ☒ Bold border Title Font Cell Font

☒ Auto-increment column ☒ Static column

Title

☐ More Language

NO

Text Library

Width 30

Title

☐ More Language

Name

Text Library

Width 80

Static column name

☐ More Language


Worker1

Text Library

Worker1
worker2
worker3


- Total rows the total rows of table
- Visible lines visible lines \leq total rows
- Title height the height of title row
- Cell height the height of each row
- Title display the title row
- Bold border the frame of grid is bold line
- Title font the font of title words
- Cell font the font of each word in the row
- Auto-increment column display the number of column
- Title(more language) set the number title, support 8 kinds of language
- Width the width of number column
- Static column the name of column
- Title(more language) set the title of static column, support 8 kinds of language
- Width the width of static column
- Static column name set the name column contents

■ Column

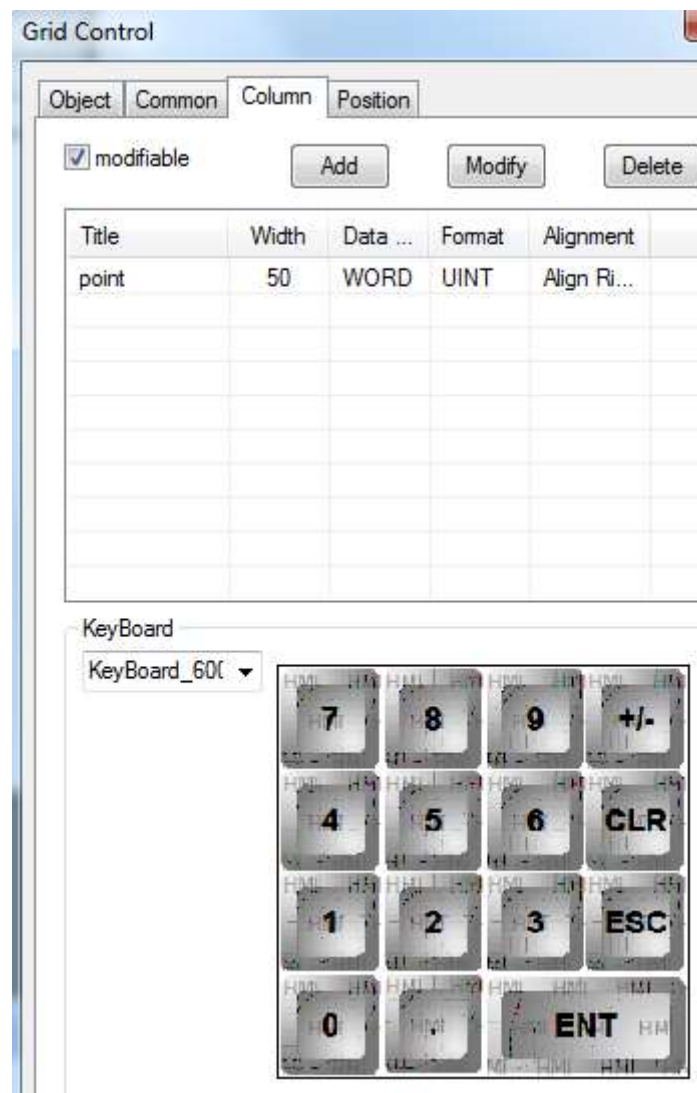

- Modifiable the data in the table can be changed
- Add add a new column
- Modify modify the data in the grid
- Delete delete one column
- Keyboard choose the keyboard type which is used to change the data


Double click the data in the list to modify the details:

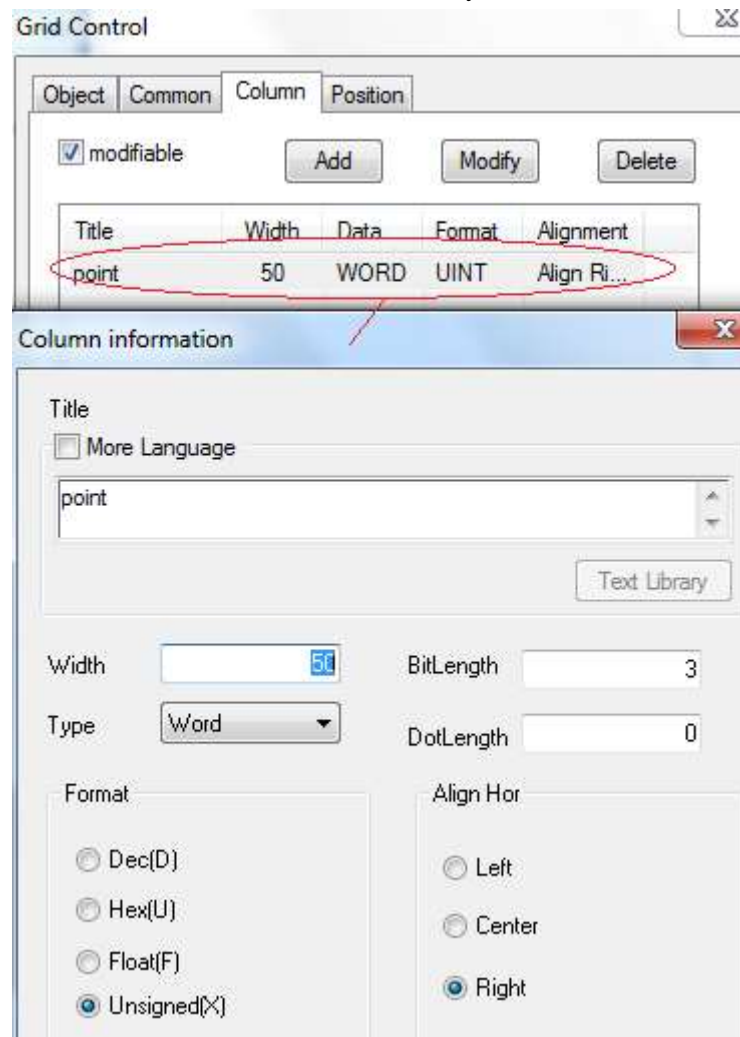

- Title the title of the column
- Width the width of column
- Bitlength the data bit length before decimal point
- Dotlength the data bit length after decimal point
- Type the data type (word, Dword)
- Format the data format

Note: the time is in hex format

■ Position

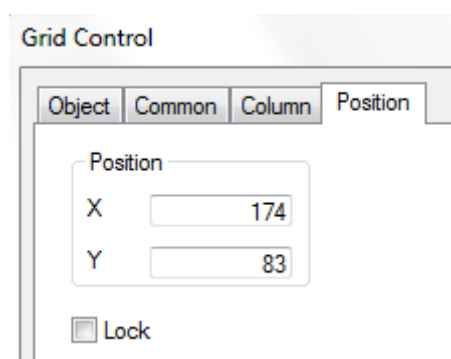

- Position set the common grid position and size
- X position set the X coordinate of common grid
- Y position set the Y coordinate of common grid
- Lock the common grid cannot move


4-4-25. Data grid

Data grid can display continuous register data. It is used together with sample save and sample export. Data grid has circular buffer and time displaying. Common grid is suitable for mass data monitoring and modifying.

The following example shows the data of sample save function. The purpose is to display the data collected by sample save function.

NO	Name	Data 1	Data 2	Data 3	Data 4	Time
0	A1	25	50	100	150	2011-09-20 13:46:07
1	A2	20	40	80	120	2011-09-20 13:46:05
2	A3	15	30	60	90	2011-09-20 13:46:03
3	B3	10	20	40	60	2011-09-20 13:46:01
4	B4	5	10	20	30	2011-09-20 13:45:59

Note: please use event button to make the operations including prev item, next item, prev page, next page. Please refer to chapter 4-4-17.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel.

NO	Name	Data1	Data 2	Data 3	Data 4	Time
000	A1	000	000	000	000	000
000	A2	000	000	000	000	000
000	A3	000	000	000	000	000
000	B3	000	000	000	000	000
000	B4	000	000	000	000	000

2. Double click the data grid, it will show the property window.

■ Object

Data Grid

Object Common Column Position

Station

Device


VirStaNO Station

Object

ObjType


- Station the communication port and station no.
- Object the first object address of the grid

The address arrangement of grid object

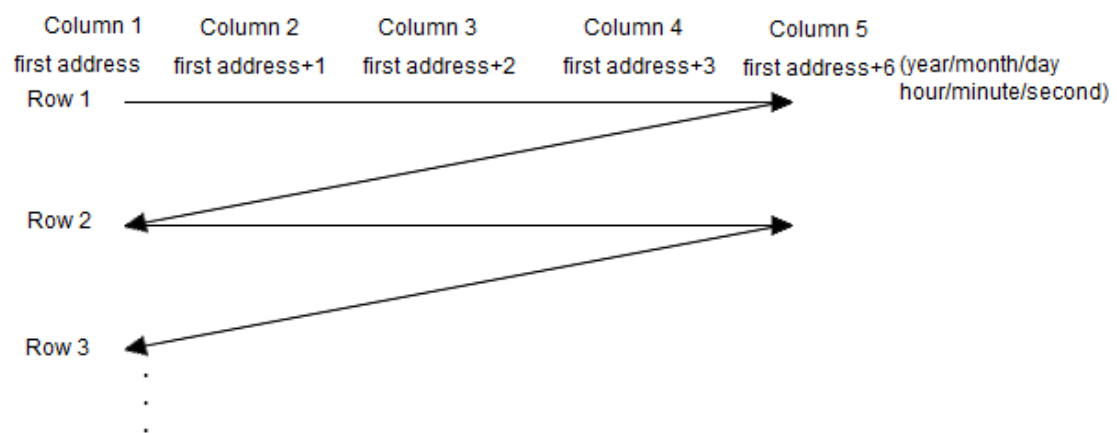


The address order in the table is from left to right, up to down

■ Common

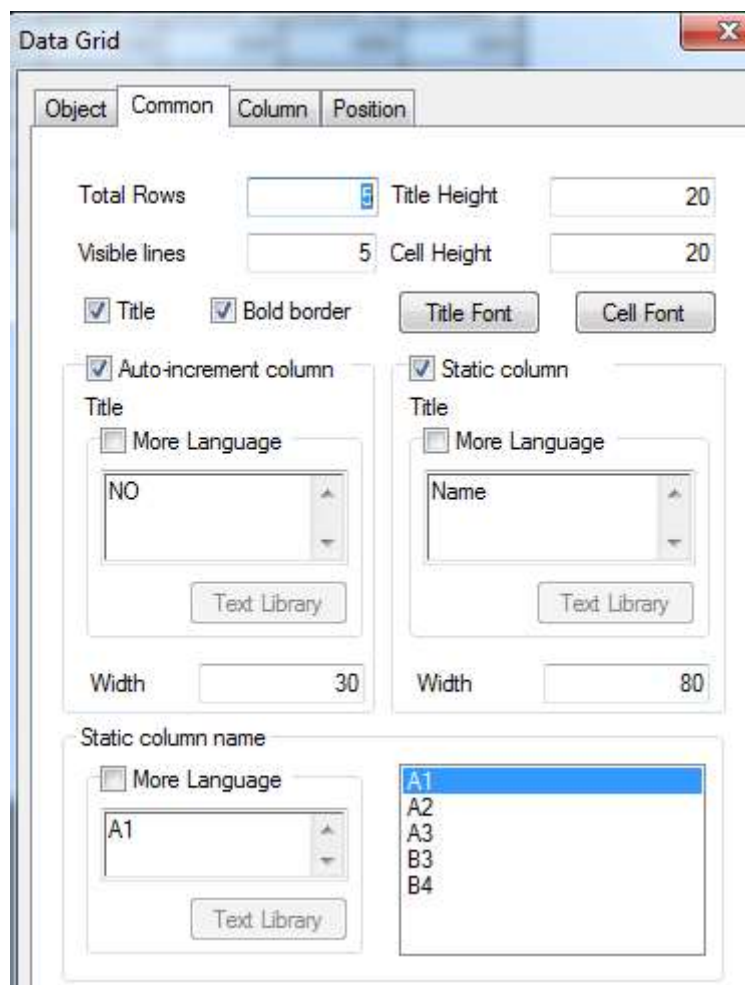


- Total rows the total rows of table
- Visible lines visible lines \leq total rows
- Title height the height of title row
- Cell height the height of each row
- Title display the title row
- Bold border the frame of grid is bold line
- Title font the font of title words
- Cell font the font of each word in the row
- Auto-increment column display the number of column
 - Title(more language) set the number title, support 8 kinds of language
 - Width the width of number column
- Static column the name of column
 - Title(more language) set the title of static column, support 8 kinds of language
 - Width the width of static column
- Static column name set the name column contents

■ Column

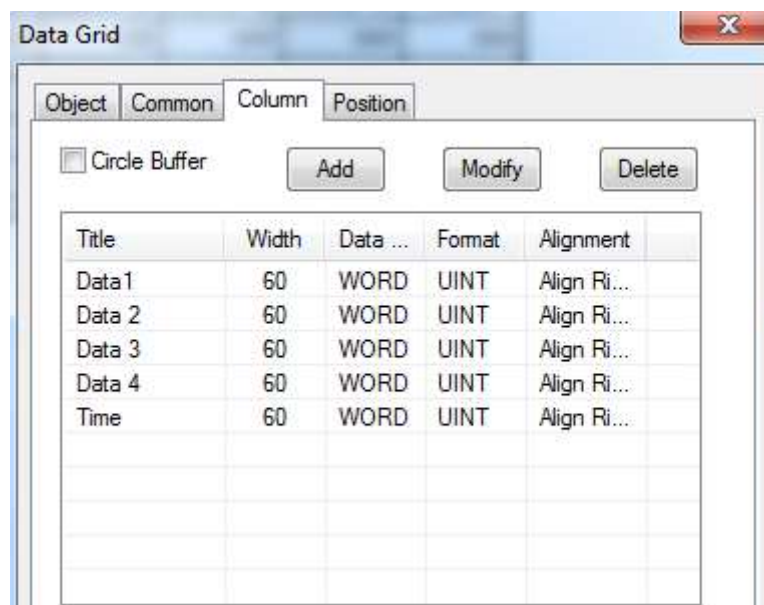


- Circle buffer auto-allocation the head and tail pointer
- Add add a new column
- Modify modify the data in the table
- Delete delete one column

Double click the data in the list to modify the details:

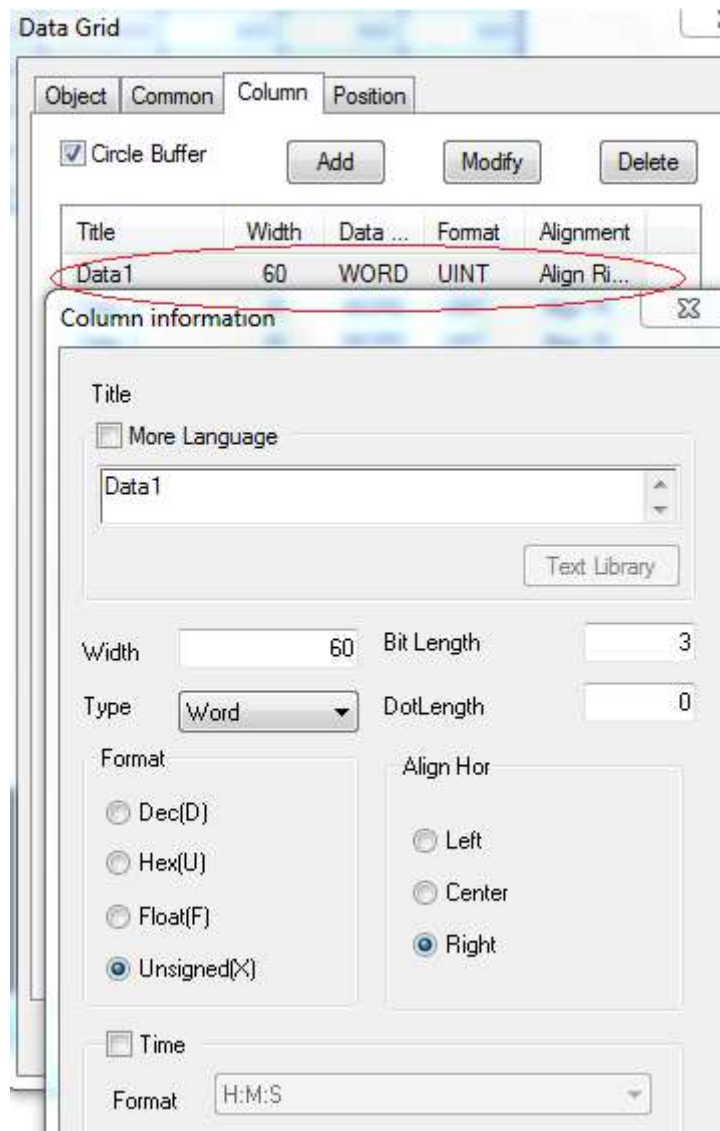

- Title the title of the column
- Width the width of column
- Bitlength the data bit length before decimal point
- Dotlength the data bit length after decimal point
- Type the data type (word, Dword)
- Format the data format
- Time to display the time and set the time format

■ Position

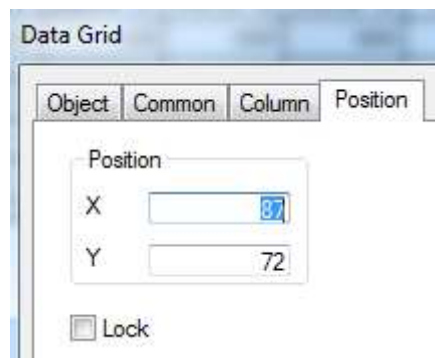

- Position set the data grid position and size
- X position set the X coordinate of data grid
- Y position set the Y coordinate of data grid
- Lock the data grid cannot move


4-4-26. Sample save

Sample save can collect the local data and store in the HMI. The data can be displayed in data grid and export to U-disk in csv format.

The following is the application of sample save and data grid. The sample save button collects the data from PSW256 to PSW259 and store in the address beginning with PSW300 then show in the data grid.

NO	Name	Data 1	Data 2	Data 3	Data 4	Time
0	A1	25	50	100	150	2011-09-20 13:46:07
1	A2	20	40	80	120	2011-09-20 13:46:05
2	A3	15	30	60	90	2011-09-20 13:46:03
3	B3	10	20	40	60	2011-09-20 13:46:01
4	B4	5	10	20	30	2011-09-20 13:45:59


Note: please use event button to make the operations including prev item, next item, prev page, next page. Please refer to chapter 4-4-17.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. This button is invisible after downloading in the HMI.

Sample Save Data


2. Double click the sample save button, it will show the property window.

■ Object

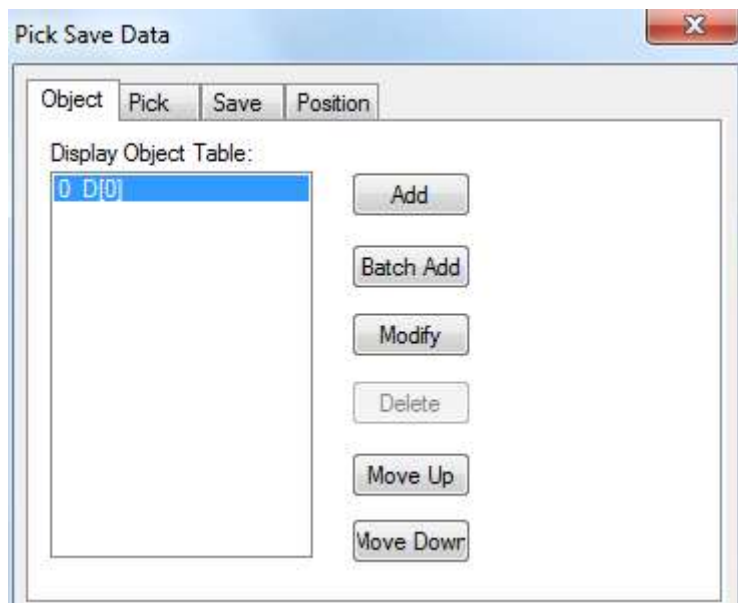

- Add add collection object
- Batch add add more objects at once
- Modify modify the collection object
- Move up move up the object
- Move down move down the object

■ Pick

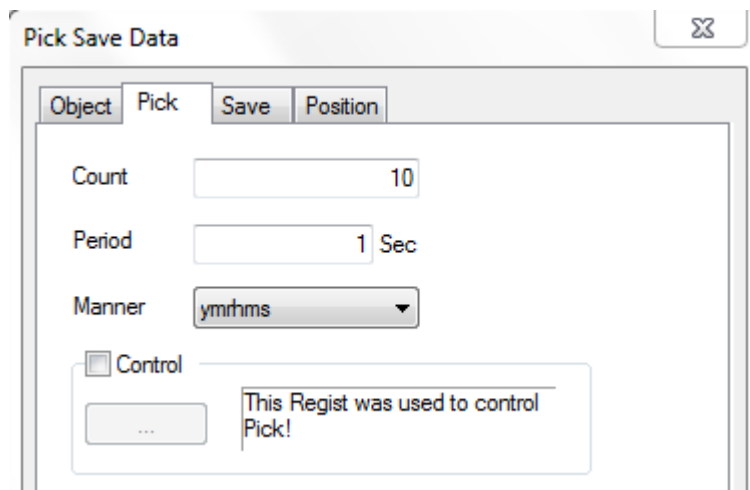

- Count the collection data amount

The registers occupied by data collection function=every piece of data information * data amount n

The registers occupied by every piece of data information=collection object (m) + time (year/month/day/hour/minute/second=6)



If there is no collection time, the registers = m

- Period the data collection period, the min unit is 1s
- Manner the time format


- Control the collection process is controlled by the coil, when the coil is ON, it is collecting data.

■ Pick save data



- Object the storage register address of collection data, the default address is PFW or PSW register


■ Position

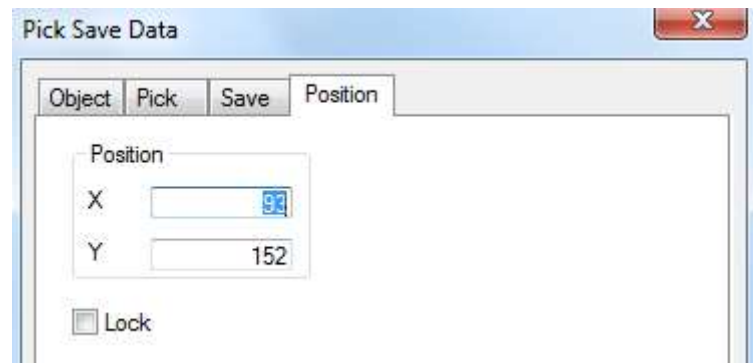

- Position set the sample save position and size
- X position set the X coordinate of sample save
- Y position set the Y coordinate of sample save
- Lock the sample save cannot move

4-4-27. Sample export


The sample save function cannot store mass real-time data in actual project. Sample export can solve the problem. It can export the data in U-disk and backup in PC.

1. Click  and move the cursor in the screen, right click mouse to confirm, click ESC to cancel. This button is invisible after downloading in the HMI.

~~Export~~ sample data

2. Double click the sample export button, it will show the property window.

■ Common

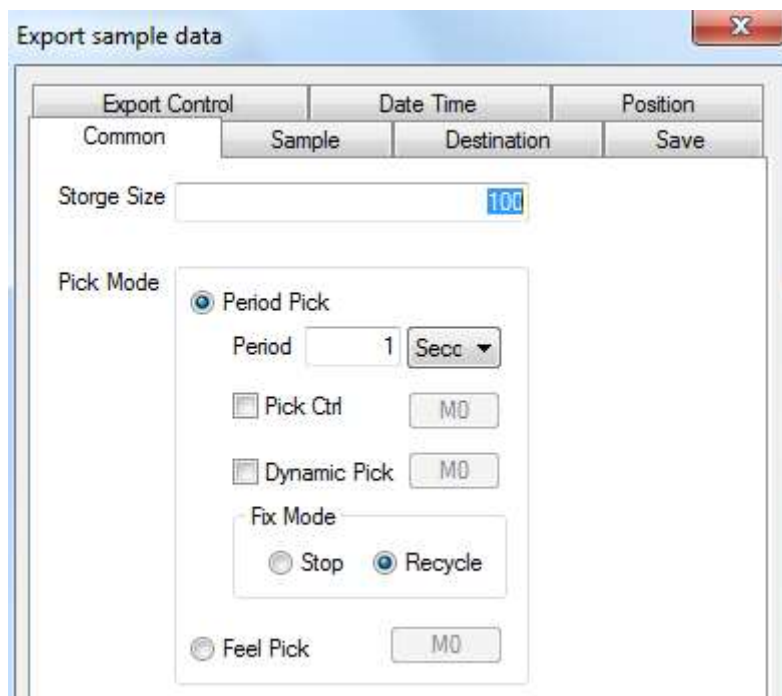

➤ Storage size the export data amount

The registers occupied by sample export = every piece of data information * data amount n

The registers occupied by every piece of data information = collection object (m) + time (year/month/day/hour/minute/second=6)

➤ Pick mode period pick and feel pick

➤ Period the collection data period, the min unit is 1s

Pick control when the coil is ON, it starts to collect data

Dynamic pick when the coil is ON, circular store the data; otherwise it will stop collecting when the memory is full.


Fix mode recycle: circular store the data; stop: when the memory is full, stop storing data




Dynamic pick and fix mode can not work at the same time. User can choose one of them to work.

Feel pick it will collect data when the rising edge of signal is coming.

■ Sample

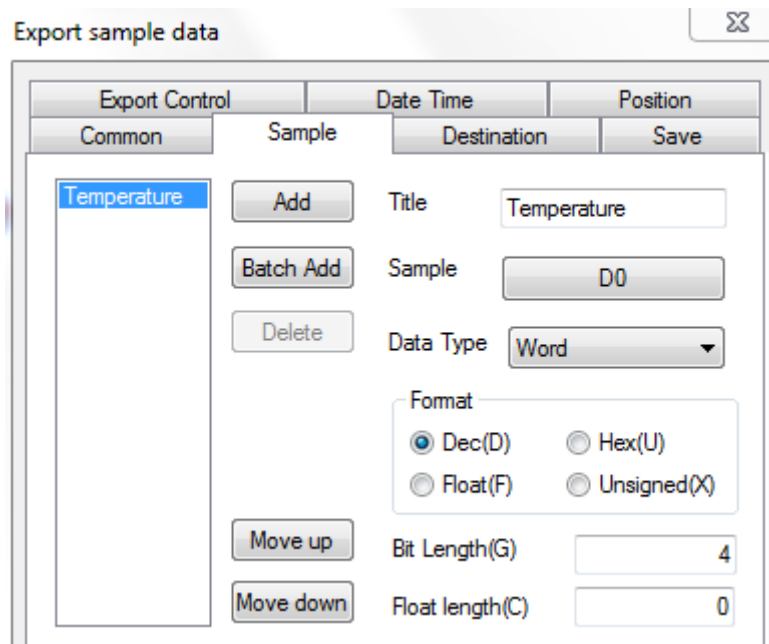

- Add add one piece of collection data
- Batch add add many pieces of collection data at once
- Delete delete the collection data
- Move up move up the collection data
- Move down move down the collection data
- Title the title of collected data
- Sample the collected data address, click the address to modify the details

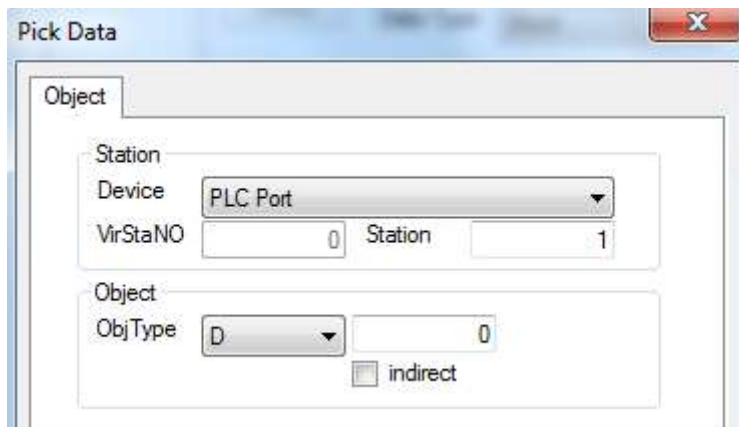

- Data type word, Dword (32 bits), string
- Data format the data format: decimal, hex, float, unsigned number
- Bit length the bit length before decimal point
- Float length the bit length after decimal point

■ Destination

The screenshot shows the 'Export sample data' dialog box with the 'Destination' tab selected. The dialog has a title bar with a close button. Below the title bar are four tabs: 'Export Control', 'Date Time', 'Position', and 'Save'. The 'Destination' tab is active. It contains the following fields and controls:

- Device ID:** A text box with a dropdown arrow, currently showing '0'. Below it is a checkbox labeled 'Dynamic set' and a 'D0' button.
- Path/File:** A text box containing 'CE.csv'. Below it is a checkbox labeled 'Dynamic set' and an empty button.
- Fix Name:** A radio button that is selected.
- Re-export title:** A checkbox that is unchecked.
- Name add automatic:** A radio button that is unselected.
- add number after name:** A radio button that is unselected. Below it is a text box containing '0', a checkbox labeled 'Dynamic set', and a 'D0' button.
- named by date:** A radio button that is unselected.
- Break character:** A text box with a dropdown arrow.

- **Device ID** the storage route of export data. 0 means C:\ in PC.



The device ID must be 0 when it is used in the HMI.

- **Path/file** export file name and export mode
- **Fix name** export to the same file
- **Re-export title** export the data title every time
- **Name add automatic** auto-increase the export file name number, for example the name is 002, the next file name is 0020001, 0020002, 0020003.... The max number is 0029999

Add number after name add fix number after file name, the number can be set through register, the max number is 9999

Named by date name the file by date


■ Save

The screenshot shows the 'Export sample data' dialog box with the 'Save' tab selected. The dialog has a title bar with a close button. Below the title bar are four tabs: 'Export Control', 'Date Time', 'Position', and 'Save'. The 'Save' tab is active. It contains the following fields and controls:

- Object:** A text box containing 'ObjType'.
- ObjType:** A dropdown menu showing 'PSW'.
- Value:** A text box containing '256'.

- Object the collection register address

■ Export control

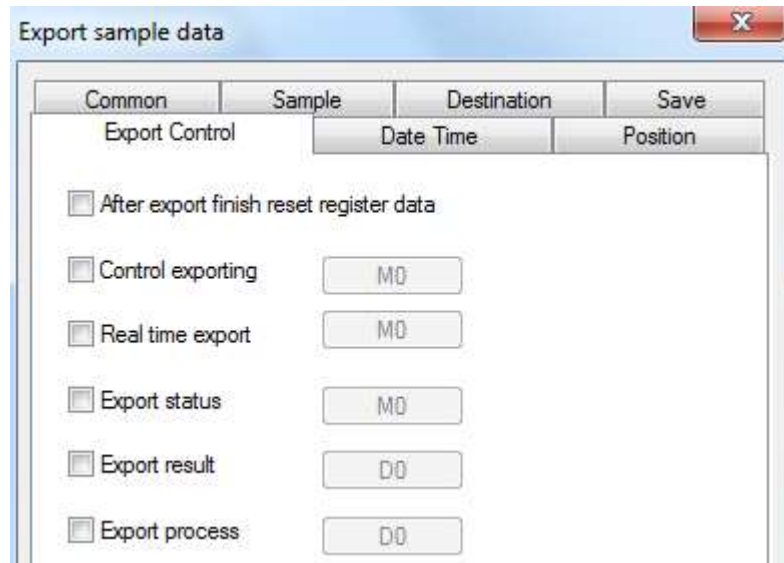

- After export finish reset register data
Clear all the data after the export is successful
- Control exporting when the memory is full, the coil is ON, the data will be exported
- Real time export it will export data when the rising edge of signal is coming
- Export status when the coil is ON, it means exporting status;
- Export result the register will show different exporting result

Register = 0, exporting is successful

Register = 1, the export device doesn't exist


Register = 2, U-disk memory is low

Register = 3, the file name or route is wrong

Register = 4, read write file failed


- Export process the register will show the exporting process percentage

■ Date time

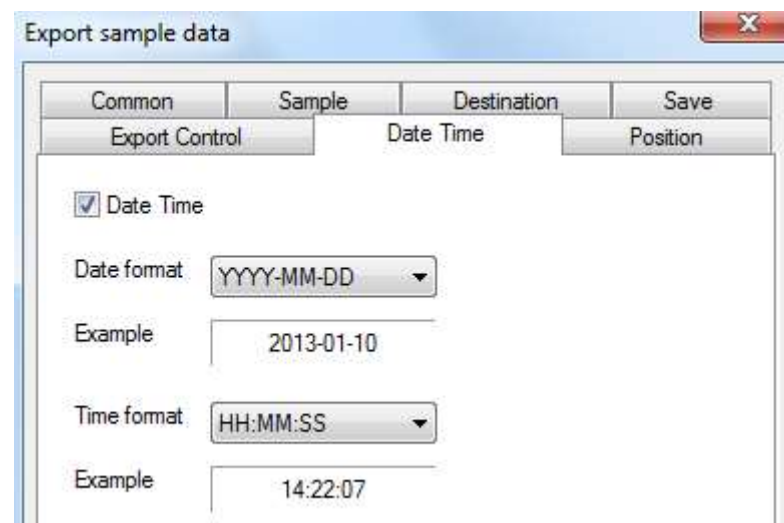

- Date time export the collection data time
- Date format the date display format
- Time format the time display format


■ Position

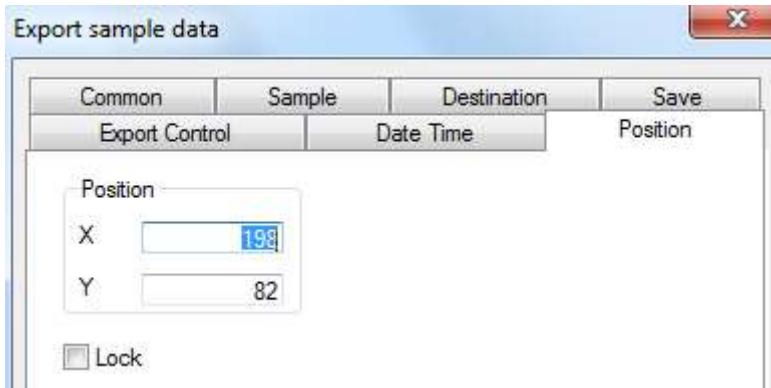


- Position set the sample export position and size
- X position set the X coordinate of sample export
- Y position set the Y coordinate of sample export
- Lock the sample export cannot move

4-4-28. Process orbit

With the new precise cutting technology, CAD file can be sent from U-disk to HMI. Then CAD file can be sent from HMI to PLC. PLC can send the cutting parameter file to HMI and show the cutting image.

1. Click  to put it in the screen, click ESC to cancel.

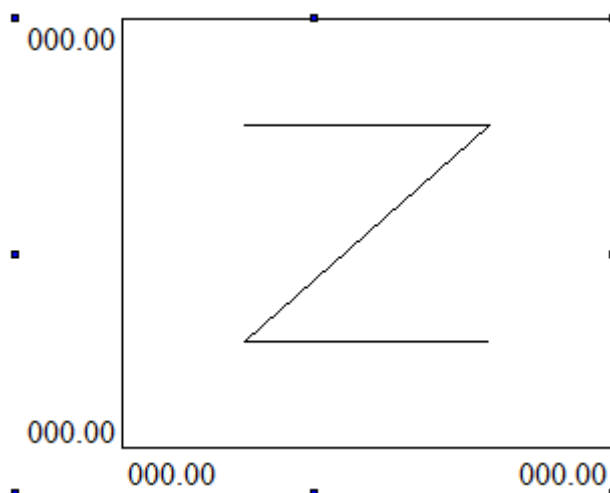


2. Double click the process orbit, it will show attribute window.

■ Orbit

The 'Process Orbit' dialog box is shown with the 'Orbit' tab selected. It features two columns for X and Y axis settings. Each column has input fields for 'Bit Len' (set to 5) and 'Float Len' (set to 2), a 'Font' button, and a 'Color' dropdown menu. Below these are 'Aspect' settings for 'Frame' and 'Back' color dropdowns. The 'Processing' section has 'Processed' and 'Unprocess' color dropdowns. The 'Raised knife' section also has 'Processed' and 'Unprocess' color dropdowns. A 'Set Path' section includes a checkbox, 'File path', and 'File name' text boxes. At the bottom is a 'Units' dropdown menu set to 'm'.

- Label
 - Bit Length the value bit length showing on X/Y axis
 - Float length the value decimal bit length showing on X/Y axis
 - Font the value font showing on X/Y axis
 - Color the value color showing on X/Y axis
- Aspect
 - Frame the frame color
 - Back the background color
- Processing
 - Processed the color of processed orbit
 - Unprocess the color of unprocessed orbit
- Set path read file from specified path
 - File path the path of the file
 - File name the name of the file
- Unit the unit of the orbit, the default unit is meter

■ Position

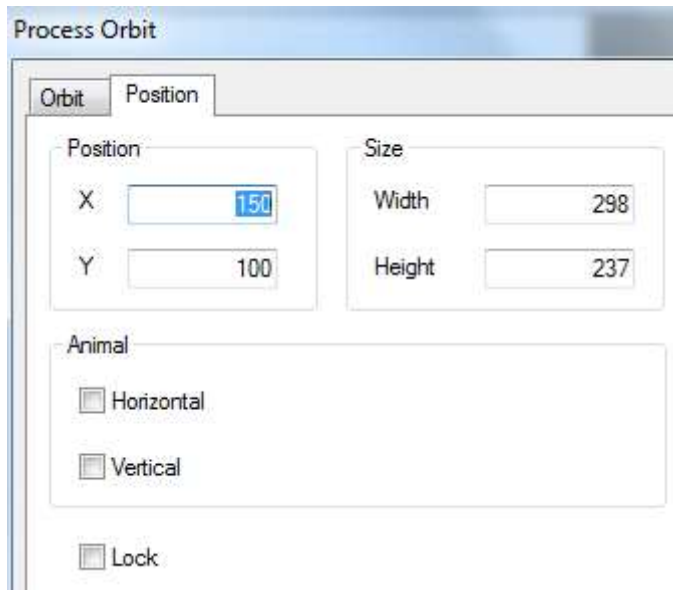

- **Position** set the coordinate of orbit according to the origin on the upper left corner
 - X the X-axis coordinate
 - Y the Y-axis coordinate
- **Size** set the width and height of orbit
 - Width the width of orbit
 - Height the height of orbit
- **Animal** the move direction of orbit
 - Horizontal horizontal moving the orbit. Set the X-axis position through register.
X coordinate = X position + current register value
 - Vertical vertical moving the orbit. Set the Y-axis position through register.
Y coordinate = Y position + current register value
- **Lock** lock the orbit, it cannot move


5 HMI internal register

5-1. HMI internal registers

The internal register of MOP series HMI include PSB, PSW, PFW, PRW, PHW

Register	Note
PSB	Bit object
PSW	Word object
PFW	Power-off retentive word object


PSB, PSW, PFW amount and range can be set in File/setting/panel/set parameters.



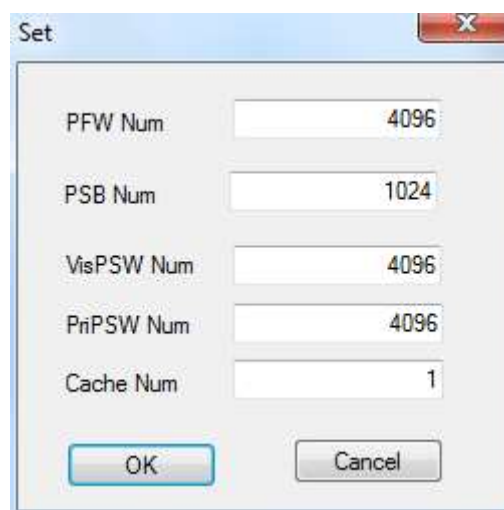


5-2. Special internal registers

PSW, PFW, PSB address 0~255 are used by system.

1. Bit object PSB

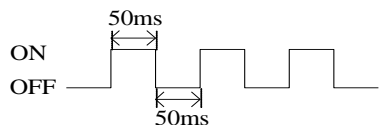Register	Function	Explanation
PSB0	Always close coil	
PSB1	Always open coil	
PSB2	First start scanning ON coil	
PSB3	100ms pulse coil	

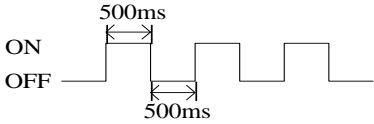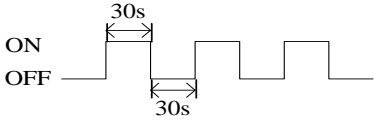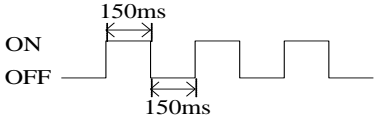PSB4	1s pulse coil	
PSB5	1 minute pulse coil	
PSB6	300ms pulse coil	
PSB15	Communication flag	0: successful 1: failed
PSB16	Scan the screen first time successful	
PSB30	First scan after download	
PSB31	First scan after power on	
PSB39	Shut down the touch screen	
PSB60	Level 1 password flag	1: password open 0: password close
PSB61	Level 2 password flag	1: password open 0: password close
PSB62	Level 3 password flag	1: password open 0: password close
PSB63	Level 4 password flag	1: password open 0: password close
PSB64	Level 5 password flag	1: password open 0: password close
PSB65	Level 6 password flag	1: password open 0: password close
PSB66	Level 7 password flag	1: password open 0: password close
PSB67	Level 8 password flag	1: password open 0: password close
PSB68	Level 9 password flag	1: password open 0: password close

2. Word object PSW

Register	Function	Explanation
PSW0	Start screen number	
PSW1	Present screen number	
PSW20	Screen width	Read only
PSW21	Screen height	Read only
PSW26	PSB amounts	Read only
PSW27	PSW amounts	Read only
PSW28	PSW amounts	Occupy PSW28, PSW29 (read only)
PSW30	Year	Hex format, read only
PSW31	Month	Hex format, read only
PSW32	Day	Hex format, read only
PSW33	Hour	Hex format, read only

PSW34	Minute	Hex format, read only
PSW35	Second	Hex format, read only
PSW36	Week	Hex format, read only
PSW40	Recipe index	
PSW54	Device amounts	
PSW60	COM 1 (Download) communication successful times	
PSW61	COM 1 (Download) communication failed times	
PSW62	COM 1 (Download) communication overtime times	
PSW63	COM 1 (Download) communication data error times	
PSW64	COM 1 (Download) device version	
PSW65	COM 1 (Download) device model	
PSW70	COM 2 (PLC) communication successful times	
PSW71	COM 2 (PLC) communication failed times	
PSW72	COM 2 (PLC) communication overtime times	
PSW73	COM 2 (PLC) communication data error times	
PSW74	COM 2 (PLC) device version	
PSW75	COM 2 (PLC) device model	
PSW80	COM3 (extension port) communication successful times	
PSW81	COM3 (extension port) communication failed times	
PSW82	COM3 (extension port) communication overtime times	
PSW83	COM3 (extension port) communication data error times	
PSW84	COM3 (extension port) device version	
PSW85	COM3 (extension port) device model	


3. Word object PFW

Register	function	Explanation
PFW1	Start screen number	
PFW2	Background color	0~255 (256 colors)
PFW10	Screen save wait time	
PFW11	screen number for screen save	
PFW20	COM 1 (Download) baud rate	4800, 9600, 19200, 38400, 115200, 187500
PFW21	COM 1 (Download) data bit	7, 8


PFW22	COM 1 (Download) stop bit	0-1 bit, 1-1.5 bits, 2-2 bits
PFW23	COM 1 (Download) parity	0-None, 1-Odd, 2-Even
PFW24	COM 1 (Download) station no.	
PFW25	COM 1 (Download) sending delay	Unit: ms
PFW30	COM 2 (PLC) baud rate	4800, 9600, 19200, 38400, 115200, 187500
PFW31	COM 2 (PLC) data bit	7, 8
PFW32	COM 2 (PLC) stop bit	0-1 bit, 1-1.5 bits, 2-2 bits
PFW33	COM 2 (PLC) parity	0-None, 1-Odd, 2-Even
PFW34	COM 2 (PLC) station no.	
PFW35	COM 2 (PLC) sending delay	Unit: ms
PFW36.2	Modbus RTU write words code switching	PFW36.2=0, send code 0x06 PFW36.2=1, send code 0x10 The status of PFW36.2 will be effective when re-power on the HMI
PFW40	COM3 (expansion port) baud rate	
PFW41	COM3 (expansion port) data bit	
PFW42	COM3 (expansion port) stop bit	
PFW43	COM3 (expansion port) parity	
PFW44	COM3 (expansion port) station no.	
PFW45	COM3 (expansion port) send delay	
PFW60	Password level 1	Occupy PFW60, PFW61
PFW62	Password level 2	Occupy PFW62, PFW63
PFW64	Password level 3	Occupy PFW64, PFW65
PFW66	Password level 4	Occupy PFW66, PFW67
PFW68	Password level 5	Occupy PFW68, PFW69
PFW70	Password level 6	Occupy PFW70, PFW71
PFW72	Password level 7	Occupy PFW72, PFW73
PFW74	Password level 8	Occupy PFW74, PFW75
PFW76	Password level 9	Occupy PFW76, PFW77
PFW100	Adjust the backlight	
PFW101	Multi-language switching	MOP Soft v2.D and higher versions support this function
PFW130	Shielding device and station no.	V2.D.2n and higher version supported, please refer to chapter 7-25

Q1 How to install two or more versions of software in PC?

1. Change the path of the software as following in the installation process.

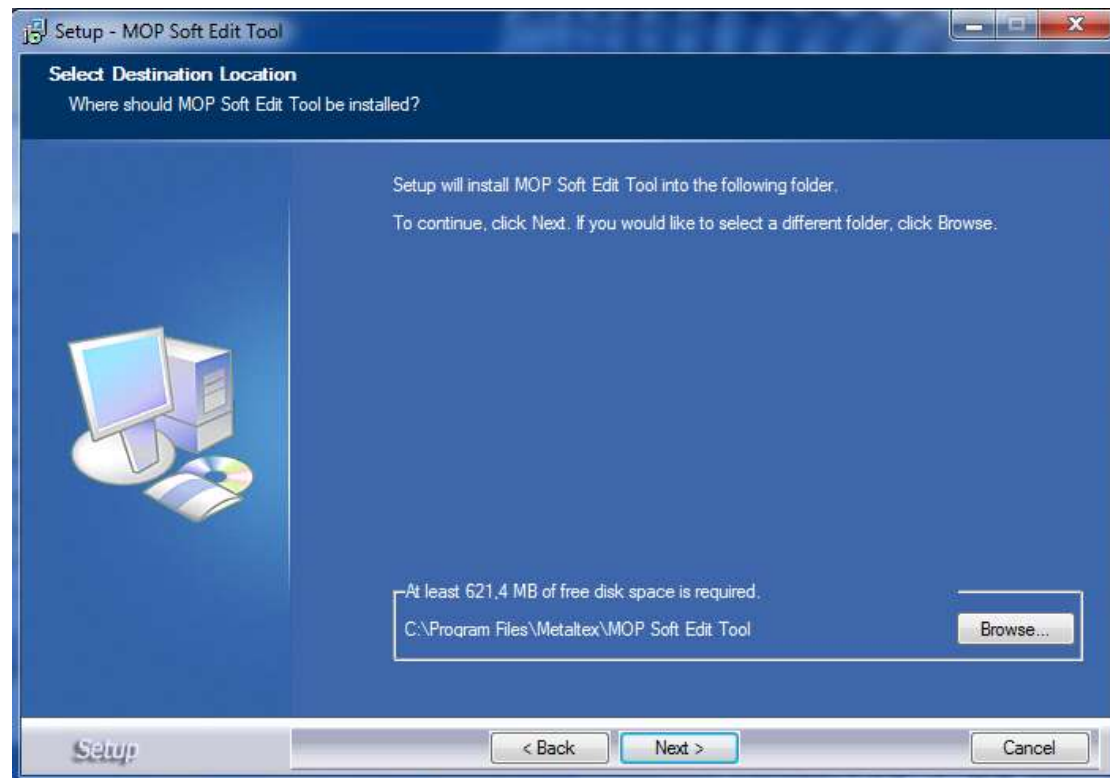


2. According to the above, the default path for software installation is as “C:\Program Files\Thinget\MOP Soft editing tool”. Click the “VIEW” button to change the installation path manually to “C:\Program Files\Thinget\16\MOP Soft editing tool”. Then click the “OK”. As following,

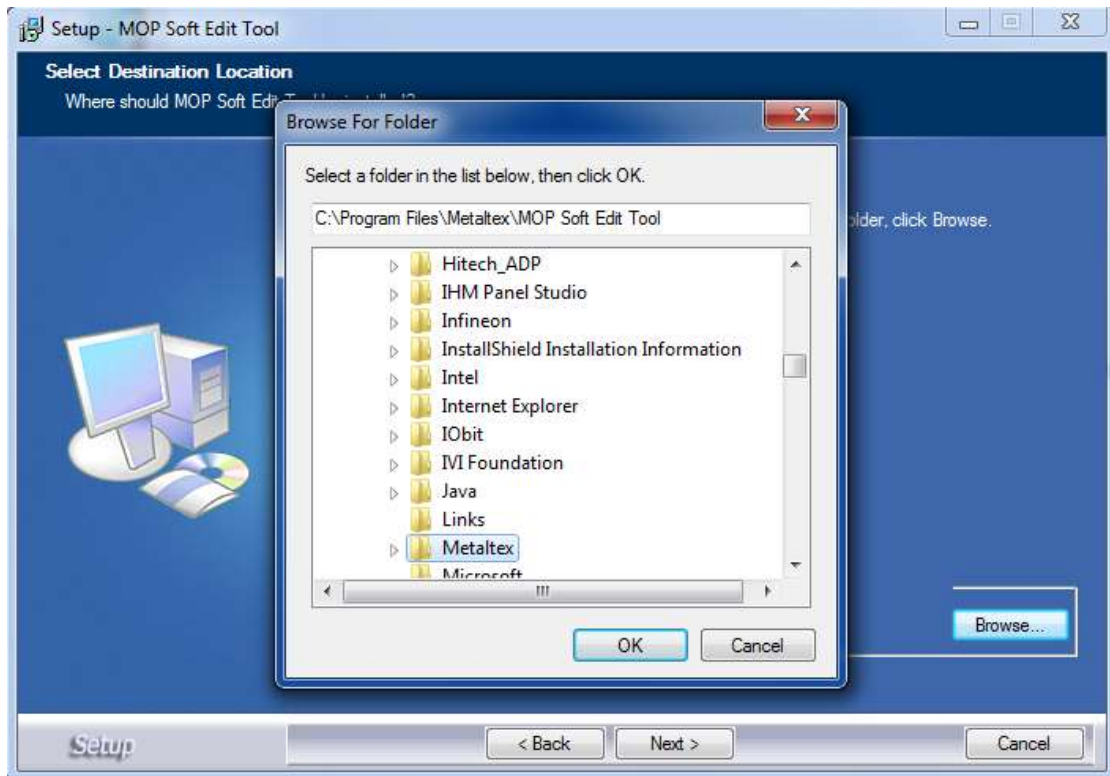


Q2 Why the software can not be installed or used normally?

1. Please close the anti-virus software and the system optimization tools before the installation;
 2. Double click the shortcut of the software on the desktop after the success of the installation.
- then the following picture will pop up:

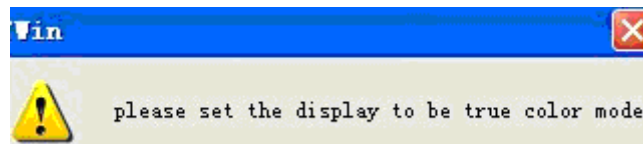

Reason: the current color mode is too low.

Method: right click the desktop, then choose the "attribute". Please change the color quality to the "highest (32 bit)" in the "settings" option.

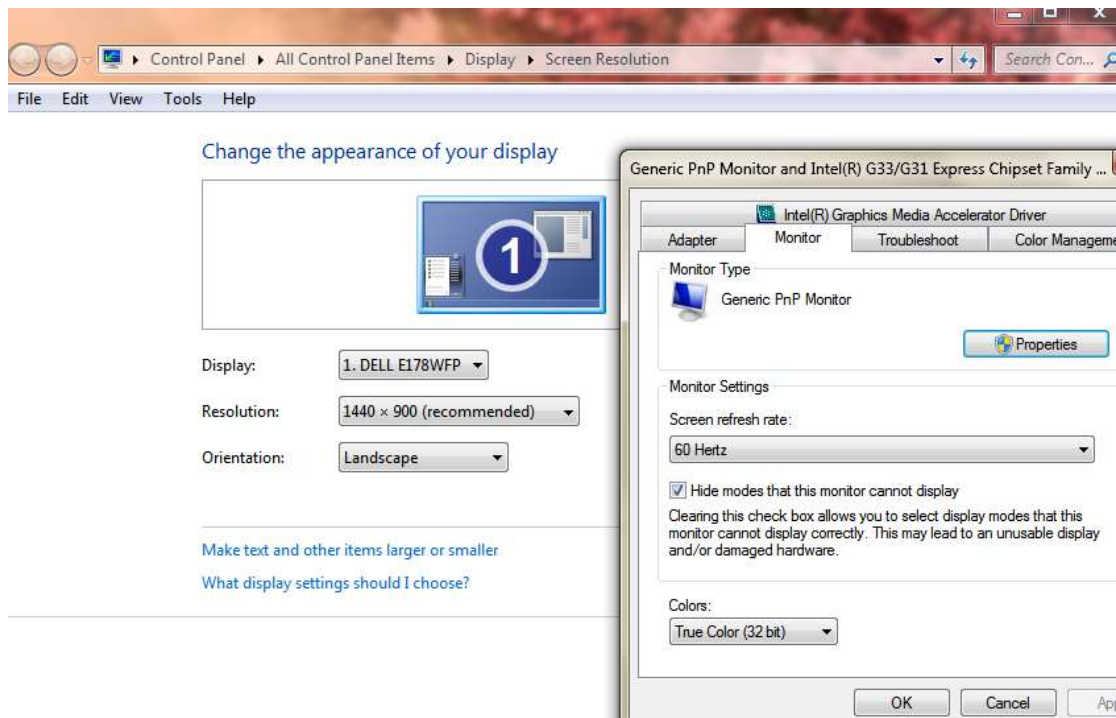

Q3 Does the software have traditional version? Does it support Traditional Chinese input?

There is no traditional version of the installation software. But in the simplified Chinese system, you can input traditional Chinese, Spanish, Japanese, German, French, etc.

At present, our company supports four software version such as simplified Chinese version, English version, German version and Korean version.

Q4 What shall we do when the HMI program of MOP series can not be downloaded?

You need to use the USB download line to download the programs MOP series HMI, and you can also buy or borrow the USB printer communication line. But the printer communication line must be complied with USB2.0 standards, and it should have the shielding layer, one side of the line is square, and the other side is flat.



1. Check whether the computer is installed with the USB driver

Get the USB driver from Metaltex CD. Please give the power to the HMI again after the success

of the driver's installation.

Note: Please read the installation instructions in the driver package before installation.

2. Please check whether the driver is abnormal if it is already installed.

Connect the USB download cable to the USB port of computer and the HMI, then give the power to the HMI again. Right click the "my computer" button on the desktop of computer, then choose the "attribute", and choose the "device manager" in the "hardware". If the computer is installed the USB driver, there will be red marked information in the "Device Manager/Universal Serial Bus Controller".

(1) If there is no information, you need to install the USB driver again.

(2) If there is red marked information, please confirm whether there is a yellow exclamation mark before it. If so, you need to update the driver program again.

3. The USB driver can not be installed

(1) Please close the anti-virus software and the system optimization tool.

(2) Please check which operating system your computer belongs to. If your operating system is Win7 64 bit, you need to use the special driver of Win7 64 bit to update your driver.

(3) There are two kinds of installation methods for the USB driver. The instructions are in the driver package, so you can have a try in turn.

(4) If the USB driver still can not be installed, you should contact us to get the technical support.

4. Cannot download program through the USB driver is installed normally

(1) Check whether the display model is in accordance with the HMI model;

Solution: Check the display model in the "document/system settings/display".

(2) The USB download cables are not qualified;

You can replace a new cable if it is not confirmed. Now some USB download cables on market are not shielding wires, and the anti-interference ability is poor. We suggest you to use the shielding cable within 1.2m.

(3) Try to pull up and insert the USB download cable or restart the HMI;

(4) If the program still can not be downloaded, you should set on DIP switch 2 which is on the back of the MOP series HMI and resume the power. Then you can force download from USB and serial port.

(5) Check whether there is interference;

We suggest you to use the independent 24V power supply. The power can not be connected with other devices at the same time. Don't put the high interference equipment around HMI, such as frequency inverter and so on. If the conditions allows, you should put the HMI to the place without high interference, such as office.

(6) the USB Port anti-interference ability of some computers is poor, or the USB port is easily damaged;

We suggest change another PC to try again. Then you can check if the program is downloaded successfully.

(7) Charging powers of some notebook computers are not very stable.

We suggest you to disconnect the power supply of the computer before downloading the programs.

Note: If the program of the HMI can be downloaded by serial port card and can not be downloaded by the USB convertor, you should change the USB convertor. You can buy the USB convertor from us. The reason is that the USB convertor of other companies can not be connected with the 7 pin of download cable of the HMI.

4. If all of the above is ok, you may connect the pin5 and the pin8 of the download port. Then you should give the power again and forced download.

Note: The pin5 and pin8 must be connected in the process of cut power and power on again.

Q5 Why does it show the error HMI capacity is not enough when downloading the program?

Reason: the capacity of the program is larger than HMI capacity.

Methods: simplify the picture content

1. In the “tool/option” of the software version before V2.C.6b, we suggest you to cancel this fuction if you choose the “Encryption Download”.
2. If you don’t use download port communication, we suggest you to choose the “not use Download port”. Otherwise the download port will occupy the resources.
3. Don’t choose “automatical save” and “redo” in “tool/option”

Q6 How to choose the download cable of HMI?

Choose the right cables according to the series of HMI

MOP series screen download cable: It supports the USB2.0 standard and has the shielding layer. One side of it is square and the other side is flat.



MOP series screen download cable:

Q7 Why the program can not be uploaded? How to set to upload the program?

Reason: has not choosed the “full download” in the “tool/option”, so programs can not b e uploaded.


Phenomenon: “there is no project” will be prompted when the programs are being upload

ed.

Programs of HMI can be uploaded if you do the following operations before downloading.

1. For software version before the V2.c.6b, you should choose the “full download” or “upload” in the “tool/option”.

Note: You need to choose this option to make the upload effective before downloading programs.

2. Please use the double download arrows like this “” if your version is V2.c.6b or above.


Q8 how to choose the right communication cable?

Please refer to “HMI and PLC connection manual”; If the instructions can not explain the connection of communication cable, customers can make their own communication cable referring to the definition of our HMI pin.

PLC communication port support: RS232/RS485/RS422


Download communication port support: RS232/RS485

Download port:

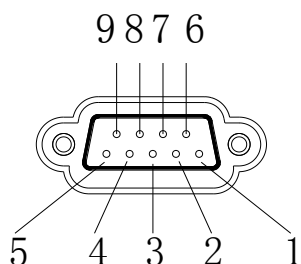

Pin number	definition	description
1	NC	Empty signal pin terminal
2	RXD	RS232 communication receive data
3	TXD	RS232 communication send data
4	A	RS485 communication “+” signal
5	GND	Signal ground
6	NC	Empty signal pin terminal
7	B	RS485 communication “—” signal
8	NC	Empty signal pin terminal
9	NC	Empty signal pin terminal

PLC port:

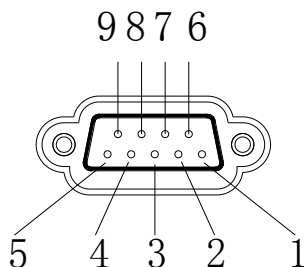

Pin number	definition	Description
1	TD+	RS422 communication send “+” signal
2	RXD	RS232 communication receive data
3	TXD	RS232 communication send data
4	A	RS485 communication “+” signal
5	GND	Signal ground
6	TD-	RS422 communication send “—” signal
7	B	RS485 communication “—” signal
8	RDD-	RS422 communication “—” signal
9	RDD+	RS422 communication receive “+” signal

Q9 Why the screen can not communicate normally and it displayed error “communicating”?

1. Refer to HMI and PLC connection manual;

you can find the related device connection diagram and refer to some special communication tips.

2. Check whether the connection of communication cable is correct

Check whether connection of the screen and equipment is correct.

3. Please use the multimeter to check whether the communication cable is damaged;

4. Check whether the type of project PLC is suitable with the type of actual connection;


5. Check the settings of communication parameters;

The communication parameters must fit for the communication equipment. For example: equipment model, modbus number, bit rate, stop bit, data bit, odd and even parity.

Generally, PLC needs to power on again after the PLC parameters downloading.

6. You may set up a program to have a test for finding the reason.

If the new program is normal, you need to check the content of the project. Especially the button, data input and some parts related with communication equipment. For example: HMI is communicated with Panasonic PLC. The modbus number is 1. Then connect with the PLC port of the screen by using the cable. Add a button for setting the soft component M0 in PLC. The modbus number of this button need to be set to 1, the “equipment” must be chosen PLC port.

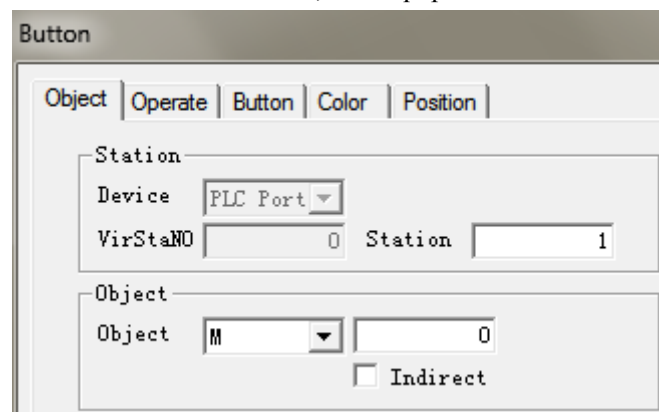

7. Check the current communication port of HMI:

HMI has two communication ports which are PLC port and Download port. Check which port is used for communication of HMI. Don't use the wrong communication port. Every part of equipment should be “PLC port” if you are using the PLC port.

8. Check the station number in communication window:


Customers should confirm the station number of communication equipment. If the number is 1 and the communication window that the screen pop up is “communicating, the PLC station number is 0.....”, The station number of some part in HMI program may be 0. Please change the station number to 1.

9. Field interference:

Check whether there is interference. Please take some anti-interference measures, such as putting

the shielding layer on the communication cable, using independent power and isolate the high frequency equipment with HMI.

2. Please choose the “download port” in the device options and set the right station number.

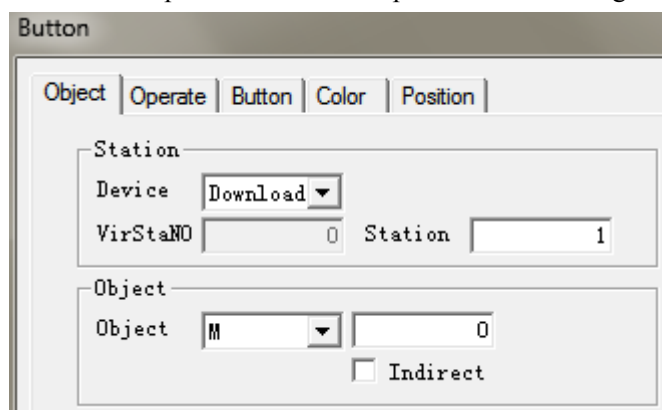

Q10 How to use the broadcasting function of HMI?

The boardcasting station number of HMI is 0, so you can not use readable components such as indicator light, button indicator light, data input and data display,etc. If not, the screen will be white.

Q11 How to set when the screen is slave station?

1. Customers can choose the “Modbus slave(panel is slave)” or “free type”(panel is slave)”. The former is used to Modbus protocol, and the latter is used to free communication protocol.
2. Please get the free format protocol manual from CD.

Q12 What shall we do if HMI does not support the current equipment model?

1. If the devices that the HMI supports are the same brand and different series,but the device communication protocol are same and they have the same device address, you can choose the device type matched with the screen.
2. Please confirm the communication protocol of the device. If it support Modbus, “Modbus RTU” or “Modbus ASCII”can be chosen.
3. If the communication protocol of the device can not meet the two coditions above, please use the following methods.

- ① You can write the communication protocol by yourself. Refer to HMI user defined

protocol manual.

② You can use C language function if the device has few variables such as meters. Please refer to MOP Soft C language manual.

Q13 Why the HMI only can read the data but cannot write when communicating with Omron PLC?

1. The old version Omron editing tools can change the settings of DM6600 directly, then it can change the former default-value to Monitor.

2. The new version Omron editing tools: “tools/internet settings/PLC settings”. You need to change the startup conditions of PLC to monitor state.

After changing the Omron settings, repower on the PLC. Then the HMI can read/write the data of Omron PLC.

Q14 Cannot print the whole contents when using microprinter.

Solutions: increase the width and length of the print window.

Q15 How to calibrate the system time in the HMI?

1. Set a screen jump button in the screen. Set the screen ID to 60002.
2. Download the program in the HMI. Press this button to jump to time/date setting screen.

Q16 How to modify the password in the HMI?

1. Set a screen jump button and set the screen ID to 60003;
2. Download the program to the HMI. Press this button to jump to password changing screen.

Note: the current password should be opened before changing the password.

Q17 What is the function of the HMI dip switch?

MOP series:

Number 1 and 4 are not defined;


Number 2 is ON, forced download;

Number 3 is ON, system menu: clock calibration, touch calibration and the USB-disk data import.


Q18 How to open the advanced functions of HMI?

V2.d3c version and above:

1. Open the programming software, and create or open any program;
2. Click the “tool/option”, and click the “user mode”.

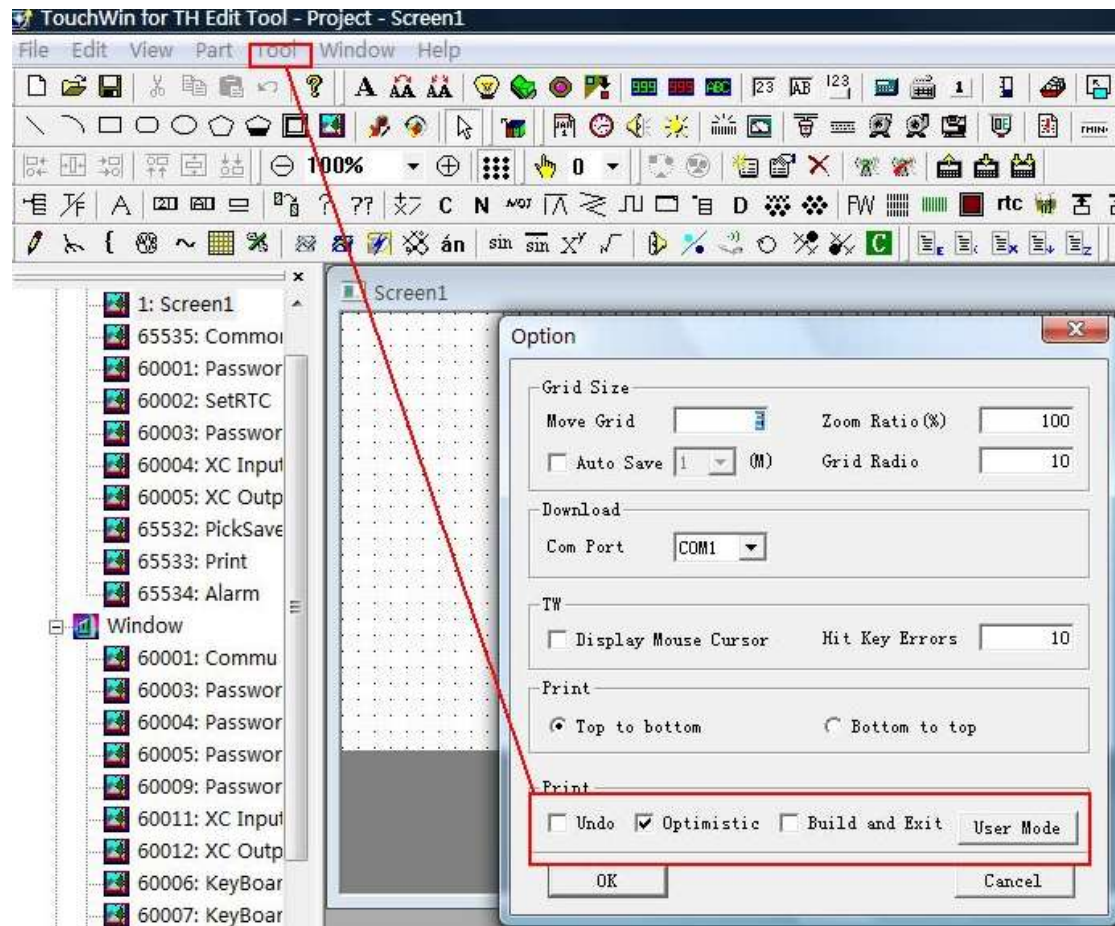

3. and then open the programme software again.

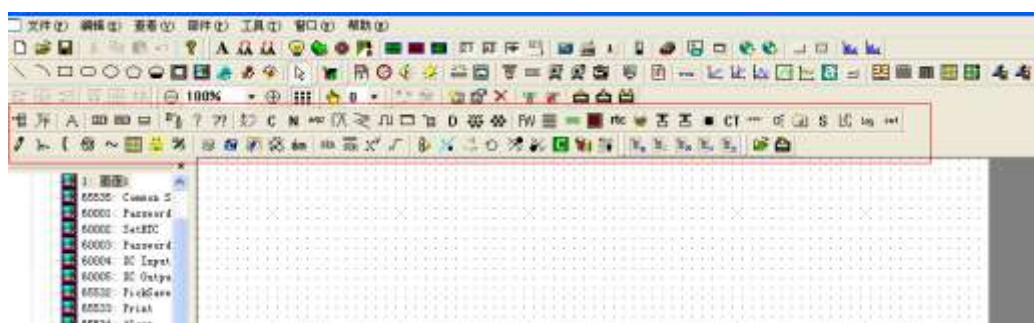

V2d.3c version and below:

If the software is installed, please do from the first step. If the software has been used for a long time, please do from the second step.

1. Create a file after opening the software. Then save it. After that, a system file named Option.dat will be generated automatically in the root directory of the system.
2. Open the file by using the text file;

3. Add two lines in the end like this: [software]
usermode=1


Note: please confirm that whether the [software] is in the file at first. If it exists, please cancel them first and add the two lines above. If not, the advanced functions will not be opened.



4. Please open the HMI software again after saving the file of “Option.dat”. Then the advanced function will open.

Q19 How to display the time and the week in HMI?

1. Click the “date” and the “clock” component, and place them in the screen;

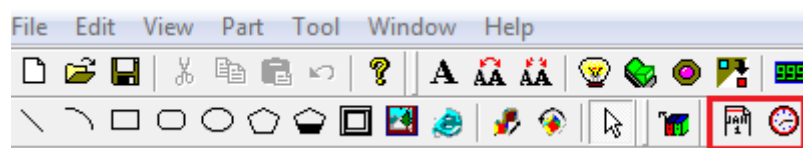

2. Display the week: set a data display. The address is PSW36, and the type of display is hex.
3. Download to the screen or do the off-line simulation.


Q20 Is the HMI password functional again after open?

1. Screen jump will make the password functional again.
2. The other parts: after the screen saver lightens again, the password will be functional again.

Q21 How to clear the data in trend map and data grid?


1. time trend

If the saved address of the historical data of the time trend is PFW256.

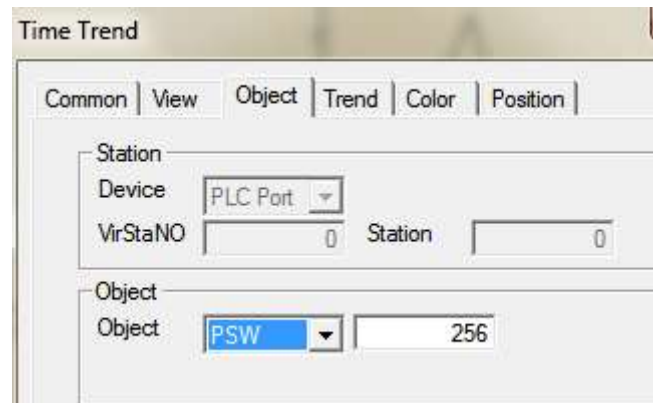

Clear method:

- place a function button.
- add "set data".
- set the PFW256 (Dword) to 260, and also set the PFW258 (Dword) to 260 (the formula is "PFWm =m+4, PFW(m+2)=m+4")

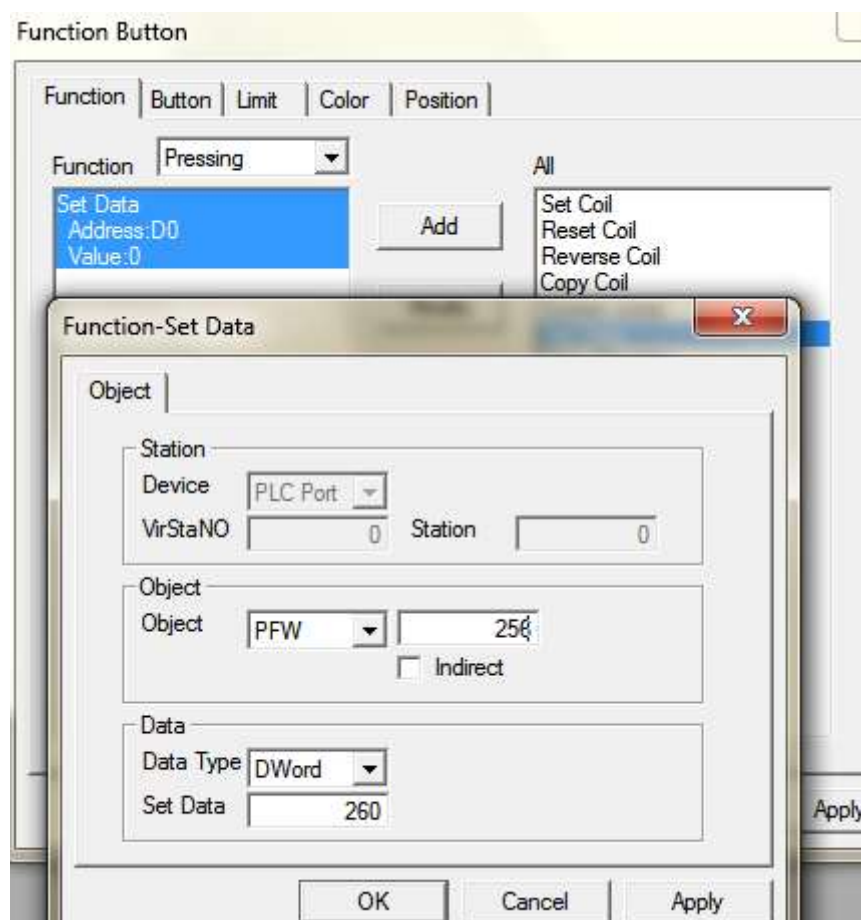

- At last, modify the button content to clear.

2. clear the data grid, common grid

Refer to the steps in item 1.

3. clear real time trend map

Refer to the steps in item 1.

4. clear the history data map/XY trend/display history event

Clear method:

a. click the event button

b. choose reset content in trend/event item

Event Button

Event | Button | Color | Position

Trend Type Function

☒ Trend/Event **ResetContent**

☐ Time Trend

☒ Time Axis Left (Thin) Rate 20 /10

☐ Y Axis Up (Thin)

ID All Trends

☐ XY Poly Trend Clear

c. At last, modify the button content to clear.

5. Clear XY curve

Similar to clear trend/event, choose reset content in XY poly trend item.

Event Button

Event | Button | Color | Position

Trend Type Function

☐ Trend/Event Prev Page

☐ Time Trend



☒ Time Axis Left (Thin) Rate 20 /10


☐ Y Axis Up (Thin)

ID All Trends

☒ XY Poly Trend **Clear**

Q22 How to make the scroll texts in the screen?


1.  scroll text: the text can move from right to left of the screen, and it will disappear when it moves to the end of left. Then it will come out from right.
2.  move animation: you can draw the moving line, and also can control the speed of it. (the best choice)
3. The animation function in the text button.

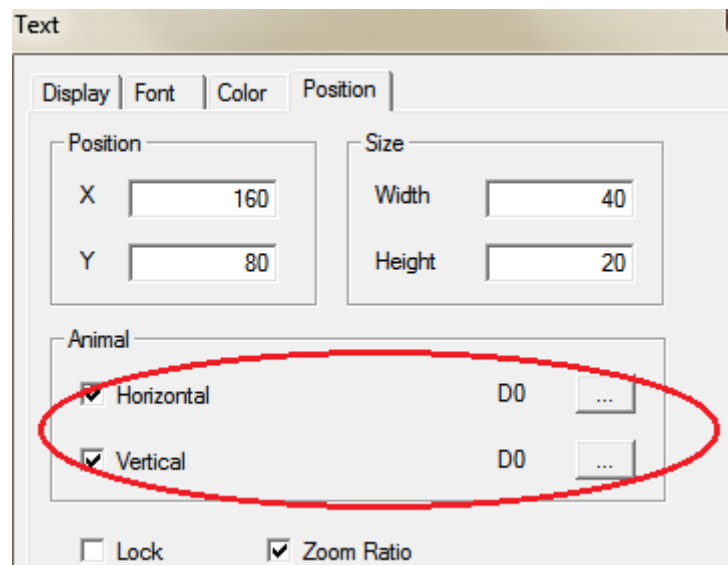


To move the text in different direction by changing the register value.

Q23 How to set password for HMI components?

1. For example, we use button. Please choose the password function and choose the password level.

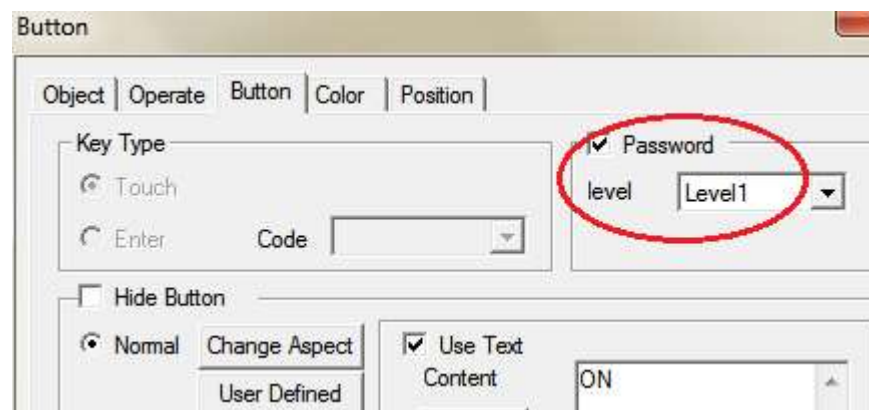


2. Open the "File/setting/para, choose password function and choose the password level.

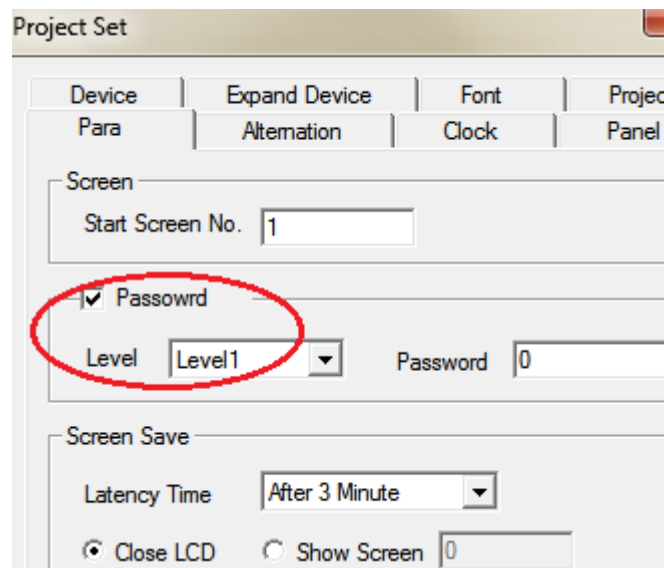

3. Set the screen jump button, the screen ID is 60001(the screen to input password).
4. Download the program to the HMI. Press screen jump button to input the password. Then you can operate the button which has password.

Q24 How to make a keyboard in the software?


Set the ASCII code in user input button. Then arrange these buttons as the keyboard order.

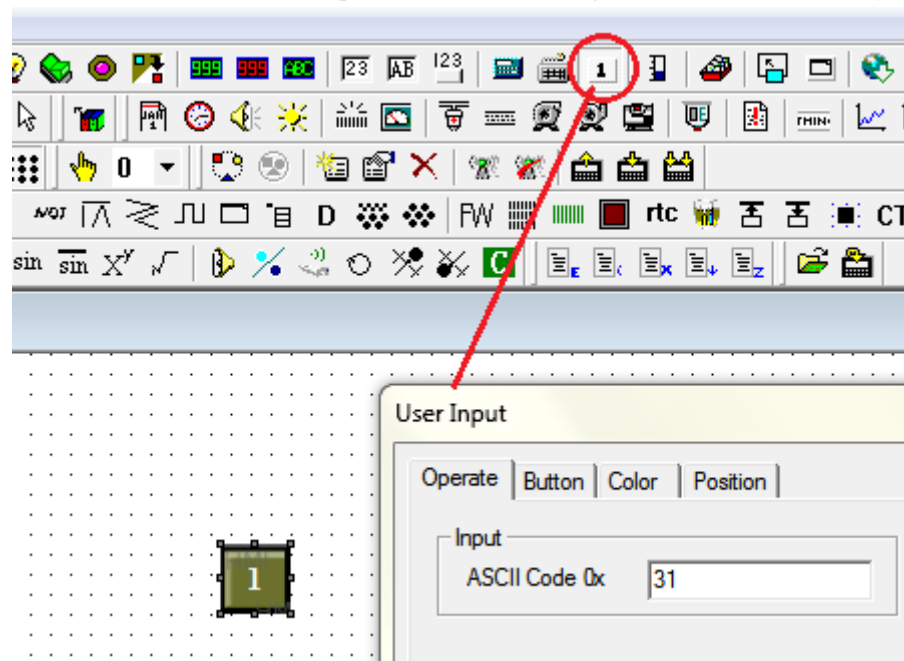

Q25 How to calculate the PFW quantity used in the program?

1. PFW quantity of data sample export


a. the storage size is m.

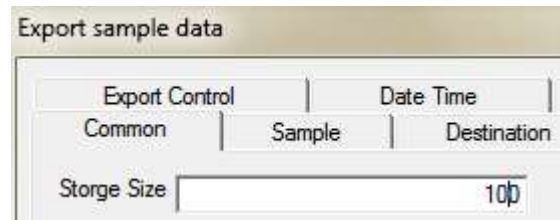

Export sample data

Export Control		Date Time
Common	Sample	Destination
Storage Size		100


b. sample data quantity is n.

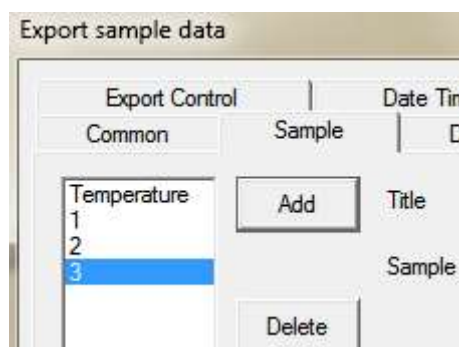

Export sample data

Export Control		Date Time
Common	Sample	D
Temperature	Add	Title
1		
2		
3	Delete	Sample

c. the time and date occupy six PFW registers.

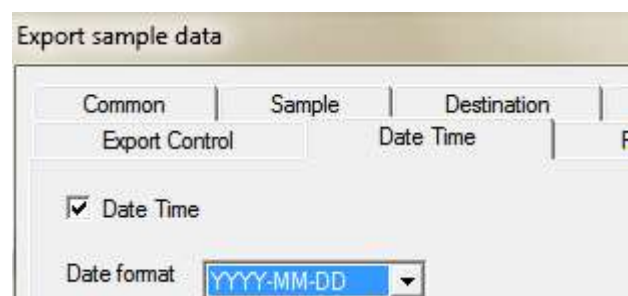

Export sample data

Common	Sample	Destination
Export Control	Date Time	P
<input checked="" type="checkbox"/> Date Time		
Date format: YYYY-MM-DD		

The PFW quantity:

If exporting the clock, the quantity of PFW is: $m \times (n+6)$


If not exporting the clock, the quantity of the PFW is: $m \times n$

2. The PFW quantity of sample save.

The same method of item 1.

3. The PFW quantity of history trend map


a. the trend source is n

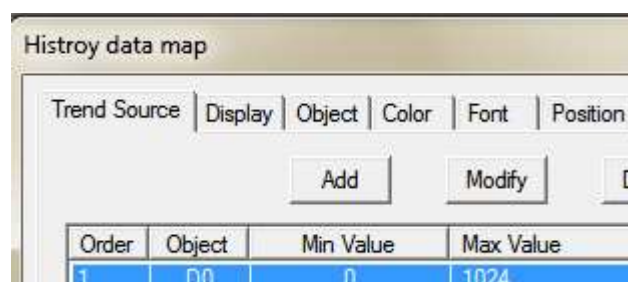

History data map

Trend Source	Display	Object	Color	Font	Position
Add Modify D					
Order	Object	Min Value	Max Value		
1	D0	0	1024		


b. the total data is m

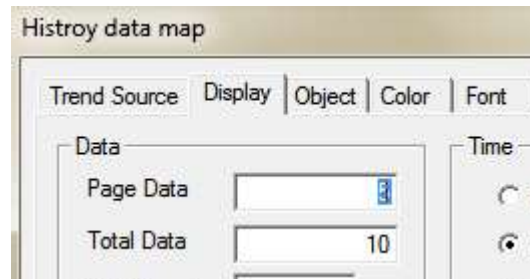


c. The history trend map can save the time and date. The date and time will occupy 6 registers.
The quantity of PFW is: $m \times (n+6)$

4. The PFW quantity of time trend map.

a. the storage size is m

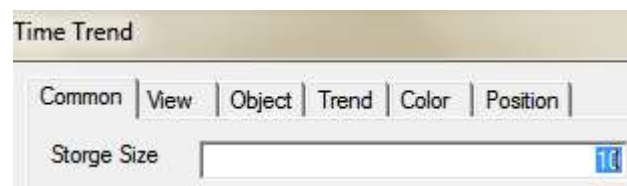

b. the line quantity is n

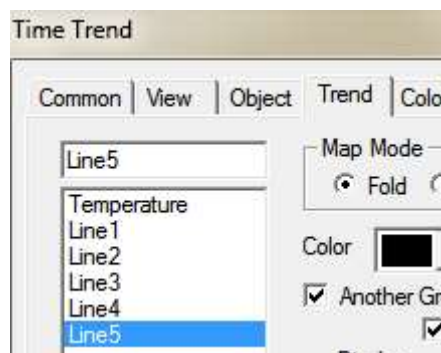

c. The time trend map can save the time and date. The date and time will occupy 6 registers.
The quantity of PFW is: $m \times (n+6)$

5. The PFW quantity of history event.

a. the event capacity is m

b. every event contains: spring time (occupy six registers) and informations (occupy one register) and affirm time (occupy six registers). Every event will occupy 13 PFW registers.

Spring Time	Info	Affirm Time
-------------	------	-------------

The PFW quantity is: $(m+1)*13+4$

Q26 What's the meaning of PSW/PFW/PSB/PRW/PHW?

There are 5 kinds of internal registers: PSB, PSW, PFW, PRW, PHW

Register	Notes
PSB	Bit object
PSW	Word object
PFW	Power loss retentive Word object
PRW	Power loss retentive Word object
PHW	Power loss retentive Word object (selectable)

Note: PHW will be provided when you indicate specially, and the TH465 has no PHW. It only has PRW.

The range of internal registers:

Modle Object	TG865/TGA62
PSB	256~1024
PSW	256~4096
PFW	256~410, 0000
PRW	None

PSB, PSW, PFW: the registers address from 0~255 are occupied by the system.

Note: refer to chapter 5 for internal registers details.

Q27 Why does the HMI screen become white?

1. some project has many screens and much communication data. The screen will become white if the PLC communication cable is not inserted in the screen. If you insert the communication cable, the white screen will disappear immediately.
 2. The power supply voltage of HMI is low.
 3. Turn on DIP switch 2 of MOP series. Then power on the HMI again.
- If it shows loading screen, it is not the reason of hardware. Some system address, such as PFW0~256 or PSW0~256 and so on, may be used by the program. If the screen is still white, the hardware may have some problems.

Q28 The HMI touch screen has problem?

1. The HMI mounting problem

Take off the HMI from the control cabinet, and operate it. If the operation has no problem, it indicates that it is caused by mounting problem. You need to measure the installation size. Don't mount too tight, otherwise the pressure of the touch panel will be too high.

2. The communication is not well

3. Make a program and test

Set a light button PSB300, and download it to the HMI to test the touch situation. If the touch function is not good, turn on DIP switch 3 to calibrate the touch screen for MT series.

If the new program has no problem, you need to check according to the following steps:

- a. indirect address is used (the indirect address is from communication device)
- b. when you use the event buttons, please don't set two or more trend maps or common grid at the same time.
- c. When adjust the size of common grid, it will have offset after downloading to the HMI. You can click each attribute in the software and download again.

Q29 What is the operating temperature and the storage temperature of HMI?

Operating temperature: 0°C~ 50°C


Storage temperature: -10°C~ 60°C

7-7. Hide the button

The buttons support hide function: text, dynamic text, variable text, button, lamp, lamp button, data display, alarm display, text display, data input, text input, Chinese input, set data, user input, window button, down

recipe, up recipe, function button, clock button.
For example, hide the lamp button.


1. Choose coil control in the lamp button setting window.

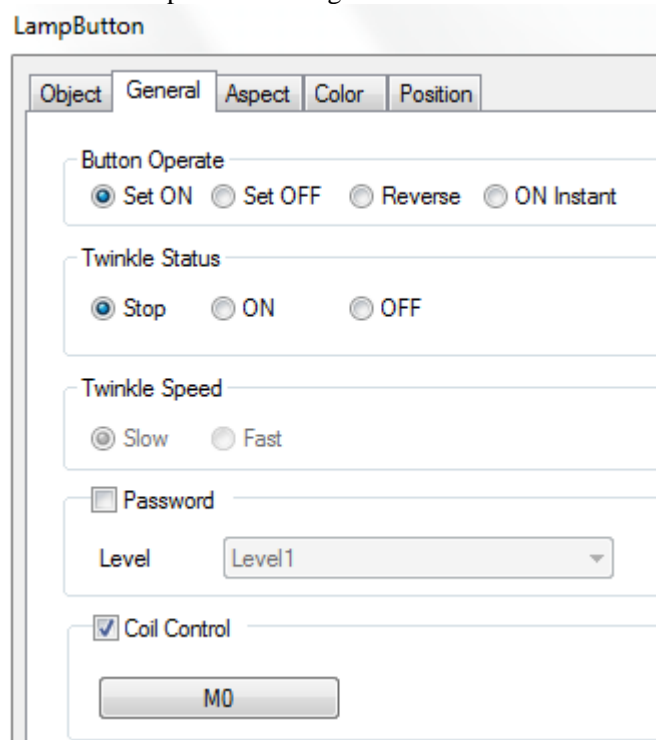


2. When M0=1, the lamp button will hide.

7-8. Hex keyboard

When data input type is hex:

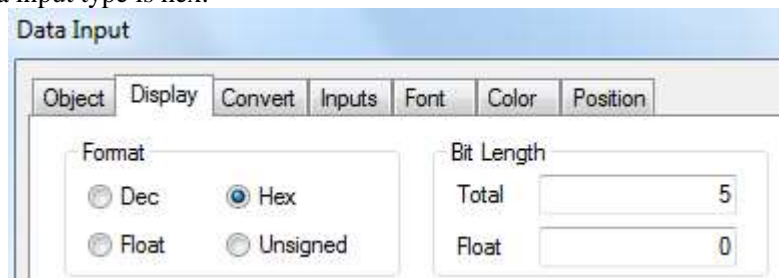


Please choose keyboard_8 (hex input keyboard):

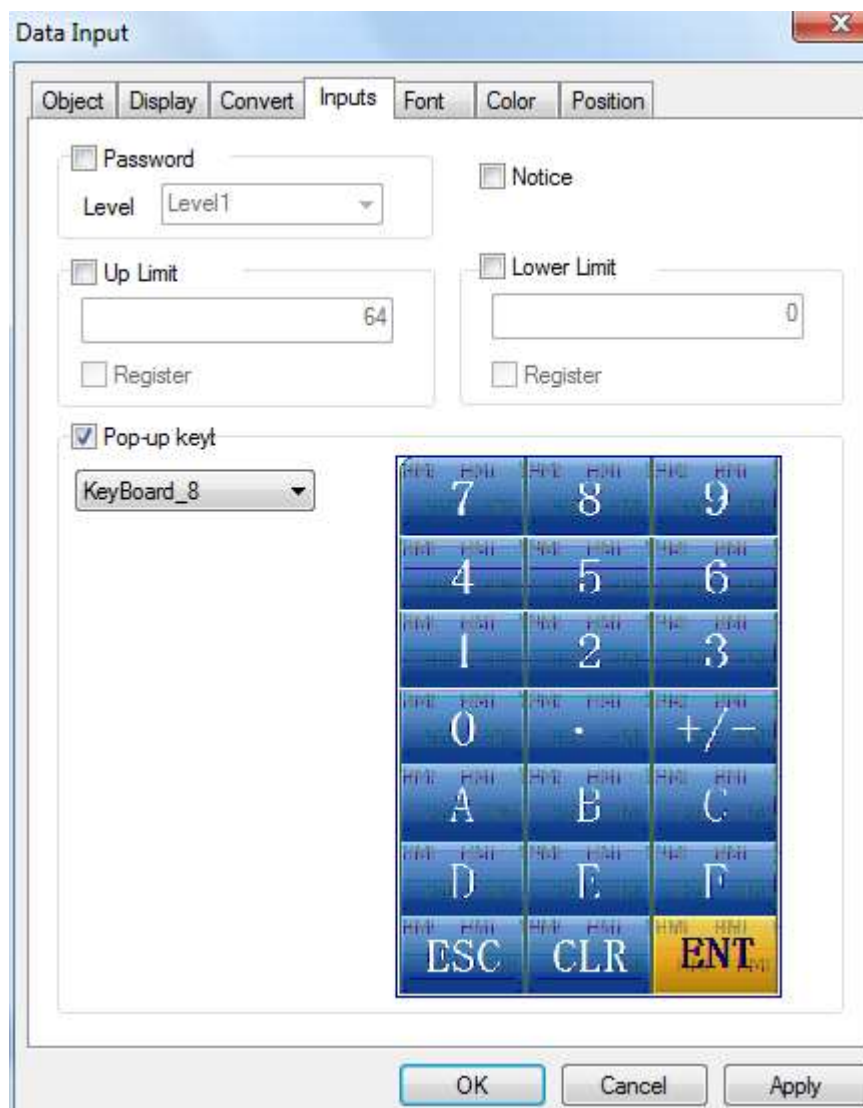


7-9. Picture rotation

Picture rotation function only support the pictures import from material library or map.

For example, import one picture from material library. Choose 11.bmp and click open to add it in the screen.

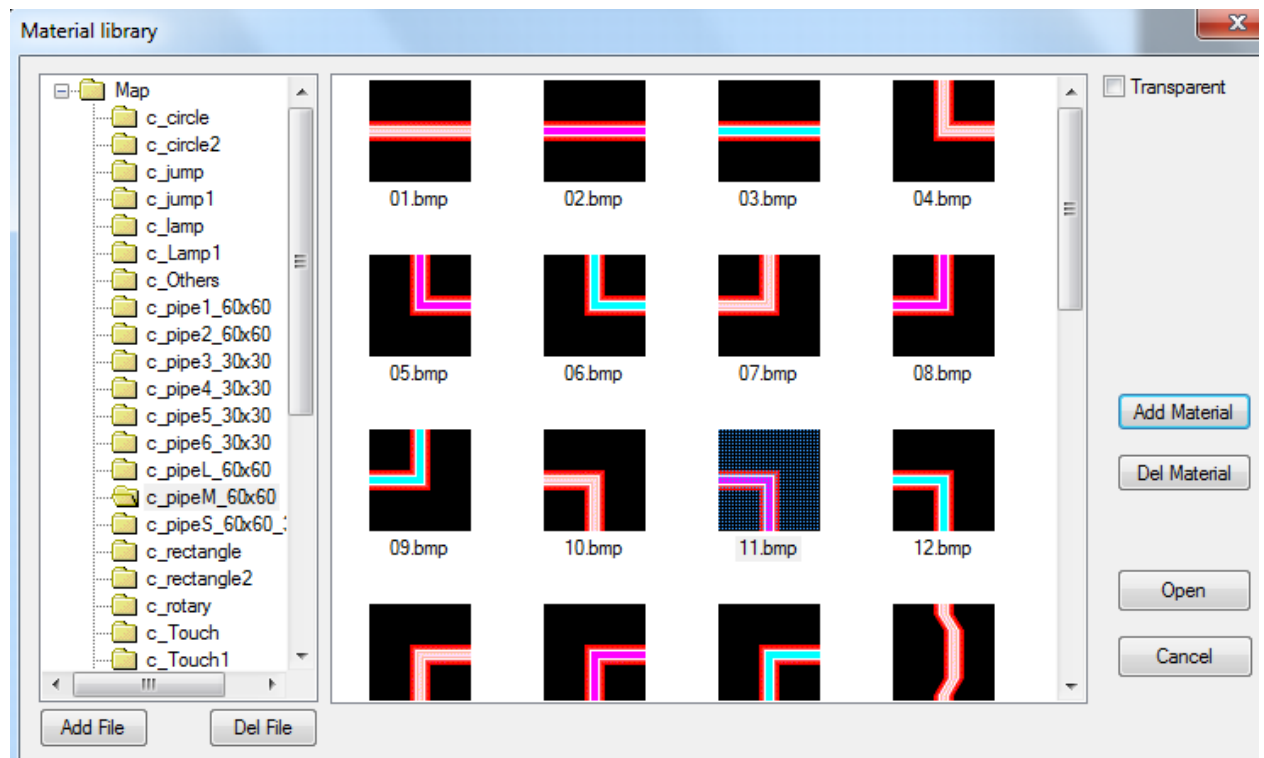

Click rotate 90 degree (clockwise/counterclockwise) button , the picture will rotate as required.



7-10. Set limit through register for data input button

For example, up limit = D0, lower limit = D10.

If D0=100, D10=10, the data input range is from 10 to 100.



7-11. Button alignment

If the buttons in the screen is messy, please use alignment function to make them in order.
The alignment modes include left-aligned, middle-aligned, right-aligned, up-aligned, down-aligned, etc.




7-12. Undo



undo function can cancel the former operations.


7-13. Variable string

Compared to version v2.c.6, new version v2.d.1 supports row change of text label.

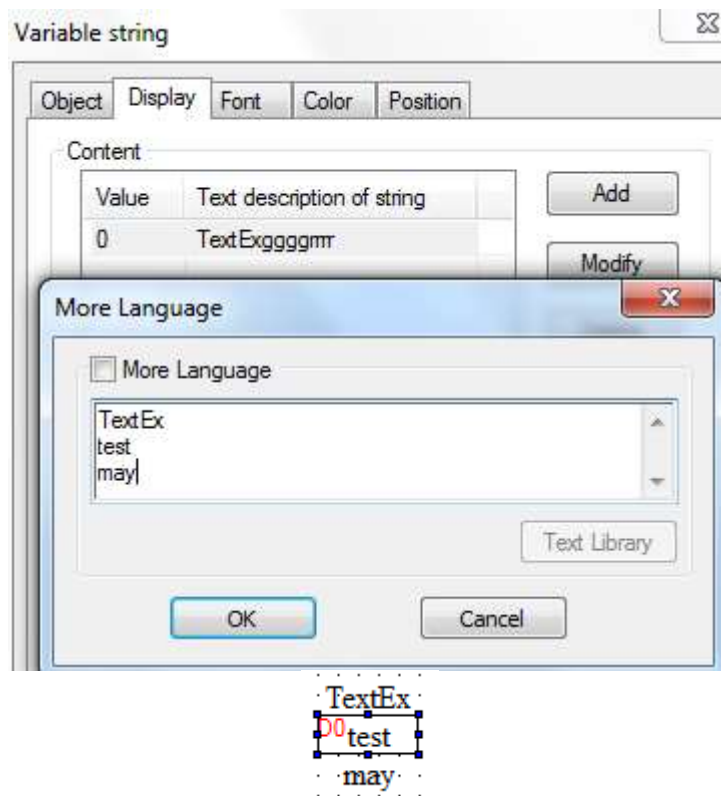


7-14. Import/export data type

For v2.d.1 and higher version, the data type of sample export support string.

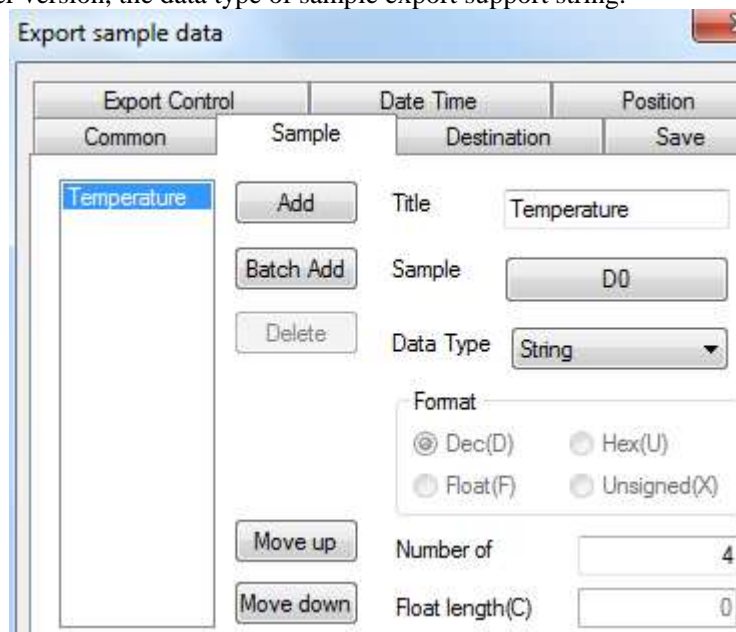


Data grid also can support string.

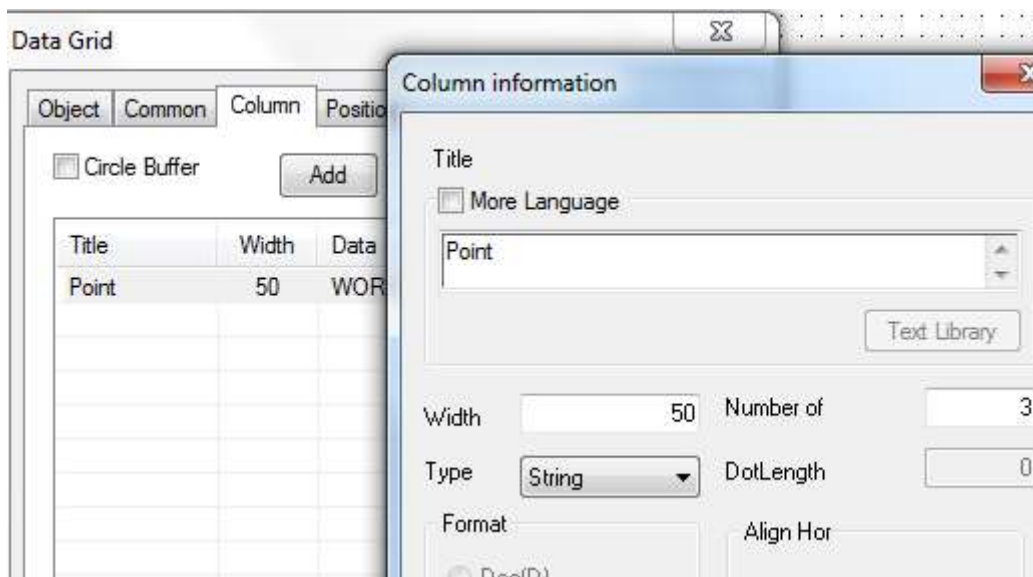

7-15. Print function

The print function only supports micro-printer.


User can set the print function in File/setting. The print modes include 8 lattice and 24 lattice.

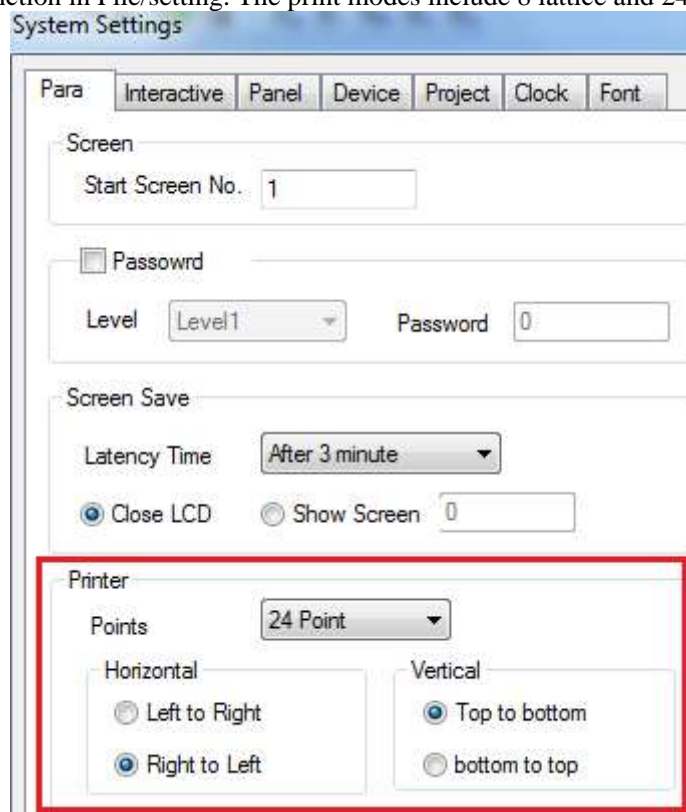


7-16-1. Proportion function of data input

For example, HMI data input range is 4~20 (float), PLC data range is 0~18432. When user input 4 in HMI,

 the real data in PLC D0 is 0.


1. Click data input button , set the object address to D0, data type is Dword.

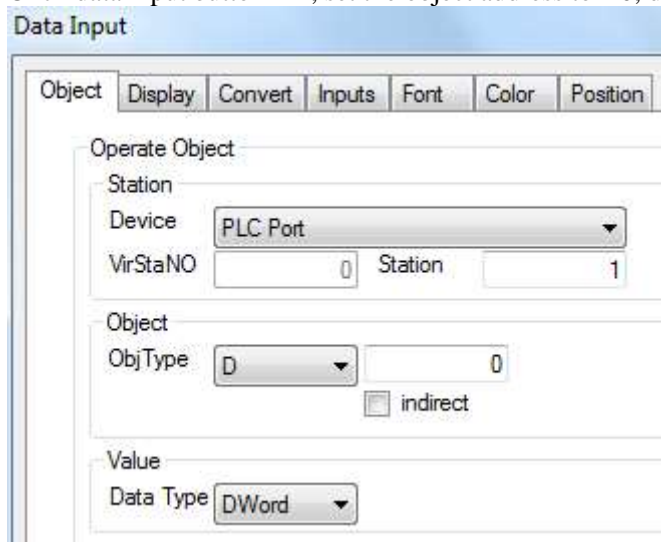

The 'Data Input' dialog box is shown with the 'Object' tab selected. It contains the following fields:

- Operate Object:**
 - Station: (empty)
 - Device: PLC Port (dropdown)
 - VirStaNO: 0 (text box)
 - Station: 1 (text box)
- Object:**
 - ObjType: D (dropdown)
 - 0 (text box)
 - ☐ indirect (checkbox)
- Value:**
 - Data Type: DWord (dropdown)

2. The display tab defines the input data format and bit length.

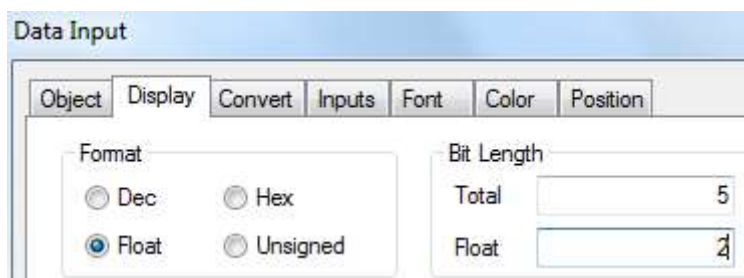

The 'Data Input' dialog box is shown with the 'Display' tab selected. It contains the following fields:

- Format:**
 - ☐ Dec
 - ☐ Hex
 - ☒ Float
 - ☐ Unsigned
- Bit Length:**
 - Total: 5 (text box)
 - Float: 4 (text box)

3. Convert tab

Input convert: source data range is 4~20 (HMI); result data range is 0~18432 (PLC).

Show convert: make the calculation result 0~18432 as data source, then change them to float value 4~20.

After setting, when user input 4 in HMI, the HMI will show 4, but in PLC D0, the value is 0 in fact.

Data Input

Object

Display

Convert

Inputs

Font

Color

Position

☒ Input Convert

Source

Upper

20.000000

☐ Register

...

Lower

4.000000

☐ Register

...

Result

Type

Dec

Upper

18432

☐ Register

...

Lower

0

☐ Register

...

☒ Show Convert

Source

Type

Dec

Upper

18432

☐ Register

...

Lower

0

☐ Register

...

Result

Upper

20.000000

☐ Register

...

Lower

4.000000

☐ Register

...

7-16-2. Proportion function of data display

For example, PLC data range is 0~18432, HMI data display range is 4~20.

1. Click data display button, set the object address to D0, data type to Dword.

Display Data

Object Display Font Color Position

Station
Device
VirStaNO Station

Object
ObjType
☐ indirect

Value
Data Type

2. As the proportion of 18432/20, the result is float value. Please choose float type data in data display button.

Display Data

Object Display Font Color Position

Format
☐ Dec ☐ Hex
☒ Float ☐ Unsigned

Bit Length
Total
Float

3. In convert item, please enter the source and result value range.

☒ Convert

 
Source
Type
Upper
☐ Register
Lower
☐ Register

Result
Upper
☐ Register
Lower
☐ Register

4. Then when the D0 in PLC is 18432, the data displayed in HMI is 20.00.

7-17. Upper/lower limit for calculation result

The calculation result of set data, function button, function field support upper and lower limit. For example, use two set data buttons. One button is auto plus one, another button is auto minus one. The result range is 0-5.

1. Click set data button , the object address is D0, the data type is word.

Setting data

Object Operate Button Color Position

Station

Device PLC Port

VirStaNO Station 1

Object

ObjType D 0

☐ indirect

Value

Data Type Word

2. The function is plus operation, the operand is 1. The upper limit is 5, the lower limit is 0.

Setting data

Object Operate Button Color Position

Function

☒ + ☐ - ☐ * ☐ / ☐ Constant

Operand 1

Format

☒ Dec ☐ Hex ☐ Float ☐ Unsigned

☒ Up Limit 5 ☐ Register Up Limit


☒ Lower Limit 0 ☐ Register Lower Limit

3. The button name is +1.

4. Repeat the step 1-3 to make button -1.

Then download the program in the HMI. Press +1 and -1 button to change the D0 value. When D0=5, +1 button cannot increase the D0 value. When D0=0, -1 button cannot decrease the D0 value.


Function button and function field also have upper limit and lower limit for calculation result.

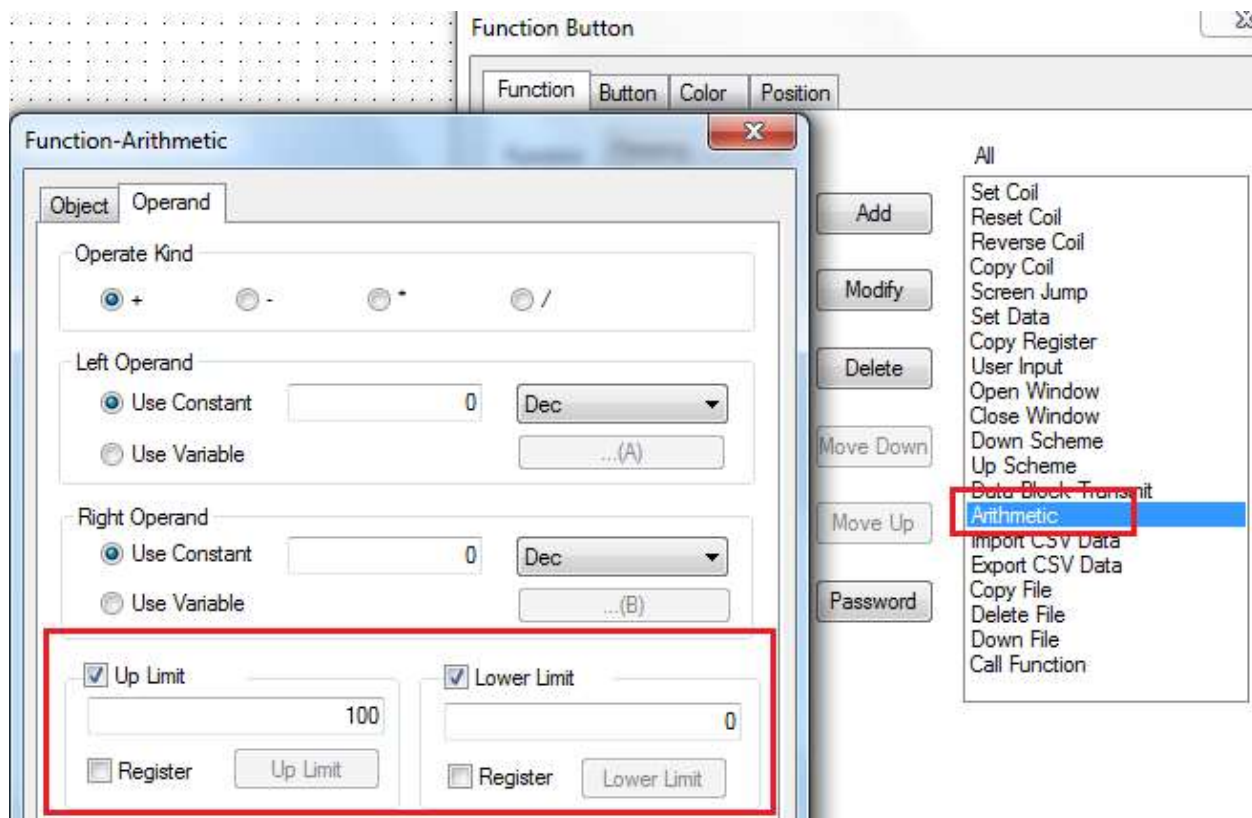

7-18.Scrolling text


This function can set the scrolling speed.

The pixels that the text has walked in 0.1s are the scrolling speed value. The larger the value, the faster the scrolling speed.

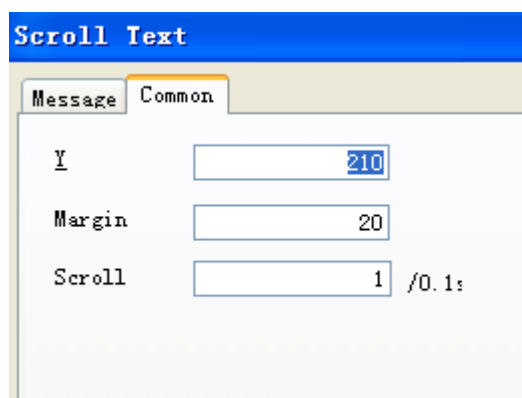


7.20 Rotate animation

1. Place a rotate animation component.

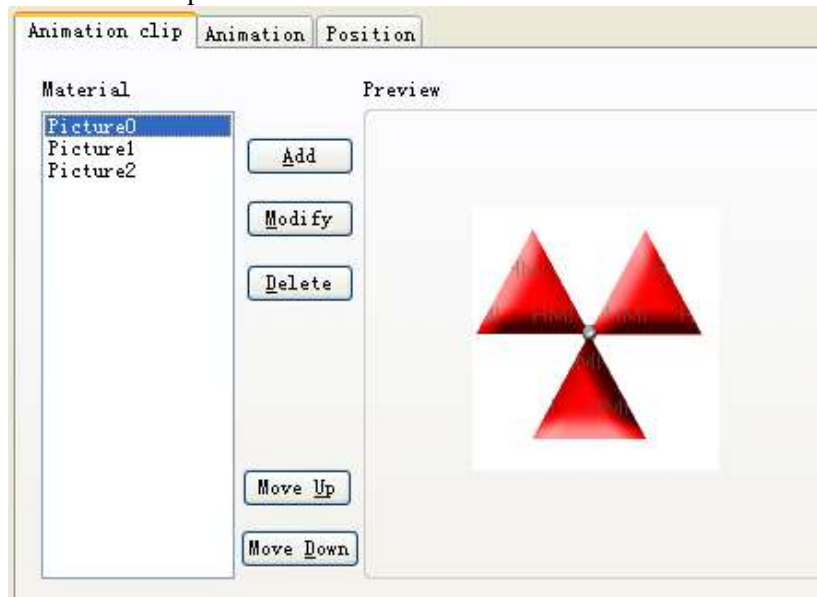

2. Click 'add' or 'modify' and select your picture from the material library;
3. You can double click the picture and modify the picture size, position.

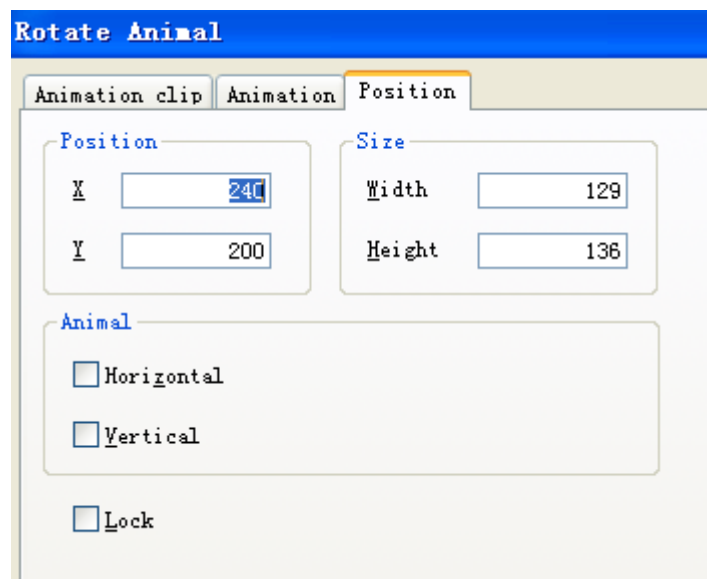

4. Animation attribute

Period: the animation running time, can be set to constant or specified by register.

Enable and reset: If only select 'enable' option and unselect the 'register controls' option, then the animation will always be running. If select the 'register controls' option at the same time, the animation will run only when corresponding coil is on. So does the reset function.

Mode: animation have random and continue mode. In continue mode, the picture will switch according to the default sequence. In random mode, the picture will switch according to your setting. For example, if write 1, 3 after random, picture will change between picture 1 and 3, picture 2 is not included.

Animation moving mode: single mode and trip mode. It also can set repeat the animation or not.

Coil control: when coil is on, the animation is visible; otherwise it is invisible.

7-21. Modbus function code switching

Some Modbus devices send 0x06 function code when write single word while others send 0x10 function code. The HMI register PFW36.2 can switch them in this software. When PFW36.2=0, send 0x06 function code. When PFW36.2=1, send 0x10 function code. After changing the value of PFW36.2, please restart the HMI to activate the function.

7-22. Public screen

The screen No.65535 is public screen. The buttons in this screen will be displayed on the top layer.

7-23. Screen saver

When the HMI is in screen saver mode, system coil PSB8 will be ON. When the HMI exits the screen saver mode, PSB8 will be OFF.

7-24. Turn off the backlight

When the system coil PSB9 is ON, the backlight will be OFF. The backlight will be ON again when touching any place on the screen.

7-25. Shielding user-defined device and station no.

The value in PFW130 (Dword) is m (the first address).

The shielding device and station no. table:

Device name	Each device covers 16 addresses. The 16 bits of each register mean the 16 station no. Setting ON the bit means shield the station no.
-------------	--

	For example: shield download port station no. 1: set ON PFWm.0. Shield download port station no.10: set ON PFWm.9. Shield download port station no.20: set ON PFW(m+1).4.			
	1	2	...	16
Download port	PFWm PFWm.0-PFWm.15 Means station no.1~15	PFWm+1 PFW(m+1).0- FW(m+1).15 Means station no.16~31	...	PFWm+15 PFW(m+15).0- PFW(m+15).15 Means station no.240~255
PLC port	PFW (m+16)	PFW (m+16) +1	...	PFW (m+16) +15
Extension port				
Reserved port				



This function will set value m in PFW130 (Dword). It will occupy 192 addresses starting from PFWm.

For example: set value 300 in PFW130 (Dword). PFW300.0 means download port station no.1 device. When this bit is ON, the download port station no.1 device will not communicate with others. PFW300.1 means download port station no.2 device. PFW316.0 means PLC port station no.1 device. PFW316.1 means PLC port station no.2 device.



MOP Soft Special function component

User's manual

Produtos Eletrônicos Metaltex.

INDEX

1	EVENT BUTTON	329
1.1	INTRODUCTION.....	329
1.2	PROCEDURE	330
1.2.1	<i>Display history event, Trend.....</i>	<i>330</i>
1.2.2	<i>Time trend control.....</i>	<i>333</i>
1.2.3	<i>XY poly trend</i>	<i>333</i>
1.3	NOTES	334
2	PROTECTION FUNCTION VIA PASSWORD.....	335
2.1	INTRODUCTION.....	335
2.1.1	<i>Direct mode</i>	<i>335</i>
2.1.2	<i>Indirect mode.....</i>	<i>335</i>
2.2	PROCEDURE	336
2.2.1	<i>Direct mode</i>	<i>336</i>
2.2.2	<i>Indirect mode.....</i>	<i>338</i>
2.3	NOTE.....	342
3	ALARM LIST	342
3.1	INTRODUCTION.....	342
3.2	PREOCEDURE	343
3.3	SAMPLES.....	345
3.3.1	<i>'Alarm list'editing.....</i>	<i>346</i>
3.3.2	<i>'Event button'editing</i>	<i>347</i>
3.3.3	<i>'Digital input'editing.....</i>	<i>347</i>
3.3.4	<i>'Lamp button'editing</i>	<i>348</i>
5.4	NOTES	348
4	DATA GRID & GRID CONTROL.....	349
4.1	INTRODUCTION	349
4.2	DESCRIPTION	349
4.3	DESCRIPTION ON SETTING	353
5	XY CURVE	357
6	SAMPLE SAVE	363
7	XY CURVE EX.....	369
7.1	INTRODUCTION.....	369
7.2	DESCRIPTION	369
7.3	DESCRIPTION OF PARAMETER SETTING	372
7.3	DESCRIPTION OF PARAMETER SETTING	ERRO! INDICADOR NÃO DEFINIDO.
8	TIME TREND CONTROL	374

8.1	INTRODUCTION.....	374
8.2	PROCEDURE	375
8.2.1	<i>'time trend curve' with 'Rotate overwrite' mode.....</i>	375
8.2.2	<i>'Time trend' with 'stop' mode</i>	383
8.3	DESCRIPTION OF PARAMETERS	386
9	MOVE ANIMAL	390
9.1	INTRODUCTION.....	390
9.2	PROCEDURE	390
9.2.1	<i>Track editing</i>	390
9.2.2	<i>Example- Scroll text</i>	395
9.3	DESCRIPTION OF PARAMETER SETTING	399
10	ROTATE ANIMAL	400
10.1	INTRODUCTION.....	400
10.2	PROCEDURE	400
10.2.1	<i>Introduction of simple animation</i>	400
10.2.2	<i>Example- butterfly</i>	406
10.3	DESCRIPTION OF PARAMETER SETTING	411
11	RECIPE	413
11.1	INTRODUCTION.....	413
11.2	EXAMPLE.....	413
11.2.1	<i>Write recipe datas to PFW registers.</i>	414
11.2.2	<i>Download Recipe</i>	416
11.2.3	<i>Modify and display the recipe data</i>	417
11.2.4	<i>Display name of the recipe</i>	419
11.2.5	<i>Switch button for Index.....</i>	420
11.2.6	<i>UPload recipe</i>	422
12	EXPORT SAMPLE DATA	ERRO! INDICADOR NÃO DEFINIDO.
12.1	PROCEDURE	ERRO! INDICADOR NÃO DEFINIDO.
12.2	EXAMPLE.....	ERRO! INDICADOR NÃO DEFINIDO.

Preface

This chapter describes how to use the Special function component ,including component introduction ,procedure and samples .Welcome to give good suggestions .

Note :Regarding common component please refer to <HMI manual Basic>

Please use 2.c.3 version of software or above to open the samples .


1 Event Button

1.1 Introduction


“Event Button” is used to be matched with data dealing component to achieve operations (page changing, confirm, movement). Its advantage is obviously in the performance of “History data map”, “Real Trend Map”, “Display history Event”, “Time trend control” and “XY curve” and so on.

Features:


- (1) “Page changing” matched with “history data map”

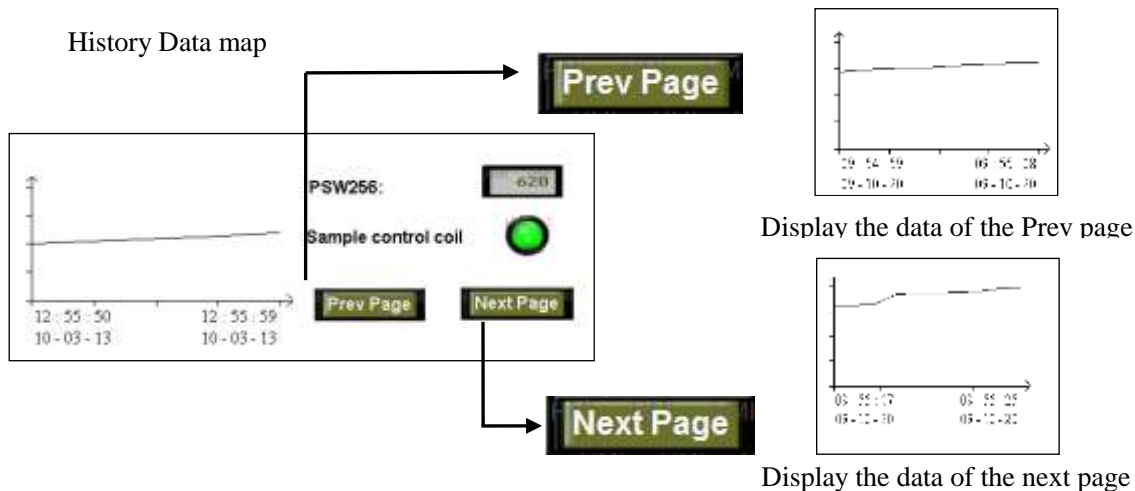


- (2) “Movement” matched with “Time trend control”

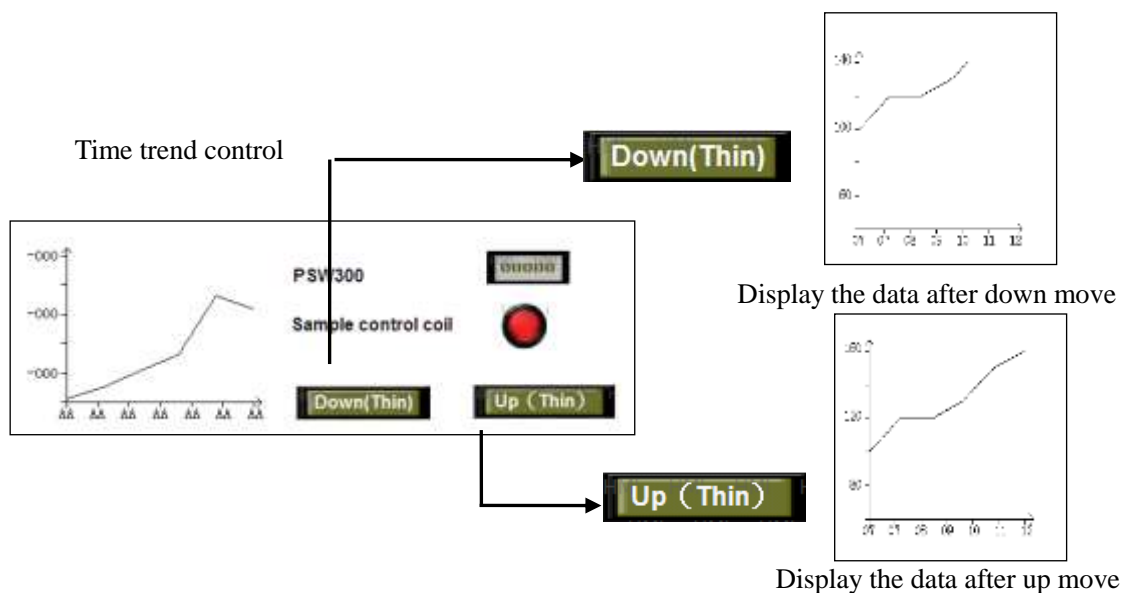


- (3) “Clear”, “Clear and draw”, “Reserve and draw”, “Repete and Draw” matched with “XY curve”

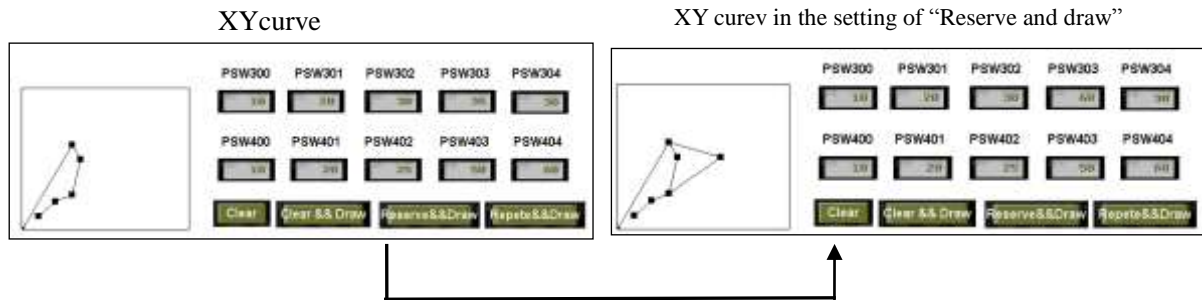

 1.2 Procedure

Step 1:click the component  from toolbar and leave it to the target position,as below

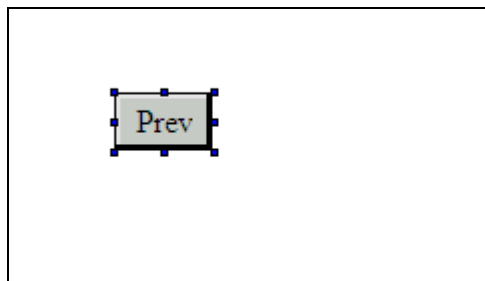

- Make it small or big via boundary points.

Step2 :property setting ,including “Event ,Button,Color,Position”
Property -----“Event”



According to event object,there are 3kinds:

- “Display history event,Trend ” : support “page changing,confirm,clear” operations
- Time trend: coordinate movement
- XY curve: Clear ,Clear and draw,Reserve and draw,Repete and draw

The following chapter will describe the procedure:

1.2.1 Display history event, Trend

- Display history event——confirm ,choose Item and page changing to the event

Trigger time	Event	Confirm time	PSB400	PSB401	PSB402	PSB403	PSB404
10-03-15 08:53	Over temperature	10-03-15 08:53					
10-03-15 08:53	Under temperature	10-03-15 08:53					
10-03-15 08:53	Over Hydraulic pressure	10-03-15 08:53					
10-03-15 08:53	Under Hydraulic pressure	10-03-15 08:53					

Shown as above

Prev Item,Next Item: press the key to move the Data frame up and down


Prev page,Next page :page changing

Confirm: check the confirm time


Clear record : clear all the data in the table

How to: Select “history event ,trend” in the “Event ”property,then click the corresponding operation “Prev item”, “Next item”, “Prev page”, “Next page”, “confirm”, “clear record”in the sequence of above.


For example : the setting of “Prev Item” is shown as below:

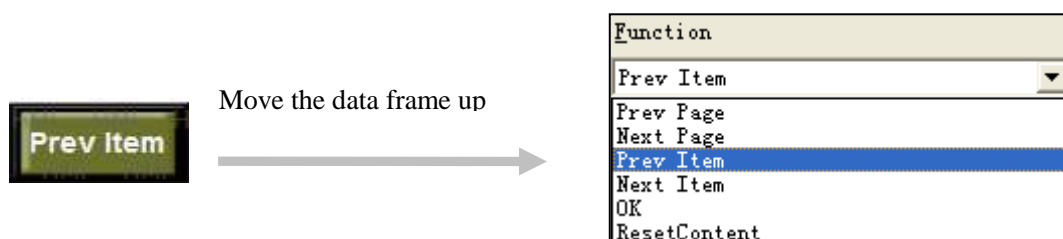


The setting of “Next page ”is shown as below

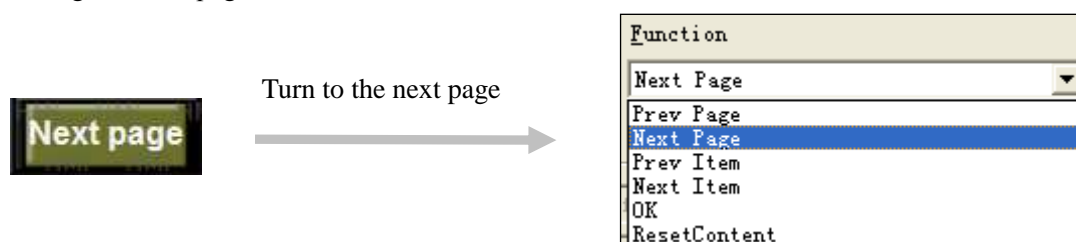

The setting of the “confirm”

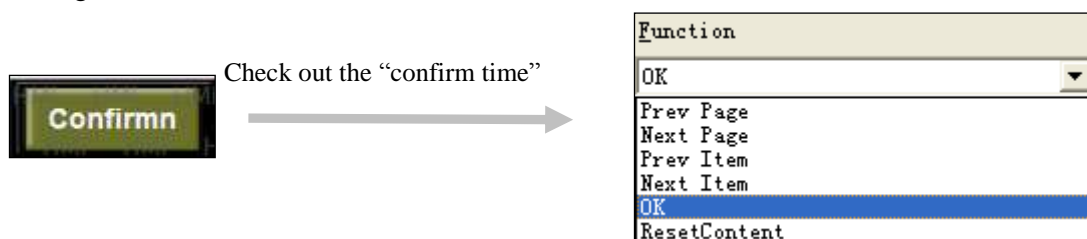


The setting of the “record clear”

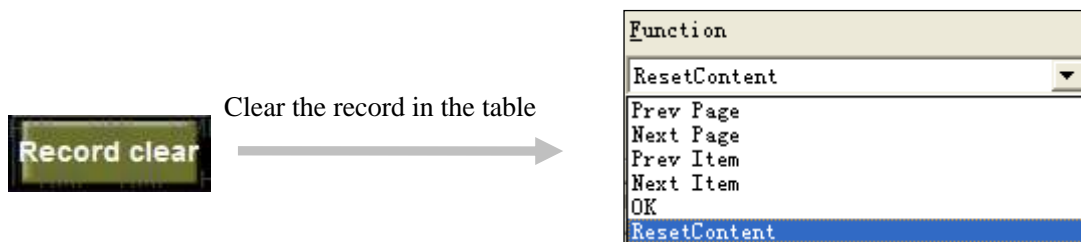


- History Data map—— Page changing (Prev page,Next page)

Display the data on defference page

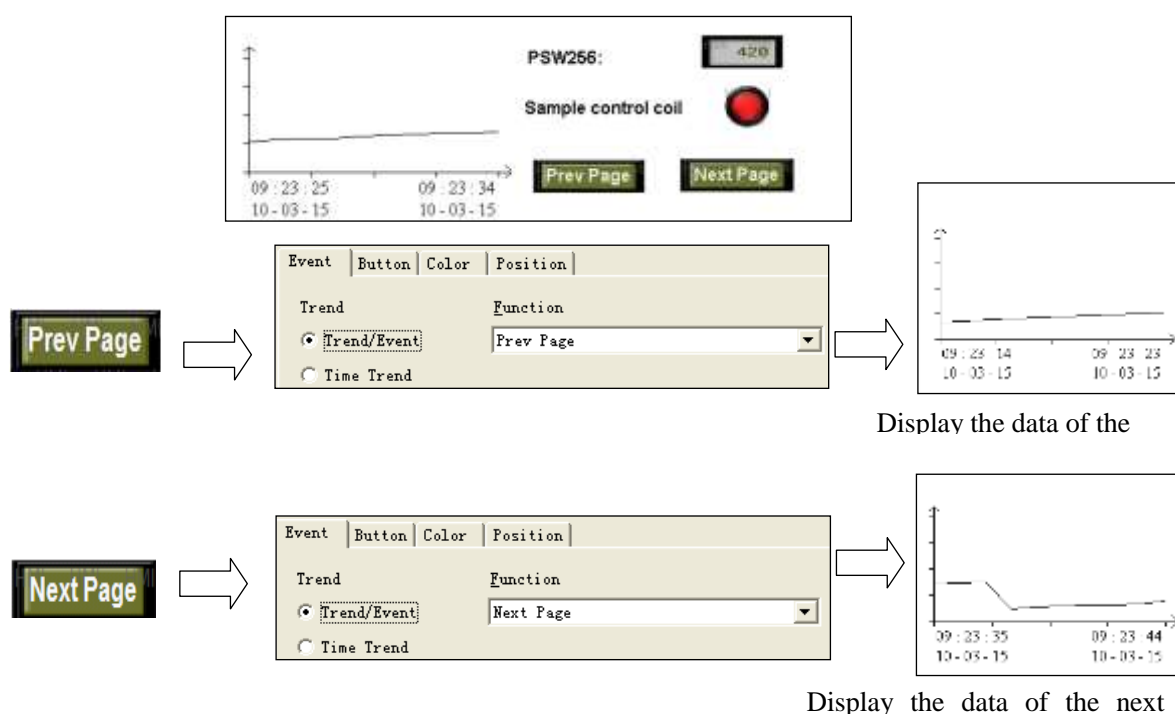

1.2.2 Time trend control

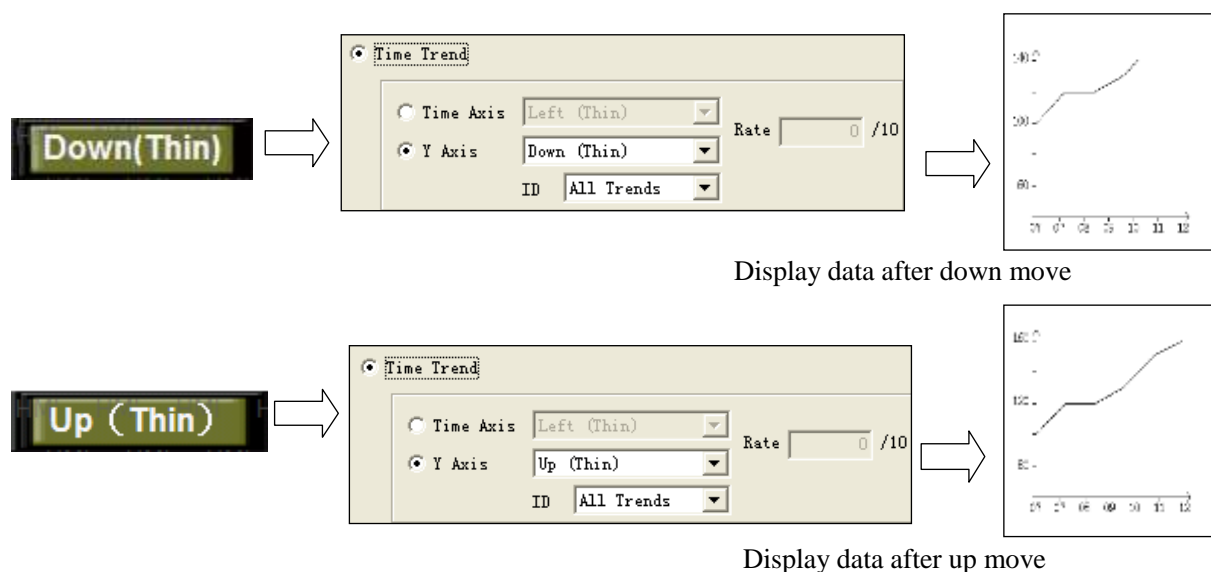

The function corresponding to time trend control is shown as below:

Move up(wide/thin):move the coordinate up(movement amount is based on the selection of wide or thin)

Move down(wide/thin):move the coordinate down(movement amount can be selected in wide or thin mode)

Zoom out(wide/thin): zoom the current coordinate out (the ratio is based on the selection of wide or thin)

Zoom in(wide/thin): zoom the current coordinate in (the ratio is based on the selection of wide or thin)


Show: show the current curve,corresponding with “hiding”.

Hide: hide the current curve,corresponding with “display”.

Reset: return to initialized value.

Zoom out/in in ratio:zoom the coordinate out or in according to the setting ratio.

1.2.3 XY poly trend

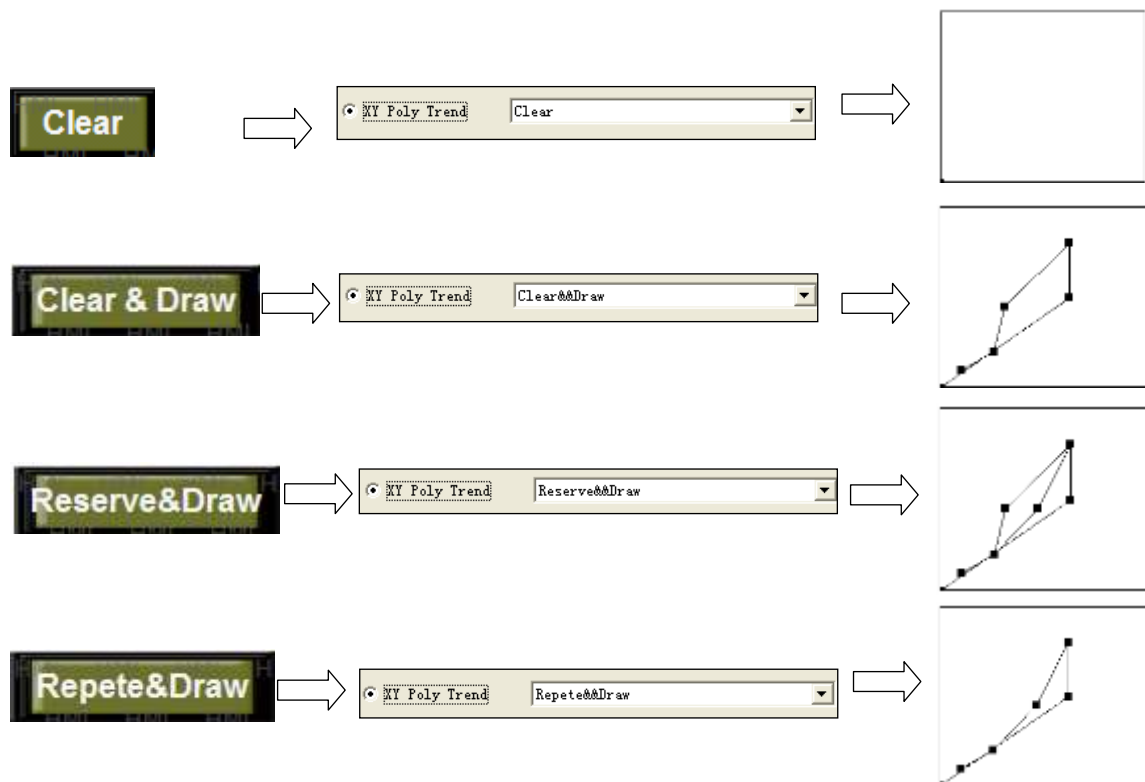

More details is showed as below:

Clear: all the curve is cleared.

Clear and draw: clear all the curve,then draw the new curve.

Rserve and draw: keep the old curve and draw the new curve.

Repeat and draw:draw the curve in circulation way,once the data changes ,the new curve replace the old curves.



More details regarding the property setting“button,color position”,please refer to the component “button”parts.



The details about “clear ,reserve and draw ,clear and draw, repeat and draw ”please refer to the component “XY curve” parts.

1.3 Notes

Only one objective component matched with “event button ” can be authorized in one screen,for example,if the event button is used for page changing of “display histroy data” , then this kind component like “history event”or “XY curve” is not allowed to use in this screen.

Protection function via password

2.1 Introduction

This function is used to limit the access authority.

There are 2 modes:


- (1) **Direct mode:**enter into the password screen after clicking the objective component. This mode is active only to “screen jump” component.
- (2) **Indirect mode:**jump into the “60001” screen via “screen jump” component, the objective component is available when the password is correct.

Component mached with this function is shown as below:

Mode	Component
Direct mode	Screen jump
Indirect mode	
Button	Button with lamp
Digital input	Text input
Set data	Window button
Down recipe	Up recipe
Event button	

2.1.1 Direct mode


Click the component “screen jump”,enter the password in the dialog box,then jump into the objective screen when the password is correct.

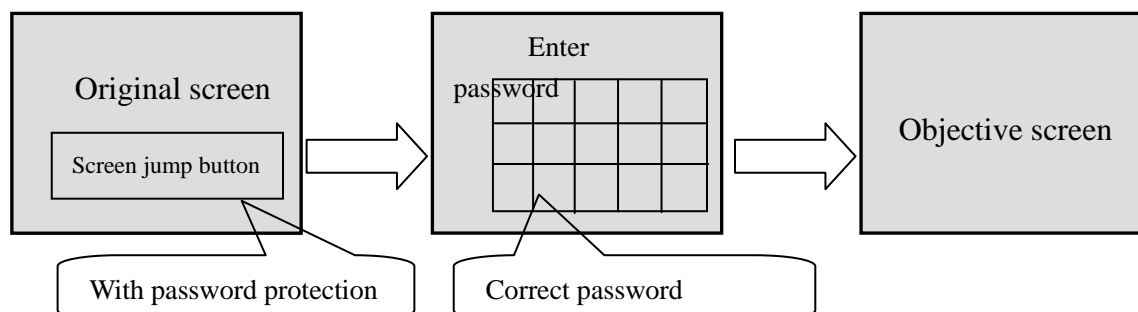

2.1.2 Indirect mode

When you use other component with password function ,please jump into “60001”screen to enter correct


password first.

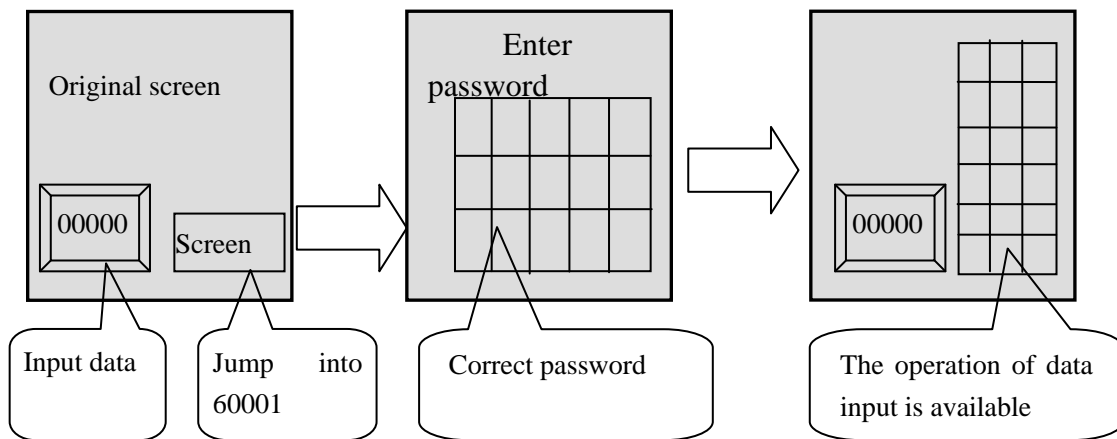

2.2 Procedure

2.2.1 Direct mode

This mode is available only to “screen jump” component.

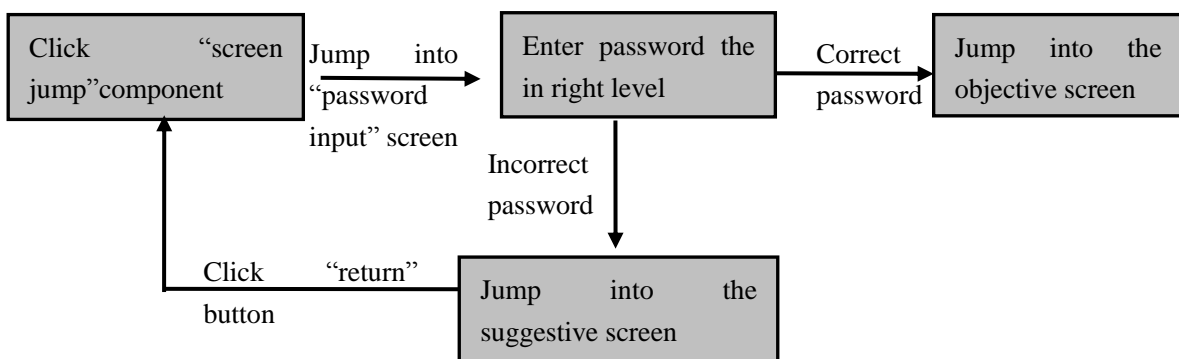


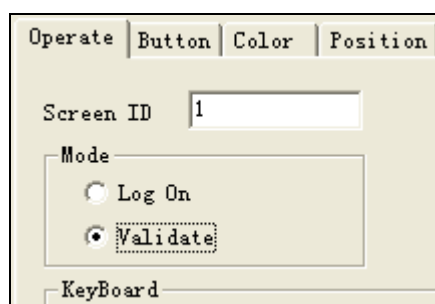
Purpose: jump into the second screen with correct password .

Procedure

The procedure is comprised of screen editing, system setting, and emulator offline.

Step1: screen editing

Screen1:Click component  from toolbar and leave it to the objective position,modify the property “operate”and “button”.



- Jump into the screen 2
- Select “validate”mode

● Change the text content

● Click the password level with “Level1”

Add screen 2:right click the screen in the project bar, press the insert then edit to show the screen ID.


Step 2: password setting

Set the password follow the path”file/system setting\parameters”


● Click “password”,choose the first leve, enter “1234”as the first level password.

Thus, screen editing and password setting are finished.

Investigate the run situation via emulator offline.
When the password is correct, then jump into the next page

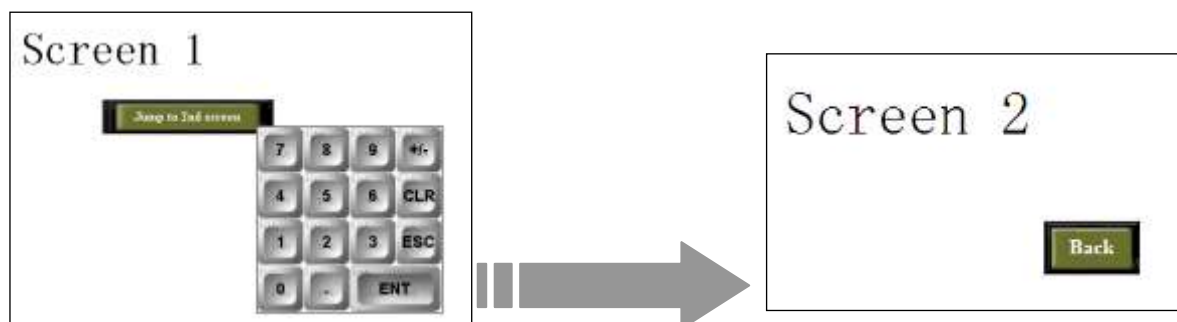


when the password is not correct, suggestive dialog box appears.

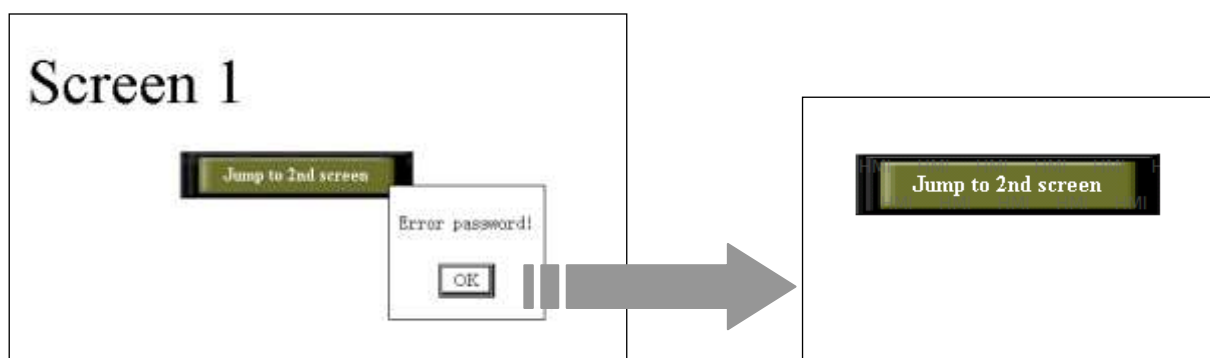

2.2.2 Indirect mode



Release the password limiting by jumping into the password screen first, then do the objective operation. The procedure is shown as below:

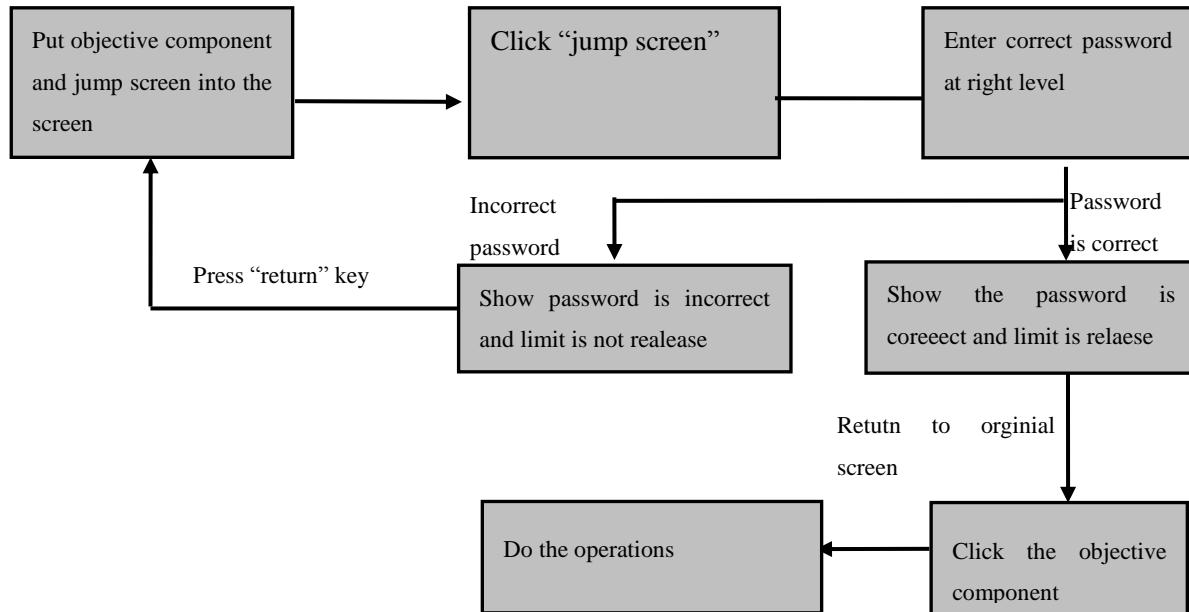

Purpose: the objective component is not available until the limit is released.

Procedure

 
The procedure is comprised of screen editing and system setting.

Step1: Click component  and , leave them to the objective position, shown as below



Set property of these two component.

Set the property "input" of "digital input" as below, others can be defined by users.

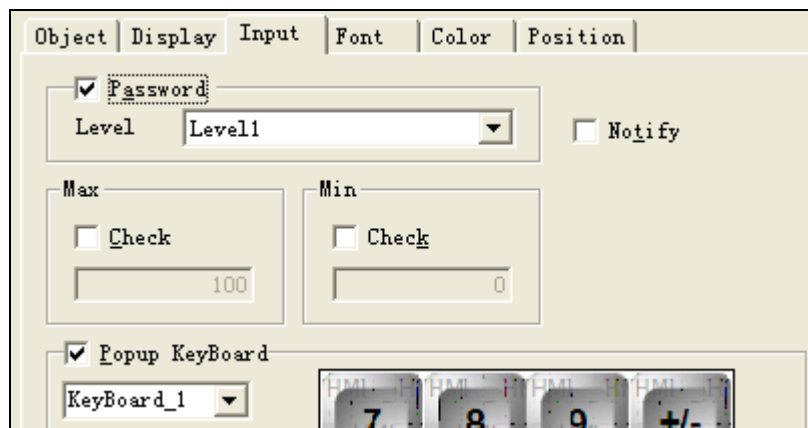

● Click the password at the first level.



More details regarding “digital input” please refer to introduction of component—digital input.

Set the property “operate” of “jump screen”,the other property can be defined by users.

- Set the screen ID on value “60001”,and this ID is the only active value
- Mode:log on
- Change the name to “enter password ”



More details regarding “jump screen” please refer to introduction of component“jump screen”.

Thus, the screen editing is finished.


Step2,set the system password

Set the password follow the path”file/system setting\parameters”

- Click the password with the first level,and set the password at the value”1234”


Investigate the run situations via emulating offline

We can see that the component “digital input ”is not available because of the limit.

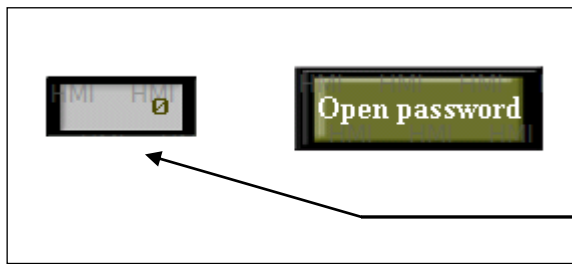

- Digital input is not available

Procedure

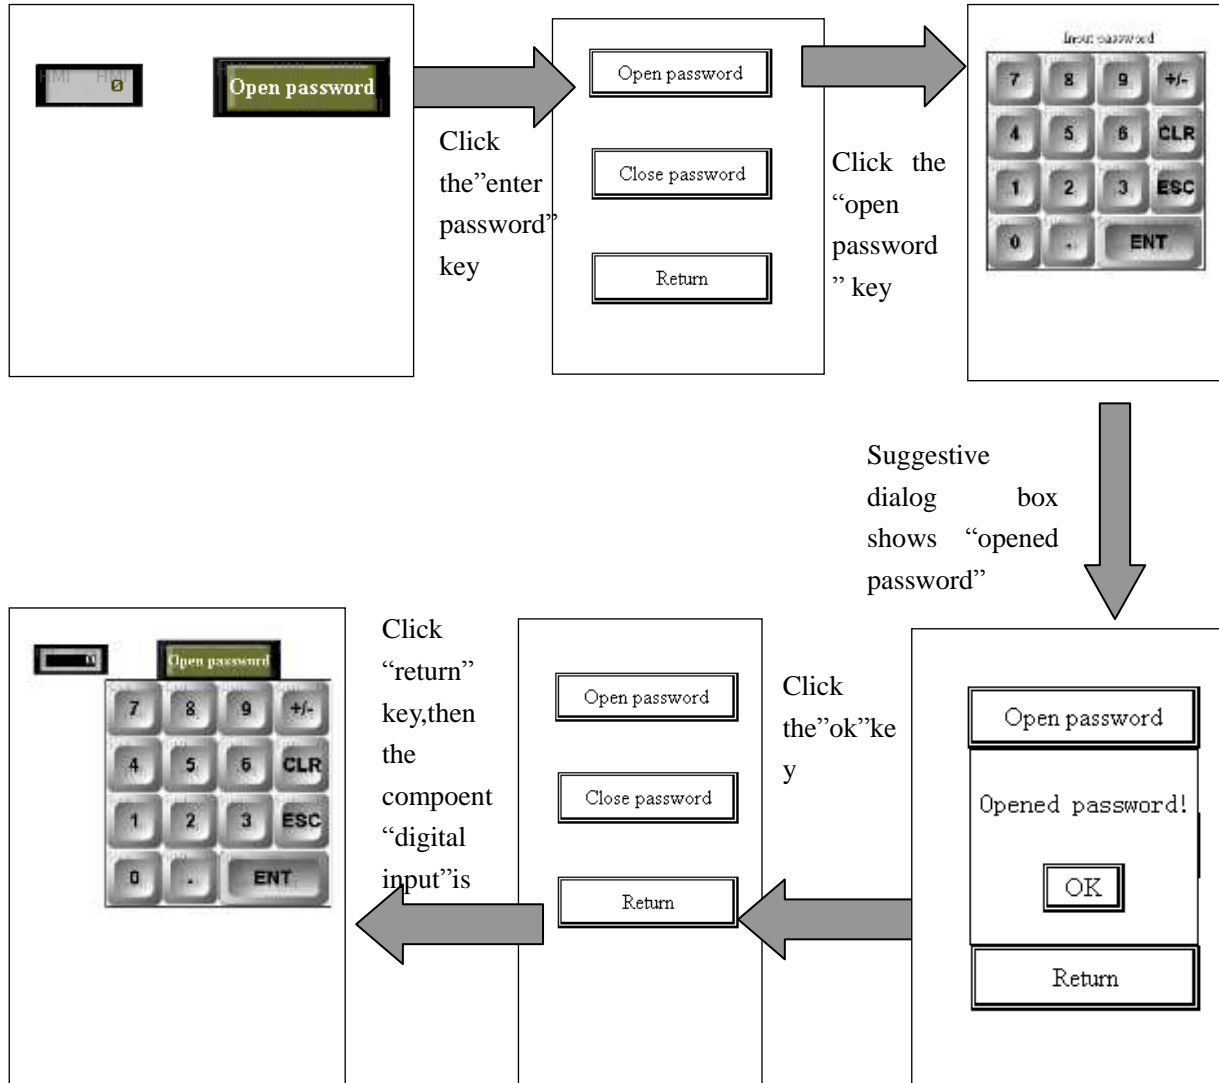

If the limit of the component is needed again, please jump into the "password screen" then close password, the protection is available again.

2.3 Note

Jump into “password screen” with ID60001 first to open password when you use indirect way with “validate mode”




The procedure regarding how to enter into advanced function mode please refer to the <HMI manual basic>

3 Alarm list


3.1 Introduction


Display alarm information when a problem occurs , usually matched with ‘text,dynamic text,digital display,event button’ components.

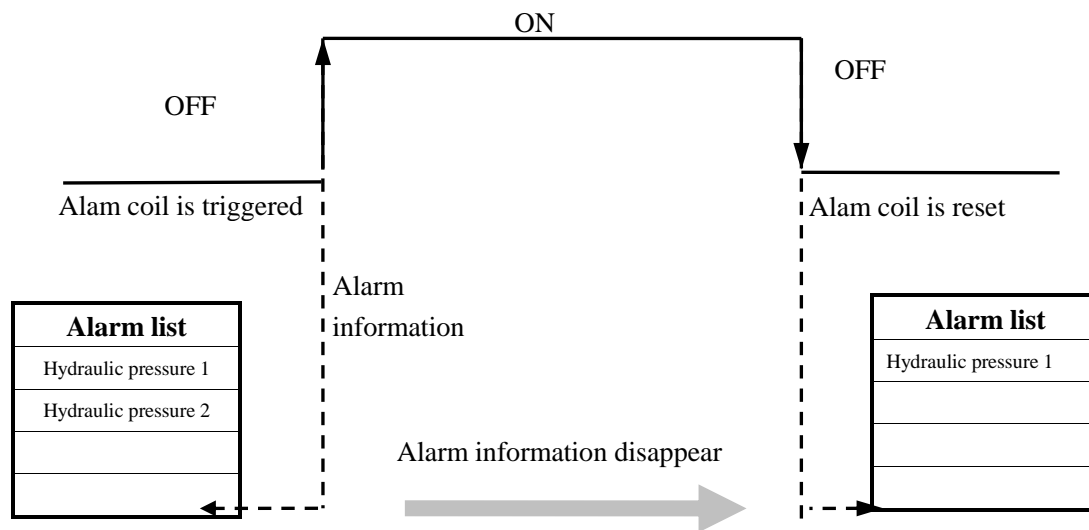

When coil M0 is triggered, display alarm information;
When M0 is reset, alarm information disappears.


3.2 Procedure

Step1; click the component  from toolbar and leave it to the objective position, is showed as below:

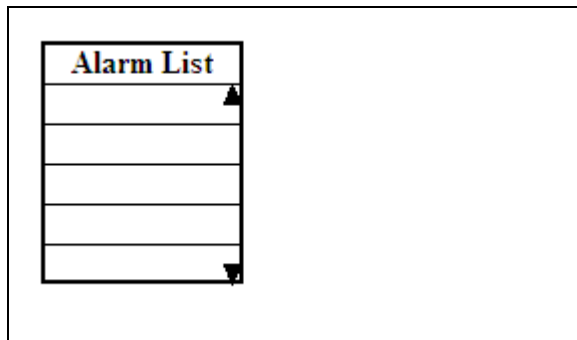


➤ Change the size via boundary point

Step2: set property, including 'common, alarm, font and position' items
property of 'common'

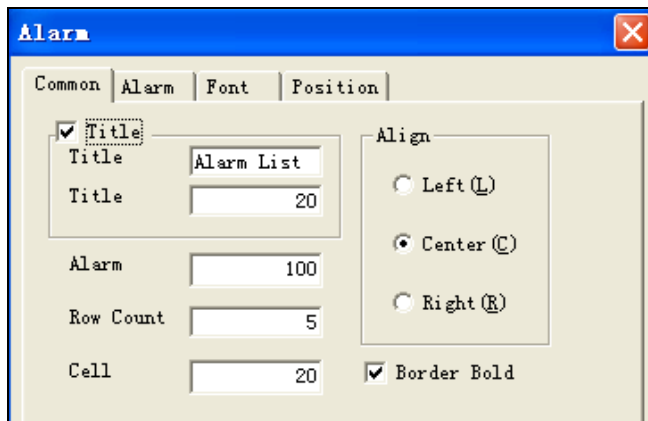


- Title: alarm list is showed with title, the width can be set.
- Align : select the align mode

property of 'alarm'

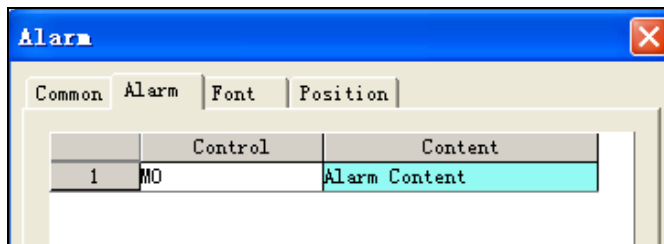


- Control coil: coil used to trigger the alarm
- Content : display alarm information

Alarm message adding or deleting

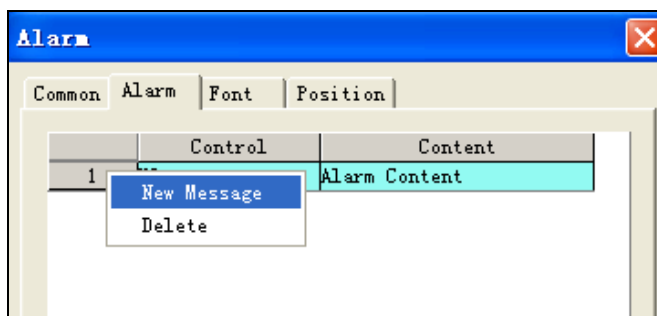


- Move to the NO. Position and right-click to select 'new message' or 'delete'.

How to do the operations with 'new text, new data and delete'

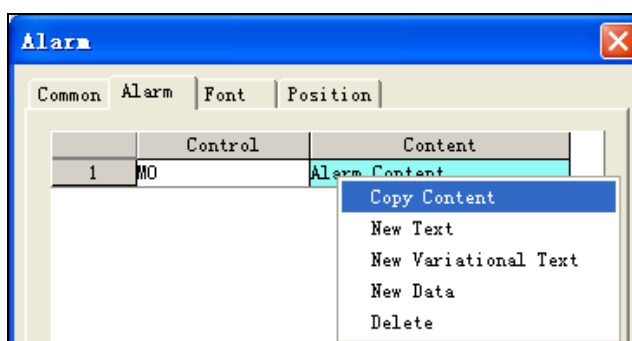


- Move to the 'content' position.
- Copy content: copy the content to another place.
- Paste content: paste the objective content
- New context: add new content
- New variational text: add variational text .
- New data: add new data
- Delete: delete the content


Details of above is showed as below:

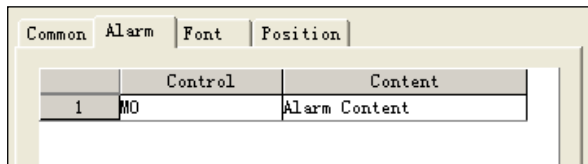

- Content is showed as left when “new content ”is selected

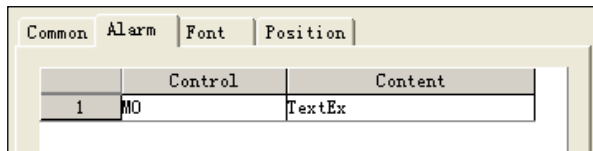

- Content is showed as left when ‘variational text’is selected.

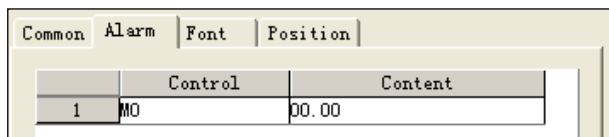


- Content is showed as left when ‘new data’is selected.



More details regarding ‘font ,position’please refter to ‘button’part.

3.3 Samples

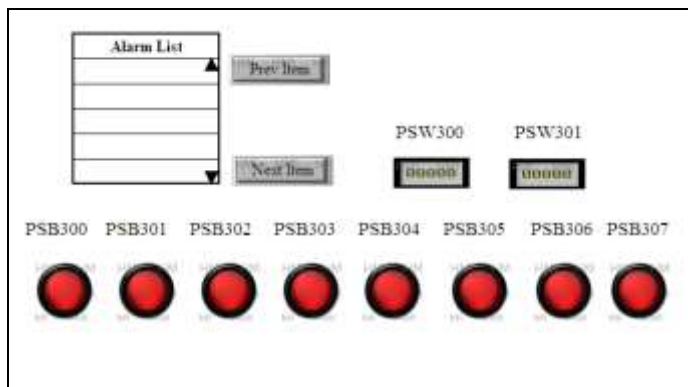


- In this example, alarm information is triggered by bit PSB300-PSB307,meanwhile the ‘variational text ’is based on value of register PSW300 and ‘data’ is according to register PSW301.


- Matched with ‘event button’,Alarm list can show more information.

The whole procedure can be comprised of 4 steps ,is showed as below:

Name	Property	Description
Alarm list	Display text	Show fluid level
	Display variational text	Show content based on register value
	Display data	Data indicator
Event button	Prev item,next item	
Digital input	PSW300、 PSW301;	Data input
Lamp button	8 lamp button from PSB300 to PSB307;	Trigger and reset alarm inforamation


3.3.1 'Alarm list' editing

Click component  from toolbar and set 'alarm' property as below:

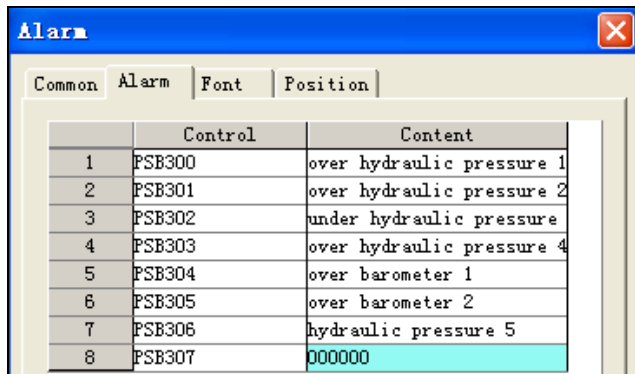


	Control	Content
1	PSB300	over hydraulic pressure 1
2	PSB301	over hydraulic pressure 2
3	PSB302	under hydraulic pressure
4	PSB303	over hydraulic pressure 4
5	PSB304	over barometer 1
6	PSB305	over barometer 2
7	PSB306	hydraulic pressure 5
8	PSB307	000000


- Add new messages to 8 items, from 1 to 6 are text, double-click to set property as below:

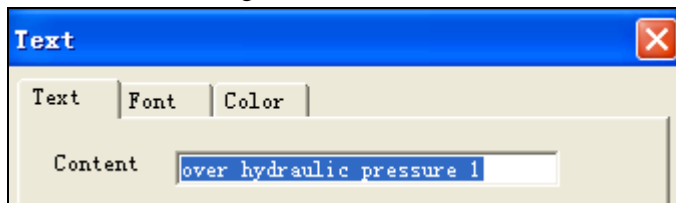

Text

Content: over hydraulic pressure 1

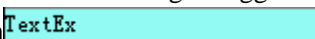- Alarm message triggered by PSB306 is referenced with PSW300, double-click this item , its property is shown as below:

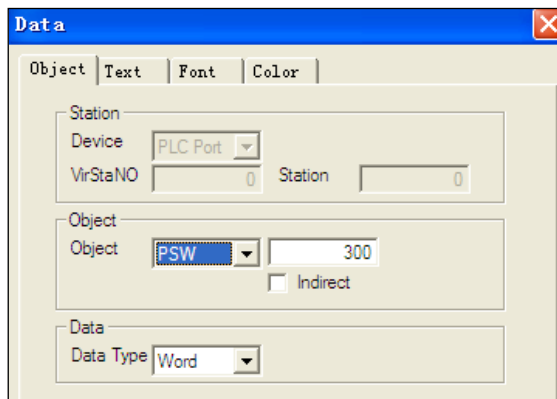


Data

Object: PSW, Value: 300


Data Type: Word

- Select the object with register PSW300

'Display' property:

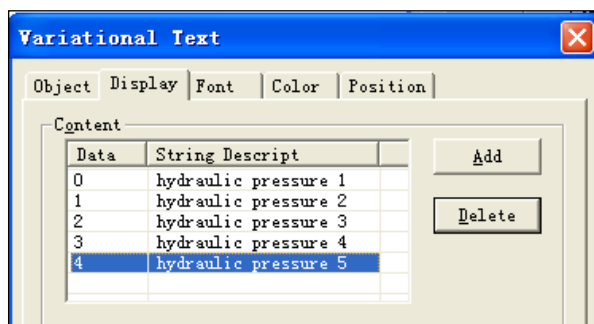



Data	String Descript
0	hydraulic pressure 1
1	hydraulic pressure 2
2	hydraulic pressure 3
3	hydraulic pressure 4
4	hydraulic pressure 5

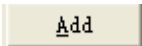Add new message via button 

The contact between PSW300 and alarm information is showed as below:


Value	Alarm message
PSW300=0	Hydraulic pressure 1
PSW300=1	Hydraulic pressure 2
PSW300=2	Hydraulic pressure 3
PSW300=3	Hydraulic pressure 4
PSW300=4	Hydraulic pressure 5

 
● The alarm message triggered by PSB307 displays data, double-click  to set property as below:

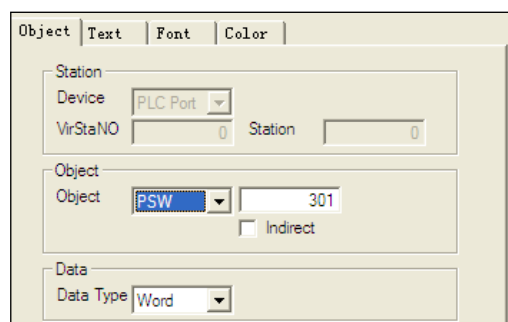

● Select the object with register PSW301, which means when the value of PSW301 display when PSB307 is triggered.

3.3.2 'Event button' editing

Click component  from toolbar and set property as below:

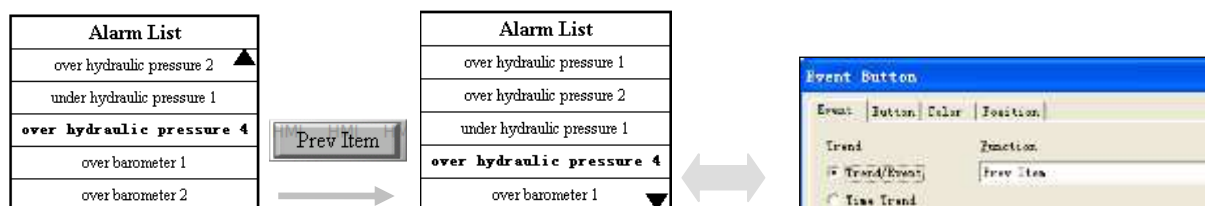

Other components are similar to this ,more details please refer to above .

3.3.3 'Digital input' editing

Click component  from toolbar and set property as below:


PSW300



Property setting



Alarm message is triggered by PSB306

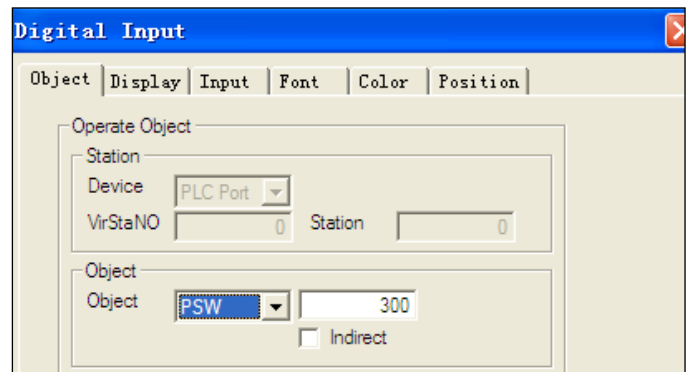


PSW301



Property setting




Alarm message is triggered by PSB307

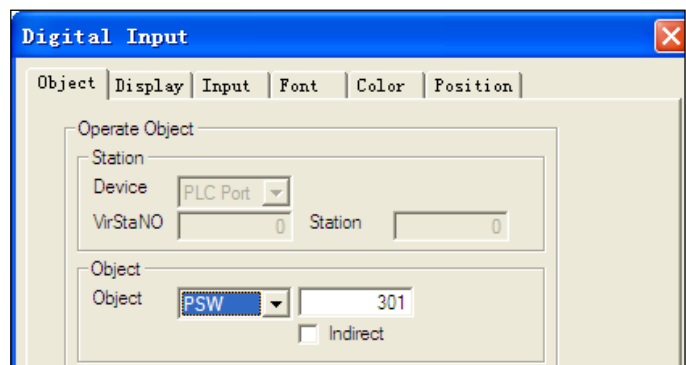

3.3.4 'Lamp button' editing

Click component  from toolbar and set property as below:

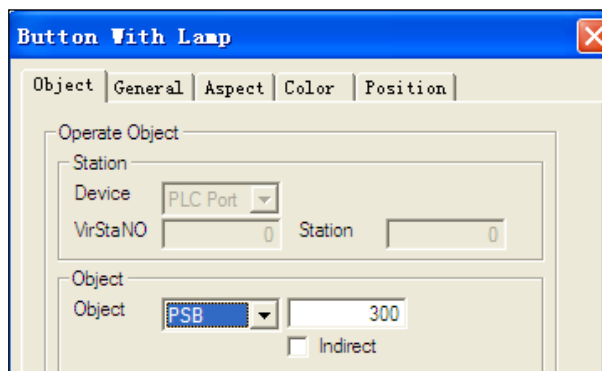

- 7 lamp buttons whose range is from PSB300 to PSB306.

Thus ,the whole project is finished.

3.4 Notes

The selection on alarm message can be achieved by 'event button'when amount of alarm meaaages is more than the number set.

4 Data grid & Grid control

4.1 Introduction

Both 'Data grid 'and 'Grid control' can display continuous register values in list form, the register address is shown as diagram 1

This list starts from PSW300 to PSW309:

PSW300	PSW301	PSW302	PSW303	PSW304
PSW305	PSW306	PSW307	PSW308	PSW309

Diagram 1

Address assignment rule: from left to right, from up to down.

The difference between these two components is:

1. 'Grid control' is usually used to modify data where needs large numbers to monitor.
2. 'Data grid' displays data with circle buffer and time.

This difference is shown in the 'Column' form, the details will be described in following chapters.

4.2 Description

Examples :

Matched with component 'sample save', this example collects data from registers PSW300 and PSW301 to be saved in registers with first address PSW300. All sample data is divided into 10 groups and displays values via 'data grid' and 'grid control'.



Description regarding the other component used in this example please refer to <HMI manual basic>

Click component 'sample save'  from toolbar and set property as below:

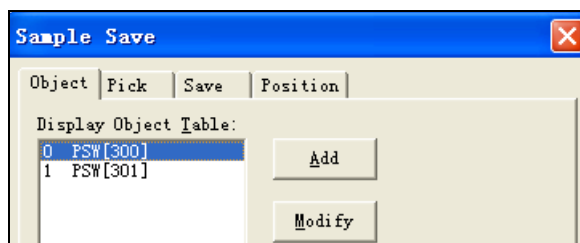


Diagram 2

- Object : set object with PSW300 and PSW301, as left.

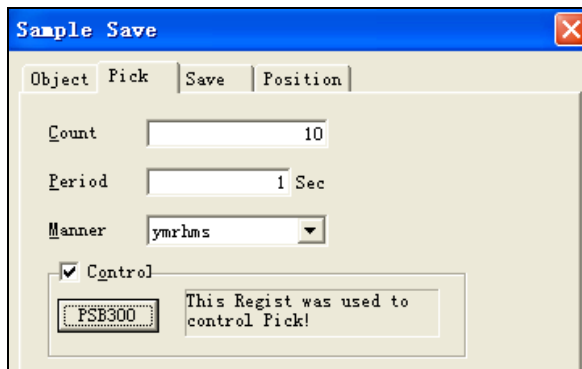


Diagram 3

- Pick
- Count: 10
- Period: 1 second.
- Manner: y/m/r/h/m/s
- Control: select and with object PSB300(this regist was used to control pick action)

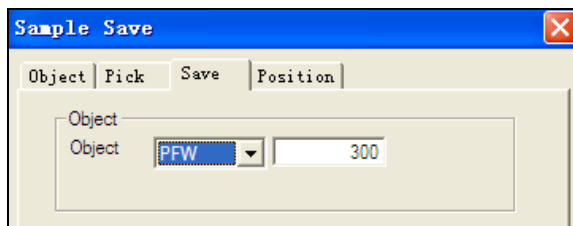




Diagram 4

- Save object: PFW300 (First address)

Click one component 'lamp button'  and two components 'digital input'  then set property as below:

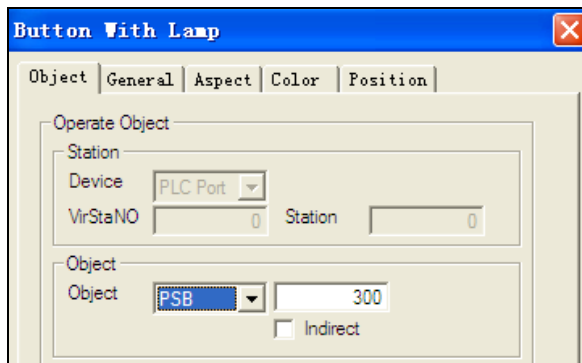


Diagram 5

- Property of object : PSB300.

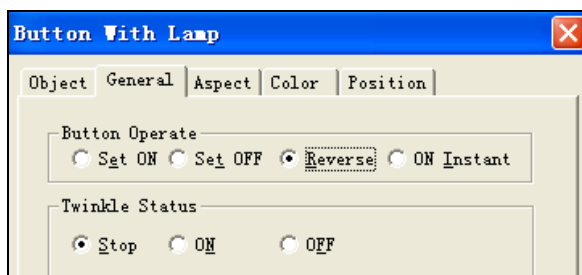


Diagram 6

- Button operate : Reverse . (convert between ON and OFF once press)

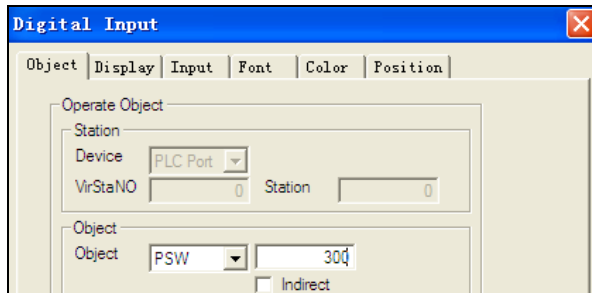


Diagram 7

- Object : set PSW300 and PSW 301 respectively.

Click component 'grid control'  and set property as below:



Diagram 8

- Object : set first address with PFW304 (With 'circle buffer'takes up 4 registers from PFW300 to PFW303,so take PFW304 as start)



More details regarding 'circle buffer'please refer to introduction of 'sample save'parts

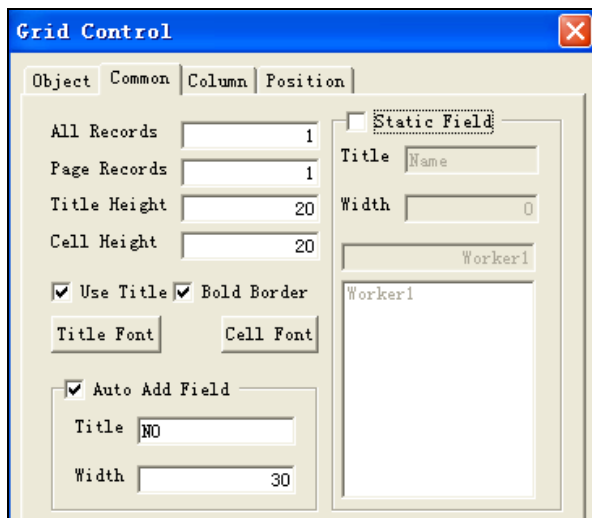


Diagram 9

- All records: amount of all record of this list.
- Page record: records showed on each page.
- Title height: height of title
- Cell height: height of each
- Use title: use title or not
- Bold font: bold or not

- Font: select font that you want.
- Auto add field: as record NO.
- Static field: set title name of each line

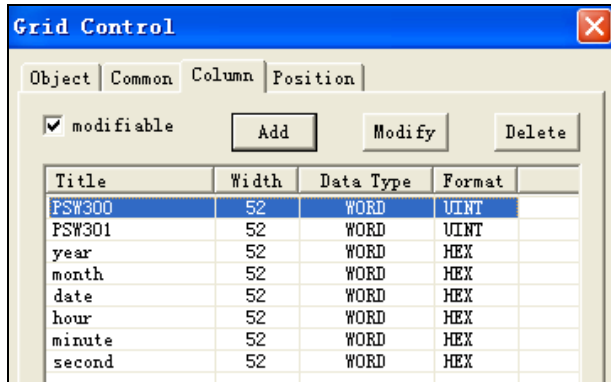


Diagram 10

- Modifiable: data can be modified when selected
- Add/modify/delete: add new column by press **Add** and modify by press **Modify**

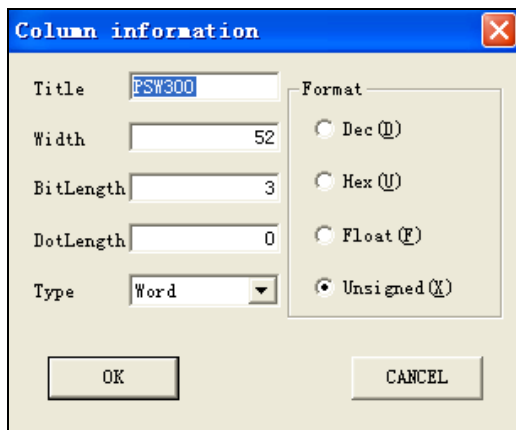


Diagram 11

- Title: title of column
- Width : width of column
- Bitlength/dolength: set length of data,(set dolength as 4 when display year information)
- Type : data type

Description of type: Byte , Word, Dword, String.

- Format: format of data
DEC ,HEX,FLOAT,UNSIGNED
Time is in HEX format

Click component 'data grid'  from toolbar and set property as below:

There only show the difference between these two components :

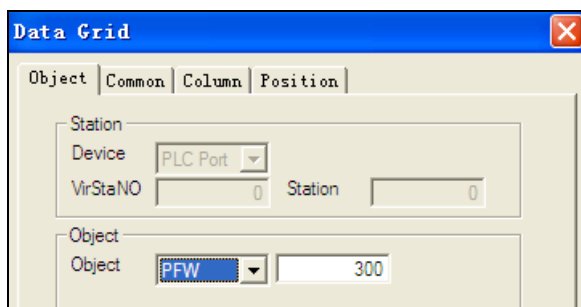


Diagram 12

- Object : PFW300. (first address from PFW300 , it is important to noted this is difference from 'grid control')



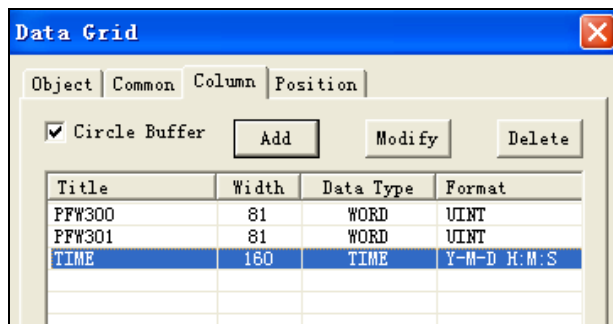


Diagram 13

- Circle buffer: when selected the saved register from the register that 'object' set. Is showed as left.

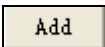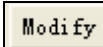

More details regarding 'circle buffer' please refer to introduction of 'sample save' parts

- Add/modify/delete: add new column by press  and modify by press , as showed diagram 13

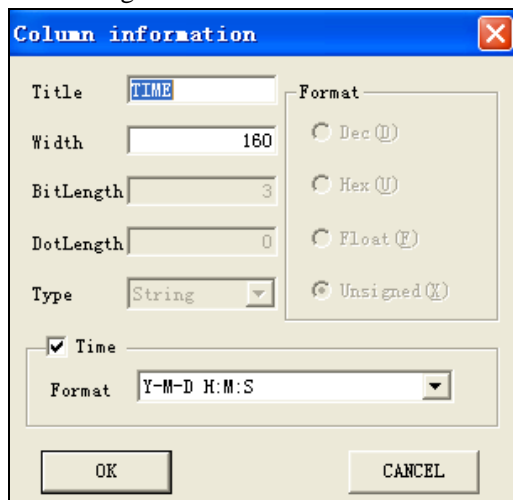


Diagram 14

- Time : when selected the data will display as form Y-M-D H:M:S.

Investigate the data in the two list via emulator offline.

4.3 Description on setting

Property of 'object' for lamp button

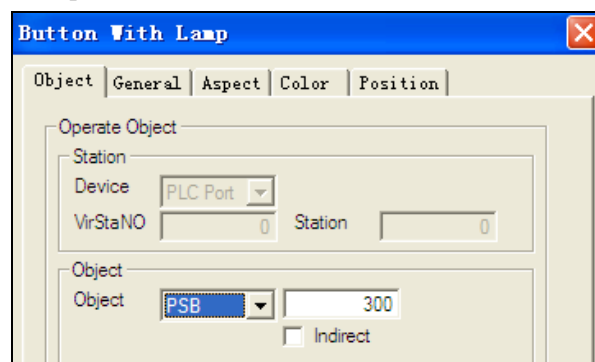


Diagram 15

Setting	Description
Object	As operation object

Property of 'common' for grid control


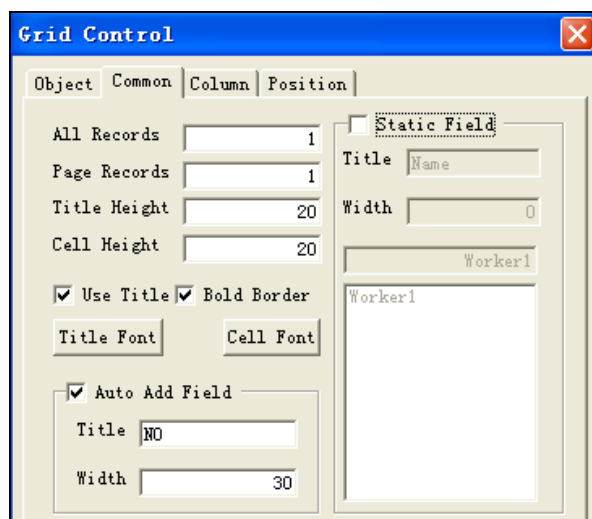



Diagram 16

Setting	Description
All record	amount of all record of this list
Page record	records showed on each page.
Title height	height of title
Cell height	height of each
Use title	use title or not
Bold border	bold or not
Title/cell font	set font that user want
Auto add field	as record NO.increased from up to down
Static field	set title name of each line

Property of 'Column'

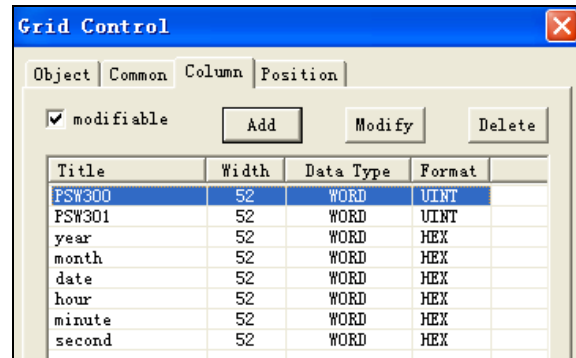

Setting	Description
Add/modify/delete	Add new column and modify
Modifiable(grid control)	Data can be modified when selected
Circle buffer	When this item is selected, the first 4 registers is taken as 'circle buffer'

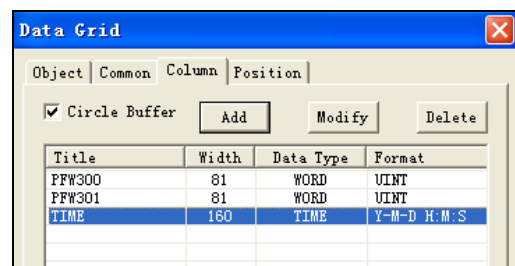

Grid control

Data grid

Diagram 17

Diagram 18


Property of 'column'

Setting	Description
Title	title of column
Width	width of column
Bitlength/dolength	set length of data,(set dolength as 4 when display year inforamtion)
Type	data type
Fornat	format of data. DEC ,HEX,FLOAT,UNSIGNED

5 XY curve


Introduction

This component is used to display object position on plane coordinate with fold or dot mode. Datas collecting from 2 registers can be compared with the referenced curve ,bringing convenience for investigation and debugging.

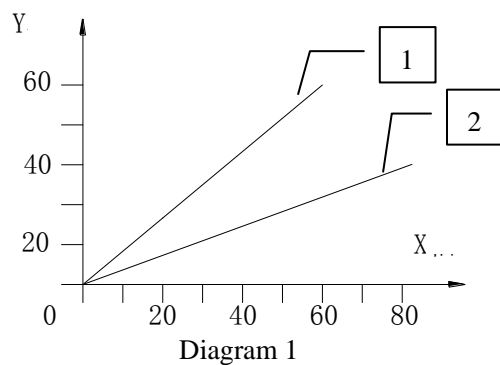

NO.1: Destination curve with fold mode

NO.2: Sample curve with fold mode

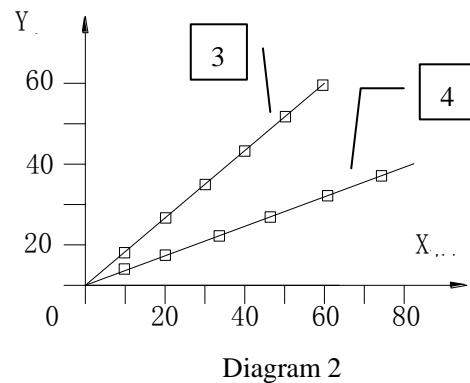

NO.3: Destination curve with dot mode

NO.4: Sample curve with dot mode

Description

Example:

Take registers PSW300 and PSW301 as data source ,and compare sample cure with destination curve.



Other components included in this example please refer to the ‘Basic manual for touch panels’.

Procedure

Cilick component ‘XY curve ’  from toolbar and se property as below:

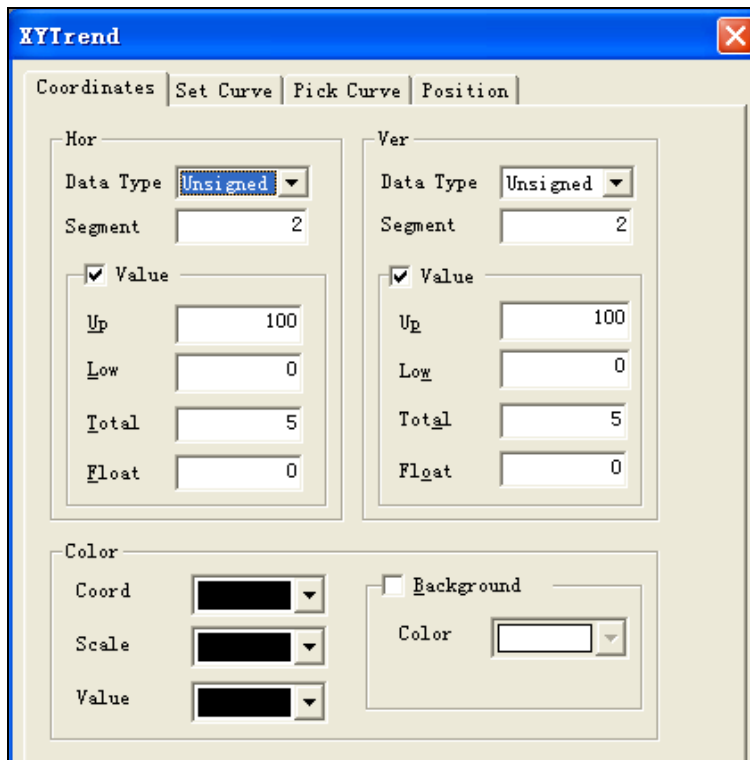


Diagram 3

- Horizon:
 - Data type: select data type of horizon, the same as the data source.
 - Segment: set the numbers of scales segments.
 - Value: display the value of the scales when selected.
 - Up/Low value: set upper-limit value and lower-limit value.
 - Total: the bitlength of scales.
 - Float: the dolength of scales.
- Vertical: parameters setting refer to 'horizon' setting.
- Color: set color for curve.


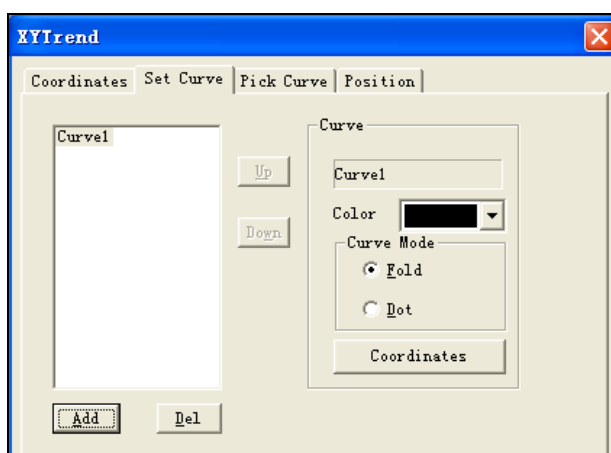


Diagram 4

- Add/Del: add or delete a set curve as referenced curve for pick curve.
- Curve :
 - Color : select destination color.
 - Curve mode: with fold mode or dot mode.
 - Coordinates: set coordinates value, double-click Coordinates to set details.

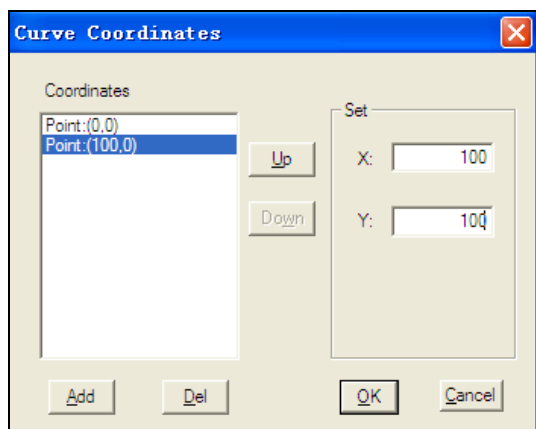

- Add/Del :add/delete coordinates and set value via right box.

Diagram 5

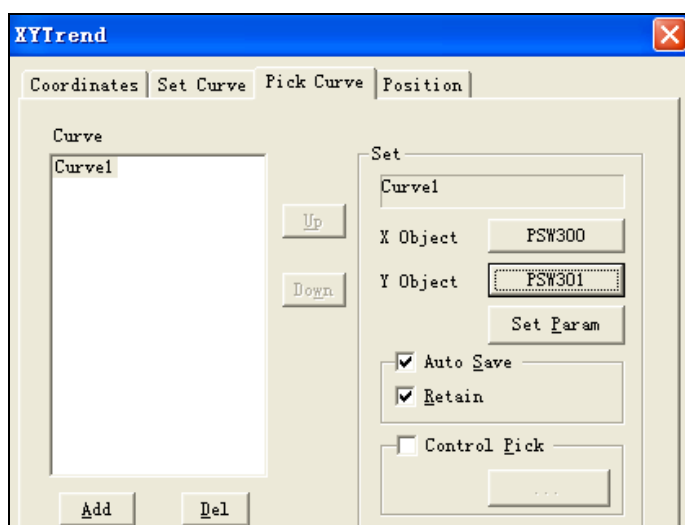


Diagram 6

- Add/del : add/delete a pick curve.
- Set
 - X Object/Y Object: set data source for sample.(In this example,X axis collect from PSW300,Y axis is from PSW301).
 - Set parameters: parameters setting for curve(double-click to enter into this mode,refer to diagram 7)
- Auto Save: coordinates value is saved into internal space automatically when this item is selected. Otherwise ,the values saved from the address defined by user.
- Retain :collecct data saved in retentive registers ,keeps value for ever,otherwise,data lose when power off.
- Control pick: object coil used to control pick. If selected that means the data collection start with coil is ON.

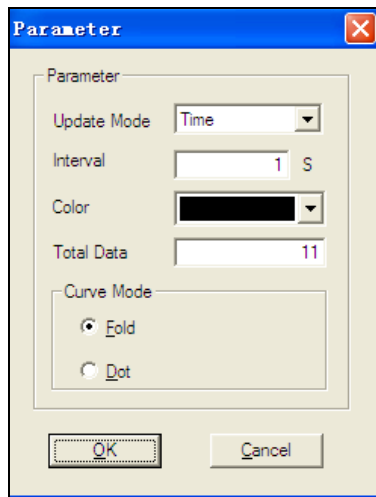


Diagram 7

- Update Mode: select mode that you want .
 - Time : updat curve at intervals (interval unit is second)
 - X value changed: new curve is generated once value of X axis is changed.
 - Y value changed: new curve is generated once value of Y axis is changed.
 - X or Y value changed: new curve is generated once either X or Y axis value is changed.

- Color: set color of pick curve.
- Total data: number of data can be display. The earliest data will be replaced when there is more datas.
- Curve mode: set mode with fold or dot.

click two components 'digital input'  from toolbar and set property as below:

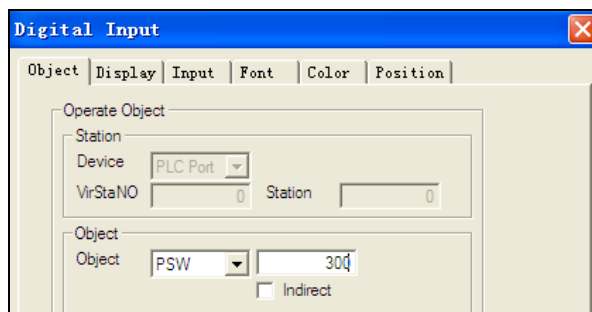


Diagram 8

- Object : set with PSW300, and the other with PSW301.

Thus, all setting is finished and investigate the curve by emulator offline.
Input data via component 'digital input'.


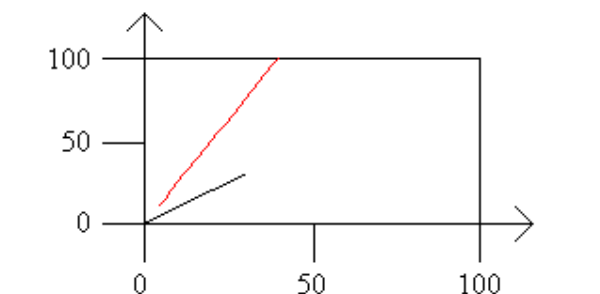


Diagram 9

Black curve: stand for set curve(destination curve).
Red curve: stand for pick curve(actual curve)


Description for parameter setting:

Property of 'coordinates'

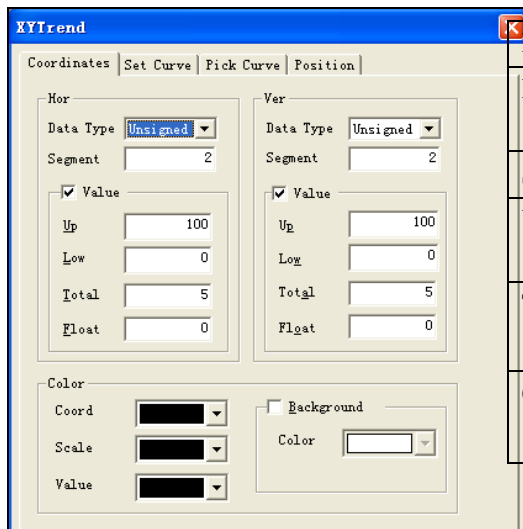


Parameter	Description
Data type	select data type of horizon, the same as the data source.
Segment	set the numbers of scales segments
Up/Low value	set upper-limit value and lower-limit value.
Total/ Float	the bitlength of scales the dolength of scales
Color	set color for curve.

Property of set curve

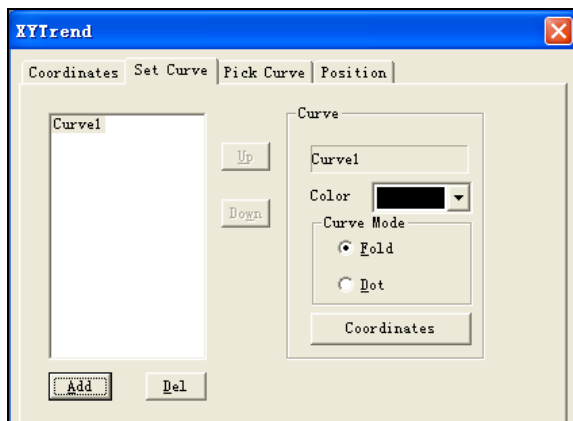


Parameter	Description
Add/Del	add or delete a set curve as referenced curve for pick curve
Color	selevt destination color.
Curve mode:	with fold mode or dot mode.
Coordinates	set coordinates value

Property of 'pick curve'

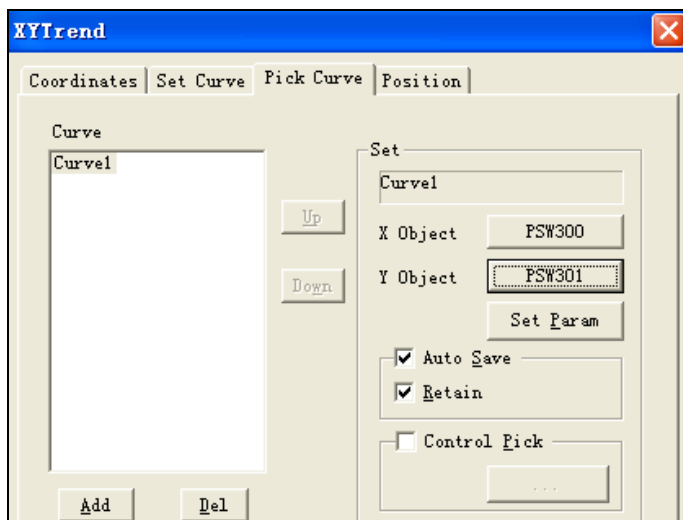

Parameter	Description
Add/del	add/delete a pick curve.
Set	X Object/Y Object: set data source for sample.(In this example,X axis collect from PSW300,Y axis is from PSW301). Set parameters: parameters setting for curve(double-click to enter into this mode,refer to diagram 7)
Auto Save	coordinates value is saved into internal space automatically when this item is selected. Otherwise ,the values saved from the address defined by user.
Retain	collecct data saved in retentive registers ,keeps value for ever,otherwise,data lose when power off.
Control pick	object coil used to control pick. If selected that means the data collection start with coil is ON.

Property of 'set parameters'

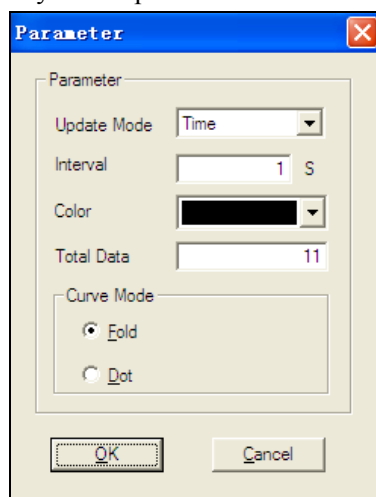


Parameter	Description
Update Mode:	I. Time : updat curve at intervals (interval unit is second) II. X value changed: new curve is generated once value of X axis is changed. III. Y value changed: new curve is generated once value of Y axis is changed. IV. X or Y value changed: new curve is generated once either X or Y axis value is changed. V.
Color	set color of pick curve.
Total data	number of data can be display.The earliest data will be replaced when there is more datas.
Curve mode:	set mode with fold or dot.

6 Sample save

Introduction

This component supports both data collection and data save for ation datas .

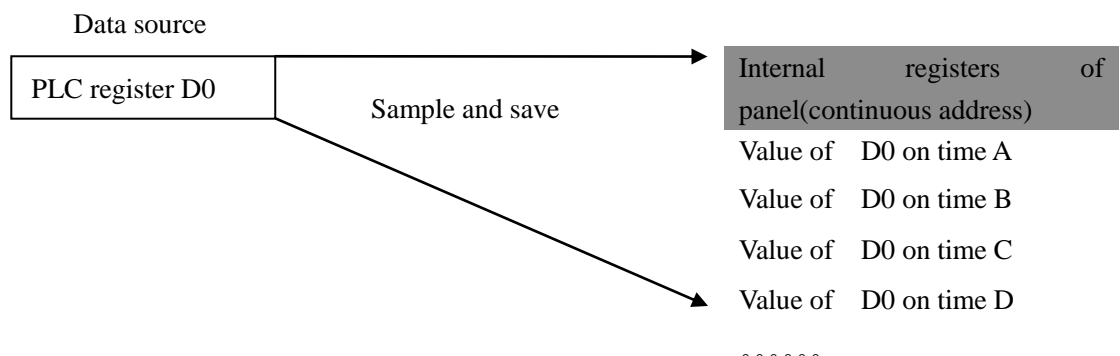

Description


Diagram 1

Example:

Collecting 20 groups datas from data sources PSW300 and PSW301 then save to the registers with beginning PFW300.



Other components included in this example please refer to the 'Basic manual for touch panels'.

Click component 'sample save'  and set property as below:

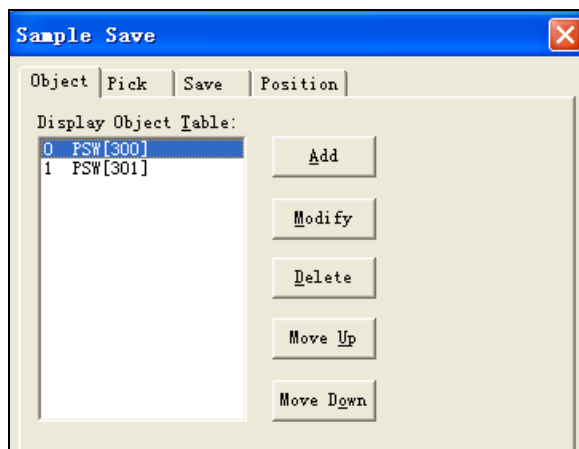


Diagram 2

- Add: add a new data source;
- Modify: modify the data source;
- Delete : delete the chosen data source;
- Move up/move down: move the chosen data source up or down


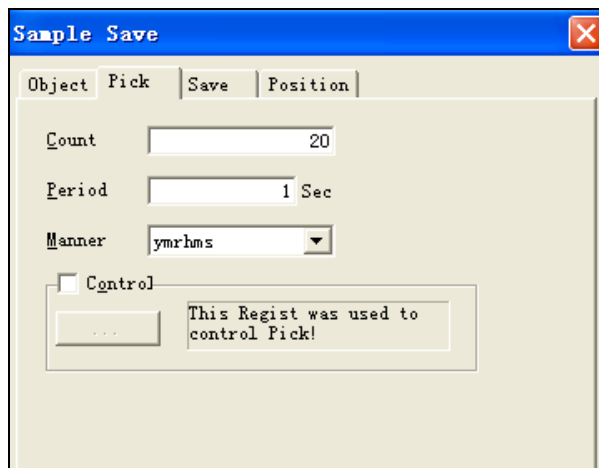


Diagram 3

- Count: pick times
- Period: interval between two picks
- Manner: time manner
- Control: this regist was used to control pick.(sample all the time if not selected)

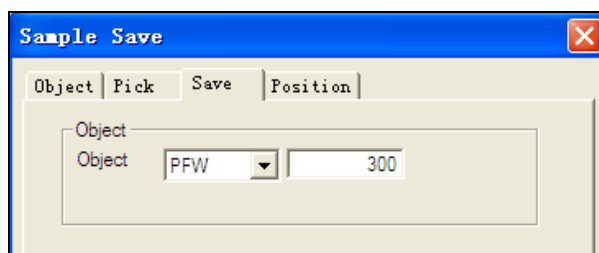

- Object :define the beginning register for data saving(in this example ,data is saved from register PFW300.)

Diagram 4

Click component 'grid control'  from toolbar and set property as below:

This component used in this sample is for data investigation, but please note this component is not necessary to be matched with component 'sample save'.

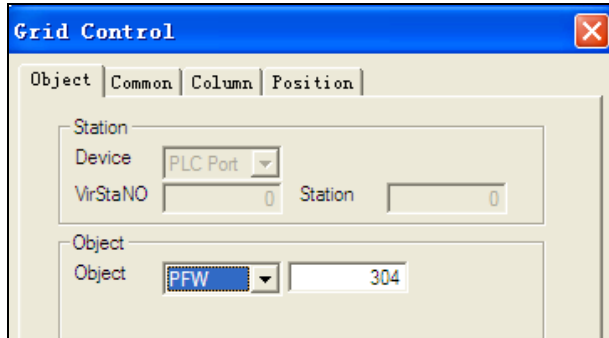


Diagram 5

- Object: display data from register PFW304.

Note: 'sample save' takes up 4 registers as 'circle buffer' where address pointer lies. These pointers indicate address for data saving, structure is shown as below (diagram 6)

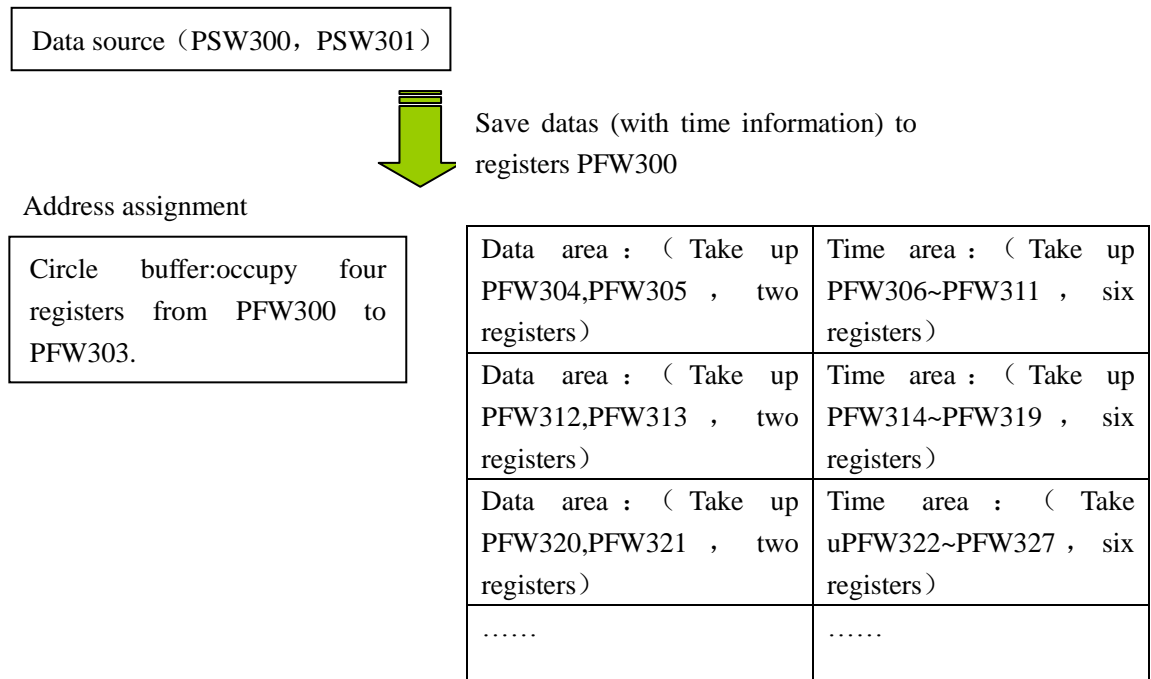


Diagram 6

As said above, 'grid control' displays data from PFW304 because there is no need to know the values of circle buffer.

Data area displaying time information is assigned in sequence: year, month, date, hour, minute, second (in HEX format).

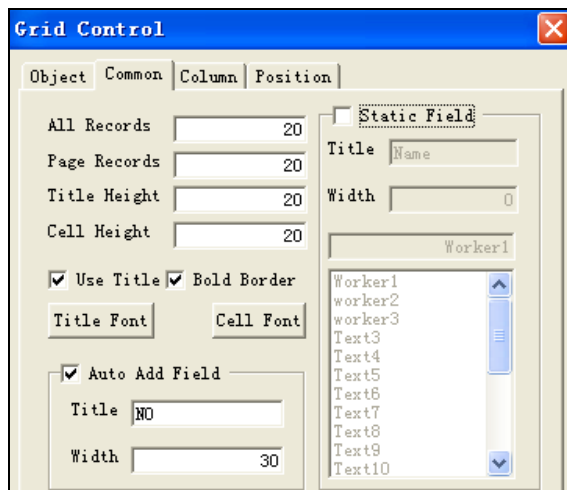


Diagram 7

- All records:20(20groups to be sampled)
- Page records:set same as 'all record'(page record can not more than all records)
- Static field:not selected in this example.

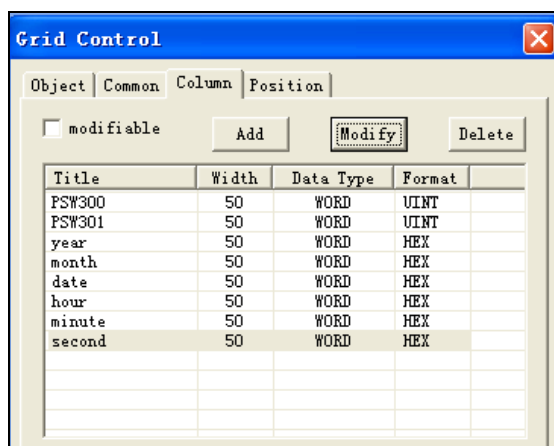


Diagram 8

- Add/modify/delete:add to 8 columns(as showed diagram 8)
- Note: year information display in 4 bits .

Click 2 components 'digital input'  from toolbar and set property as below:

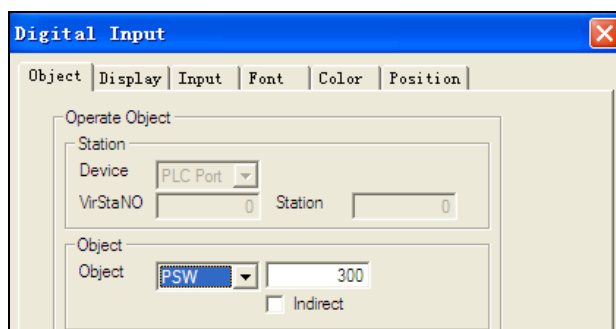


Diagram 9

- Object : one set with PSW300.the other set with PSW301.


After all components setting over,investigate run status via emulator offline.

NO	PSW300	PSW301	year	month	date	hour	minute	second
0	500	200	2009	10	23	13	11	17
1	500	200	2009	10	23	13	11	18
2	500	200	2009	10	23	13	11	19
3	500	200	2009	10	23	13	11	22
4	500	200	2009	10	23	13	11	23
5	500	200	2009	10	23	13	11	24
6	500	200	2009	10	23	13	11	25
7	500	200	2009	10	23	13	11	26
8	500	200	2009	10	23	13	11	27
9	500	200	2009	10	23	13	11	28
10	500	200	2009	10	23	13	11	29
11	500	200	2009	10	23	13	11	30
12	500	200	2009	10	23	13	11	31
13	500	200	2009	10	23	13	11	32
14	500	200	2009	10	23	13	11	33
15	500	200	2009	10	23	13	11	34
16	500	200	2009	10	23	13	11	35
17	500	200	2009	10	23	13	11	36
18	500	200	2009	10	23	13	11	37
19	500	200	2009	10	23	13	11	15

Diagram 10

Description of parameters setting

“Property of ‘object’

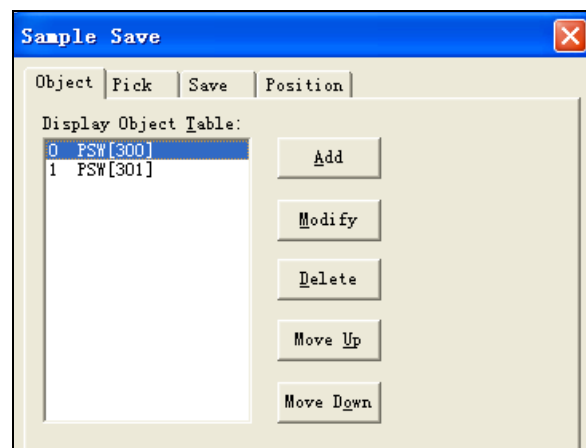

Parameter	Description
Add/Modify /Delete	add /modify the data source/delete data source;
Move up/move down	move the chosen data source up or down.(this operation effect the sequence of data saving)

“Property of ‘Pick’

Parameter	Description
Count	pick times
Period	interval between two picks
Manner	time manner
Control	this regist was used to control pick.(sample all the time if not selected)

Sample Save

Object | Pick | Save | Position

Count: 20

Period: 1 Sec

Manner: ymrlms

☐ Control

This Regist was used to control Pick!

“Property of ‘save’

Parameter	Description
Object	define the beginning register for data saving(in this example ,data is saved from register PFW300.)

7 XY Curve Ex

7.1 Introduction

XY curve EX is used to display a series values from X axis and Y axis with fold mode. The difference compared with XY curve is:

First ,XY curve Ex display datas from continuous registers rather than two fixed registers(X is from one register,and Y is from one register).

Second: There is no referenced curve for comparing.

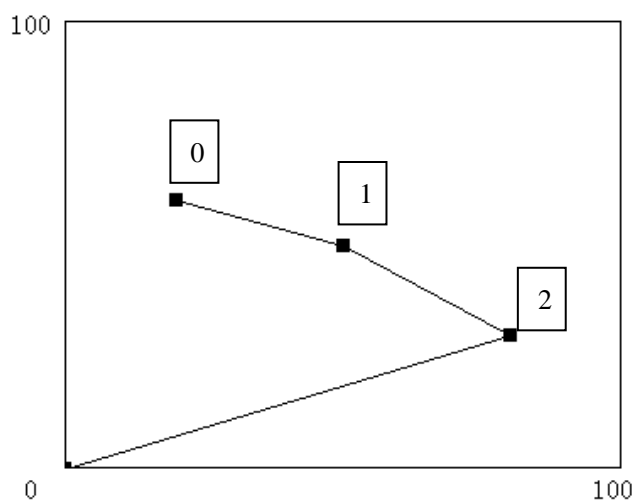


Diagram 1

NO.	X value	Y value
0	20	60
1	50	50
2	80	30

7.2 Description

Example :

Draw XY curve based on values from 20 registers from PSW300 to PSW319 with 10 dots.



Other components included in this example please refer to the 'Basic manual for touch panels'.

Click pomonent 'XY curve Ex'  from toolbar and set property as below:

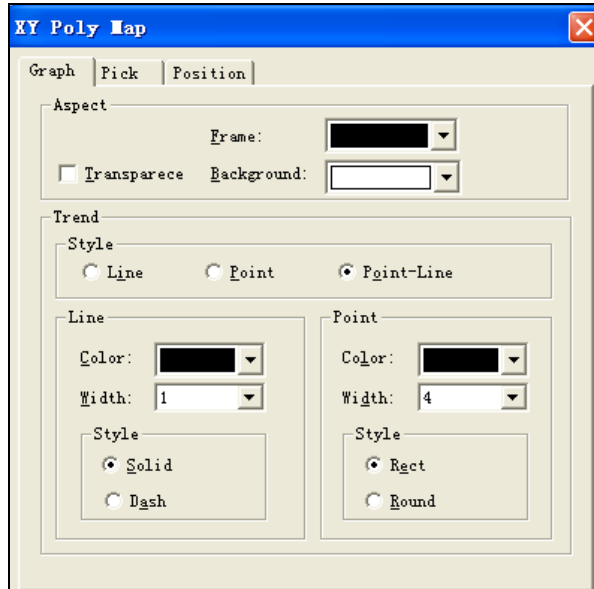


Diagram 2

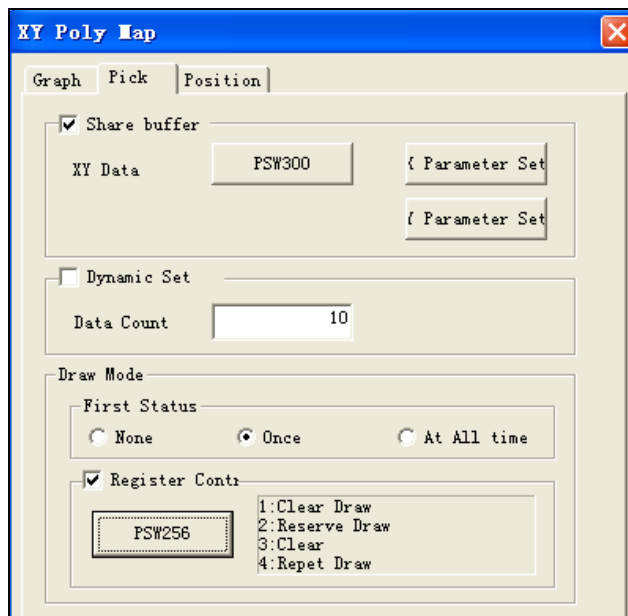


Diagram 3

- Aspect: set color of frame and background.
- Style :set curve mode.(in this sample ,select point-line mode)
- Line :set color,width and style of line.
- Point : set color,width and style of point.

- XY data:data source is from one area or not.(in this example,'share buffer'is selected and from register PSW300 which means the first dot Xvalue is from PSW300,and Y value is from PSW301,and so on.)

- Data count:the count of points on curve,(when 'dynamic buffer'is selected,it means that data count is based on the referenced register value)

- First value: set the initial mode of curve:

- None: do no draw automaticlly.
- Once :only draw once at intinal values .
- At all time :draw curve all the time.

- Register control:do the operation based on the value of referenced reister,there are four operation can be selected.

- 1:clear draw:clear all previous records and draw new one.
- 2:reserve draw: reserve all previous and draw new one.
- 3:Clear: clear all records.
- 4:Repet draw: repeat draw continuously instead old ones.

Click 'grid control'  from toolbar and set property as below:

This component used in this sample is for data investigation,but please note it is not

necessary for application of component 'sample save'.

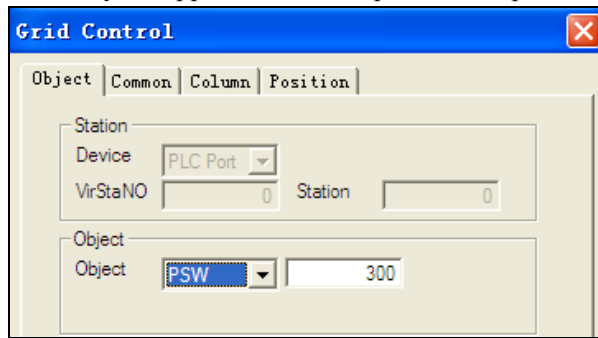


Diagram 4

- Object :PSW300(beginning address as data source)

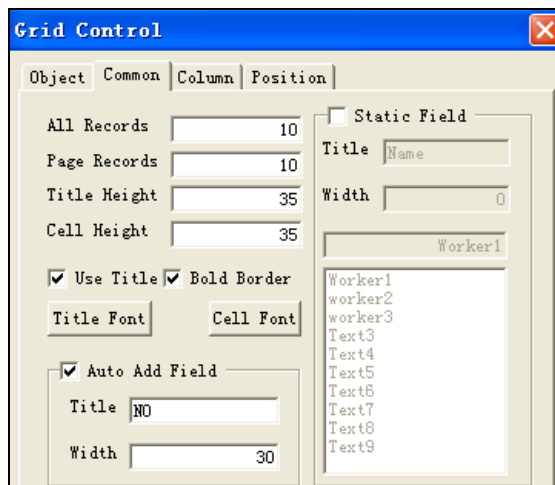


Diagram 5

- All records:10
- Page records:10
- Static field:not use

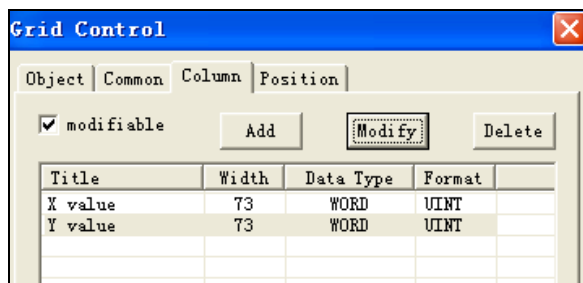


Diagram 6

- Add/modify/Delete:add to 2 columns.

After above components are finished ,please use 'emulator offline'to investigate the run status.


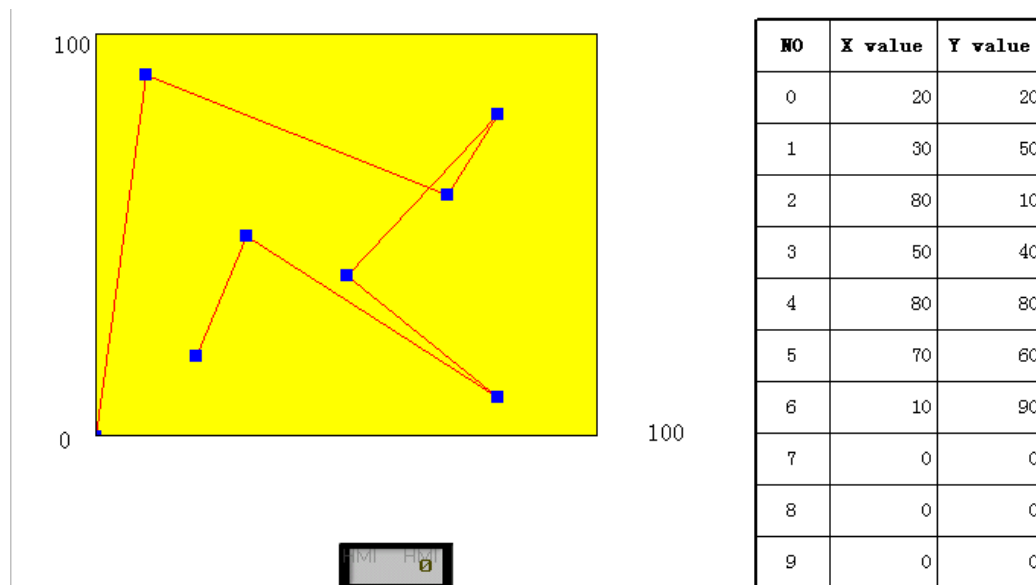


Diagram 7

7.3 Description of parameter setting.

Property of 'Graph'

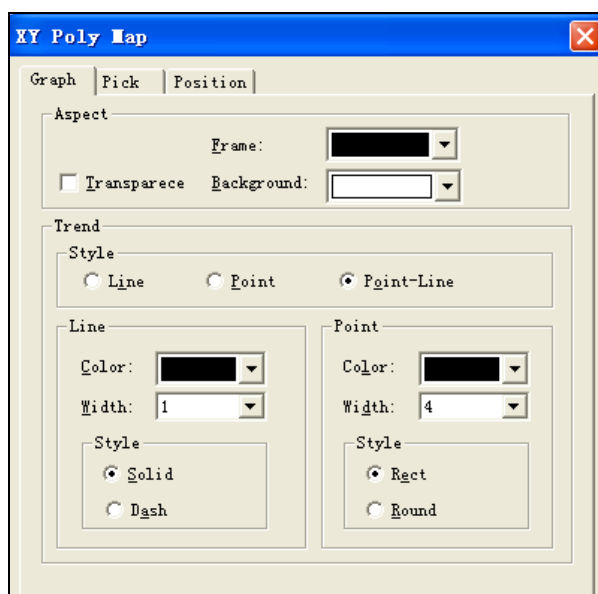

Parameters	Description
spect	set color of frame and background.
Style	set curve mode.(in this sample ,select point-line mode)
Line	set color,width and style of line.
Point	set color,width and style of point.

Property of 'pick'

XY Poly Map

Graph Pick Position

☒ Share buffer

XY Data PSW300 { Parameter Set

{ Parameter Set

☐ Dynamic Set

Data Count 10

Draw Mode

First Status

☐ None ☒ Once ☐ At All time

☒ Register Control

PSW256

1:Clear Draw
2:Reserve Draw
3:Clear
4:Repet Draw

Parameters	Description
XY data:	data source is from one area or not.
Data count	the count of points on curve,(when 'dynamic buffer'is selected,it means that data count is based on the referenced register value)
First value	set the initial mode of curve None: do no draw automatcially. Once :only draw once at intinal values . At all time :draw curve all the time.
Register control	do the operation based on the value of referenced reister,there are four operation can be selected. 1:clear draw:clear all previous records and draw new one. 2:reserve draw: reserve all previous and draw new one. 3:Clear: clear all records. 4:Repet draw: repeat draw continuously instead old ones.

8 Time trend control

This chapter describes how to use ‘time trend control’.

8.1 Introduction

This component is used to sample data from destination register at intervals and display value with curve mode



Note: scale can be defined by user, more details please refer to chapter 1.4.





8.2 Procedure


Chapter 13.2.1 describes 'time trend curve' with 'Rotate overwrite' mode;


Chapter 13.2.2 describes 'time trend curve' with 'full stop' mode.

 8.2.1 'time trend curve' with 'Rotate overwrite' mode

 Step1. click 'component'

 Click component 'time trend curve' , 'lamp button' , 'function field'  and 'data grid' 

 and leave them to a suitable position as below.

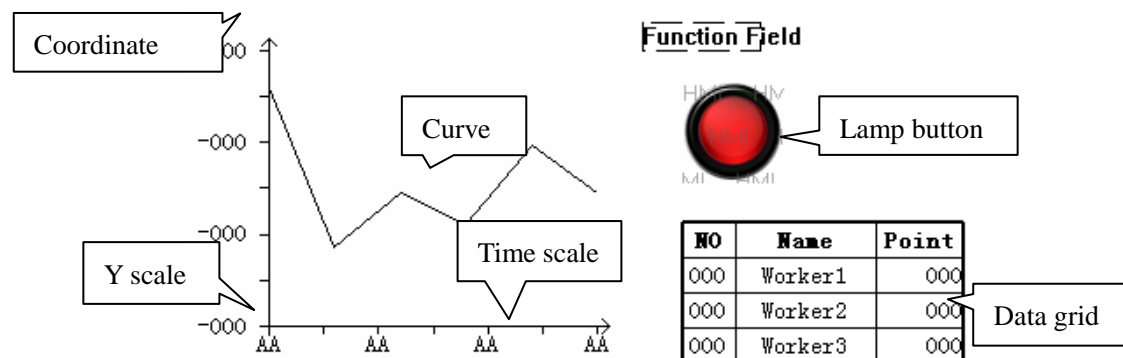

Time trend curve display datas, it is comprised of 4 parts, as shown below:

- A. coordinate
- B. time scale
- C. Y scale
- D. curve

Button coil used to control amperage

Function field data source

Data grid: display the sampled data

Step2 view setting on 'time trend curve'

Double-click 'time trend curve' or right-click to set properties as below:

1) Property of 'common'

Storage Size : 10 ;

Storage Mode: ☒ rotate overwrite ☐ full stop;

Pick Mode: Pick period and with variable

mode ☐ Variable Mode ;

Other parameter is set as default value

Property contains :common,view,object,trend,color and position

Property of 'common'

Storage Size

Storage size: amount of input datas

Storage Mode ☒ rotate overwrite ☐ full stop

Pick mode: contains 'rotate overwrite' mode and 'full stop' mode

Rotate overwrite: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,the new sampled data instead of the old data from the beginning address until new full complement coming, cycles in this rule.

Full stop: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,saving process is stopped

Note :pick mode is available only when storage mode--- 'rotate overwrite'is selected.

Pick mode: contain 'pick period' and 'pick feel'.

Pick period: sample data at fixed intervals.

Period: set period value and unit.

pick control:start to sample when referenced coil is triggered.

Variable Mode:

The 'fix mode' is in 'stop'mode when 'variable mode 'is selected with referenced coil OFF.

The 'fix mode'is in 'circle'mode when 'variable mode 'is selected with reference coil ON.

While 'variable mode 'is not selected,, 'stop'and 'circle'can be selected by user.

Fix mode-stop: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,the new sampled data instead of the old data from the beginning address until new full complement coming, cycles in this rule.

Fix mode-circle: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,saving process is stopped.

Pick feel: sample action is triggered by rising edge of signal.collect data once at each rising edge .Parameter setting is showed as below:

Pick Mode

☒ Pick Period

Period Seco

☐ Pick Ctrl MO

☒ Variable Mode PSB300

Fix Mode

☒ Stop ☐ Circle

☐ Pick Feel MO

2) Property of 'view'

☒ Grid Sty. Grid Sty:show grid or not,in this example,grid is selected.

Time Info	<input type="checkbox"/> Year	<input type="checkbox"/> Month	<input type="checkbox"/> Day
	<input type="checkbox"/> Hour	<input type="checkbox"/> Minute	<input checked="" type="checkbox"/> Second

Time informamtion: set manner of time.In this example, chose 'second'.

Init Time	<input type="text" value="5"/>	Secon▼
-----------	--------------------------------	--------

Initial time: the scale of the initial time. In this example,chose 5 second.

Time Section	<input type="text" value="2"/>
Scale	<input type="text" value="1"/> Font

Time section:sections of time axis. In this example,set 2 sections.

Scale: scale of time axis.

Y Section	<input type="text" value="2"/>
Scale	<input type="text" value="1"/>

Y sections:sections of Y axis.

Scale: scale of Y axis.

Time Trend

Common View Object Trend Color Position

☒ Grid Sty Time Y

Time Info ☐ Year ☐ Month ☐ Day
☐ Hour ☐ Minute ☒ Second

Init Time Secon▼

Time Section

Scale Font


Y Section

Scale


Property of 'color' is set as below:



Set color of
'frame ,back,
grid and time
lable'.

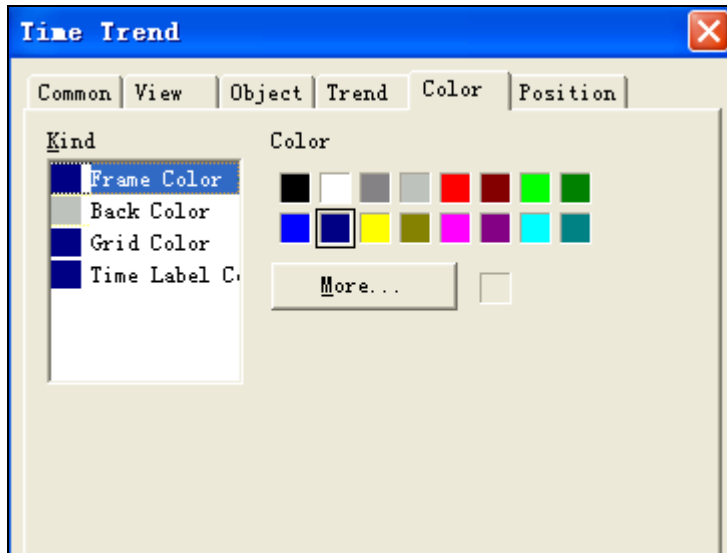

All above setting ,digram is showed as below:

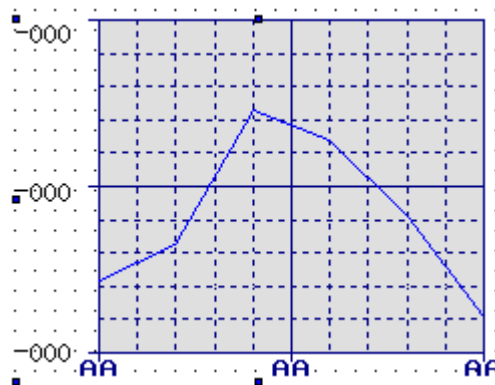

Step 3 setting sample parameters

1) Set property of 'data grid'

Details of parameter setting is showed as below:

Property of 'common': 'user title,bold border, auto add field,static field'are not selected.

All records:10, page records: 10


Property of 'column': add to 7 column, data format of first column is in DEC format. Data format of second column is in Hex format, bitlength is 4, the third, fourth, fifth, sixth and seventh are in HEX format, and other parameters are default value.

When all above setting is finished, data grid is showed as below:

000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF
000	FFFF	FFF	FFF	FFF	FFF	FFF




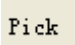
 
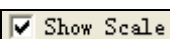
2) Time trend ---parameter setting regarding data sample


Set 'object' property of 'time trend' and set with PSW300

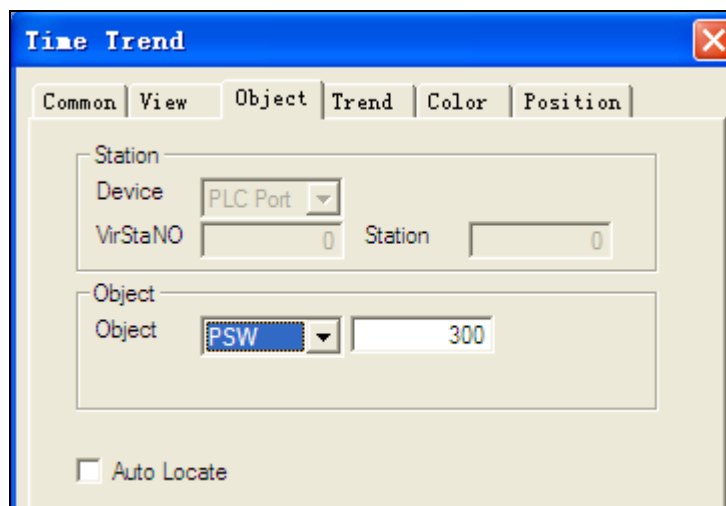


Set property 'trend' of 'time trend' as below:

Select , and set color , set  with , also select 'show scale' .

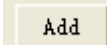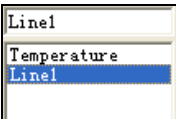Press  to add 'line' , and set color , set  with , also select 'show scale' .

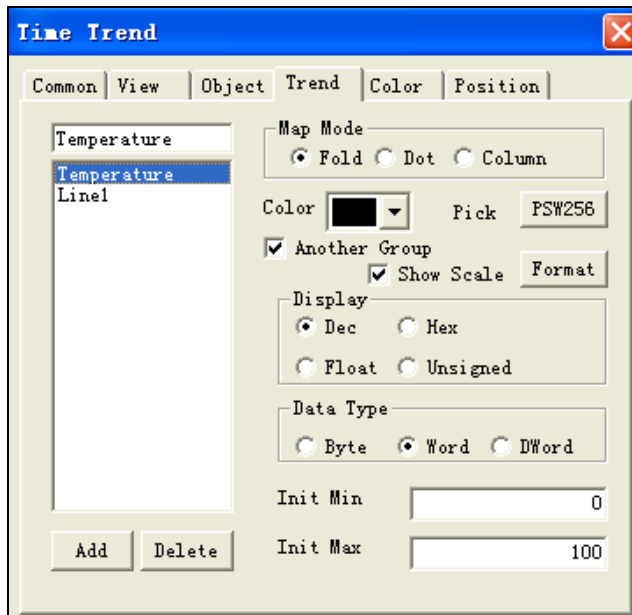

Map mode:

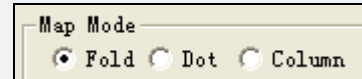

Fold: generate graph in fold format.

Dot: generate graph in dot format.

Column: generate graph in column format.

Color: select color you want

Pick: set data source.

press " PSW256 " to modify object.

Another group: display Y axis or not. When select 'show scale', scale displays and format also can be set by click key **Format**

Set property of 'data format' and 'data type' as below:

Display: 'Dec, Hex, Float and unsigned' four types can be selected.

Data type: 'Byte, Word, Dword' three types can be selected.

Init Min: the Min value of Y axis.

Init Max: the Max value of Y axis.




Add or delete graph by press **Add** or **Delete** key.


3) Property setting of 'function field'

Select Time (Sec) mode in 'act mode', and add function 'Arithmetic':

'Mode' property of function field:

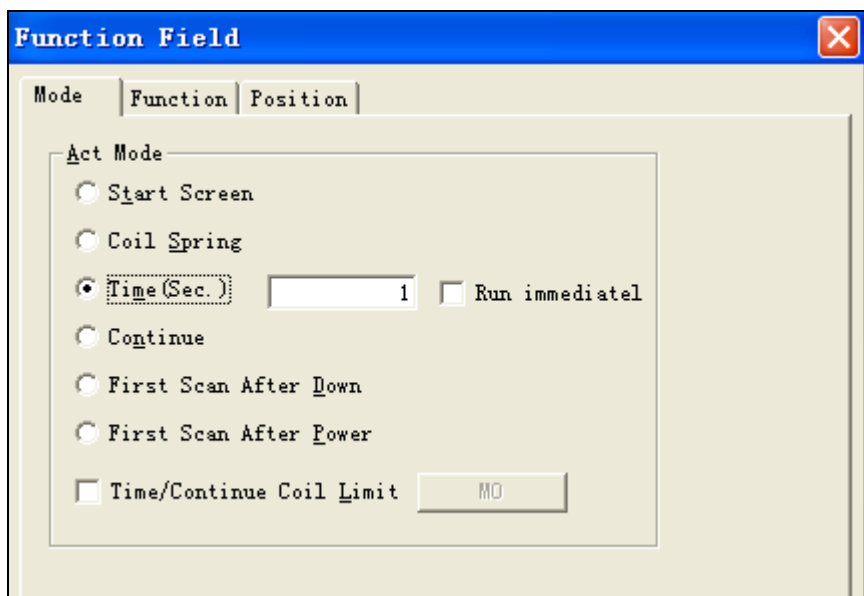


'Function' property of 'function field'

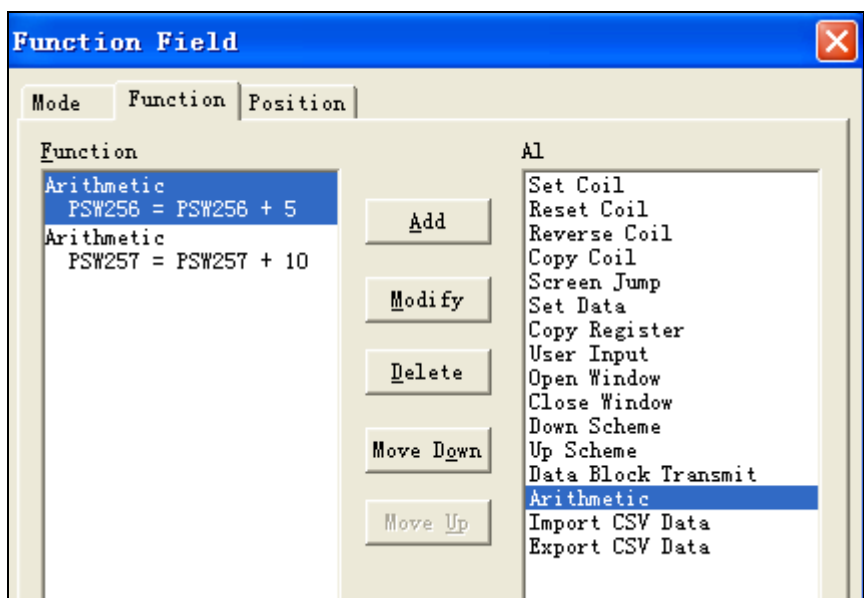


Note: more details regarding 'function field' please refer to <HMI manual Basic>

After all above component is finished, the view of project is showed as below:

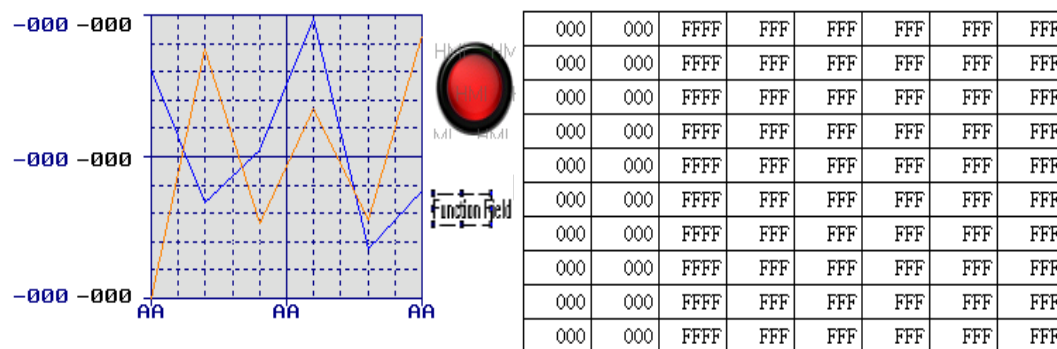


The result by emulator offline:

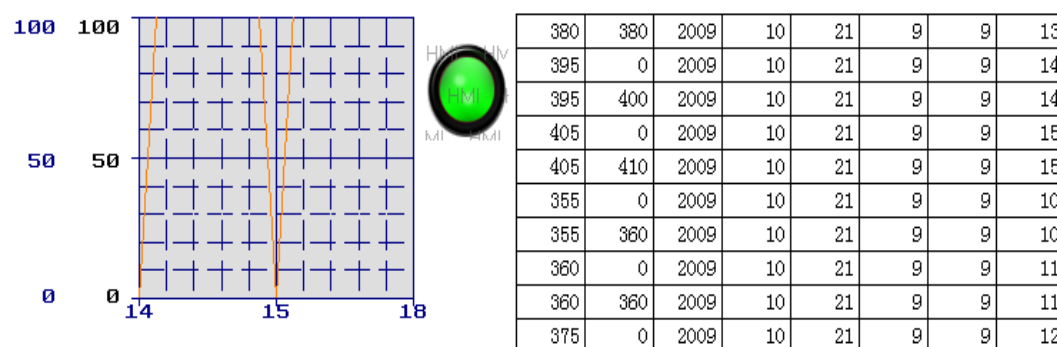

Note: when lamp button is ON , 'time trend is in 'fix mode 'with 'circle',investigate data changing via 'data grid'.


When lamp button is OFF,'time trend'is in 'fix mode' with 'stop',investigate data changing via 'data grid'

8.2.2 'Time trend'with 'stop'mode

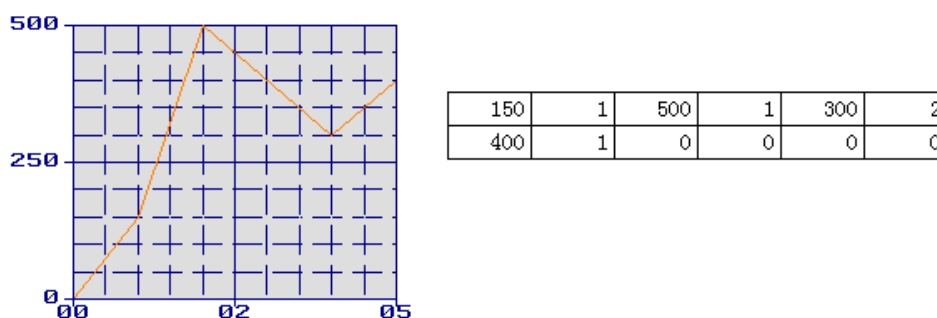

Step1:open a new screen.

Open a new project and add component 'time trend control'and 'grid control' as below:

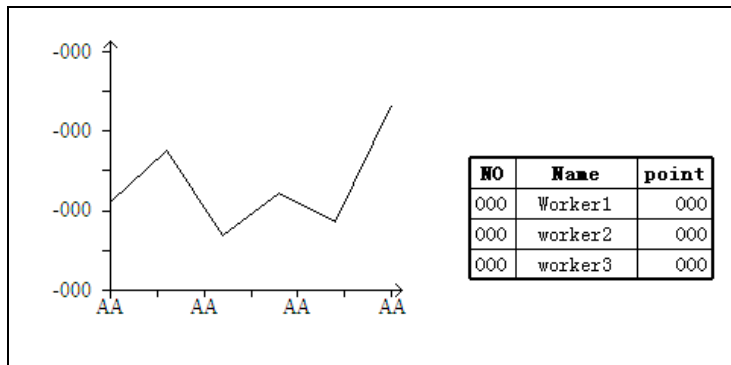

Step2 parameter setting on 'time trend control'

Double-click to set property ,
'common'property

Storage Size

"Storage Size" is set with value 10,

☐ rotate overwrite ☒ full stop

"Storage Mode" is set with 'full stop';

'View' property

☒ Grid Sty

display with 'grid'

Init Time

is set with '5 second'.

Time Section
Scale

time section is set with 2, and scale is set with 1.

Y Section
Scale

Y section is set with 2, and scale is set with 1. other is

set as default value.

'Object' property:

Object

Object is set with PSW260 and other parameters are set


with default value.

'Trend' property:


Set color with

also show scale ☒ Show Scale other parameters are set in default value.

'color'property

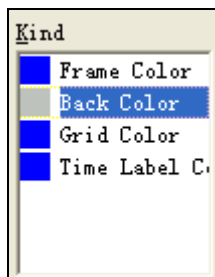

others are set with default value:

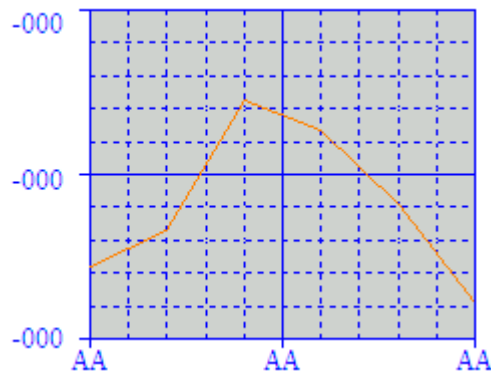


NO	Name	point
000	Worker1	000
000	worker2	000
000	worker3	000

Step3:parameter setting with ‘grid control’

Double-click to set property


‘Object’property:set object with PSW260,

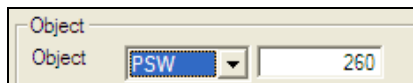

others


keep in default value.

‘Common property’:

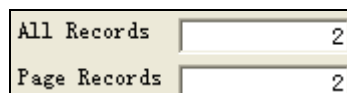


set all records with value ‘2’,and


page value with value ‘2’,other setting containing ‘user title’ ☐ Use Title, bold border

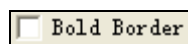

,static field

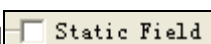


,auto add field

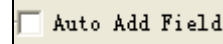

, are all


not selected,

‘Column property’: add to 5 column,others are kept in default value

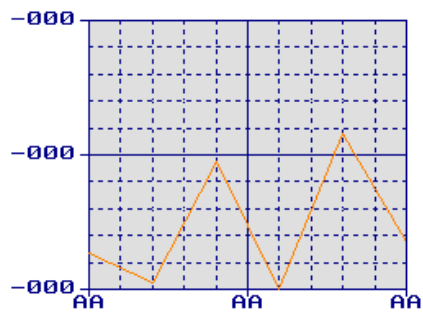

000	000	000	000	000	000
000	000	000	000	000	000

he reslut after emultor offline is showed as below:

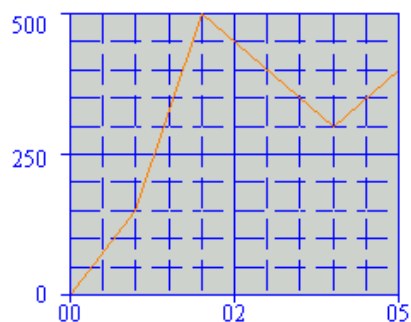

150	1	500	1	300	2
400	1	0	0	0	0

Note: after entering the above datas in ‘data control’,the curve is showed as above.

The first data you enter is the Y value ,the second data is the time ,the following data is arranged in this rule.

8.3 Description of parameters

Property of ‘time trend control’ contains ‘common,view,object,trend,color and position’five items.

1) Property of ‘Common’

Time Trend

Common | View | Object | Trend | Color | Position

Storage Size

Storage Mode ☒ rotate overwrite ☐ full stop

Pick Mode

☒ Pick Period

Period Seco

☐ Pick Ctrl

☒ Variable Mode

Fix Mode

☐ Stop ☒ Circle

☐ Pick Feel



Time Trend

Common | View | Object | Trend | Color | Position

Storage Size

Storage Mode ☐ rotate overwrite ☒ full stop

Pick Mode

☐ Pick Period

Period Seco

☐ Pick Ctrl

☐ Variable Mode

Fix Mode


☐ Stop ☒ Circle

☐ Pick Feel

Parameter	Description		
Storage Size	input amount of datas		
Storage Mode	Rotate overwrite :sampled datas are saved to destinationed registers in sequence. When it has its full complement ,the new sampled data instead of the old data from the beginning address until new full complement coming, cycles in this rule.		
	Full stop: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,saving process is stopped		
Pick mode	Pick mode: contains 'rotate overwrite' mode and 'full stop' mode		
Note: be available under 'rotate overwrite' mo	Pick period	sample data at fixed intervals.	
		Period	set period value and unit
		Pick control	start to sample when referenced coil is triggered

de		Variable Mode	<p>The 'fix mode' is in 'stop'mode when 'variable mode 'is selected with referenced coil OFF.</p> <p>The 'fix mode'is in 'circle'mode when 'variable mode 'is selected with reference coil ON.</p>
		Fix mode	<p>While 'variable mode 'is not selected,, 'stop'and 'circle'can be selected by user.</p> <p>Fix mode-stop: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,the new sampled data instead of the old data from the beginning address until new full complement coming, cycles in this rule.</p> <p>Fix mode-circle: sampled datas are saved to destinationed registers in sequence. When it has its full complement ,saving process is stopped.</p>
	Pick feel	sample action is triggered by rising edge of signal.collect data once at each rising edge	


2) Property of 'view'

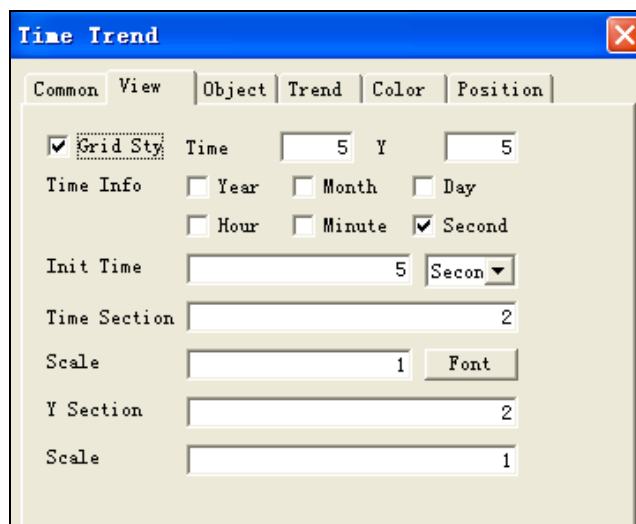

Parameter	Description
Grid Sty	show grid or not
Time inforamtion	set manner of time.
Initial time	the scale of the initial time
Time section	sections of time axis
Scale	scale of time axis
Y sections	sections of Y axis


Scale	scale of Y axis
-------	-----------------

3) Property of ‘object’

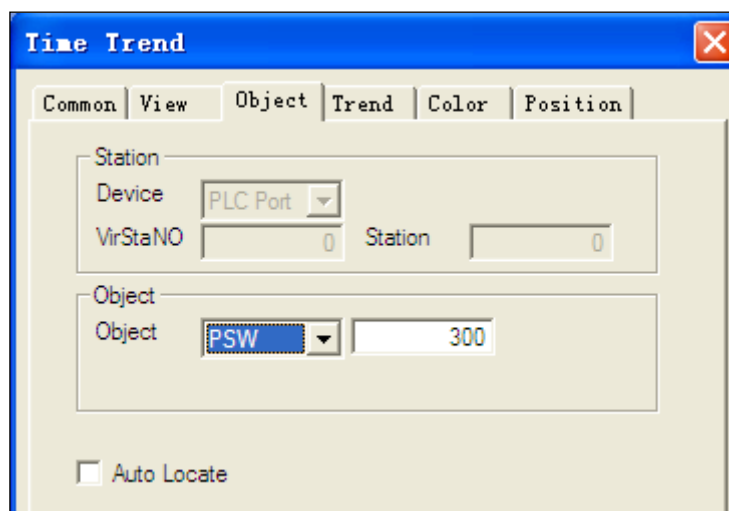

Parameter	Description
Object	Enter the beginning address ,in this mode, ‘auto locate’can not be selected.
Auto Locate	Registers to save datas are arranged automatically.

4) ‘Trend’property

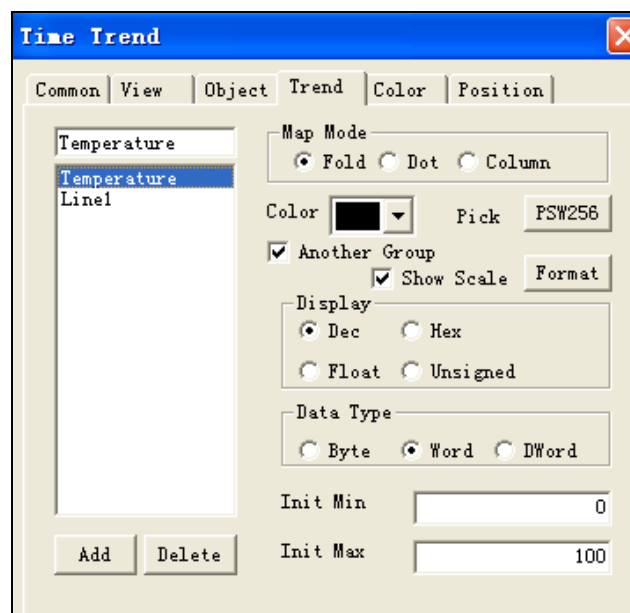

Parameter	Description
Map mode	Fold: generate graph in fold format. Dot: generate graph in dot format. Column:generate graph in column format
Color	select color you want

Pick	set data source
Another group	display Y axis or not
show scale	scale displays and format also can be set.
Display	Dec,Hex,Float and unsigned' four types can be selected.
Data type	'Byte,Word,Dword' three types can be selected.
Init Min	the Min value of Y axis
Init Max	the Max value of Y axis
Add /delete	Add or delete graph by press 'Add' or 'Delete' key.

9 Move animal

This chapter describes how to use this function.

9.1 Introduction


Component 'move animal' is used to move destination object with other referenced components, otherwise, this component is not available.

9.2 Procedure


9.2.1 Track editing


Step1: create a new project and add component.

Open a new project and click component  from toolbar, then click to confirm the start point of the track, double-click to confirm the end point, is shown as below:

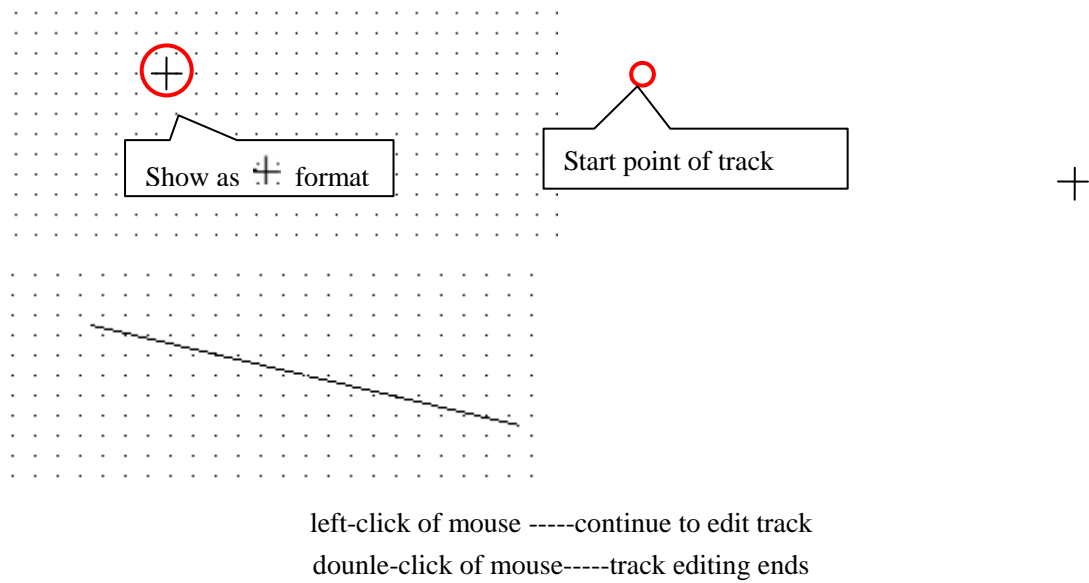

Step2:set property of text


Click component 'text'  with content 'Move animal' ,and set set in 'red'color, is showed as below:

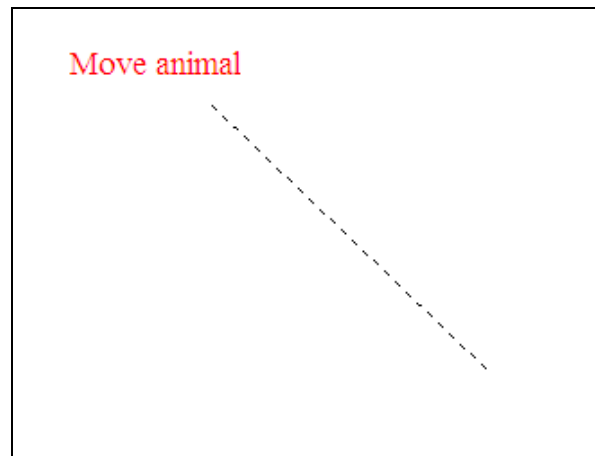


Step3:set property of 'move animal'

Double-click 'move animal' and set property as below:


Key Point:
X means abscissa;
Y means ordinate;
Escape time: time spend to
move from
current point to
next point

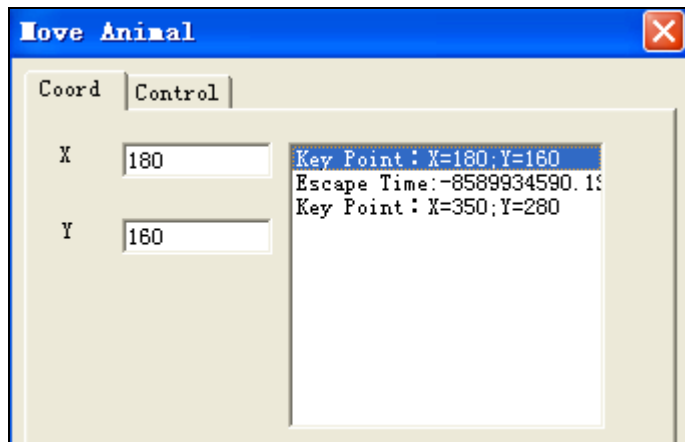


Select 'Escape time', as below:

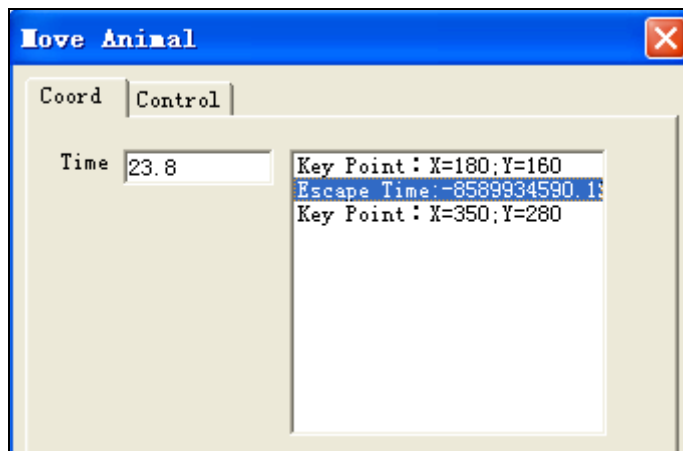


Set the time you want with second as unit,in this example ,we change it to 10 second,
is showed ad below:

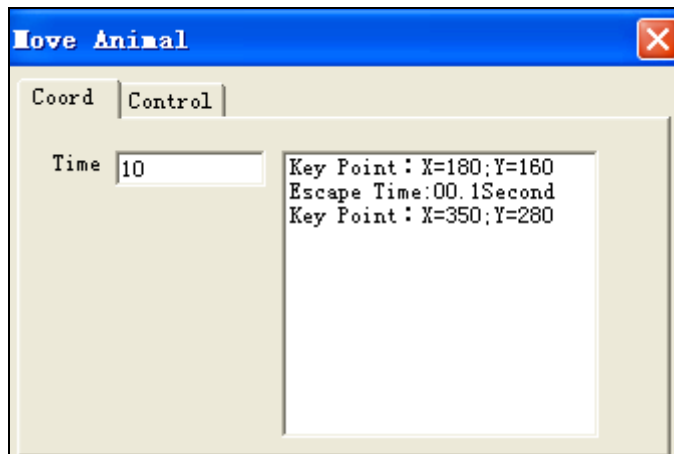



Property of 'Control', is showed as below:

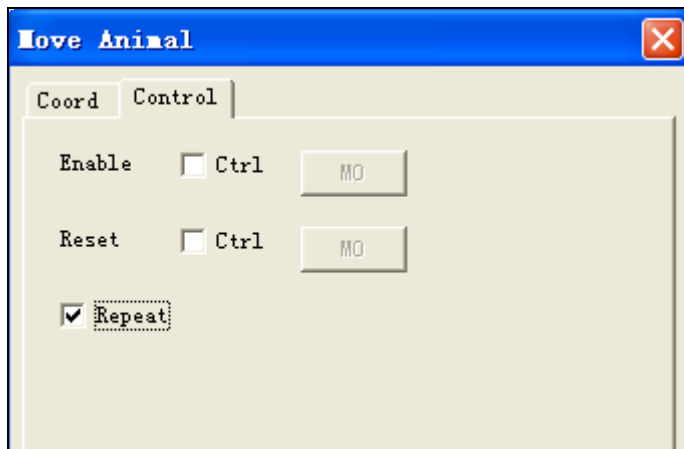


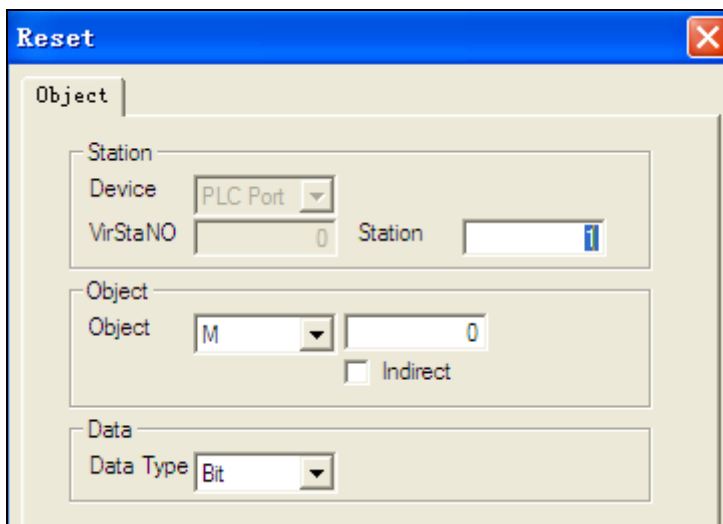
When you want to start the 'move animal' by a triggered coil, please select 'Enable-control', as below:

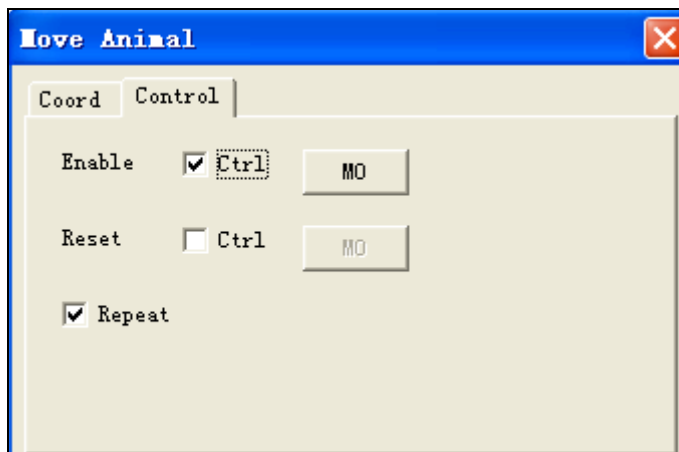

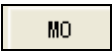Click key  to set the control address, as below:

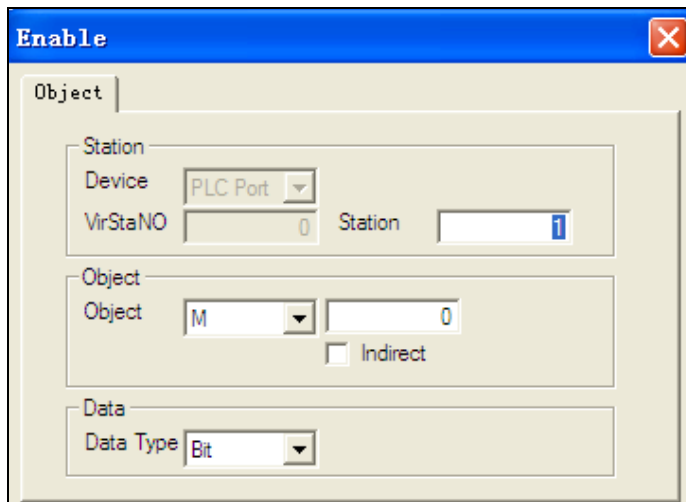


If you want the 'move animal' to return to the beginning point ,please select 'Reset-control',click key  to modify the address.




Repeat: move as the track path in circle if this item is selected,if not ,will not repaet movement.

Step4: 'move animal' editing

Select component 'text 'and 'move animal',as below:

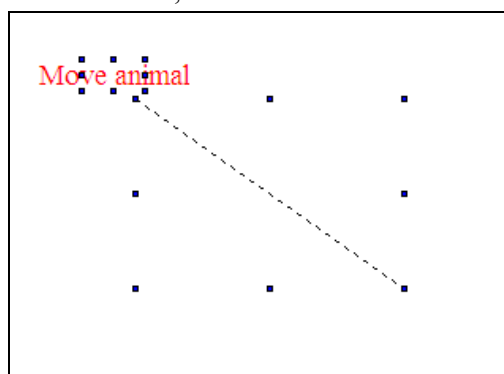


then right-click and select 'group',as below:

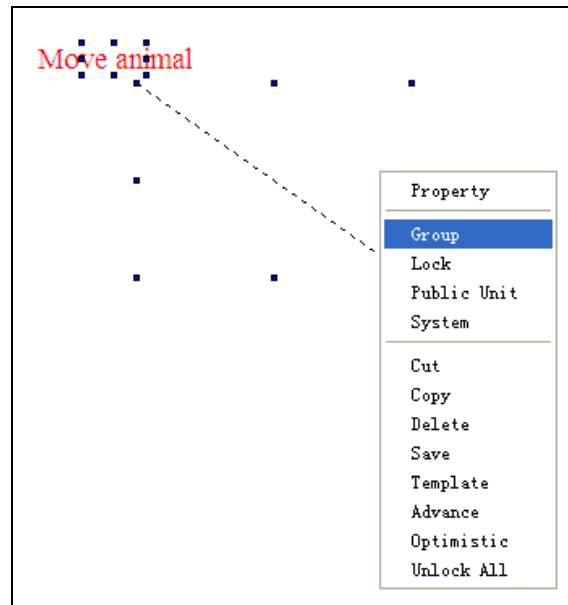


Above is all the procedure of 'move animal'


9.2.2 Example- Scroll text

Step1:creat a new project


Click component 'text'  and with text 'Scroll text edited by move animal',is showed as below:

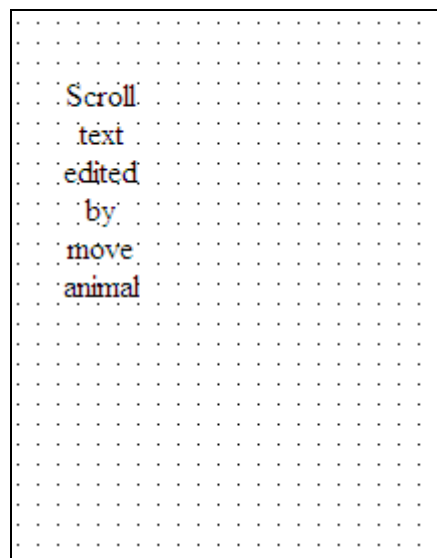


Step2: Creat 'move track'

Click component 'move animal'  from component from toolbar and left-click to

confirm the start point, as below:

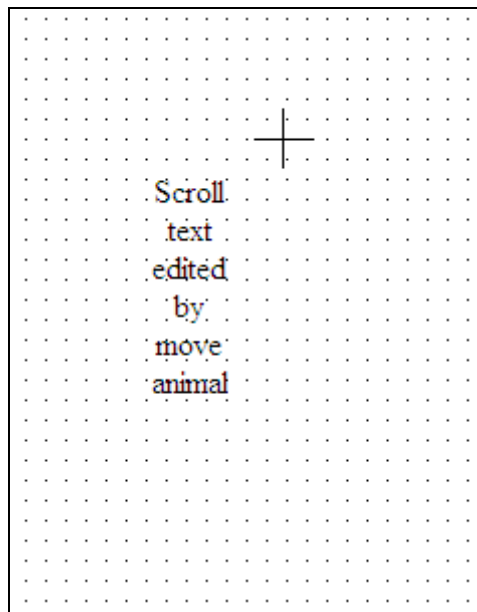


Creat track and double-click to end edit, as below:

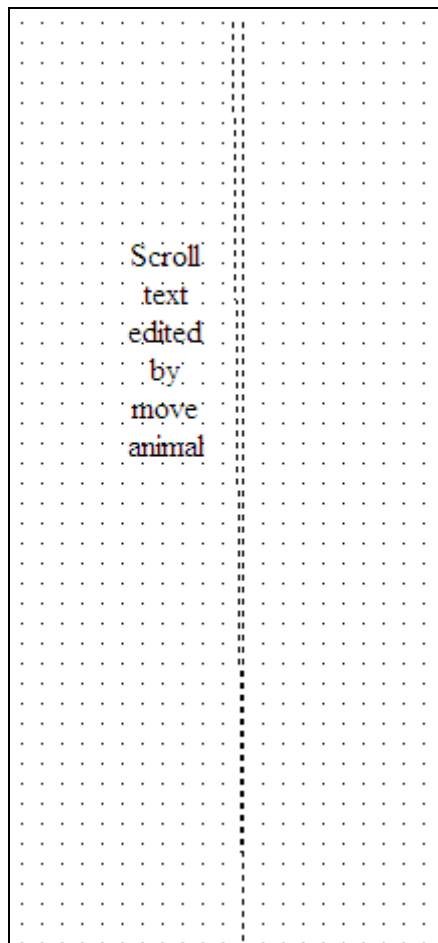


Step3:property setting

Double-click 'text' to set color with 'red', is showed as below:

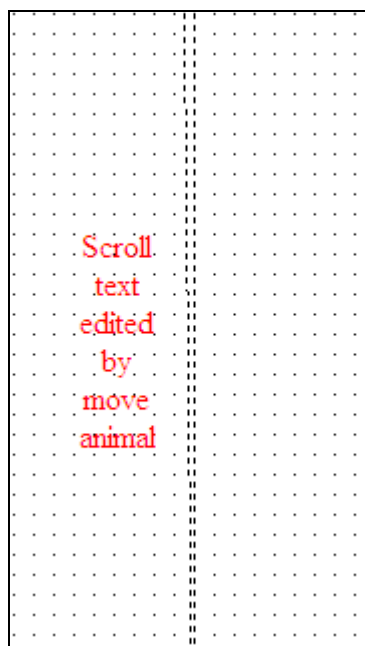


Move Animal

Double-click 'move-animal' and set 'escape time' with 10 second:

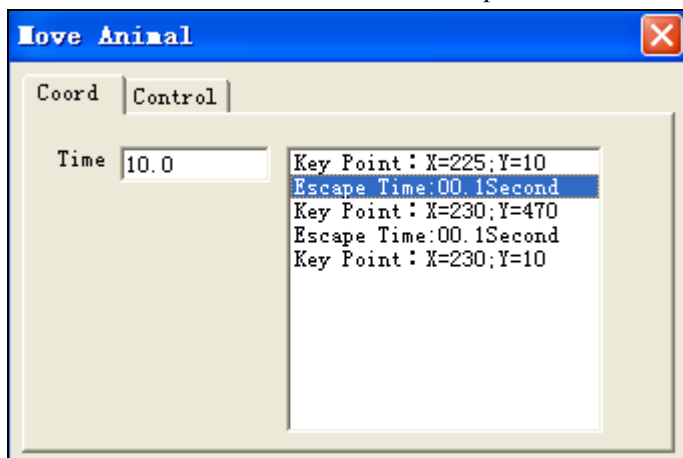



Set property 'control' and select 'Enable control', and 'Reset control' with object PSB300 and PSB 301, is showed as below:

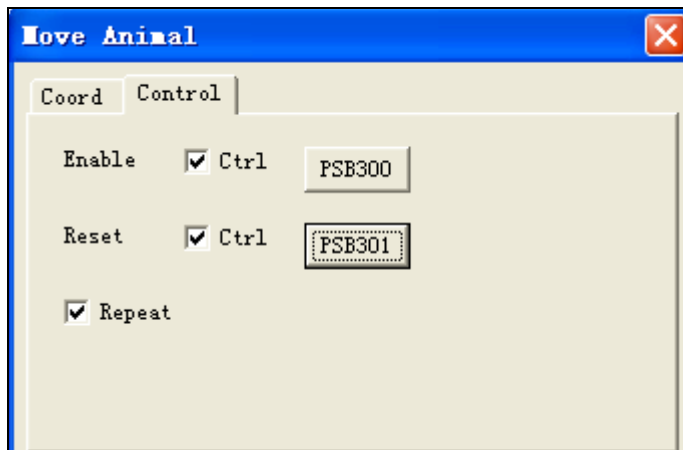

Step4: finish 'move animal'

Select component 'move animal' and 'text', and right click to get a group, as below:

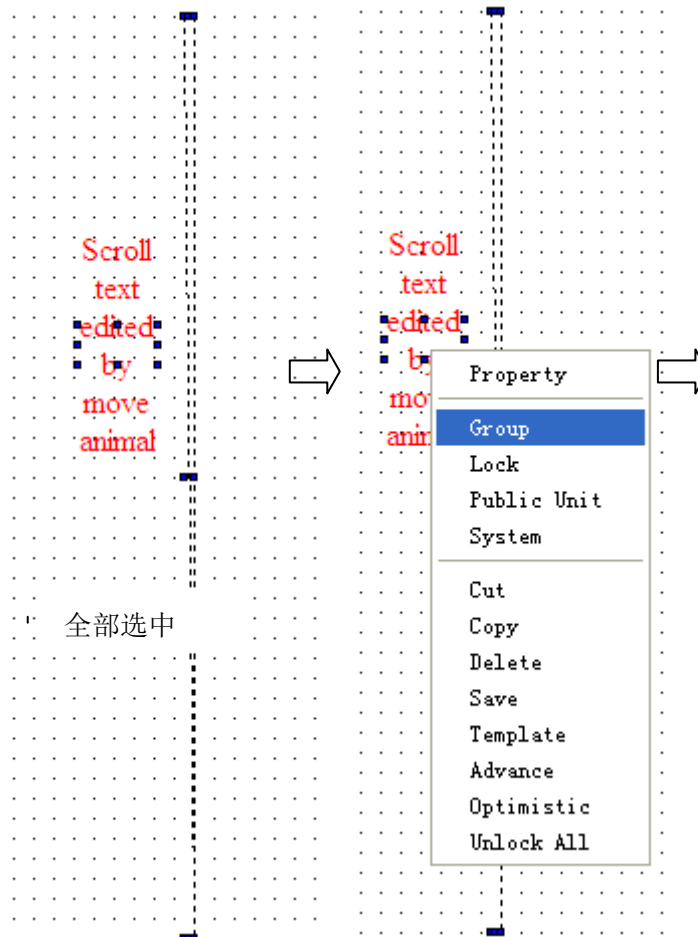


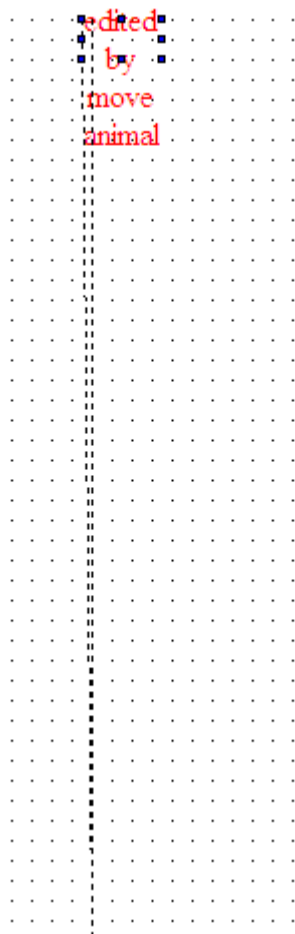

After all above componnet is finished,investigate the running status via emulator offline


9.3 Description of parameter setting

Property of ‘Coordinate’

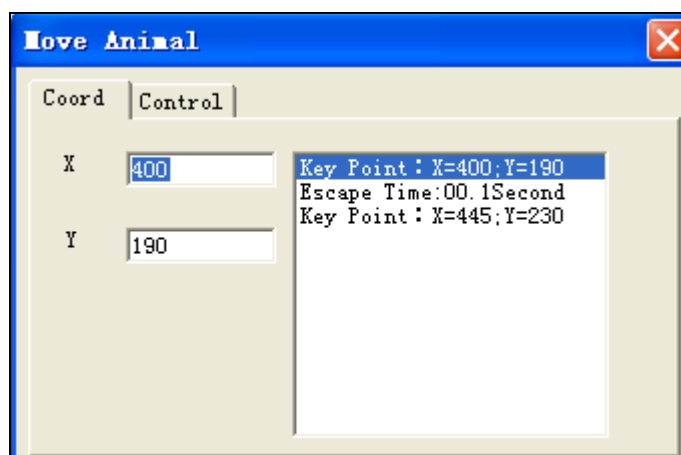

Parameter	Description
Key point	X means abscissa Y means ordinate
Escape time	time spend to move from current point to next point

Property of ‘control’

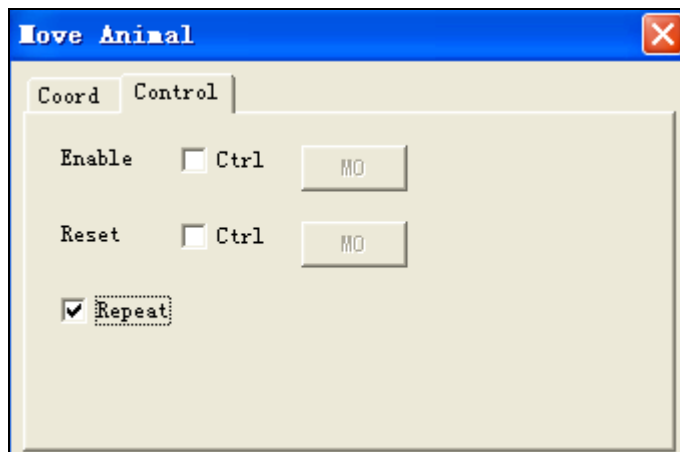

Parameter	Description
Enable signal	Move action is triggered by rising edge of object signal.
Reset signal	‘move animal ’is set to return to the beginning point
Repeat	move as the track path in circle if this item is selected,if not ,will not repaet movement.

10 Rotate animal



10.1 Introduction


Similar to component ‘move animmal’described in previous chapter,this component ‘rotate animal’supports animation grpupe with component **SWITCH** .


10.2 Procedure

10.2.1 Introduction of simple animation

Step1:Creat a new project


Click component ‘switch’ (one), ‘rotate animal’ (one) and ‘rectangle’

 (one) and leave them to suitable position, as below:

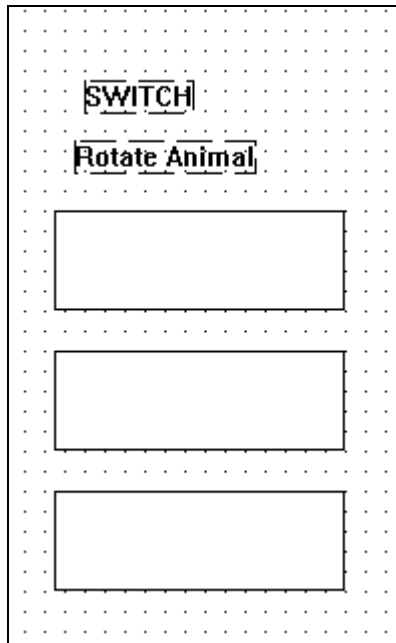


Step2:set property of 'rotate animal'


Double-click 'rotate animal' to set property as below:

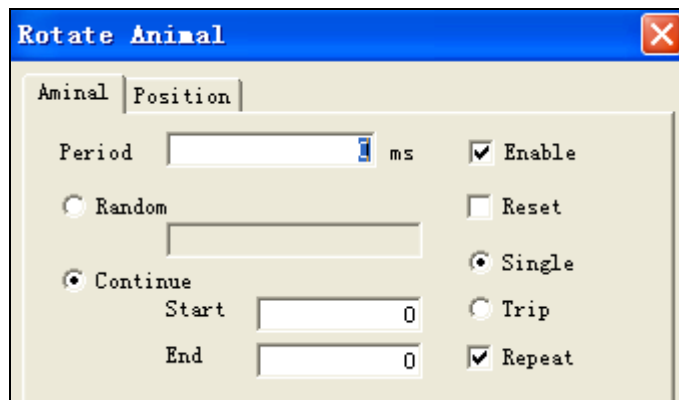

Period: time spent to finish one cycle animation.

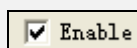

Make sure this item is selected during edit process, otherwise, it runs unusual.

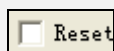


This item is not selected in most situation, when use ,please mach with advanced function component.

Continue: the No. of graphs starting from '0'. For example: when NO shows '0', the first graph displays; when NO shows 2, the second graph displays, shows graph in sequence as this rule.

Continue-start: the first graph when animation begins;

Continue-End: the last graph when animation ends.

Random: differenced with 'continue',graphs don't display in sequence but follow the user defined order; for example:when select 'reset' and enter value '0,2,1', the fact graph order is the first graph, the third graph and the second graph, is showed as below:

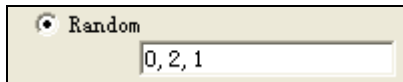

A small window titled 'Random' with a radio button selected. Below it is a text input field containing the sequence '0, 2, 1'.


Single: display graphs from first to last ,then from first to last again,running in this rule.

Trip: display graphs from first to last ,then from last to first ,running in this rule.

Repeat: display graphs in circle or not

Set property as below:

Period :1500ms ,e.g 1.5second; select 'comtinue', set end with '2',others keep in default value, is showed as below:

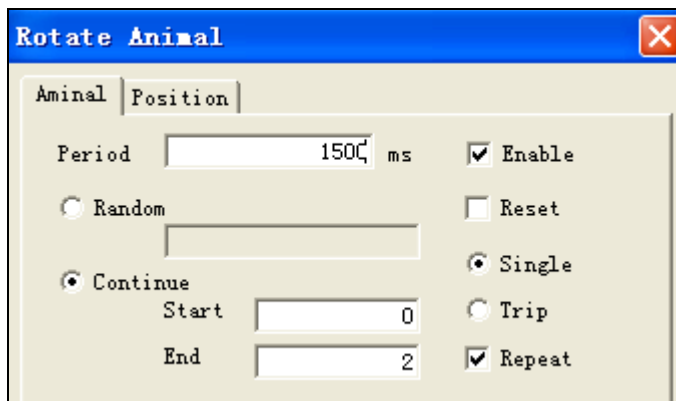


A window titled 'Rotate Animal' with a close button. It has two tabs: 'Aminal' and 'Position'. Under 'Aminal', there are settings for 'Period' (1500 ms), 'Enable' (checked), 'Random' (radio button), 'Reset' (checkbox), 'Continue' (radio button), 'Start' (0), 'End' (2), 'Single' (radio button), 'Trip' (radio button), and 'Repeat' (checked).


All setting is finished.

Step3: Animation editing


Select 'SWITCH' componnet , 'rotate animal', 'rectangle' and right-click to set property as below:

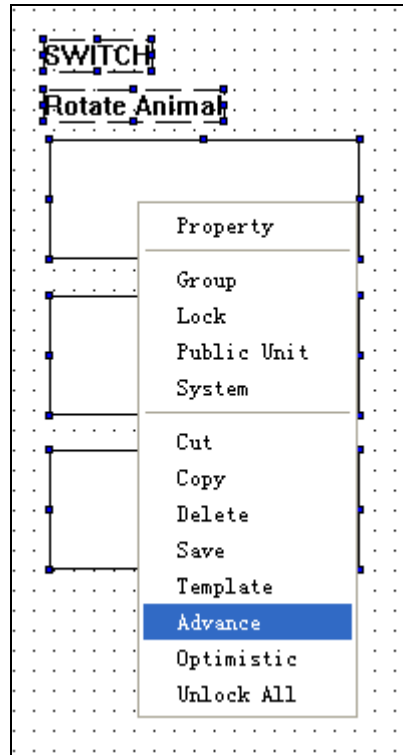



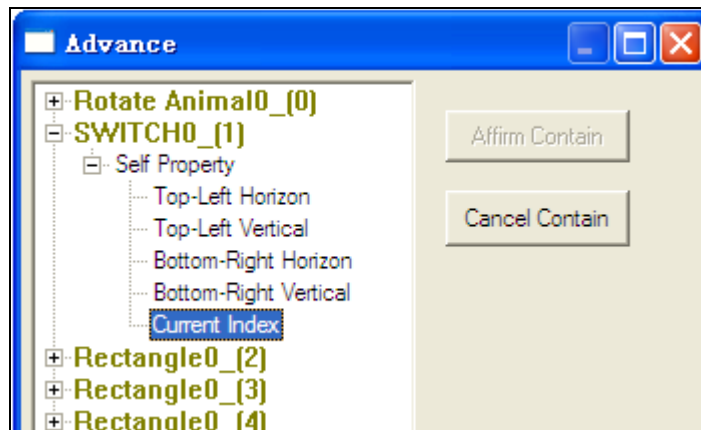
Select 'advance', and is showed as below:

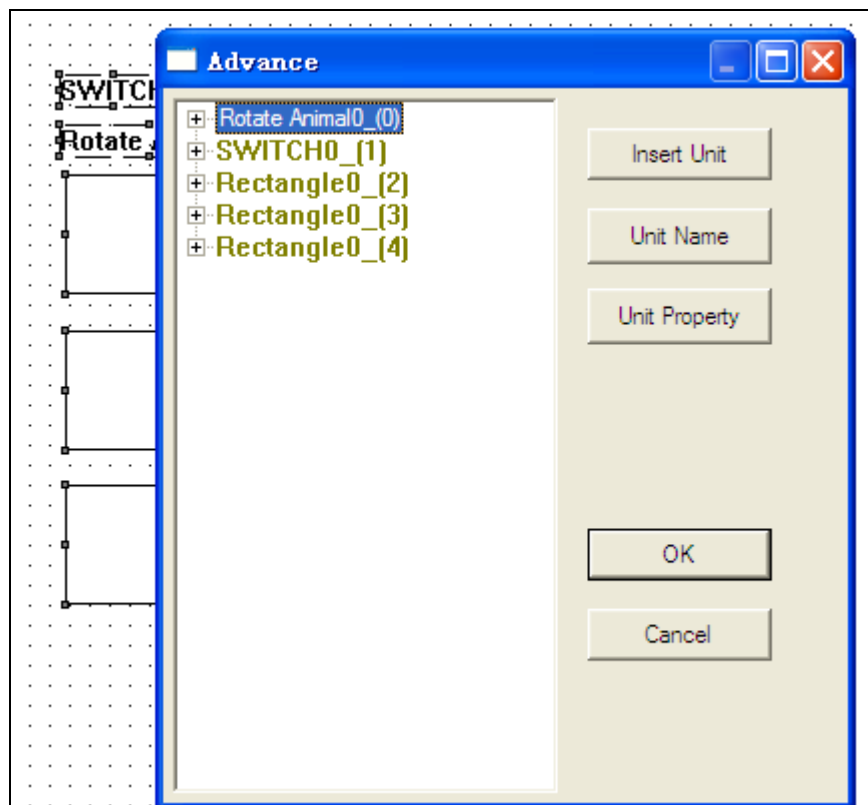


Click 'self property' of Switch and select 'current index'.


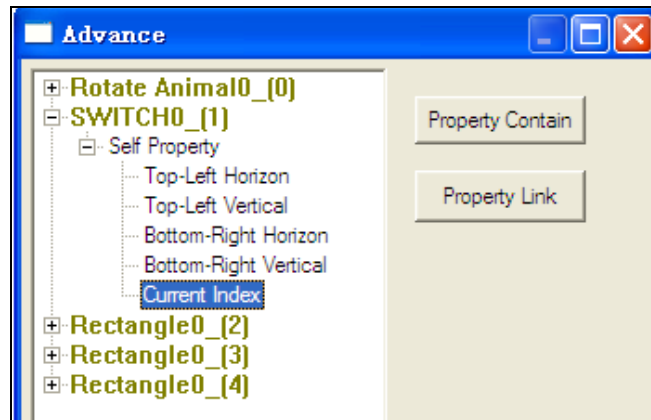


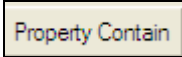Left-click the right button 'property contain' , then this button convert to gray color  which means this button is not available at present, is showed as below:





Then click 'Rotate animal' , changing happened in the right button, is showed as below:

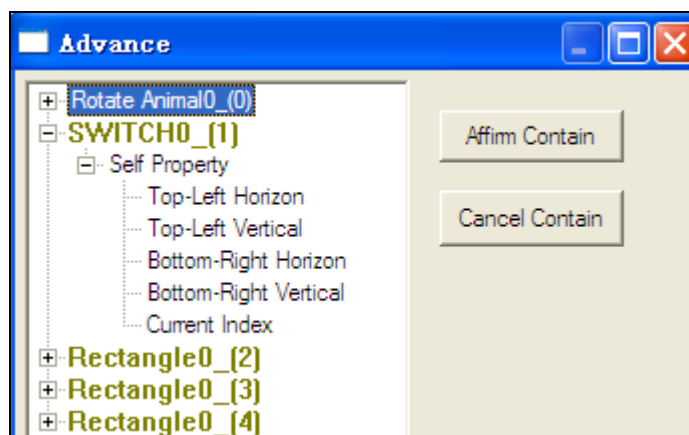

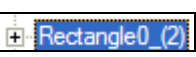
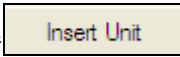
Click 'rectangle' , then button  appears, is showed as


below:

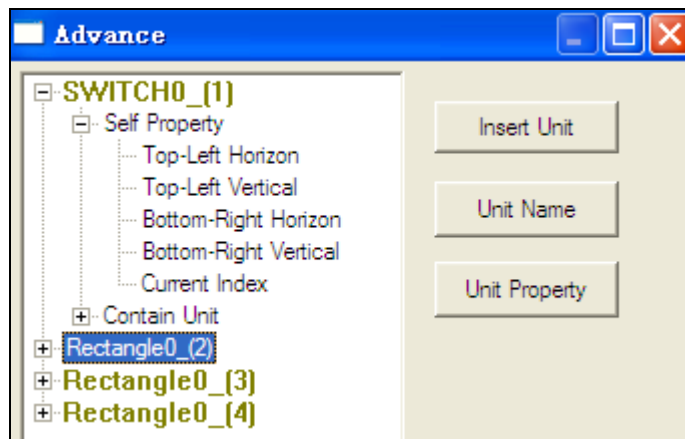


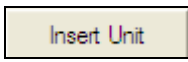
Click 'Insert unit' , then button changes to 'Affirm insert' with gray color.

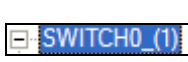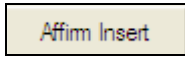

Click "SWITCH" , then button  is available.

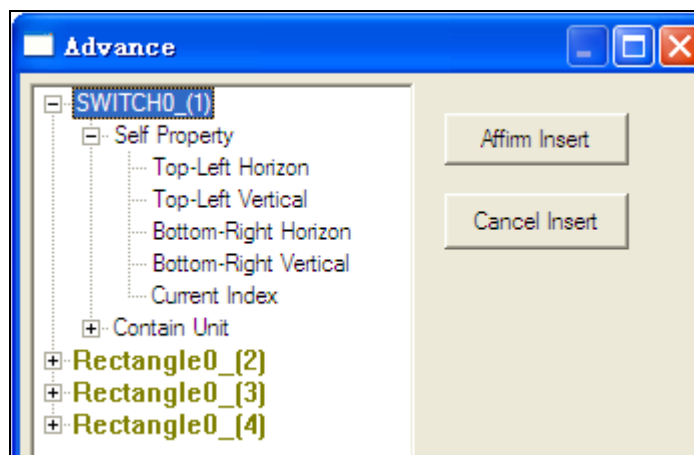


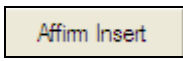Click 'Affirm insert'  to finish one insert operation, is showed as below:

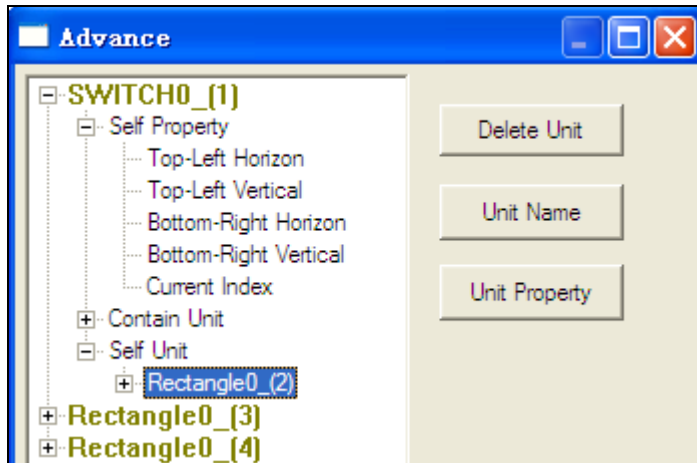

The operation with **Rectangle0_(3)** and **Rectangle0_(4)** is same as the first one, please follow the above steps.

After all above component is finished, is showed as below:

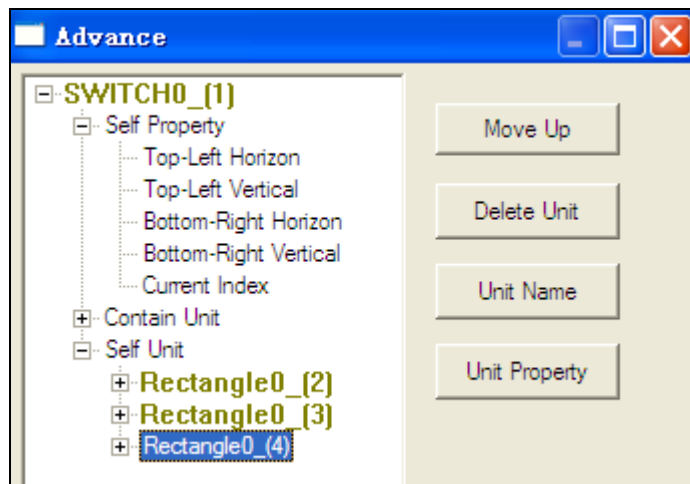


More details regarding advance function please refer to

15.2.2 Example- butterfly


Animation of butterfly contains 'rotate animal', 'move animal', 'advance reference', 'picture', the procedure is showed as below:


Step1: creat a new project :

Click component SWITCH , rotate animal , two pictures of butterfly, is showed as below:

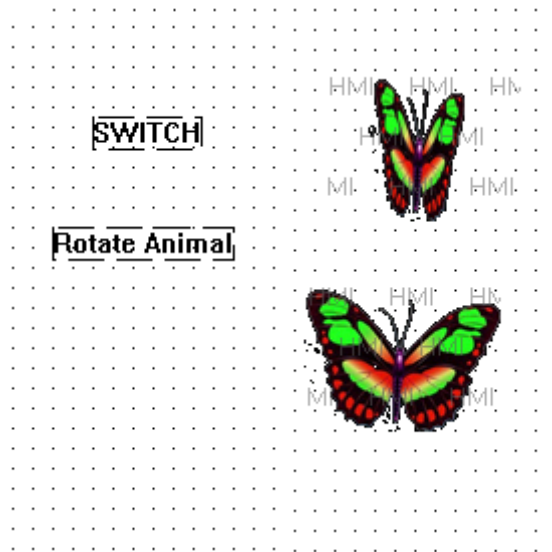


Note; there are two ways to add the butterfly picture into panel:

Way 1: click component 'map'  from toolbar.


Way 2: add picture to 'material library'  then select the destination picture.


Step2: set property of 'rotate animal'.

Set period with time 1000ms, set the continue-end with value 1, as below:

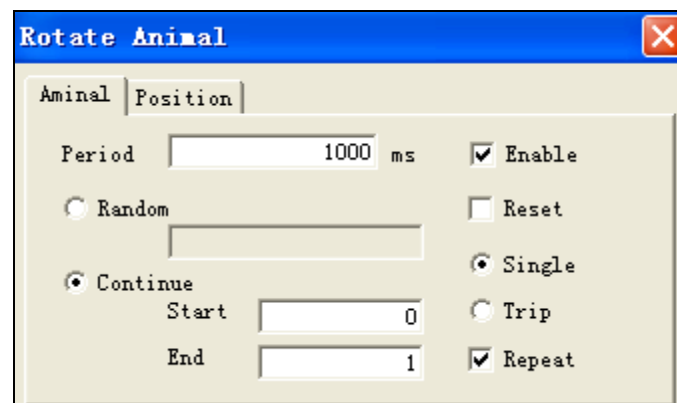

Step3: Flutter of butterfly

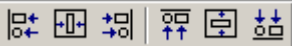
Select the above two pictures, then click  to edit them as below:

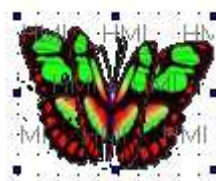

Note : tool 'Align' is available in the case of at least two pictures are selected, otherwise, it

shows with gray color.


Select component 'switch', 'rotate animal' pictures and right-click to choose 'advance',as below:

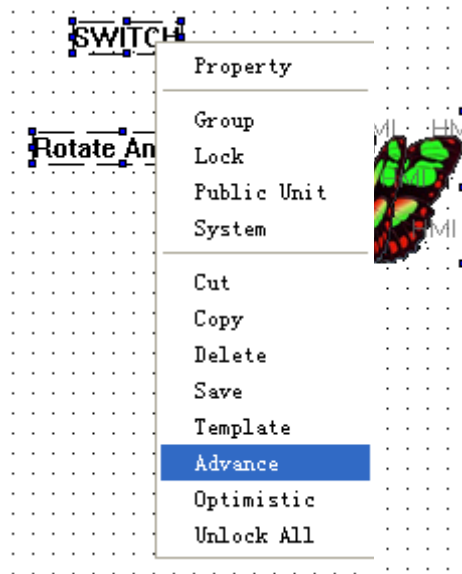

Set property as below: open 'self property' of **SWITCH0_1**,select


Current Index, then press button **Property Contain** in the right ,click

Rotate Animal0_0 then press button **Affirm Contain**,is showed as below:

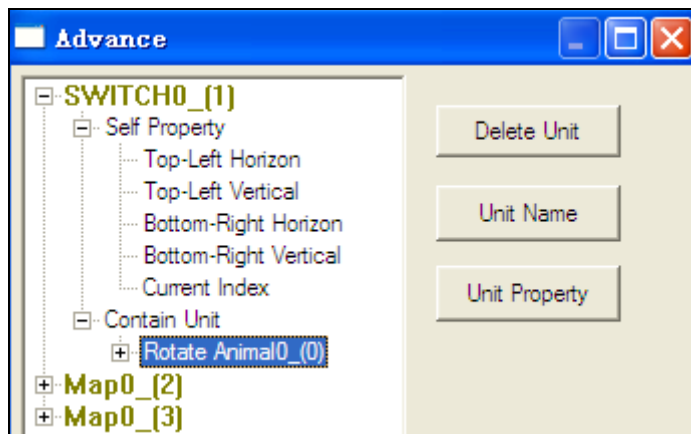



Select **Map0_2** and press button **Insert Unit**, then click

SWITCH0_1,press button **Affirm Insert**, the result is showed as below:

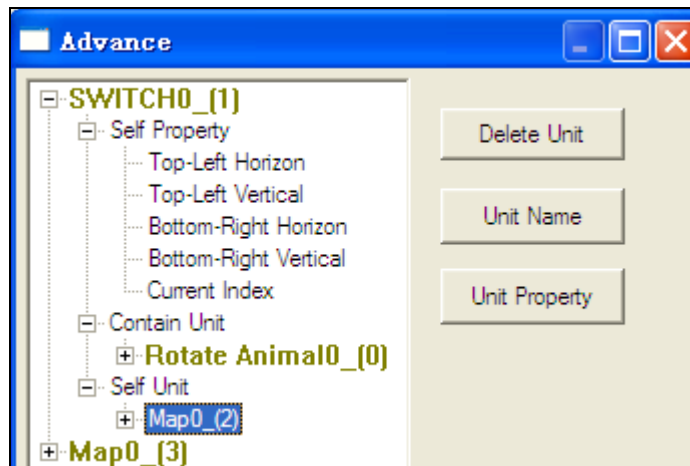


Do the same operation on Map 3 as Map2, then is showed as below:

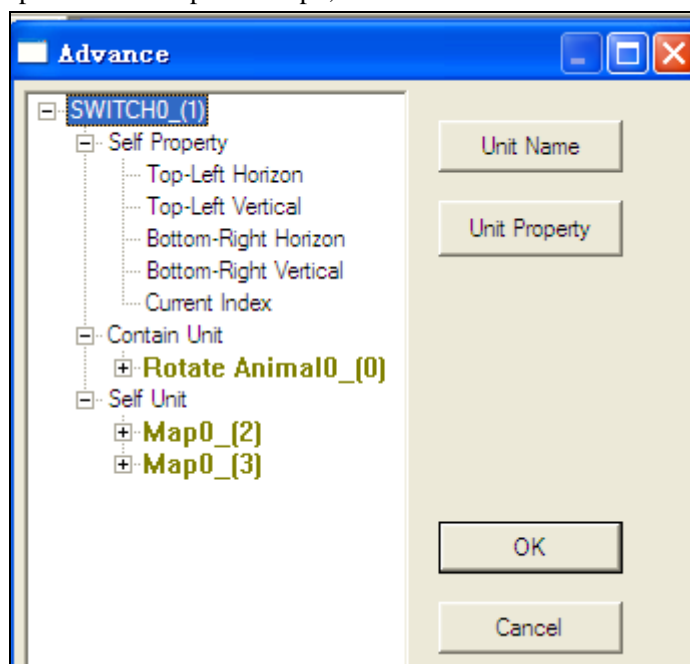

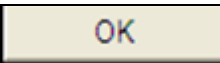
After all above editing, then press button , investigate the flutter via emulator offline.

Step4:Edit on butterfly motion


Click component 'move animal' , then make a track as below:

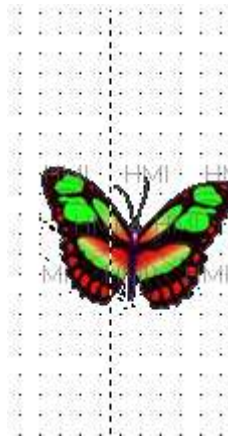

Double-click to set property with 'escape time '10second,others is kept in defaulty value:

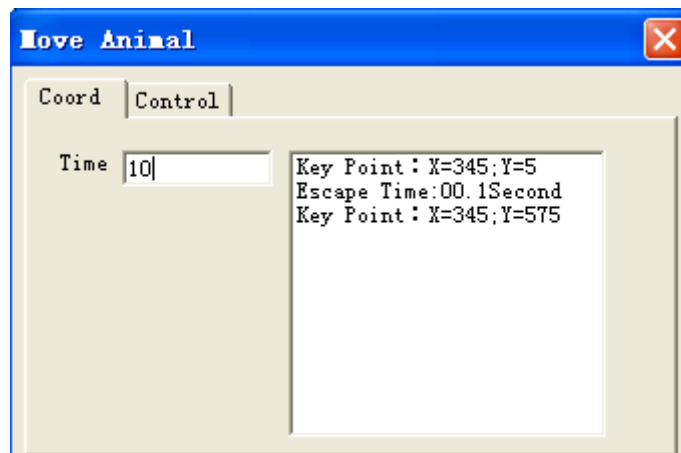

Select 'move animal' and 'butterfly', and right-click to group, as below:

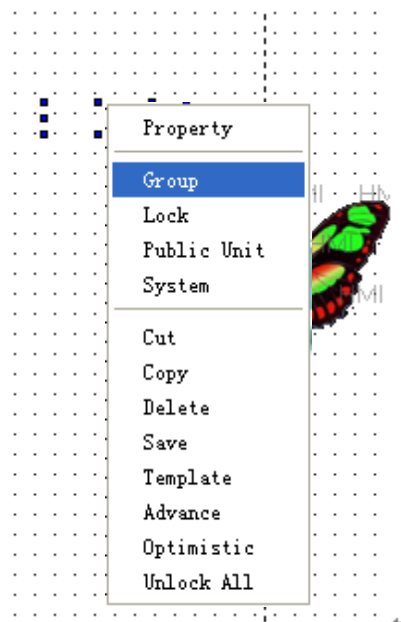

All steps are finished, investigate the running via emulator offline.

10.3 Description of parameter setting

‘Rotate animal’-Property of ‘animal’

Parameter	Description
Period	time spent to finish one cycle for all object animation
Continue	the No. of graphs starting from ‘0’. For example: when NO shows ‘0’, the first graph displays; when NO shows 2, the second graph displays, shows graph in sequence as this rule. Continue-start: the first graph when animation begins; Continue-End: the last graph when animation ends.
Random	differentiated with ‘continue’, graphs don’t display in sequence but follow the user defined order; for example: when select ‘reset’ and enter value ‘0,2,1’, the fact graph order is the first graph, the third graph and the second graph,
Enable	Make sure this item is selected during edit process, otherwise, it runs unusual.
Reset	This item is not selected in most situation, when use ,please match with advanced function component.
Single	display graphs from first to last ,then from first to last again, running in this rule.
Trip	display graphs from first to last ,then from last to first ,running in this rule.
Repeat:	display graphs in circle or not

11 Recipe

11.1 Introduction

- What is recipe?

Recipe: a string of parameters generated for production.

- Why do we need recipe ?

With development of industry, it is obviously that ways to enter parameters by manual for workpiece leads to low efficiency. But touchpanel as interface between operators and machine, save a string of parameters and get ready to be invoked whenever there needs.

- Recipe edited in panel


There are two kinds of registers built in panels, PSW and PFW:

PSW: Word object need power

PFW: Word object which can maintenance without power

we use PFW registers during the application of recipe.

Concept : recipes are saved in a string of continues registers, with index saved in PSW40 to select the needful ones, as shown below:

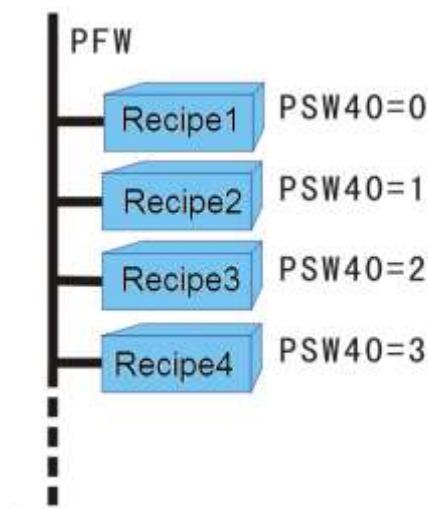

Note: PSW40 is available only edit tool in advance mode ,more details regarding how to enter into advance mode please refer to <HMI manual Basic>

11.2 Example

This chapter take the following example to describes how to generate Recipe.

Background: groups of workpiece with different size, material and quantity.


Method : all parameter informations are saved into continues registers, which means one group parameters stand for one recipe. It is only to transmit destination recipe data from panel to

PLC when there needs.

11.2.1 Write recipe datas to PFW registers.


Note : this Step is not needed if there is not too many datas ,input datas with panel operation instead.

1. the aim of this step is to record all datas in PFW registers,please as following steps:
Open the edit tool- MOP Soft click 'file',and select 'PFW SET'. Is showed as below:

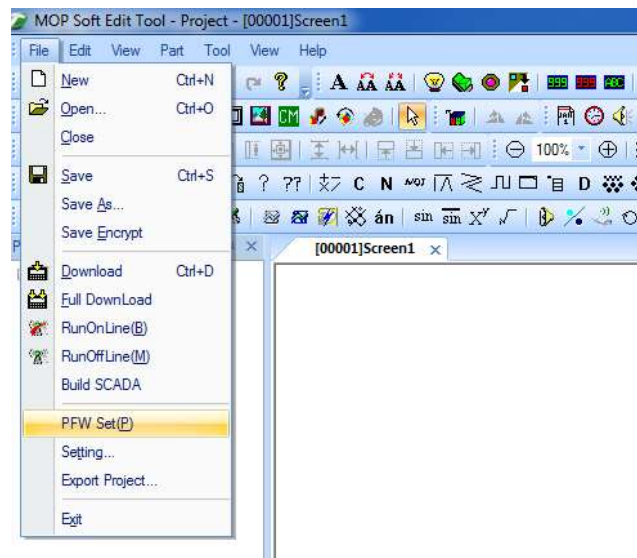

2. Define the first address PFW[***] and the last address PFW[***], then press button

, then the datas PFW[***]-PFW[***] will appear.

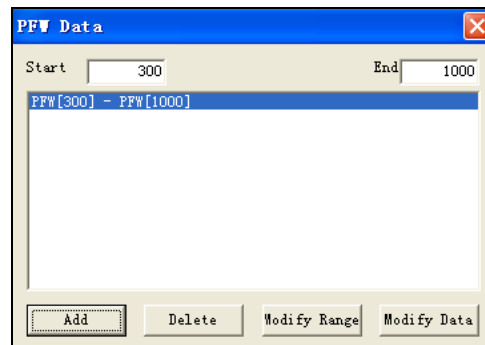

3. Double-click FW[300]-PFW[1000], then edit PFW datas

	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9
PFW[000000300]	0	0	0	0	0	0	0	0	0	0
PFW[000000310]	0	0	0	0	0	0	0	0	0	0
PFW[000000320]	0	0	0	0	0	0	0	0	0	0
PFW[000000330]	0	0	0	0	0	0	0	0	0	0
PFW[000000340]	0	0	0	0	0	0	0	0	0	0
PFW[000000350]	0	0	0	0	0	0	0	0	0	0
PFW[000000360]	0	0	0	0	0	0	0	0	0	0
PFW[000000370]	0	0	0	0	0	0	0	0	0	0
PFW[000000380]	0	0	0	0	0	0	0	0	0	0

4. Input right datas in right registers, press  to exit.


Make sure the input datas in the sequence as the parameters of the workpiece, for example, the data is arranged as below:


Type	Length	Width	Thickness
A type	136	253	120
B type	269	200	216
C type	156	172	236
D type	252	137	254

Thus, the data need to enter into the first line of the list is: 136, 253, 120, 269, 200, 216, 156, 172, 236, 252, 137, 254. After this, only to download datas from PC to panels, the value of registers are assigned in this sequence.

	+1	+2	+3	+4	+5	+6	+7	+8	+9
PFW[000000300]	253	120	269	200	216	156	172	236	252
PFW[000000310]	137	254	0	0	0	0	0	0	0
PFW[000000320]	0	0	0	0	0	0	0	0	0
PFW[000000330]	0	0	0	0	0	0	0	0	0
PFW[000000340]	0	0	0	0	0	0	0	0	0
PFW[000000350]	0	0	0	0	0	0	0	0	0
PFW[000000360]	0	0	0	0	0	0	0	0	0
PFW[000000370]	0	0	0	0	0	0	0	0	0
PFW[000000380]	0	0	0	0	0	0	0	0	0


11.2.2 Download Recipe

1. How to invoke and manage these datas? Recipe index PSW40 can solve this problem well, with reference between PSW40 and button 'down recipe' , ensure the whole process runs perfectly.

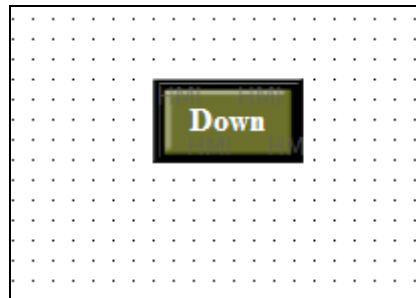

1. As destination data, these datas are built in PLC. Like the following picture, D0 as the first address of the device data, with three registers for each group, so the PLC runs based on the value of D0, D1 and D2. As device data, with first address PFW300 and occupy 3 registers, so the arrangement is PFW300, PFW301 and PFW302.

3. Set the property of 'object' and 'recipe', is shown as below:

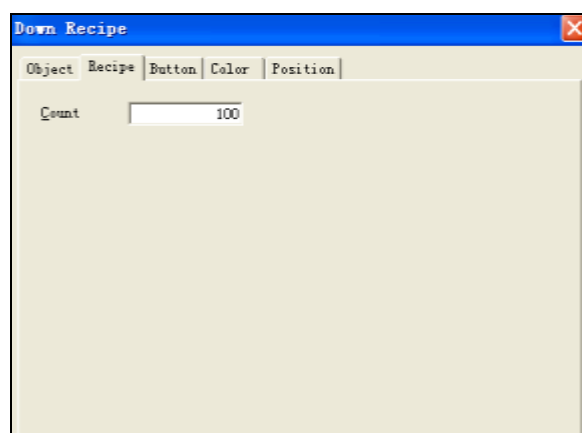

4. After all above setting, the edit on 'down recipe' button is finished, we defined the address

of the first group both in PLC and panels , it seems like there is no way to connect PSW40 and these datas together, but in fact, PSW40 as a bridge to connect the button 'down recipe' and these datas set in panels.

It runs in the following rule:

When PSW40=0, press button 'down recipe', the datas from PFW300 to PFW302 is transmitted to the register (D0~D2), which is for workpiece A.


When PSW40=1, press button 'down recipe', the datas from PFW303 to PFW305 is transmitted to the register (D0~D2), which is for workpiece B.

So we only need to modify value of PSW40 to get reference with corresponding recipe datas.


Note: It is necessary to use index PSW40 when it is matched with button 'down recipe' and button 'up recipe'. Regarding the procedure to support recipe function with other register as index, please refer to the following chapters..

11.2.3 Modify and display the recipe data


1. We change the group by modifying index PSW40. there are three components 'digital input' in the screen to investigate the data.

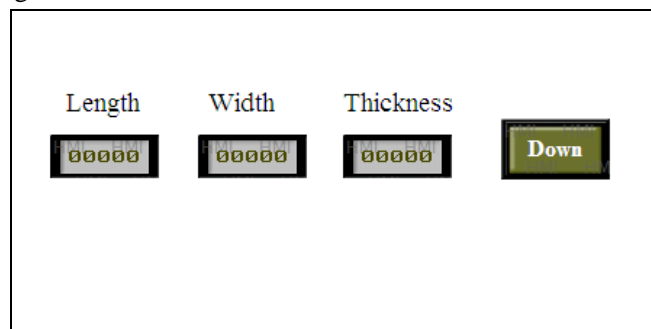


2. Set the first register standing for 'Length' with object PFW300, is showed as below

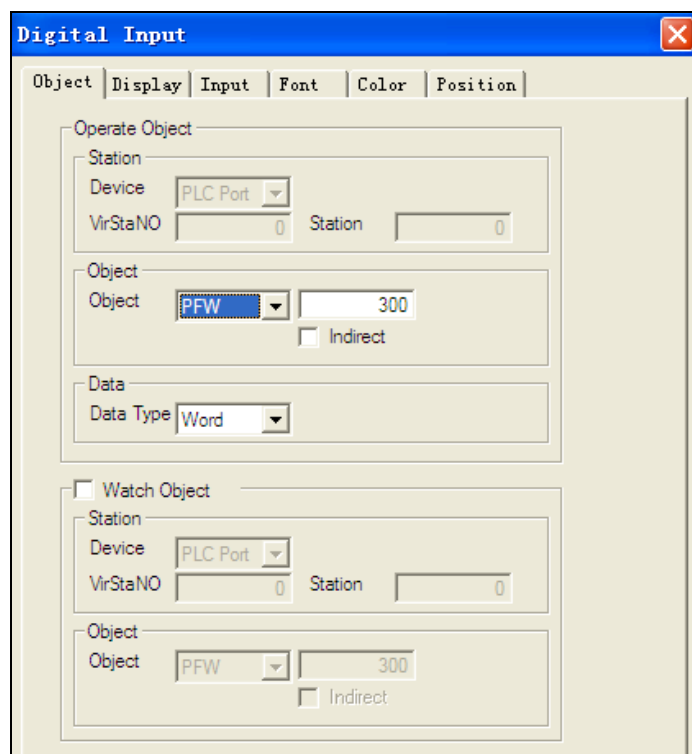

3. As we know, the PFW300 is the first address of all recipe data, how to display all parameters by these three registers? So we set the registers with indirect mode to get reference with index PSW40, as shown below:

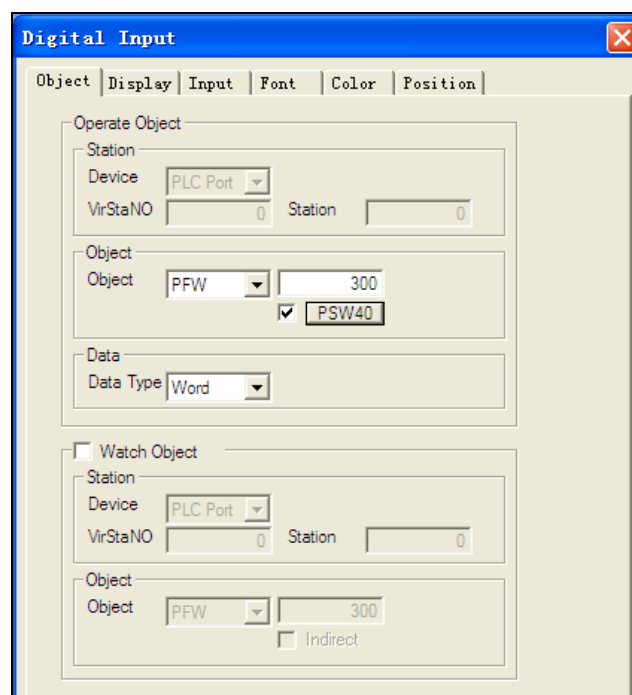


4. Select 'indirect' ☐ Indirect, and double-click to modify the object with PSW40, is showed as below:

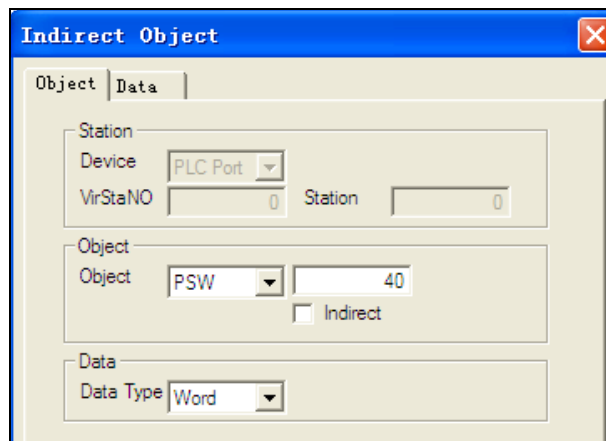



5. Set property 'data' of 'indirect object'. As said above, each group contains three data, so the times is set with 3, click OK to affirm.

Thus, the setting on parameter 'length' is finished.

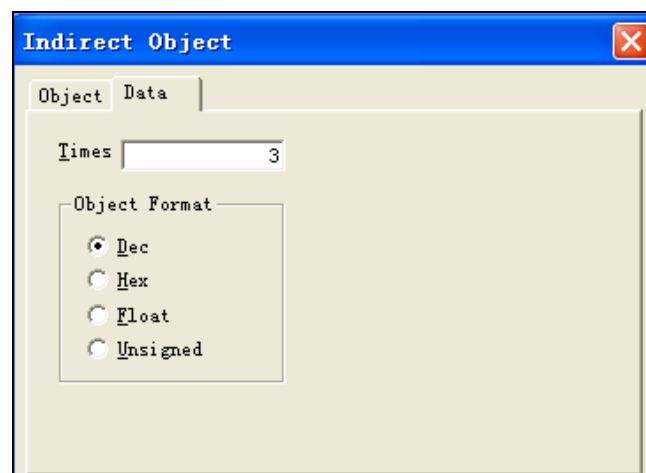Please set the parameter 'width, thickness' as the same way as setting on parameter 'length'.




11.2.4 Display name of the recipe

1. In order to distinguish each group easily, we take a name for them. Click component  to enter group name,  below:




2. Double-click this component to set property.

The parameters of recipe occupy registers is $3 \times 100 = 300$, from PFW300 to PFW599. So we take the register PFW800 as the first address of the group name, every two characters takes up one register, so like 'A TYPE' occupies 3 registers, so is showed as below:

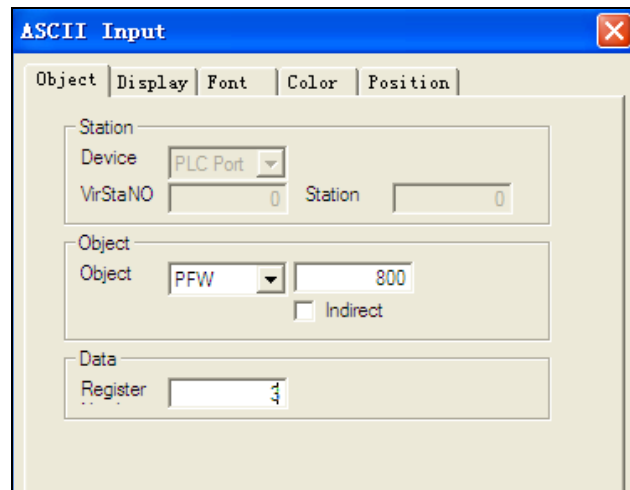


3. Select 'indirect' mode and double click to set object with PSW40

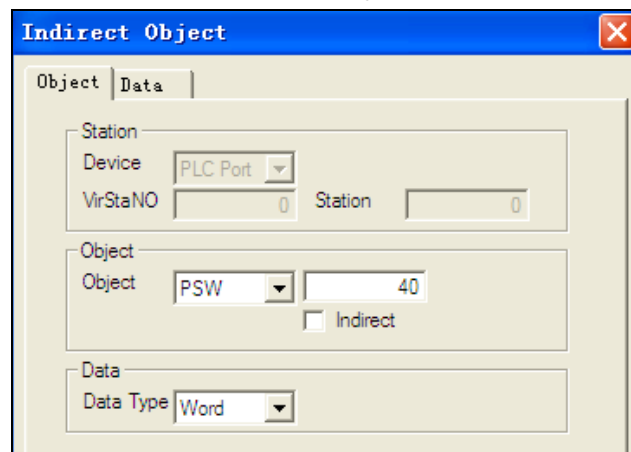

4. Set property 'data' of 'indirect object'. As said above, each group name takes up 3 registers, so the times is set with 3, click OK to affirm.

Thus, the setting on parameter name is finished

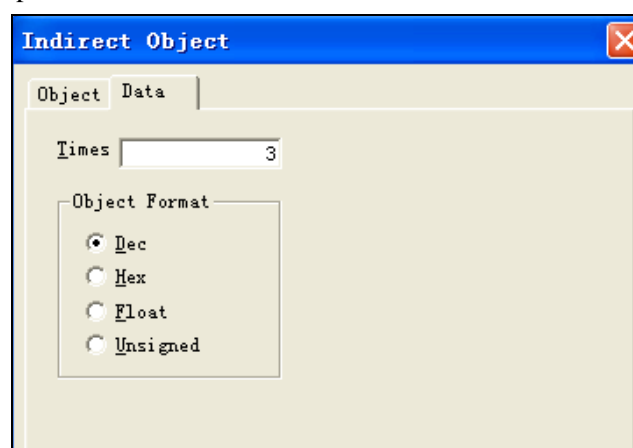


11.2.5 Switch button for Index

How can we change the value of the index (PSW40)? There are two ways: first : with

component 'Digital input' to enter data directly. Second: increase or reduce the index by 'up' and 'down' key.


This chapter will take the second way as example to describe how to change value of index.

The procedure is showed as below:


1. We edit the increas button first ,e.g. the 'up' button.click component 'set data' ,as below:




2. Double-click to set property, object with PSW40;

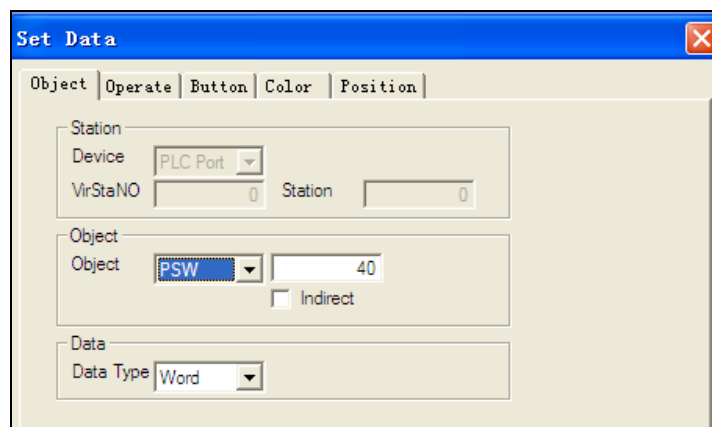


3. set the property 'operate' with operand with 1 is showed as below:

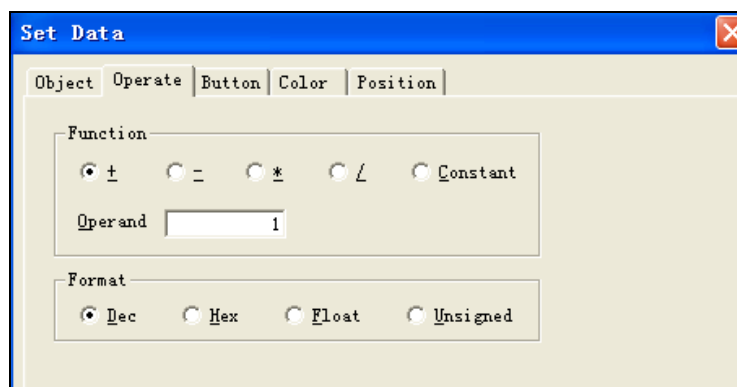

4. Change the view of the button, is showed as below, at the same time ,set the down button with the right view,

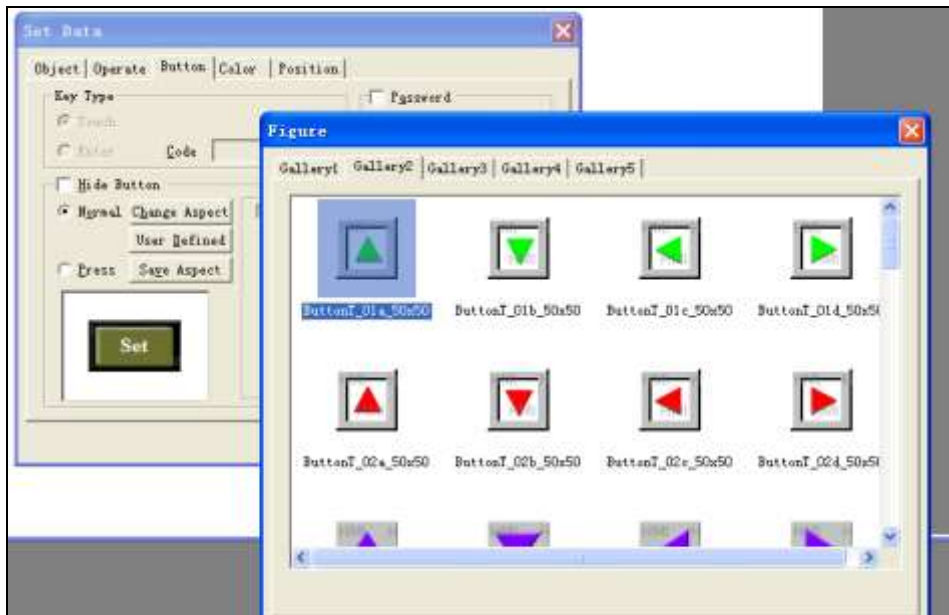


5. Download the project to the panel, is showed as below

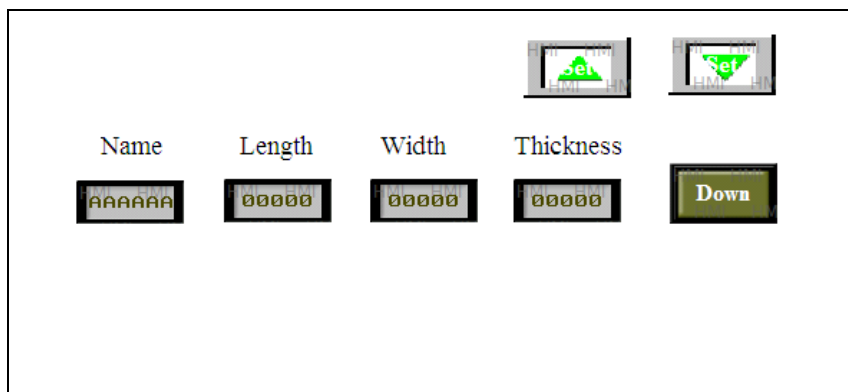


11.2.6 UPload recipe

Recipe function can not only support downloading data from panel to PLC, but also support uploading data from PLC to panel when there is a need.

This chapter takes the example to describe how to use this function. Based on the above example, operators modify the parameters of workpiece in the PLC when there is a new type to work on. So what we need is to upload the data from PLC to panels and save these data for next invocation.

1. Based on the above example, click component 'up recipe'  as below:

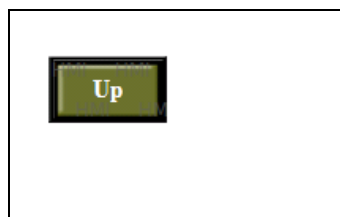

2. Set property like this: device data with object D0, recipe data with object PFW300, 'RECIPE' with 3, as below:

The 'Up Recipe' dialog box has a blue title bar with a close button. It contains several tabs: 'Object', 'Recipe', 'Button', 'Color', and 'Position'. The 'Object' tab is active. It is divided into three sections: 'Device Data', 'Object', and 'Recipe Data'. In 'Device Data', 'Device' is a dropdown menu showing 'PLC Port', 'VirStaNO' is a text box with '0', and 'Station' is a text box with '1'. The 'Object' section has an 'Object' dropdown menu showing 'D' and a text box with '0', with an unchecked 'Indirect' checkbox below it. The 'Recipe Data' section has an 'Object' dropdown menu showing 'PFW' and a text box with '300'. At the bottom, there is a 'Data' section with a 'Recipe' text box containing '3'.

3. Set the property of 'recipe' with 100, as below:

The 'Up Recipe' dialog box is shown with the 'Object' tab selected. The 'Count' text box is set to '100'. The other sections are empty.

4. After all above steps is finished ,the project is showed as below:

The project interface shows a table with four columns: 'Name', 'Length', 'Width', and 'Thickness'. The 'Name' column has a value 'AAAAAA', 'Length' has '00000', 'Width' has '00000', and 'Thickness' has '00000'. Above the table, there are two 'Set' buttons. To the right of the table is a 'Down' button, and below it is an 'Up' button.

5. According to value in INDEX PSW40, the destination data in PLC is uploaded to corresponding registers by pressing button 'UP'. For example, when PSW40=10 with the beginning address in panel is PFW300, after pressing button 'UP', the data from D0 to D2 is transmitted to register PFW330, PFW331, PFW332 .

